



ALC 360

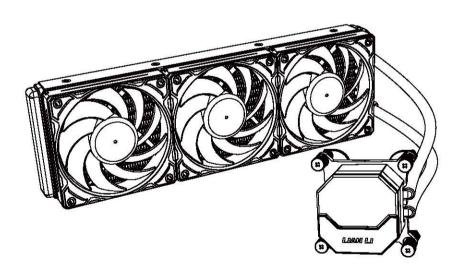


Hardware List

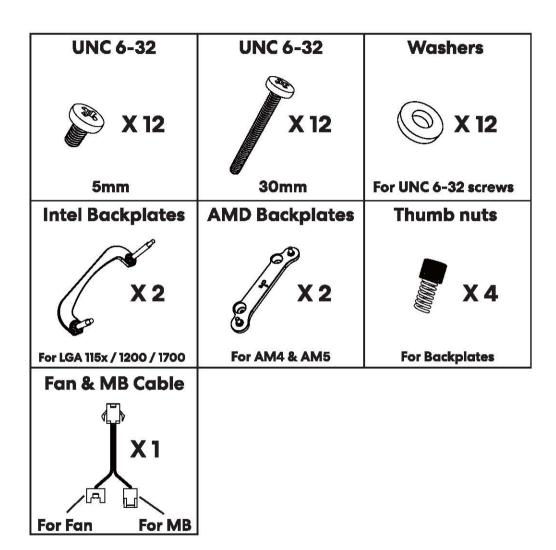


ALC 360 ALC 360

Cover Installation


(the top cover is magnetically attached, making it easy to lift up.)

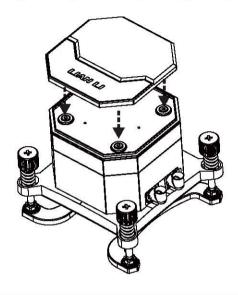

Rotating Water Cooling Cap

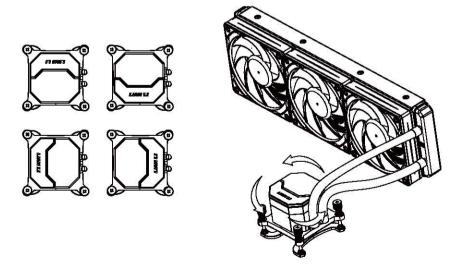


(top cover is magnetic, can be placed in any direction you want.)

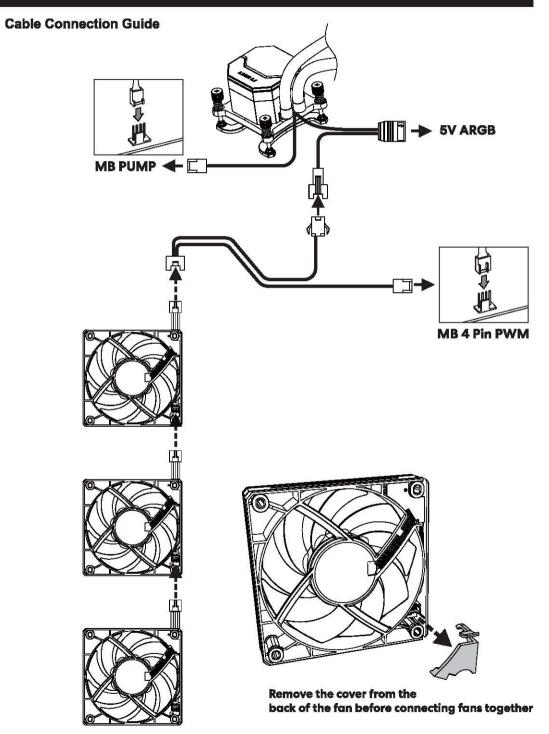


ALC 360 ALC 360

1. REMOVE THE PROTECTIVE LID BEFORE INSTALLATION

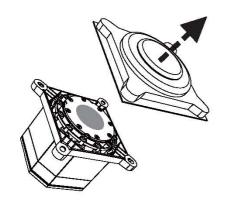


2. MOUNTING THE BACKPLATE TO MOTHERBOARD

A. Intel

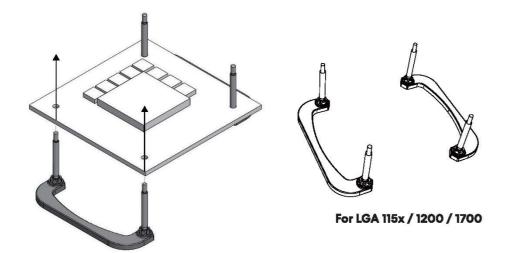


3. MOUNTING THE PUMP TO MOTHERBOARD

- Position pump/retention ring assembly on the CPU. Ensure the holes on the retention ring align with the backplate screws.
- Tighten thumb screws onto backplate screws until Finger tight.

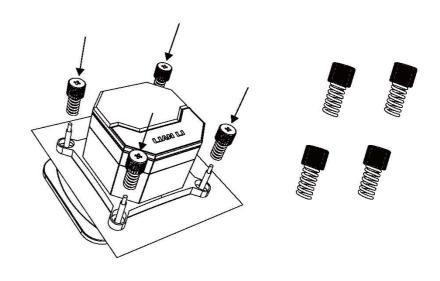

B. AMD

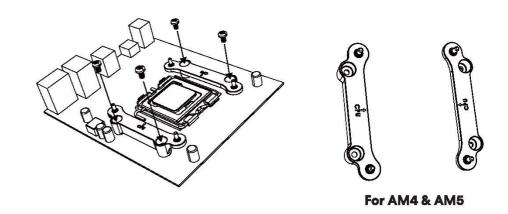

ALC 360 ALC 360

MOUNTING THE RADIATOR & FANS

- Install the fans on the radiator with the provided UNC 6-32, 30mm screws
- Mount the radiator (attached with fans) onto the case with the UNC 6-32,
 5mm screws and washers



Washer (optional)



UNC 6-32, 5mm screws

