



YU01 三模 VIA
Multi-modes

用 户 手 册

 
User Manual

快速开始指南 ▶
Quick Start Guide

感谢您购买及使用本产品

为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

产品介绍

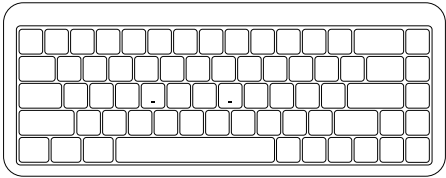

包装内容



系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本


安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用

独立指示灯

状态	指示灯位置	回连	配对	连接成功
BT1	按键Q	蓝灯慢闪	蓝灯快闪	指示灯停止闪烁
BT2	按键W	黄灯慢闪	黄灯快闪	指示灯停止闪烁
BT3	按键E	紫灯慢闪	紫灯快闪	指示灯停止闪烁
2.4G	按键R	绿灯慢闪	绿灯快闪	指示灯停止闪烁
有线	无	无	无	无
状态	指示灯位置	指示方式		
低电	左Ctrl键	红灯慢闪		
充电		红灯常亮		
充满		绿灯常亮后关闭灯光		
Caps	Caps键指示灯	白灯常亮		
锁Win	左Win键指示灯	白灯常亮		

 YU01 组合键功能

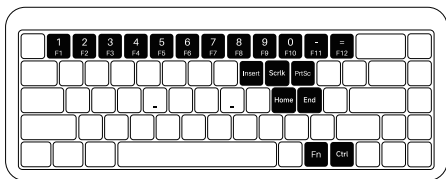

Fn+	U	=	Prt Scr
	I		ScrLk
	O		Pause

Fn+	K	=	Home
	L		End
	右Ctrl		F区与数字区切换

注1: Fn+右Ctrl切换到F区 组合功能如下

Fn+	F1	=	我的电脑
	F2		主页
	F3		邮箱
	F4		计算器
	F5		音乐播放器
	F6		停止


Fn+	F7	=	上一曲
	F8		播放/暂停
	F9		下一曲
	F10		静音
	F11		音量减弱
	F12		音量增加

注2: FN+右Ctrl切换到数字区 组合功能如下

Fn+	1	=	F1
	2		F2
	3		F3
	4		F4
	5		F5
	6		F6

Fn+	7	=	F7
	8		F8
	9		F9
	0		F10
	-		F11
	+		F12

 YU01系统功能 (Windows)

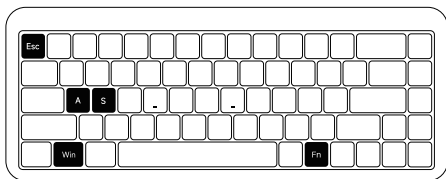

锁Win键

Fn + 左Win

 
恢复出厂设置

长按 Fn + Esc 3秒

切换系统

Fn+A (Win系统)
Fn+S (Mac系统)

YU01系统功能 (Mac)

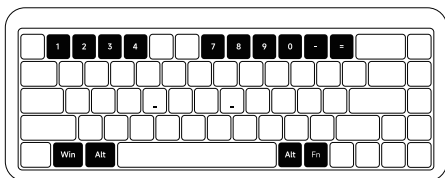

右 Alt Command

左 Alt Command

左 Win Option

Fn+ 右Ctrl = F区与数字区切换

注1: Fn+右Ctrl切换到F区 组合功能如下

Fn+	F1	降低显示屏亮度
	F2	增加显示屏亮度
	F3 =	开放任务控制
	F4	呼出Siri
	F7	上一曲


Fn+	F8	播放/暂停
	F9	下一曲
	F10 =	静音
	F11	调低音量
	F12	调高音量

注2: Fn+右Ctrl切换到数字区 组合功能如下

Fn+	1	F1
	2	F2
	3 =	F3
	4	F4
	7	F7


Fn+	8	F8
	9	F9
	0 =	F10
	-	F11
	+	F12

 YU01 灯光调节

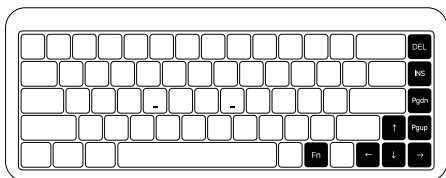

Fn+	Ins	=	切换主键盘灯光颜色
	↑		灯光变亮
	↓		灯光变暗
	←		灯光速度变慢
	→		灯光速度变快
	Del		主背光灯效切换
	PgDn		切换氛围灯灯效
	PgUp		灯光关闭/开启

 YU01连接使用指南

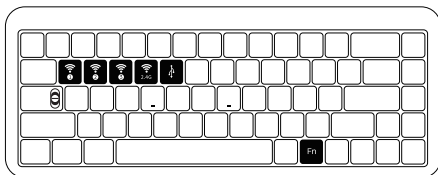

Fn+	Q	=	蓝牙设备1
	W		蓝牙设备2
	E		蓝牙设备3
	R		2.4G无线设备
	T		有线模式

短按回连
长按配对



开关位于
CAPS按键右侧

上：无线模式

下：纯有线模式

2.4G配对

键盘开机后，按下Fn+R进入2.4G模式，再按下Fn+R组合键3S进入配对模式后，绿色指示灯快闪，插入接收器，配对成功后退出对码，模式灯常亮2S，找不到配对设备30s后，退出对码模式灯熄灭，键盘进入睡眠。

蓝牙配对

键盘开机后，按下Fn+Q/W/E进入蓝牙模式，长按Fn+Q/W/E组合键3S，键盘进入对码状态蓝/黄/紫色指示灯快闪，连上后指示灯常亮2S，如果没有连上设备指示灯熄灭，键盘进入睡眠。

电量查询

在无线模式下，按Fn+Backspace组合键可检查电池电量。如果电池电量低于30%，数字1-2键将显示红灯。如果电池电量低于100%，数字1-9键将显示绿灯，电池电量充满则数字1-0键显示绿灯。



按键/灯光自定义说明和调用说明

1. 键盘的按键以及灯光更深层次的自定义需配合VIA实现
2. 网页版驱动地址：<https://yu.hsgaming.cn/>

AKKO保修和服务声明

1. Akko为中国大陆的客户提供一年保修。对于其他地区，请联系您的卖家（Akko分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，Akko也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 由于私自拆卸产品、使用不当和安装不当而导致的缺陷不在保修范围内。
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00
节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.akkogear.com

产地：中国·深圳

Company: Shenzhen Yincheng Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



WARNING:

Water and Beverages can't be
poured into the Keyboard.

 


中国制造 / Made in China

**注意
事项**

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品
请按照电子产品保护方式爱惜使用。

Packing List

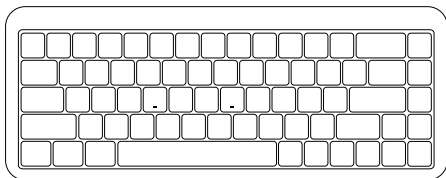

What's in the package



Minimum System Requirement

Windows®XP/Vista / 7 / 8 / 10 or higher version


Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB-A port to start using it.

LED Indicator Overview

Status	Indicator	Re-Connecting	Pairing	Connected
Bluetooth device 1	Button Q	Blue light blinks slowly	Blue light blinks fast	The indicator stops flashing
Bluetooth device 2	Button W	Yellow light blinks slowly	Yellow light blinks fast	The indicator stops flashing
Bluetooth device 3	Button E	Purple light blinks slowly	Purple light blinks fast	The indicator stops flashing
2.4G wireless device	Button R	Green light blinks slowly	Green light blinks fast	The indicator stops flashing
Wired mode	N/A	N/A	N/A	N/A
Status	Indicator	Indicating Mode		
Low Battery	Left Ctrl Key	Red Light Blinks Slowly		
Charging		Steady Red		
Fully Charged		Green Light Stays On / Turn Off The Lights		
Caps	LED for Caps Key	Steady White		
Lock Win	LED for left Win Key	Steady White		

 YU01 Key Combinations

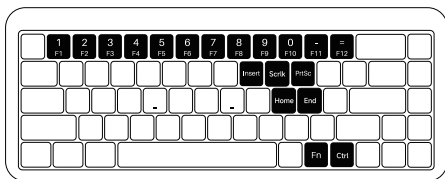

Fn+	U	=	Prt Scr
	I		ScrLk
	O		Pause

Fn+	K	=	Home
	L		End
	Right Ctrl		Switch between Function Keys and Numeric Keys.

Note: Press Fn + Right Ctrl to switch to the Function Keys.
The short-cuts are as follows:

Fn+	F1	=	My Computer
	F2		Home
	F3		Mail
	F4		Calculator
	F5		Music Player
	F6		Pause


Fn+	F7	=	Skip back (Audio)
	F8		Pause/Play (Audio)
	F9		Skip forward (Audio)
	F10		Mute
	F11		Volume down
	F12		Volume up

Note: Press Fn + Right Ctrl to switch to the Numeric Keys.
The short-cuts are as follows:

Fn+	1	=	F1
	2		F2
	3		F3
	4		F4
	5		F5
	6		F6

Fn+	7	=	F7
	8		F8
	9		F9
	0		F10
	-		F11
	+		F12

 YU01 System Features (Windows)

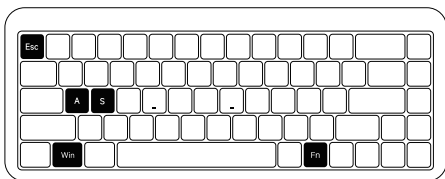

Lock Windows Key

Press Fn and left Win Key

 
Restore Factory Settings

Hold down Fn and press Esc 3s

Switch System

Fn+A (Windows)
Fn+S (Mac)

YU01 System Features (Mac)

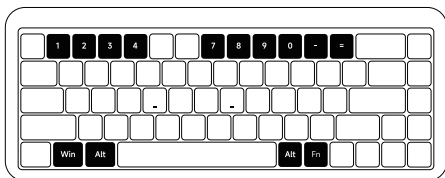

Right Alt	Command
Left Alt	Command
Left Win	Option

Fn+ Right Ctrl	=	Switch between Function Keys and Numeric Keys.
----------------	---	--

Note: Press Fn + Right Ctrl to switch to the Function Keys.

The short-cuts are as follows:

Fn+	F1	Decrease display brightness
	F2	Increase display brightness
	F3 =	Open mission control
	F4	Activate Siri
	F7	Skip back (Audio)

Fn+	F8	Pause/Play (Audio)
	F9	Skip forward (Audio)
	F10 =	Mute
	F11	Volume down
	F12	Volume up


Note: Press Fn + Right Ctrl to switch to the Numeric Keys.

The short-cuts are as follows:

Fn+	1	F1
	2	F2
	3 =	F3
	4	F4
	7	F7


Fn+	8	F8
	9	F9
	0 =	F10
	-	F11
	+	F12

 YU01 Lighting Customization

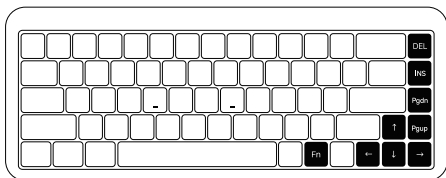

Fn+	Ins	=	Switch the main backlight color of the keyboard
	↑		Bright
	↓		Dim
	←		Slower Animation
	→		Faster Animation
	Del		Switch the main backlight effects of the keyboard
	PgDn		Switch the Switch the side light effects
	PgUp		Light OFF/ON

 YU01 Connection Guide

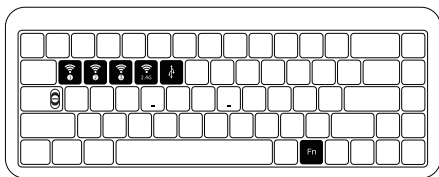

Fn+	Q	=	Bluetooth Device 1
	W		Bluetooth Device 2
	E		Bluetooth Device 3
	R		2.4G Wireless Device
	T		Wired Mode

Short press to
reconnect
Long press to pair



The switch is
located under
the CAPS key

Top: Wireless Mode

Bottom: Wired Mode

2.4G Pairing

 
After turning on the keyboard, press Fn+ R to enter 2.4G mode. Then press and hold the Fn+R Key combination for 3 seconds to enter pairing mode. Then insert in the receiver, and the green indicator light will flash quickly. Once the pairing is successful, the LED indicator will stay on for 2 seconds. If no available device is found within 30 seconds, the LED indicator will turn off and the keyboard will enter sleep mode.

Bluetooth Pairing

After turning on the keyboard, press Fn+ Q/W/E to enter Bluetooth mode. Press and hold the Fn+Q/W/E Key combination for 3 seconds to enter pairing mode, with the blue/yellow/purple indicator light flashing quickly. Once the connection is established, the indicator light will stay on for 2 seconds. If the device fails to connect, the indicator light will turn off and the keyboard will enter sleep mode.

Battery Level Check

In wireless mode, press Fn+Backspace to check the battery level. If the battery level is less than 30%, the 1-2 keys will light up red. If the battery level is less than 100%, the 1-9 keys will light up green, and if the battery level is full, the 1-0 keys will light up green.

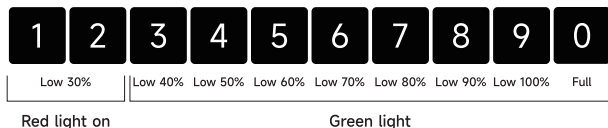

Key/Lighting Effects Customization instruction

1. VIA is a widely recognized software that offers an intuitive interface for configuring and personalizing various keyboard settings. Users can utilize VIA to remap keys and adjust lighting on keyboards with VIA/QMK firmware.

Web Version: <https://usevia.app/>

App: <https://github.com/the-via/releases/releases>

It enables you to remap keys, create custom macros, customize lighting effects, and more.

If you encounter connection issues, please load the corresponding V3 JSON file specific to your keyboard model. You can download JSON files from our dedicated Download page

<https://en.akkogear.com/download/>

2. You can download keyboard source code (in compliance with GPL license)
via: <https://github.com/akkogear>

Akko Warranty and Service Statement

- 1. Akko provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
- 2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
- 3. Defects resulting from disassembly of our product, improper usage and incorrect installation are not covered by warranty.
- 4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Company: Shenzhen Yincheng Technology Co., Ltd
Address: 33 Langbi Rd, Bitou Community 1st industrial Zone,
Bao'an District, Shenzhen, China
Tel: 0755-23216420
Website: www.akkogear.com
Origin: Shenzhen, China



中国制造 / Made in China

Precautions	Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.
-------------	---



www.akkogear.com

