


Operating Instructions - Oven Siemens HB13AB521B

Control Panel

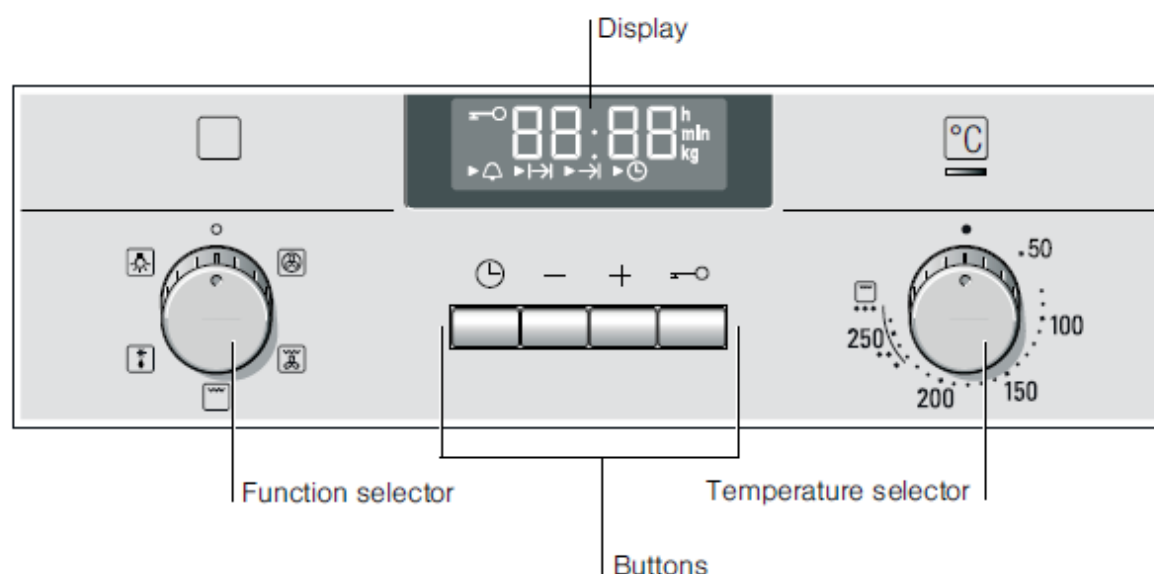



Buttons and display

Button	Use
Time-setting options	Selects Timer, Cooking time, End time and Clock.
Minus	Reduces the settings.
Plus	Increases the settings.
Childproof lock	Locks and unlocks the control panel.


Function selector

Setting	Use
Off position	The oven is switched off.
3D hot air*	For cakes and pastries on one to three levels. The fan distributes the heat of the ring heating element in the rear wall evenly throughout the cooking compartment.
Circulated air grilling	For roasting meat, poultry and whole fish. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the dish.
Grill, large area	For grilling steaks, sausages, toast and pieces of fish. The whole area below the grill element becomes hot.

	Defrosting	For defrosting, e.g. meat, poultry, bread and cakes. The fan causes the warm air to circulate around the dish.
	Oven light	Switches on the oven light.


Temperature selector

The temperature selector is used to set the temperature or grill setting.


Setting		Meaning
●	Off position	The oven does not heat up.
50-270	Temperature range	The temperature in the cooking compartment in °C.
•, ••, •••	Grill settings	The grill settings for "Grill, large area"  . <ul style="list-style-type: none"> • = setting 1, low •• = setting 2, medium ••• = setting 3, high

Setting the oven

Use the function selector to set the type of heating

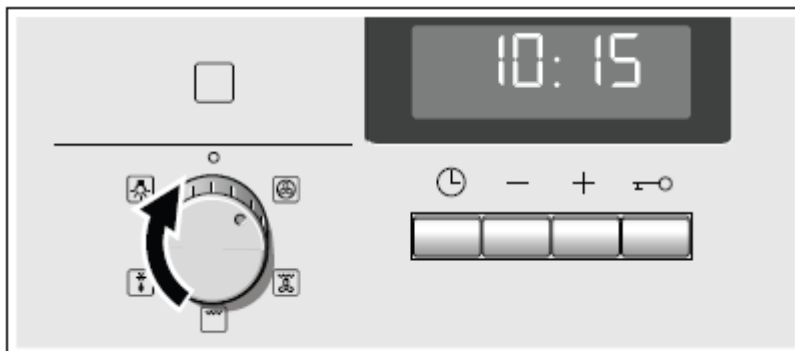

Set the temperature or grill using the temperature selector

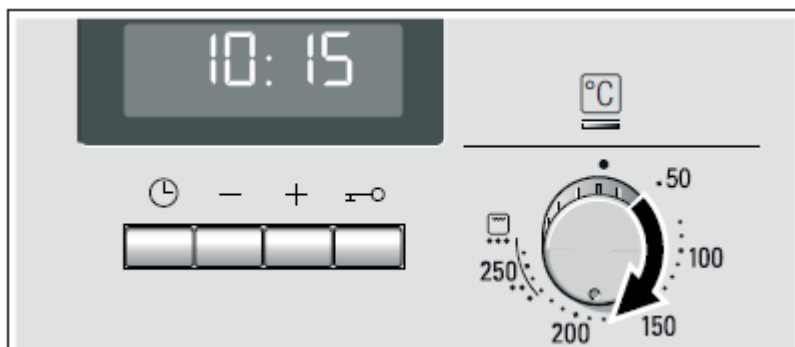

The oven will then begin to heat up.

 




Switching the oven off

Turn the function selector to the off position

Changing the settings






The type of heating and temperature or grill setting can be changed at any time using their respective selectors.


Setting the time-setting options

Your oven has various time-setting options. You can use the  button to call up the menu and switch between the individual functions. All the time symbols are lit when you can make settings. The  arrow shows you the time-setting option that is active. A time-setting option that has already been set can be changed direction with the  or  button when the  arrow is next to the relevant time symbol.



Timer

You can use the timer as a kitchen timer. It runs independently of the oven. The timer has its own signal. In this way, you can tell whether it is the timer or a cooking time which has elapsed.

1. Press the  button once. The time symbols light up in the display and the  arrow is next to .
2. Use the  or  button to set the timer duration.

Default value for  button = 10 minutes

Default value for  button = 5 minutes

After a few seconds, the time setting is adopted. The timer starts. The   symbol lights up in the display and the timer duration counts down. The other time symbols go out.


The timer duration has elapsed

A signal sounds 0:00 is shown in the display. Use the  button to switch off the timer.


Changing the timer duration


 
 



Use the  or  button to change the timer duration. After a few seconds, the change is adopted.

Cancelling the timer duration

Use the  button to reset the timer duration to 0:00. The change will be adopted after a few seconds. The timer is switched off.



 
 

Checking the time settings


If several time-setting options are set, the relevant symbols are illuminated on the display. The time-setting options symbol is in the foreground preceded by the  arrow.

To call up the  timer, ,  end time or  clock, press the  button repeatedly until the  arrow is next to the relevant symbol. The display shows the value for a few seconds.

 
Cooking time

The cooking time for your dish can be set on the oven. When the cooking time has elapsed, the oven switches itself off automatically. This means that you do not have to interrupt other work to switch off the oven. The cooking time cannot be accidentally exceeded.





1. Use the function selector to set the type of heating
2. Set the temperature or grill setting using the temperature selector
3. Press the  button twice. 0:00 is shown in the display. The time symbols light up and the  arrow is next to .
4. Use the  or  button to set the cooking time.

Default value for  button = 30 minutes


Default value for  = 10 minutes

The oven will start up after a few seconds. The cooking time counts down in the display and the  symbol lights up. The other time symbols go out.


The cooking time has elapsed

A signal sounds. The oven stops heating. 0:00 is shown in the display. Press the  button. You can set a new cooking time using the  or  button. Or press the  button twice and turn the function selector to the off position. The oven switches off.

Changing the cooking time




 
Use the **+** or **-** button to change the cooking time. After a few seconds, the change is adopted. If the timer has been set, press the  button beforehand.


 
Cancelling the cooking time




 
 
Use the **-** button to reset the cooking time to 0:00. After a few seconds the change is adopted. The cooking time is cancelled. If the timer has been set, press the  button beforehand.

End time

 

You can change the time at which you wish your dish to be ready. The oven starts automatically and finishes at the desired time. You can, for example, put your dish in the cooking compartment in the morning and set the cooking time so that it is ready at lunch time. Ensure that food is not left in the cooking compartment for too long as it may spoil.

1. Adjust the function selector
2. Set the temperature selector
3. Press the  button twice
4. Use the **+** or **-** button to set the cooking time
5. Press the  button. The  arrow is next to . The time when the dish will be ready is displayed.
6. Use the **+** or **-** button to set a later end time

After a few seconds, the oven adopts the settings and switches to standby position. The display shows the time at which the dish will be ready and the  arrow is next to the  symbol.

The  and  symbols go out. When the oven starts, the cooking time counts down in the display and the  arrow is next to the  symbol. The  symbol goes out.

The cooking time has elapsed

A signal sounds. The oven stops heating. 0:00 is shown in the display. Press the  button. You can set a new cooking time using the **+** or **-** button. Or press the  button twice and turn the function selector to the off position. The oven switches off.