


TESCO

User guide

CRM1901
Jumbo Display Alarm
Clock Radio



 IMPORTANT SAFETY INFORMATION

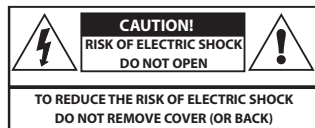

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Do not use this apparatus near water.

Clean only with a dry cloth.

Do not block any ventilation openings.

Install in accordance with the manufacturer's instructions.

Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning: To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

No naked flame sources such as candles should be placed on the product.

Batteries (a battery pack or installed batteries) shall not be subject to excessive heat such as sunshine, fire or the like.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

Caution: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

IMPORTANT

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ELECTRICAL INFORMATION

Mains Supply: The mains operating voltage is marked on a rating plate under the radio.

 
The means of disconnecting this appliance from the mains supply is the AC mains plug. This should be unobstructed and readily operable at all times.

COMPLIANCE STATEMENT

Hereby, Tesco declares that the radio equipment type CRM1901 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.tesco.com/productsupporttesco.

CONTROLS AND CONNECTORS

Top View

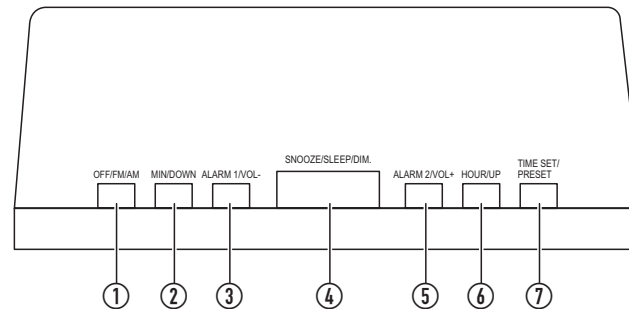

1. OFF/FM/AM Selector switch
2. Minutes/Down button
3. Alarm 1/Volume down button
4. Snooze/Sleep/Dim button
5. Alarm 2/Volume up button
6. Hour/Up button
7. Time Set/\Preset (Store) button

Front View

1. Alarm 1 buzzer mode indicator
2. Alarm 1 radio mode indicator
3. Time/Frequency display
4. Alarm 2 buzzer mode indicator
5. Alarm 2 radio mode indicator

Back View

1. Backup battery compartment
2. Power cable
3. FM aerial

UNPACKING

Carefully unpack the unit. If it is damaged, please return it to your nearest Tesco store for replacement. Remember to take your purchase receipt with you. Retain the User Handbook. If you pass the unit on to a third party make sure you pass on the handbook.

 
We suggest you retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

BACK-UP BATTERIES

This unit is designed to operate on a 220-240V 50Hz mains supply. The unit requires back-up batteries to retain its settings in the event of a power cut.

You will need to purchase 2 x AA batteries. Unwrap the batteries, remove the battery cover from the clock radio and insert the batteries observing polarity. Replace the battery cover.

NOTE: Never allow the batteries to become fully exhausted - replace them periodically. Dispose of used batteries according to all recycling regulations in your area. Never throw used batteries into the general rubbish, or a fire.

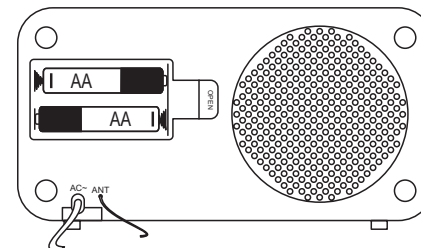

WARNING - CARE OF BATTERIES

This unit uses back-up batteries. Handle batteries with care. Do not short batteries out with metal objects. Do not leave batteries lying around or expose to fire or water. When disposing of batteries do not throw them in the general rubbish, a fire or in water. Dispose of them in full accord with recycling regulations that are applicable in your area.

PRELIMINARIES

Before connecting the power, check that the mains voltage on the rating plate under the radio is the same as the voltage in your area.

- Place the unit on a stable surface away from heat and damp.
- Unwrap the FM antenna cable and extend it fully
- Uncoil the mains cable fully.
- Plug the mains plug into the power socket and switch on.
- Press and hold the SNOOZE/SLEEP/DIM button to switch the display between bright and dim settings.

CLOCK SETTING

The Clock is a 24 hour clock; e.g. 6 pm is entered as 18:00 hours.

NOTE: The radio must be OFF when setting the clock. If the radio is ON, refer to page 5 for instructions to turn it off.

 
1. Hold the TIME SET/PRESET button down until the display flashes.
2. Release the button.



3. Press the HOUR/UP button repeatedly until the hour is set correctly.



4. Press the MIN/DOWN button repeatedly until the minutes are set correctly.

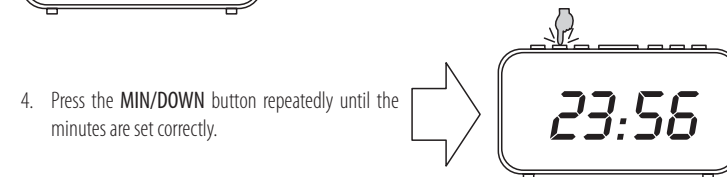

5. Press the TIME SET/PRESET button to save the time setting.
NOTE: The time setting will auto-save if no buttons are pressed for 5 seconds.
The time is now set.



RADIO OPERATION

1. To turn the radio on, press the **OFF/FM/AM** button repeatedly to select FM or AM operation.



2. Press the **HOUR UP** or **MIN/DOWN** button to tune up or down the band. Press briefly to tune in steps, press and hold to search for a station.



3. Press the **ALARM 2/VOL+** button to increase the volume level or press the **ALARM 1/VOL-** button to decrease the volume.



4. Move the FM antenna to improve FM signal quality. To improve AM reception, move the radio around or rotate it.



5. To turn the radio off, press and hold the **OFF/FM/AM** button.

STATION PRESETS

Your radio can store up to 20 of your favourite stations as presets (10 FM, 10 AM) for quick recall.

To store a preset station

1. Tune to the station you want to store as a preset.
2. Press and hold the **TIME SET/PRESET** button. 'P01' will flash on the display.



3. Press the **HOUR/UP** or **MIN/DOWN** button to select the preset number you want to store.



4. Press the **TIME SET/PRESET** button to store the preset.



To tune to a preset station



1. Press the **TIME SET/PRESET** button repeatedly to step through the presets available. The preset numbers will count up on the display.

SETTING THE ALARM TIME

Example: set Alarm 1 or Alarm 2 to ring at 8:25 AM.

1. Switch off the radio.
2. Press and hold the **ALARM 1/VOL-** button to set Alarm 1 or the **ALARM 2/VOL+** button to set Alarm 2. The alarm time will flash on the display.
3. Release the button.



4. Press the **HOUR/UP** button repeatedly until the alarm hour is set correctly. 8 in the example.



5. Press the **MIN/DOWN** button repeatedly until the alarm minutes are set correctly. 25 in the example.



6. Press the **ALARM 1/VOL-** button (Alarm 1) or **ALARM 2/VOL+** button (Alarm 2) to store the setting. The alarm time is now set.



WAKING UP TO THE RADIO OR BUZZER

1. After setting the alarm time, press the **ALARM 1/VOL-** or **ALARM 2/VOL+** button repeatedly to choose a wake up mode for Alarm 1 or Alarm 2. The Alarm 1 or 2 indicators will come on and indicate the wake-up mode (Alarm 1 examples shown below).



2. Switch the radio off. When the alarm time comes the buzzer or radio will sound.

WHEN THE ALARM SOUNDS

To switch the alarm off

1. Press the **OFF/FM/AM** button to switch the alarm OFF.



THE SNOOZE FUNCTION

To extend the alarm time by 9 minutes

1. Press the **SNOOZE/SLEEP/DIM** button. The alarm will switch off temporarily. After 9 minutes the alarm will sound again.



THE SLEEP FUNCTION

When the radio is playing you can programme the clock to switch off after a predetermined time.

1. Set the radio to play.
2. Press the **SNOOZE/SLEEP/DIM** button. The sleep time of 90 minutes appears.



3. Press the **SNOOZE/SLEEP/DIM** button repeatedly to set the sleep time you want in the range 10 - 90 minutes. After the preset time the radio will switch off. If you have set the alarm, the radio will switch on again at the alarm time.

CARE AND CLEANING

UNPLUG the unit from the mains power. The surface of the unit can be cleaned with a dry cloth. Never use abrasives, abrasive cloths or chemical solvents.

SPECIFICATIONS

Supply Voltage 220 - 240 V ~, 50 Hz: 3 W
Backup Battery: 3V (2 x AA)
RF Range : FM 87.5 - 108 MHz:
..... AM 522 - 1620 kHz
Weight: 0.377 kg



Class II construction double insulated. This product must not be connected to earth



WARRANTY

Your Tesco appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the TESCO electrical help line. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights. Tesco Helplines: Landlines 0800 323 4060 (Freephone from a BT landline). Mobiles 0330 123 4060 (Calls cost no more than calls to geographic numbers eg. 01 or 02 and are included in inclusive minutes and discount schemes).



UK: Waste electrical products / batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities. See www.recycle-more.co.uk or in-store for details. ROI: Produced after 13th August 2005. Waste electrical products/ batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

TESCO

Tesco Stores Ltd, Welwyn Garden City AL7 1GA, U.K.
Tesco Ireland Ltd., Gresham House, Marine Road, Dun Laoghaire, Co. Dublin.