



| Original                                                                            | Recharge     |
|-------------------------------------------------------------------------------------|--------------|
|    | Power        |
|    | 123 / keypad |
|    | Extra        |
|    | Up           |
|    | Left         |
|    | OK           |
|    | Right        |
|    | Down         |
|    | Return       |
|    | Vol Up       |
|  | Home / Hub   |
|  | CH Up        |
|  | Vol Down     |
|  | CH Down      |
|  | Play / Pause |
|  | Mute         |
|  | Play         |

| Original                                                                              | Recharge              |
|---------------------------------------------------------------------------------------|-----------------------|
|    | Pause / Step / Freeze |
|    | Stop / Hold           |
|    | Rec / Rec Mode        |
|    | << / Tune-            |
|    | >> / Tune+            |
|    | I<< / Preset-         |
|    | >>I / Preset+         |
|    | S.Mode                |
|    | AD                    |
|    | AD / Subt.            |
|  | Picture               |
|  | P.Size                |
|  | Sleep                 |
|  | Auto Prog             |
|  | Tools                 |
|  | TTX/MIX               |
|  | Source                |





| Original | Recharge                                                                            |                                   |
|----------|-------------------------------------------------------------------------------------|-----------------------------------|
| Menu     |    | Menu / Home                       |
| Info     |    | Info / Angle                      |
| Exit     |    | Exit / Cancel / Clear             |
| CH List  |    | Display / Media                   |
| 1        |    | 1                                 |
| 2        |    | 2                                 |
| 3        |    | 3                                 |
| 4        |    | 4                                 |
| 5        |    | 5                                 |
| 6        |   | 6                                 |
| 7        |  | 7                                 |
| 8        |  | 8                                 |
| 9        |  | 9                                 |
| Guide    |  | Guide / EPG / -/--                |
| 0        |  | 0                                 |
| Fav CH   |  | Fav / Marker / PC                 |
| Search   |  | Shift + Yellow / YouTube / Repeat |

| Original    | Recharge                                                                              |                             |
|-------------|---------------------------------------------------------------------------------------|-----------------------------|
| Prime Video |    | Shift + Blue / Prime        |
| Rakuten Tv  |    | Shift + Green / APP /       |
| Netflix     |    | Shift + Red / Netflix /     |
| Still       |    | Shift + Pause / Step /      |
| Dual I-II   |    | Shift + Audio / Lang I/II   |
| Add / Del   |    | Shift + Eject / Surround    |
| TV / DTV    |    | Shift + TV/Radio / Program  |
| E-Manual    |    | Shift + OK                  |
| Media P.    |    | Shift + Display / Media     |
| -/--        |   | Shift + Guide / EPG / -/--  |
| PRE-CH      |  | Shift + Fav / Marker / PC   |
| Red         |  | Red / Netflix / Search      |
| Yellow      |  | Yellow / YouTube / Repeat   |
| Blue        |  | Blue / Prime Video / Random |
| Green       |  | Green / APP / Repeat        |
|             |                                                                                       |                             |
|             |                                                                                       |                             |

