 
 
 




| Original                                                                                         | Recharge                                                                                                  | Original                                                                                      | Recharge                                                                                                          |
|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  Power          |  Power                   |  Up        |  Up                            |
|  Open/Close     |  Eject / Surround        |  Left      |  Left                          |
|  Dimmer         |  Shift + Mute / Dimmer   |  Enter     |  OK                            |
|  Display        |  Display / Media         |  Right     |  Right                         |
|  Sleep          |  Sleep / Timer           |  Menu      |  Menu / Home                   |
|  CD             |  Shift + 3               |  Down      |  Down                          |
|  Tuner          |  Shift + 6               |  Return    |  Back / Return                 |
|  Line           |  Subtitle / EQ           |  Vol+      |  Vol+                          |
|  Digital        |  D.Menu / Top            |  Tone Ball |  Smart / List                  |
|  USB           |  Shift + 8              |  Vol-     |  Vol-                         |
|  Pause        |  Pause / Step / Freeze |  Muting  |  Mute / Dimmer               |
|  I<</< Preset |  I<< / Preset-         |  Memory  |  TV/Radio /                  |
|  Play         |  Play / Slow           |  Random  |  Blue / Prime Video / Random |
|  Preset >/>>I |  >>I / Preset+         |  Repeat  |  Green / APP / Repeat        |
|  <</< Tun     |  << / Tune-            |  1       |  1                           |
|  Stop         |  Stop / Hold           |  2       |  2                           |
|  Tun >/>>     |  >> / Tune+            |  3       |  3                           |



