

MCombo®



User Manual

Swing Chair

Newacme LLC



Mcombo.com

 WEBSITE
www.mcombo.com

 Consumer Hotline
1-323-597-1109

 E-MAIL
sales@mcombo.com

 Monday to
9:00AM - 5:00PM

Newacme LLC, 2808 Vail Ave, Commerce, CA, 90040

Manual Version: 1.2.0

Model : 6055-4090



I. About MCombo



MCombo® with the mission of "bringing more convenience to family and travel life", the vision of "becoming the first choice and trusted brand of customers in outdoor series", and the core value of "providing high-quality and high-standard outdoor products", awakens people pay attention to the outdoor garden life itself, extend the time to play with family and partners in the outdoor garden, and enjoy a healthier and more comfortable life.

This user manual is for 3-seat swing chair, 6055-4090. MCombo® reserves the right to change, update any content contained herein without prior notice.

Please read, understand, and follow this user manual before assembling and using the swing. Save this manual for future reference. It's the responsibility of the user for potential risks of injuries due to inappropriate use not obeying safety instructions in this manual.

II. Safety Guidelines

WARNING

For your own safety, please strictly follow the instructions in this manual and follow the proper order, otherwise personal injury may result!

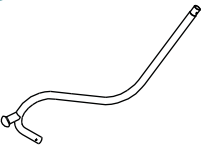 
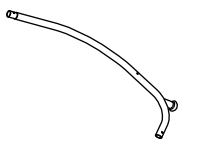 
 
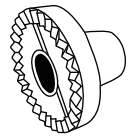 
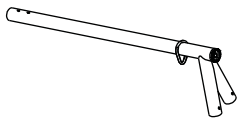 
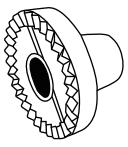 
 
 
 
 
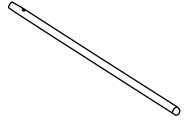 
 
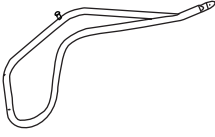 
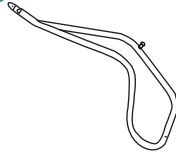 



 
 
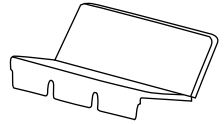 

 
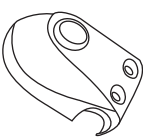 

 
Before you proceed, please read the following safety precautions:

- Separate and count all parts and hardware.
- Install not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Tighten all nuts and bolts securely.
Never use power tools or excessive force during assembly and tightening of bolts.
- Always place the product on a flat, steady and stable surface.
- It is recommended to protect in case of strong wind or rain and in your absence.
- Do not use candles, matches, or any open flames in or near the swing.






III. Maintenance

- Wash frame parts and fabric with mild soap and water, rinse thoroughly.
- Dry frame completely and allow the fabric to drip dry.
- Do not use bleach, acid, or other solvents on the fabric or frame parts.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your swing.

Part List

A  2PCS Front Leg	B  2PCS Back Leg	C  1PC Left Top Bar	C1  1PC Rotation Base (preinstalled on part C)	D  1PC Right Top Bar
D1  1PC Rotation Base (preinstalled on part D)	E  2PCS Connecting Bar	F  1PC Left Back Support	F1  1PC Right Back Support	G  2PCS Left Bottom Support
G1  2PCS Right Bottom Support	H  2PCS Spring Hook	I  2PCS Left Arm Frame	I1  2PCS Right Arm Frame	J  1PC Seat Frame with the cloth
K  2PCS Canopy Frame (Right&Left)	P  1PC Right Cup Table	L  2PCS Canopy Frame (Front&Back)	M  1PC Canopy	N  1PC Cushion
O  1PC Left Cup Table	X  2PCS Knob	K1  2PCS Ceiling Rotation Connector	Y  1PC Allen Wrench	Z  1PC Double-ended Spanner

     Screw Pack

W  3PCS 6*32mm Bolt Set	Q  6PCS 8*55mm Bolt Set	R  6PCS 8*65mm Screw	S  2PCS 6*63mm Bolt Set	T  4PCS 68*72mm Bolt Set
---	---	--	--	--

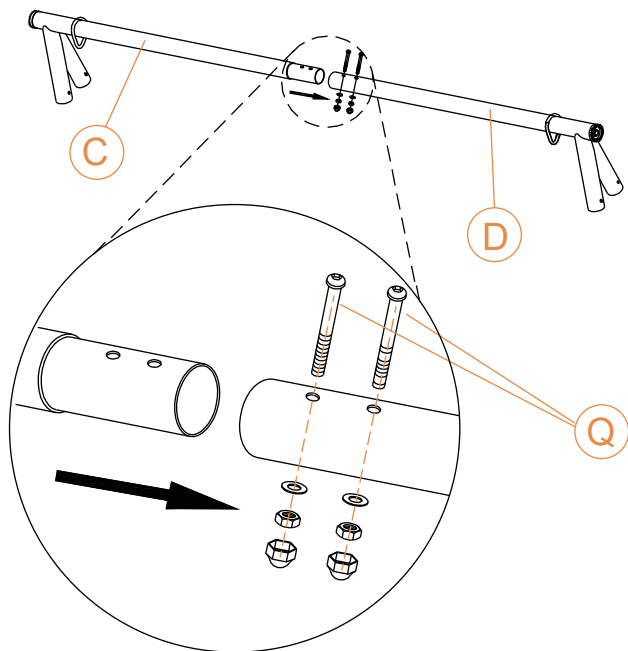 
IV. Assembly Steps

Preparation

Please remove all protective foam. Before assembling, make sure that you lay out and identify all parts listed below in the parts list. Install on level ground.


Tips: For a smooth installation, keep the parts horizontal during the installation of the screws.

1




Put **#C**(Left Top Bar) into the **#D**(Right Top Bar) using two **#Q**(8*55mm Bolt Set).

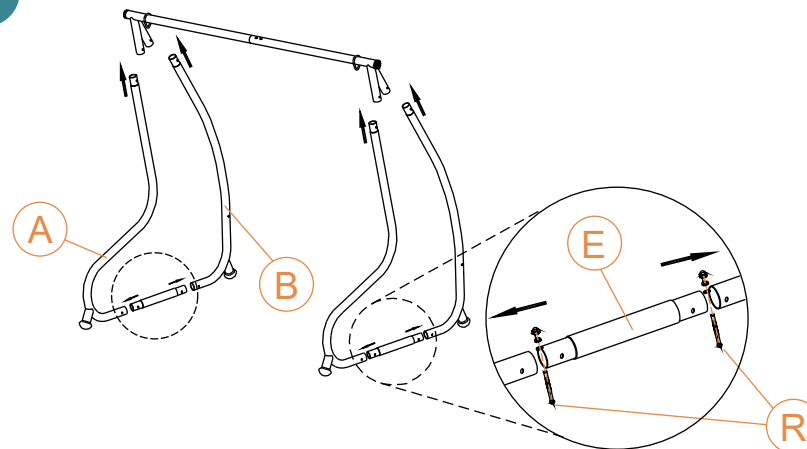 2




Connect **#E**(Connecting Bar) to **#A**(Front Leg) and **#B**(Back Leg) with four **#R**(8*65mm Screw).

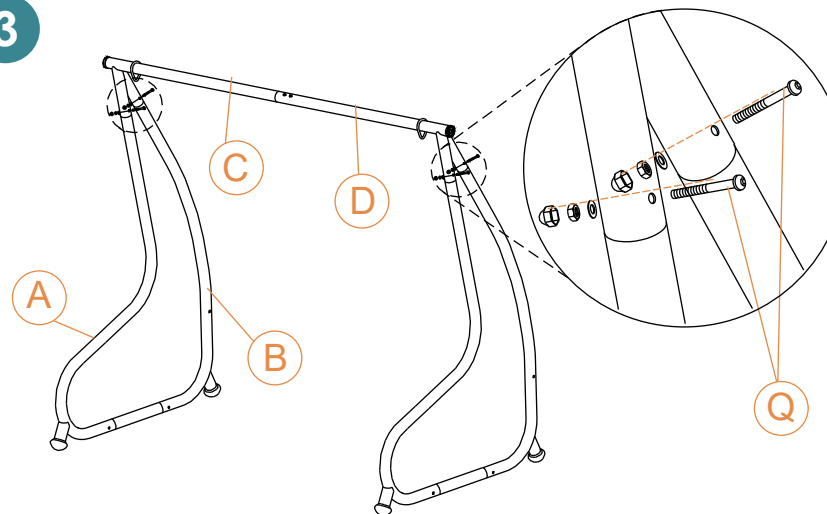 3




Connect **#A**(Front Leg), **#B**(Back Leg) and **#C**(Left Top Bar) / **#D**(Right Top Bar) with four **#Q**(8*55mm Bolt Set).

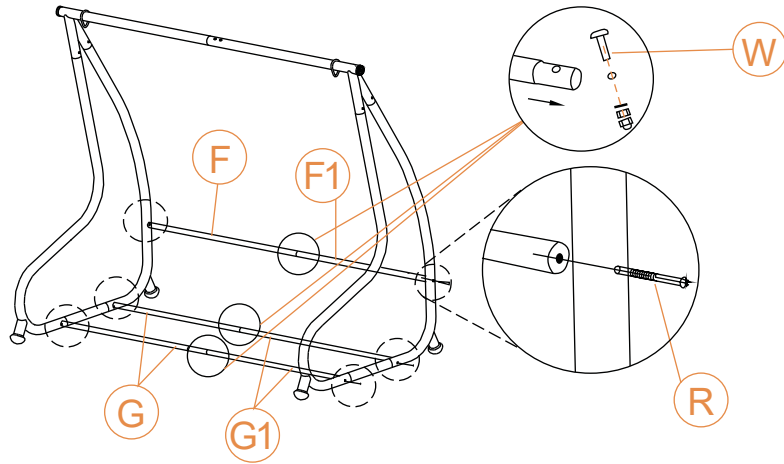 4




Connect **#F**(Left Back Support) to **#F1**(Right Back Support). Connect **#G**(Left Bottom Support) to **#G1**(Right Bottom Support) with three **#W**(6*32mm Bolt Set). Connect the ends of the three rods to **#C**(Left Top Bar) and **#D**(Right Top Bar) with six **#R**(8*65mm Srcw).

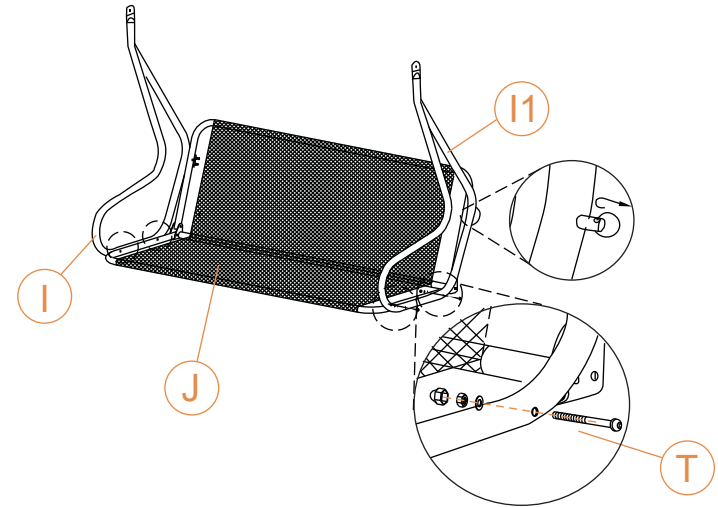 6




Attach **#I**(Left Arm Frame) and **#I1**(Right Arm Frame) to **#J** (Seat Frame with the cloth) using four sets of **#T**(8*72mm Bolt Set).

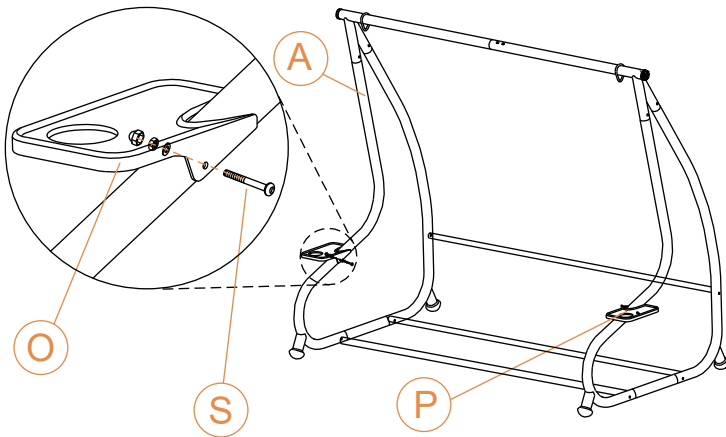 5




Attach **#O**(Left Cup Table), **#P**(Right Cup Table) to **#A**(Front Leg) with **#S**(6*63mm Bolt Set).

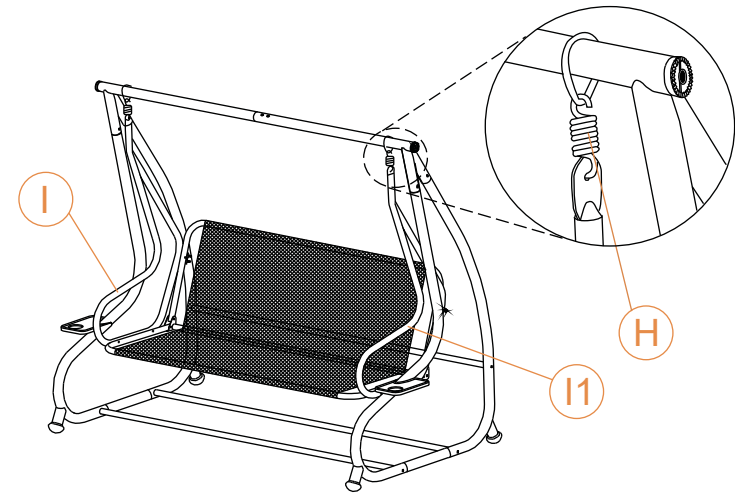 7




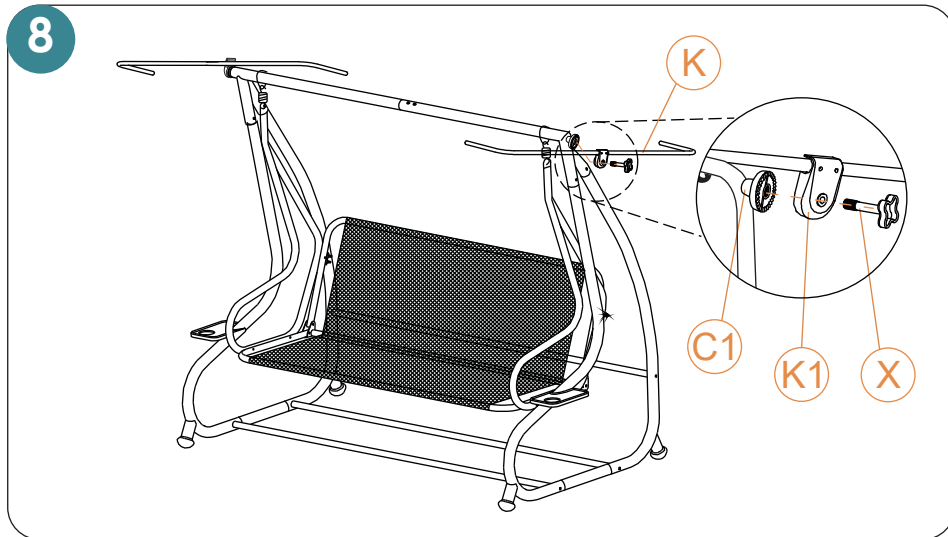 Attach **#I**(Left Arm Frame), **#I1**(Right Arm Frame) to **#C**(Left Top Bar), **#D**(Right Top Bar) through **#H**(Spring Hook).




Attach **#K**(Canopy Frame (Right&Left)) to **#C**(Left Top Bar) and **#D**(Right Top Bar) using **#X**(Knob).

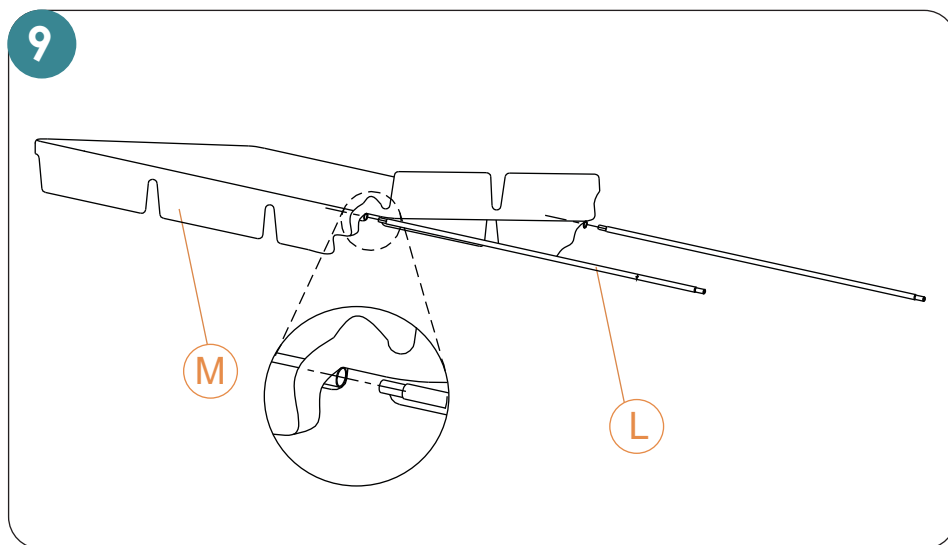 
Tip: Do not tighten the **#X**(Knob) first before the installation is complete.



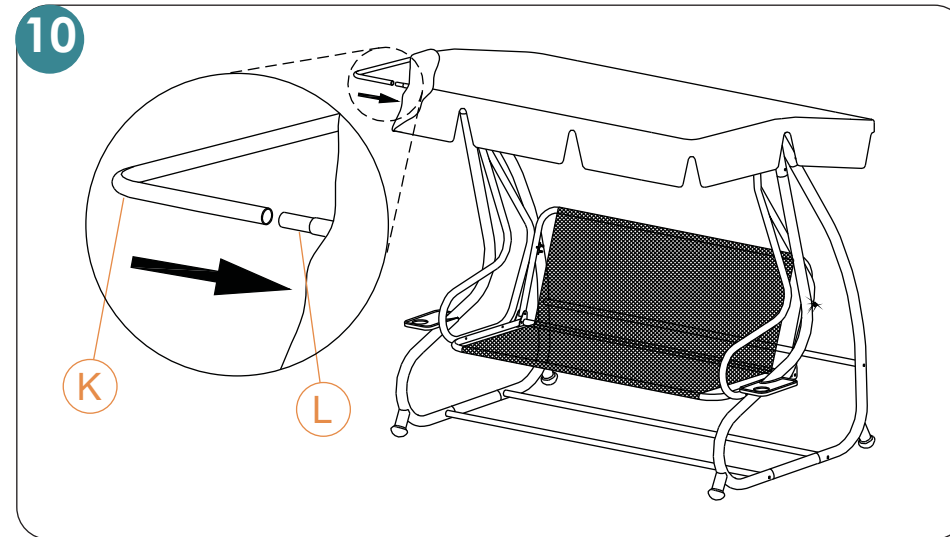 
Insert **#L** (Lower Canopy Frame) into **#M**(Canopy).



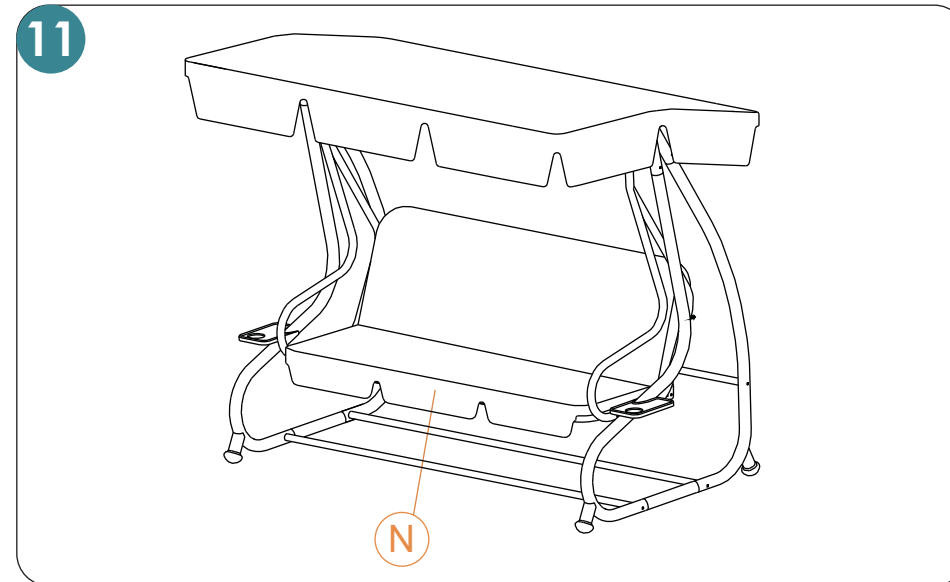 
Connect **#K**(Canopy Frame (Right&Left)) to **#L**(Lower Canopy Frame).



Put **#N**(Cushion) on the seat .

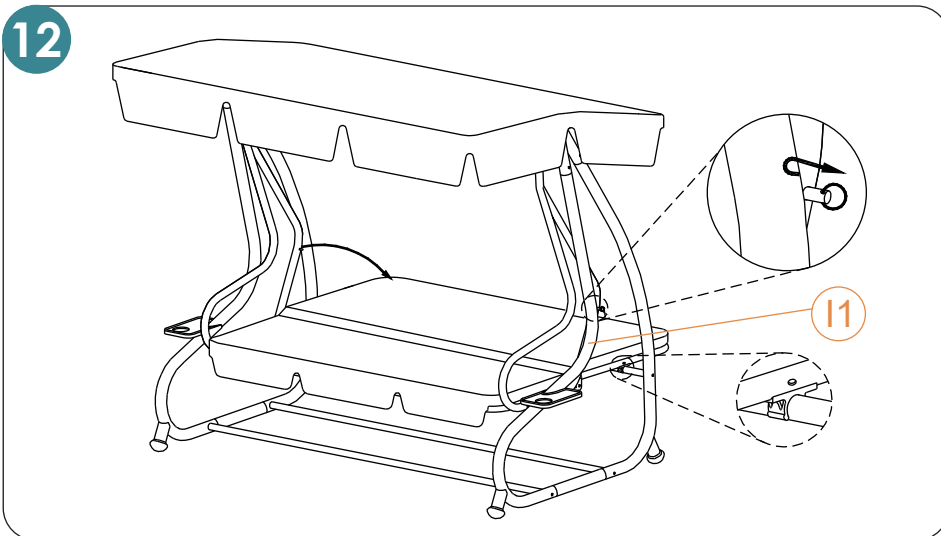 

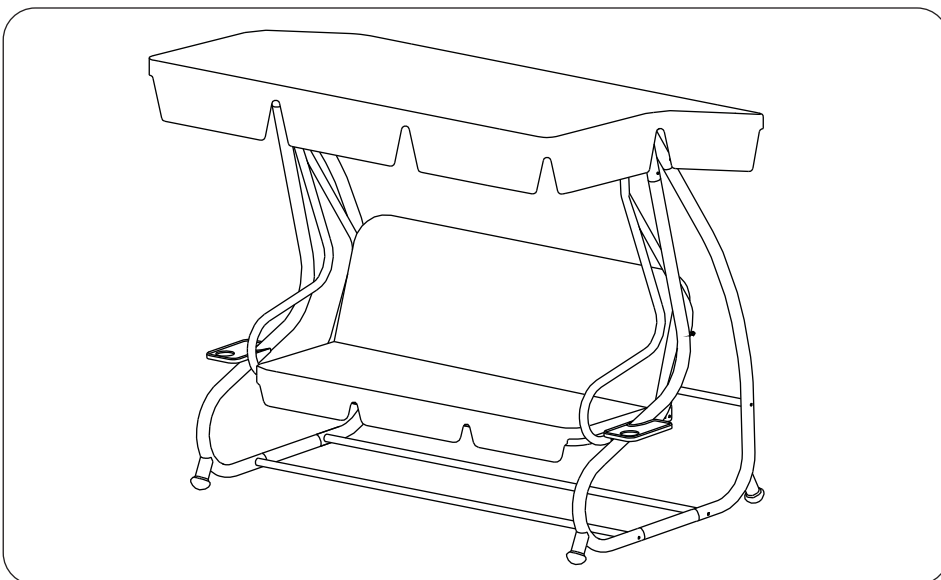 Pull the pull ring on the #11(Right Arm Frame) apart so that the #11(Right Arm Frame) is separated from the seat frame and place the backrest flat.



Congratulations, your swing chair has been installed!

V. Warranty Disclaimer

Thank you for your interest in the products and services of MCombo®.

This Limited Warranty applies to physical goods, and only for physical goods, purchased from MCombo®.

What does this limited warranty cover? _____

This Limited Warranty covers any defects in material or workmanship under normal use during the Warranty Period.

During the Warranty Period, MCombo® will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship, under normal use and maintenance.

How long does the coverage last? _____

The Warranty Period of Physical Goods purchased from MCombo® refers to the table below. A replacement Physical Good or part assumes the remaining warranty of the original Physical Good or 180 days from the date of replacement or repair, whichever is longer.

Swing Frame

1 YEAR

Swing Fabric

6 MONTHS

This Limited Warranty does not cover any problem that is caused by:

Conditions, malfunctions, or damage not resulting from defects in material or workmanship

To obtain warranty service, you can contact us via email sales@mcombo.com. Contact us to determine the issue and the appropriate solution for you. Before this, you can take some photos of your product and send them to us, so that we can reply to you more quickly and accurately.

VI. Return/Replacement Policy

MCombo® All of item come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.

Please disassemble the item before you return it, unless there will be huge costs oversized.

MCombo® Does not responsible for the returns that customer bought by mistake or changed their mind and other non-quality issues. The customer is responsible for freight costs unless the item is defective. Items returned due to being refused by the customer or deemed undeliverable by freight carrier are subject to fees for freight both ways and a 15% restocking fee.