



Installation instructions to install an Airlab module into an existing Airlab-DT.

Instructions:

1. Remove the screw cover strips on top and bottom of the module.
2. Remove all screws from the blank panel or the module that you want to exchange on the position.
3. Lift the front / module.
4. Remove all the shuttle cable on the module. If you remove a blank panel, these cable will not be there.
5. Remove the blank plastic plate on the backside of the Airlab-DT on the position where you want to include the new module. If you want to exchange a module or replace it for another version module, first check if the back print you have received with your Airlab-DT module is the same or not. If this back print is different, you need to exchange this print also on the backplane.
6. Connect the delivered shuttle cables that has been included at the new module on the MUX board and the back print.
7. Now connect the new module with the shuttle cables.
8. Place the module carefully inside the console again and montage the module again with screws.
9. Test everything before you mount all front panels again.

Good luck!