



# QUICK SET UP GUIDE


## BROADWAY

### VDTJ-1500

#### Desktop Bluetooth® Jukebox


### BASIC SETUP OF THE VDTJ-1500 JUKEBOX:

1. Determine the ideal location for the turntable. Unit should be placed on a sturdy surface away from any heat or water sources.
2. Connect the power cable to a nearby power supply.
3. Unwind the FM antenna wire and extend to full length.
4. Press the **⏻/FUNC.** button to turn the unit on.
5. Press the **⏻/FUNC.** button to select the source (CD/FM/AUX/BLUETOOTH®).
6. Rotate the VOLUME knob to adjust the desired sound level.
7. Press and hold the **⏻/FUNC.** button to turn the unit off.

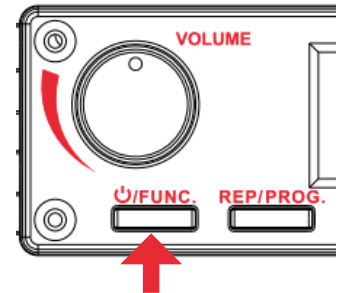

### CONNECT BLUETOOTH®

1. Press **⏻/FUNC.** button to select Bluetooth® mode and then the display will show "bt".
2. Set the Bluetooth® function of your external device when the apparatus is on.
3. Set to search Bluetooth® device on your external device. Note: The effective distance between your external device and this apparatus is up to 33 feet (10 meters).
4. Find the "VICTOR VDTJ-1500" on the paired devices list on your external device and connect. If prompted for a password, enter "0000" then press "OK" on your external device.
5. A few seconds later your Bluetooth® connection is success and you will hear a series of rising tune.

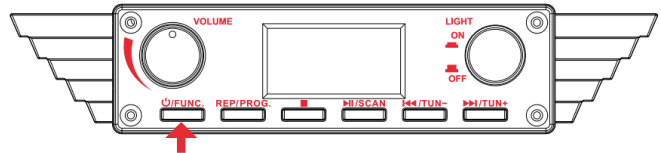

*\*This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at [www.victor-brand.com](http://www.victor-brand.com). All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.*

**READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION**