



www.homewellproducts.com/rock

Solar Charging Bluetooth Rock Speakers



Instruction Manual

Thank you for purchasing The Homewell Rock Speaker! This solar powered outdoor rock speaker with high-fidelity sound is compatible with any Bluetooth-enabled device. Play your favorite tunes!

WHAT'S INCLUDED



Solar Bluetooth Speaker- 1



36" USB Charging Cable- 1



For more info including connection demo videos, please visit our website: www.homewellproductscomrock or scan QR code

Pairing One Speaker with a Bluetooth Device:

STEP 1. Turn on the speaker by pressing the power button on the back of the speaker.

STEP 2. A tone will sound and the Bluetooth indicator light will quickly flash blue. Now the speaker is in discovery mode and is ready to be paired with a new device.

STEP 3. Go to Bluetooth settings on your phone or device and pair with "Homewell Speaker" . When the speaker is successfully paired, a sound will chime and bluetooth indicator will have a steady blue light.

STEP 4. Play your favorite music and enjoy.

NOTE: If you would like to pair the speaker to a different device, you must unpair the speaker from the currently paired device first if that device is still in connection distance.

NOTE: These Homewell Speakers are capable of pairing up to 2 speakers at once. See below for special instructions.

NOTE: The maximum pairing distance between the speaker(s) and your Bluetooth-enabled device is about 30 feet.

NOTE: Even if bluetooth device is disconnected the speaker(s) will continue to be on until manually turned off with the power button.

Pairing Two Speakers with a Bluetooth Device:

You will need to pair the two speakers to each other then connect the main Homewell Speaker to your device.

STEP 1. Turn on the speakers by pressing the power button on the back of the speakers.

STEP 2. A tone will sound from each speaker and the Bluetooth indicator lights will quickly flash blue. Now the speakers are in discovery mode and are ready to be paired to each other.

STEP 3. Double press the "Pairing" Button on the back of one of the speakers and a chime will sound. The main speaker will now flash blue and the secondary speaker will have a steady blue light.

STEP 4. Go to Bluetooth settings on your phone or device and pair with "Homewell Speaker" . When successfully paired, a sound will chime and the bluetooth indicator will have a steady blue light on one speaker and a flashing light on the other.


STEP 5. Play your favorite music and enjoy both speakers at the same time.

NOTE: Both speakers must be Homewell Speakers to be able to be paired to each other.

NOTE: Before pairing both speakers, make sure neither of them are connected to any Bluetooth device. (If already connected, select "Homewell Speaker," and unpair)

NOTE: Once speakers are paired to each other, speakers will look for each other automatically at each start up. Wait for the chime sound before playing your favorite music.

NOTE: The speakers have a maximum pairing distance of 30ft. Make sure speakers and Bluetooth device are within this range while pairing and listening to music.

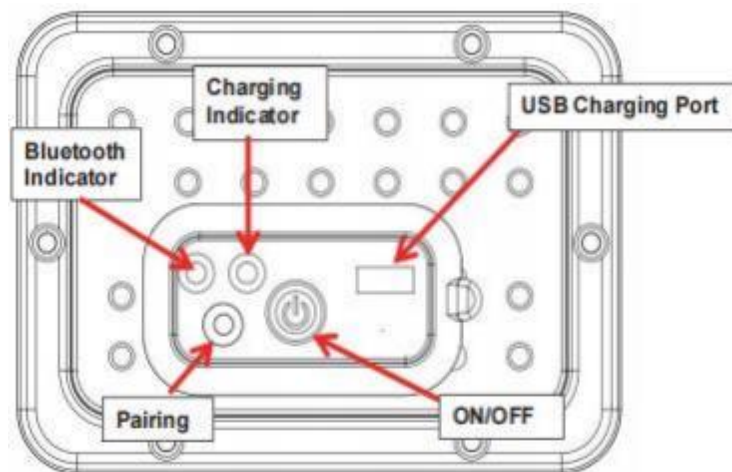

Battery Charging

Charging the speaker with USB Cable

Plug the small end of the Micro USB Charging Cable into the Micro USB port on the back of the speaker. Connect the larger end of the Micro USB Charging Cable into your computer or other USB charging device. Recommended charge time with USB cable is about 5-6 hours. When the speaker is charging, the charging indicator light will light up RED, when it is fully charged the charging indicator will turn GREEN. Remove the Micro USB Charging Cable from the speaker after charging is completed.

Charging the speaker with the solar panel

Allow the solar speaker to receive full days of sunlight to fully charge the battery prior to first use. Place the solar speaker in a spot that will receive the maximum amount of sunlight during the day. Position the solar panel of the speaker to receive at least 3-4 hours of direct sunlight.

NOTE: The solar panel should be cleaned periodically with a damp cloth to help maintain optimum performance. Do not use any cleaners with chemicals, solvents, or harsh abrasives .

NOTE: Charge times may vary depending on solar conditions.

Battery Replacing

If you notice the battery performance is significantly reduced you have the option to replace it. Unscrew the cover from the control box on the back of the speaker and remove the battery. Replace with a new standard 18650 Lithium ion, 2000 mah 3.7 V rechargeable battery. Screw the cover back on with all six screws.

NOTE: Dispose of the old battery in accordance with local, state, and federal regulations.

NOTE: When storing the unit for an extended period of time you may remove the battery to extend it's life.

NOTE: In order to preserve battery life, we recommend bringing the speaker inside your home during the winter. Temperatures below -4°F (-20°C) will reduce the battery life.

ONE YEAR LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this product to be free of defects in material and workmanship for a period of one year from the date of purchase. This warranty only applies to the original consumer purchaser and only to products used in normal use and service. The manufacturer's only obligation and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion provided that the product has not been damaged through misuse, abuse, accident, modification, alternation, neglect, or mishandling. Proof of purchase must accompany all warranty claims.

WHAT IS NOT COVERED

This warranty does not apply to products that are found to have been improperly installed, set-up, or used in any way not in accordance with the instruction supplied with product. This warranty does not apply to a failure of the products as a result of an accident, misuse, abuse, negligence, alternation, or faulty installation. Batteries supplied with this product are not included in this warranty. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warranty and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. This warranty does not cover consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of the product.