


IFB


DeepClean®

POWERED BY 

WASHING MACHINE USER MANUAL


Elena ZWS/ZSS 6510
Elite MXS/ZRS/ZLS/ZSS/MSS/ZMS 7012
Senator ZMS 8012
UF421PKMAN653 I

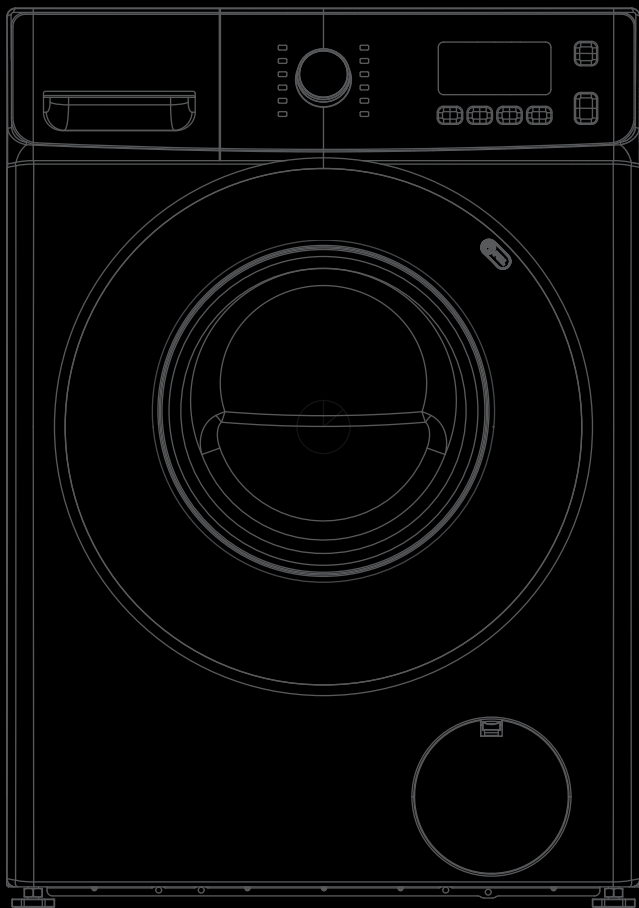

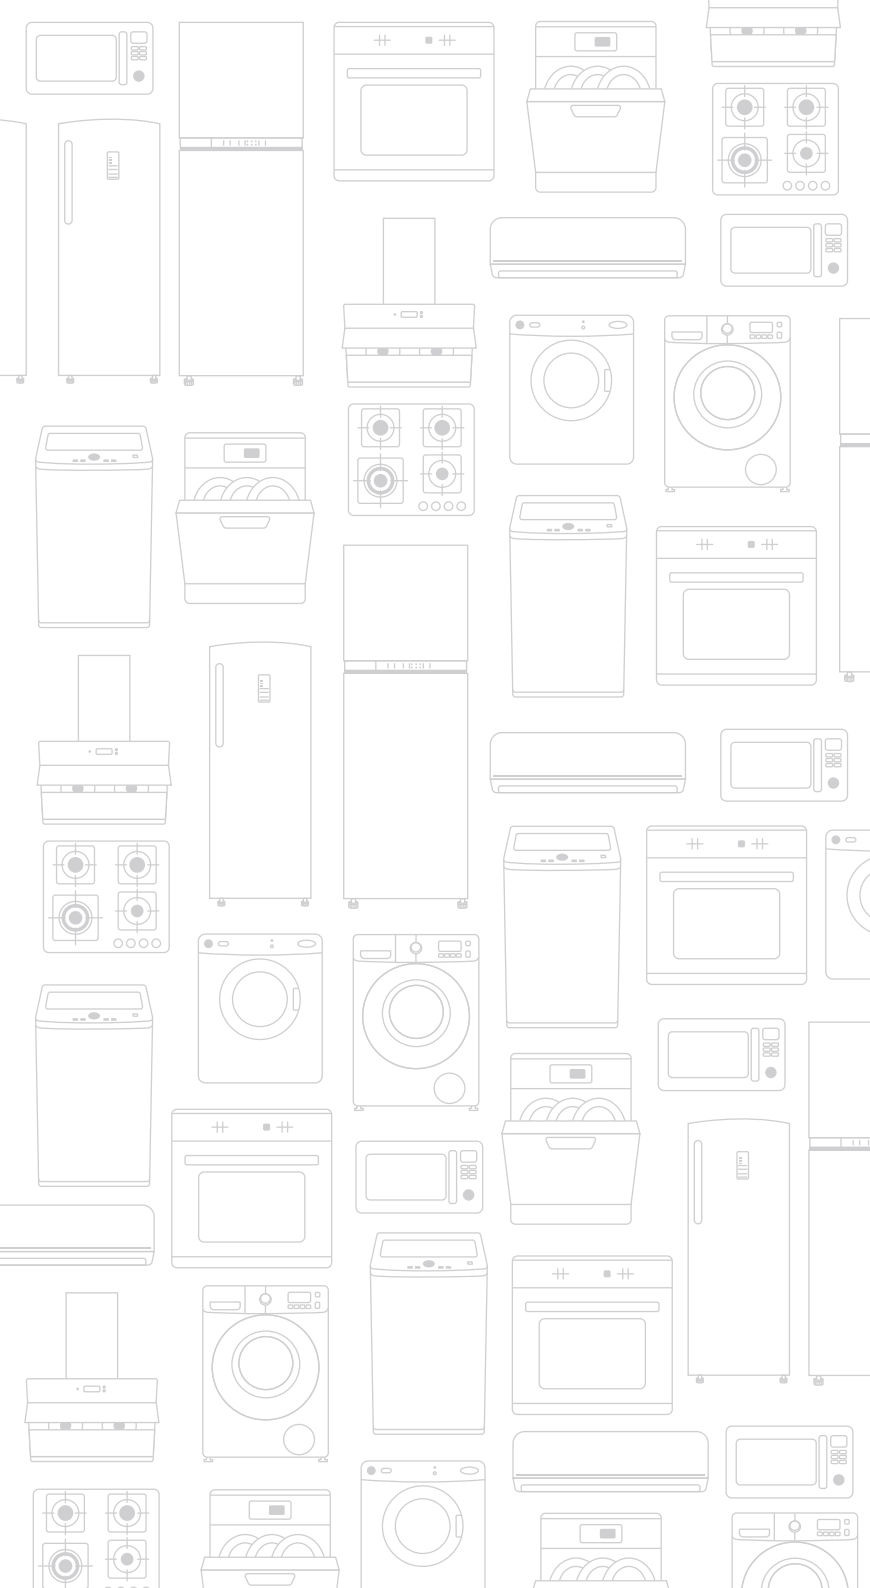

Welcome to the IFB Family

Get ready to experience excellence
in washing and long lasting peace
of mind. Happy Laundry Days to you!

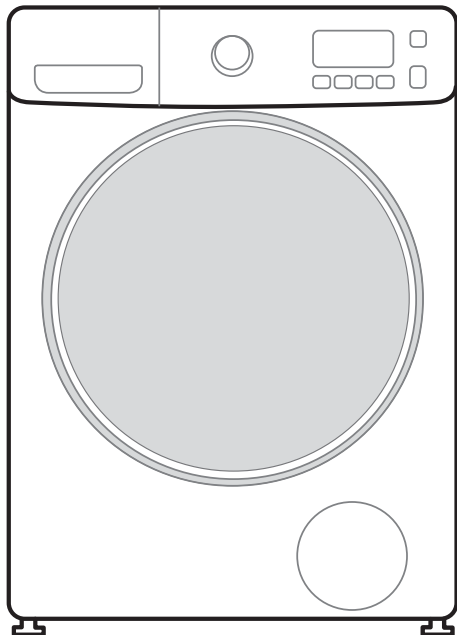

Front Load Washer

Contents

The A to Z of Your Washing Machine	06
---	----

The Display Panel	08
--------------------------	----

Safety Guidelines

Installation	12
--------------	----

Instructions	14
--------------	----

Caution	15
----------------	----

About eWaste	19
---------------------	----

Section 1 Getting Started With Your Washing Machine

Installation and Safety Guidelines	21
------------------------------------	----

Before You Start	25
------------------	----

Section 2 Running Your Machine

6 Easy Steps For Doing Your Laundry	26
-------------------------------------	----

Finishing	32
-----------	----

Program Guide	33
---------------	----

Wash Options	35
--------------	----

Wash Guide Map	43
----------------	----

Key Features	48
--------------	----

Section 3 Getting More From Your Machine

Tips for Best Results	53
-----------------------	----

Stain Treatment	56
-----------------	----

Maintenance and Cleaning	60
--------------------------	----

Section 4 Useful Information

Troubleshooting	65
-----------------	----

Display & Error Codes	74
-----------------------	----

Technical Specifications	78
--------------------------	----

Revisions Sheet	79
------------------------	----


PRECAUTIONS

This appliance meets the required safety standards, but using it improperly could cause injury or property damage. Make sure to read this manual carefully—it covers safety, installation, use and maintenance. Use detergents with low foam to prevent any problems. Following these guidelines will help you get the most out of your new washing machine and keep it running smoothly while avoiding accidents or damage.

The A to Z of Your Washing Machine



The A to Z of Your Washing Machine

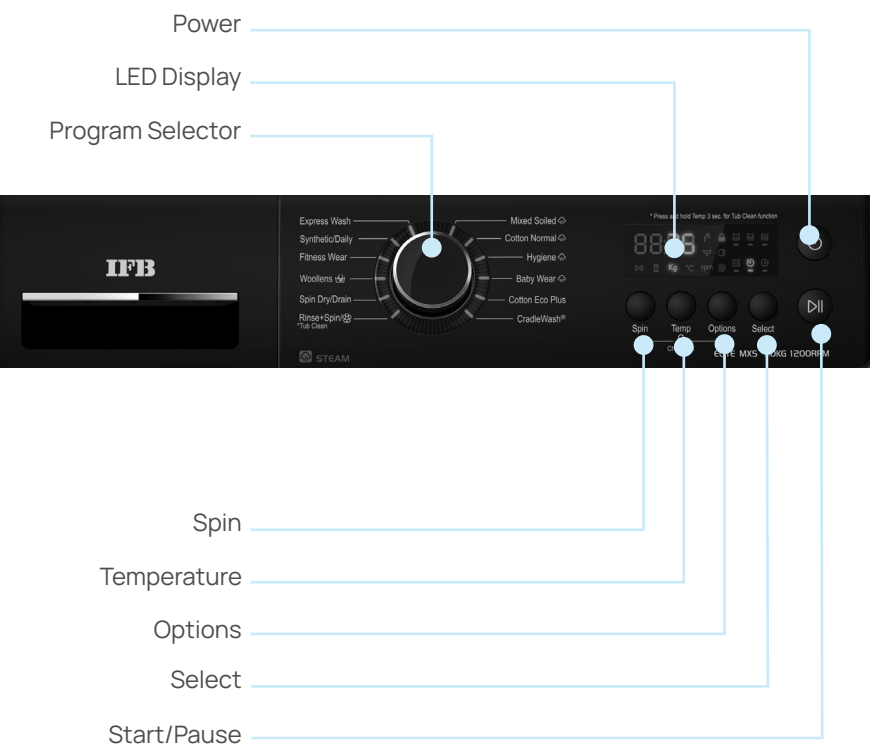

The Display Panel



1 SPIN

To select/change Spin Speed use this button.

2 TEMPERATURE

To select the different temperatures available use this button.

3 OPTIONS

Select the program by turning the program selector. Then press this button to select the different Options available for the chosen program.

4 SELECT

Use this button to select the option.

5 START/PAUSE

LED flashes when door is closed or during Pause mode, remains OFF when door is open and glows when program is running.

The Display Panel



6 TIME LEFT

Glows to indicate the time left.

7 KG

Glows to indicate the maximum capacity of the program in Kg.

8 °C

Glows when you are selecting the Temperature.

9 RPM

Glows when you are selecting the Spin Speed.

10 TIME STATUS

Displays Program Time, Spin Speed, Temperature, Error Codes and other status.

11 TAP

Glows when the water is filling.

The Display Panel



12 DRAIN

Glows when water is drained during the wash process.

13 CHILD LOCK

Glows when the Child Lock function is selected and flashes to indicate deselection.

14 DOOR

Glows when the door is open and turns OFF when door is locked. It flashes to indicate that the door is unlocking.

15 SPIN CANCEL

Glows when the selected Spin Speed is '0' (No Spin).

The Display Panel



16 OPTIONS BAR

Glows when the corresponding option is selected.
Flashes when the option is available for selection.
Remains OFF if the option is not available for selection

17 POWER ON/OFF

Turn the machine ON or OFF with this button.

18 START/PAUSE

Touch this button once to START/PAUSE the machine.



Safety Guidelines

FOR INSTALLATION

Read all instructions & explanations carefully before installation. Choose the area where the machine will be placed carefully after reading the



Keep the packaging material. It may come in handy when shifting residence.

Not removing all packaging and transit bolts before using your appliance could damage your appliance. Please do not operate your machine until the transit bolts have been removed.



Pre-installation plumbing and electrical connections must be handled by qualified fitters, electricians, or technicians.

All washing machine installation work must be carried out only by authorised IFB Care Service Personnel.

Use only the new hoses provided with the machine. Old hoses should never be reused.

Do not connect your machine to a hot water supply.

This machine works best with water pressure between 0.3 and 10 bar (that's about 3.5 to 10 litres/ minute). If the water pressure is too low, your machine might malfunction.



Your machine comes with ventilating openings on the base. Always put it directly on the floor after removing any carpets.

Keep your machine safe from direct sunlight and rainfall.

Avoid installing the machine in damp areas or bathrooms exposed to direct showers

Don't put the machine on a sloping, uneven, or unstable surface.

Make sure your machine is installed in a room with adequate ventilation. Don't pick a room without windows. And make sure there's at least 4 inches (100 mm) of space between the back of the machine and the wall.

Don't put your washing machine in places where the temperature is below freezing. If hoses freeze, they could burst when under pressure. Also, the electronic control unit might not work if it's too cold (below freezing) or too hot (above 50 °C).

A concrete floor is recommended for installation, as it reduces vibration during the spin cycle compared to wooden floorboards.

Ensure the machine is placed on a stable, level surface to prevent vibrations during operation. All four washer feet should be levelled and balanced against the floor.

Before cleaning your machine, make sure you disconnect the main electricity supply & remove the plug from the socket.

Don't use your appliance near flammable stuff like oil, benzene, or highly flammable gas. These might start fires or explosions. And don't use combustible detergents that can catch fire either.



Safety Guidelines

INSTRUCTIONS FOR USE

Safety first, always. Make sure you read all the instructions carefully before you start using the appliance. Keep the operating instructions handy for future reference



Remember, if cockroaches or other pests cause any damage, the appliance guarantee won't cover it.

Don't install or use a machine that's damaged. Before you plug it in, check if the connection details on the data plate (like fusing, voltage and frequency) match your electricity supply. If you're not sure, reach out to IFB Care for help.

Avoid washing or drying articles contaminated with combustible or explosive substances, such as oil, paint, gasoline, or solvents, to prevent fire or explosions.

Before using the machine for the first time, ensure the transit bolt at the rear is removed (refer to the installation section).

If you're leaving the machine for a while, for example if you're going on holiday, remember to turn OFF the stopcock, especially if there's no floor drain nearby.

Keep children away from the appliance, and closely supervise them when the machine is in use.

Appliances are not intended for use by children. Parents or legal guardians are responsible for supervising or training children on safe product usage. Do not let children clean or maintain appliances without adult supervision.



Caution

A WORD OF WARNING



The manufacturer isn't responsible if there's a problem with the earthing system. Make sure your machine is connected to a grounded outlet with a 16A Fuse or MCB. If you're unsure whether the machine is properly grounded, get it checked by a qualified technician or licensed electrician.

If the earthing connection is not properly carried out, it could lead to electric shocks.

Make sure the machine is connected to a 3-pin socket with good earthing and 16 Amp MCB for protection against short circuits.

Avoid using extension cables with the appliance for safety reasons, as they do not meet the required levels of safety.

When disconnecting the plug, hold the plug itself, not the cord. Don't insert or remove the plug with damp hands.

Overheating could be a real danger.

Your machine has been built according to current safety requirements.

Your machine is totally disconnected from electricity when you switch it OFF at the wall socket and remove the plug, or turn it OFF from the main source, or remove the main fuse, or switch OFF the MCB.



Caution



Letting unauthorised mechanics repair your machine, may pose unforeseen dangers. Only authorised IFB Care Service Personnel should undertake repairs.

Only use a new hose kit to connect your machine to the water supply on site. Don't try to reuse old hoses. If any parts need replacing, make sure to use genuine IFB spare parts. That way, you can be sure your machine meets safety standards.

Faulty connection cables must be replaced by authorised IFB Care Service Personnel to prevent potential danger to the user.

Never stack a washer and dryer without the proper stacking kit. This is dangerous because the dryer could shake off the washing machine while it is in use.

First use after installation—Condensed water droplets may remain inside the drum after assembly and test run. Run the first cycle without garments. Use the Cotton program at the highest temperature, add detergent, DO NOT put any clothes in the machine.

If the trolley vibrates excessively, it needs to be replaced right away. Otherwise, it could make the machine less reliable and shorten its lifespan.

If your machine has a porthole door, keep in mind that the glass might get hot when you're washing at high temperatures. Make sure children don't touch it.

Always ensure the drum is stationary before removing clothes to avoid accidents.

Avoid dragging the washing machine while its running to prevent damage.



Caution

Keep your machine dry to avoid corrosion/rusting.

Don't spill water on the machine. If spills occur, wipe it dry. Your machine should be kept away from floor cleaning chemicals. Don't wash or spray water over the switch or control panel. Keep the machine dry to prevent corrosion and rusting. Make sure to wipe the machine after cleaning the coin trap.



Don't wash shoes or utensils in this appliance.

Check the labels on your clothes for the washing instructions for the fabric.

Use detergents that have been recommended for this washing machine.

Only use dyes specified by the manufacturer for domestic washing machines. Make sure to follow the manufacturer's instructions carefully.

Never use solvent-based cleaning agents in the machine. They can damage parts and produce dangerous fumes. Plus, they can also increase the risk of fire and explosions.

If your clothes have been treated with solvent-based cleaning agents before washing, make sure to rinse them really well in clean water before you put them in the machine.

Avoid using colour run and dye removers containing sulphur compounds, as they can cause corrosion or damage.



Caution

Your machine has been built according to current safety requirements.

During assembly, the machine is tested with water to make sure it performs correctly. Sometimes, a few water droplets may be left inside the drum.

Replace the trolley immediately if excessive vibrations are observed, as it can affect the machine's reliability and lifespan.

Flooding Danger

When you're connecting the drain hose to a washbasin, make sure the water drains away fast to stop the sink from overflowing. Also, make sure the hose is firmly in place so the water flow doesn't push it out. Otherwise, you might end up with flooding.

Be careful to not let things like nails, pins, coins, or paper clips end up in the machine with your laundry. They can damage parts like the suds container or drum, which can then ruin your clothes during the wash.

USE OF APPLIANCE

This appliance is not intended to be used in household and similar applications such as—

- Staff kitchen areas in shops, offices and other working environments,
- Farm houses,
- By clients in hotels, motels and other residential type environments,
- Bed and breakfast type environments, and
- Areas for communal use in blocks of flats or in launderettes.

If the manufacturer wants to limit the use of the appliance to less than the above, this shall be clearly stated in the instructions.

About eWaste

eWaste, or Waste Electrical and Electronic Equipment (WEET), refers to discarded appliances using electricity. To responsibly manage eWaste, follow the guidelines below.



DOs

- Always dispose of end-of-lifecycle products by contacting an authorised local eWaste recycler.
- Do drop off used electronic products, batteries, or accessories at authorised eWaste recyclers.
- Sort packaging materials for responsible waste disposal and recycling options whenever possible or as instructed.



DON'Ts

- Do not dismantle electronic products on your own.
- Never dispose of electronic products in bins marked 'Do Not Dispose'.
- Refrain from giving eWaste to informal sectors like local scrap dealers or rag pickers.
- Do not dispose of your product in garbage bins along with municipal waste that ultimately reaches landfills.

RISKS OF IMPROPER HANDLING OF eWASTE

eWaste usually includes components which, if disposed of improperly, hold environmental consequences such as air, water and soil pollution and also pose risks to human health.

By ensuring your appliance is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. Components and materials used in this washing machine are fully compliant with the Provisions of Hazardous Substances outlined in eWaste Management Rule, 2016.




FOR DETAILED INFORMATION AND DISPOSAL REQUEST
Contact **IFB Care** at **080 695 45678**. Provide your details to our representative to arrange for proper product disposal.

Getting started with your washing machine


Installation and Safety Guidelines

1 SELECTING THE RIGHT SPOT

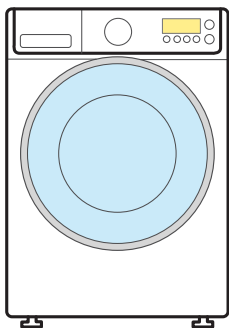


Place the machine on a level floor.

Make sure the machine is close to both water and electrical connections.

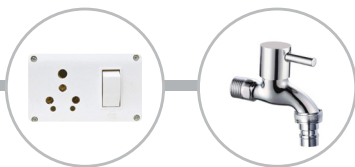

2 REMOVING TRANSIT BOLTS

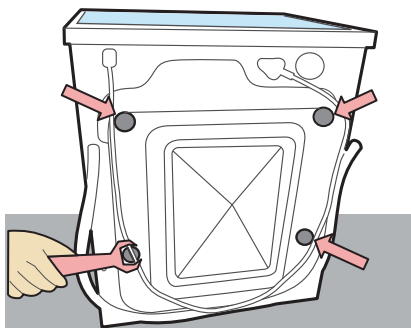

Use a spanner to remove the transit bolts.

Insert the plastic caps provided.


Keep the transit bolts carefully as they will be required in case you need to shift the machine.

Please do not operate the machine until the transit bolts have been removed.

Getting started with your washing machine




Installation and Safety Guidelines

3 LEVELLING

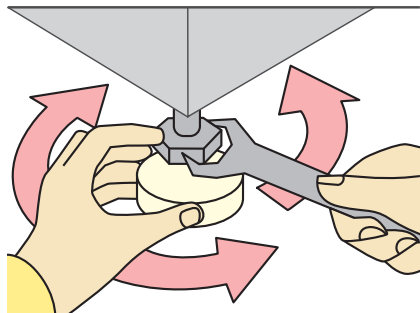

Level the machine by using adjustable screws, as shown.


Make sure all 4 feet are grounded.

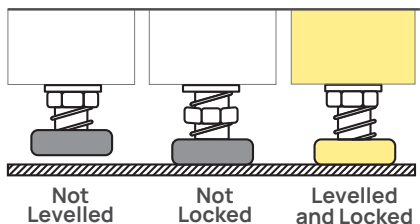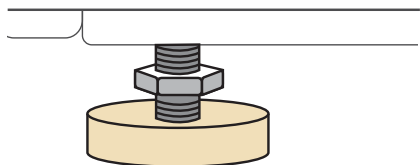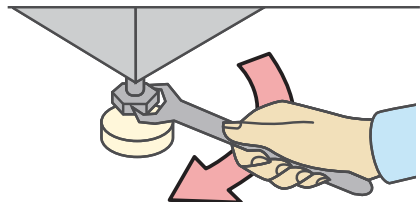

Getting started with your washing machine

Installation and Safety Guidelines

4 CONNECTION TO WATER SUPPLY

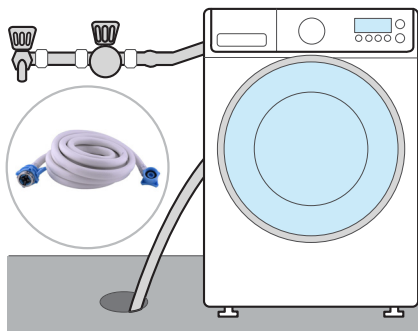


The water inlet of the machine has a collar with parallel internal threads.

Water supply point with a 3/4" external/parallel thread should be within 1 m of the machine.

Don't stretch the water supply hose.

Note After connecting inlet hose to water tap, turn on the water tap to flush out foreign substances such as dirt, sand or sawdust in the pipelines.

5 CONNECTION TO DRAIN HOSE

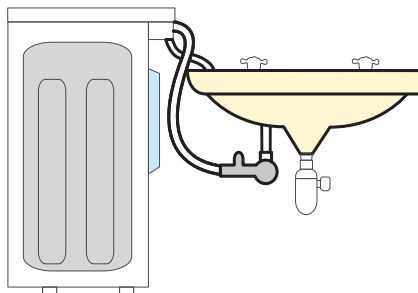

The machine uses a drain pump. Direct the end of the drain hose towards a sink.


The drain hose can be either placed on the floor or over a sink at a maximum height of 1 m from the floor.

Getting Started With Your Washing Machine


Installation and Safety Guidelines

5 CONNECTION TO DRAIN HOSE (contd)

Is the sink on the **left** side? Follow this diagram.

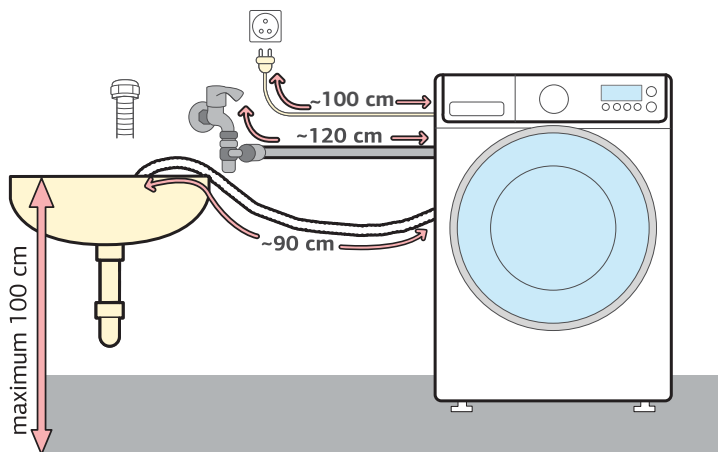


Is the sink on the **right** side? Follow this diagram.

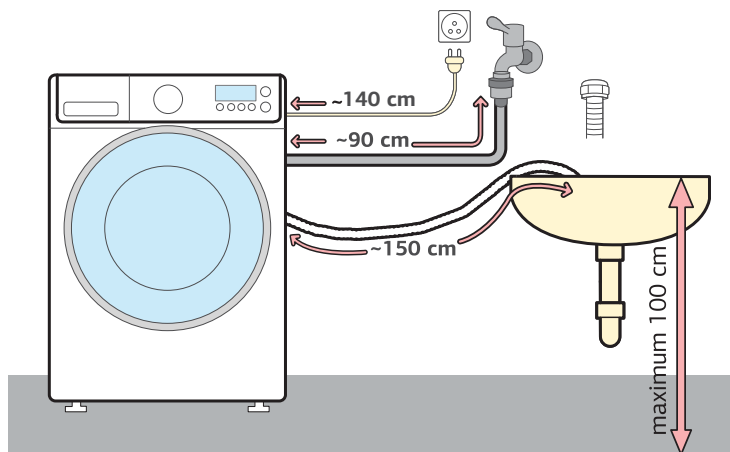


Getting Started With Your Washing Machine

Installation and Safety Guidelines


6 ELECTRICAL CONNECTION

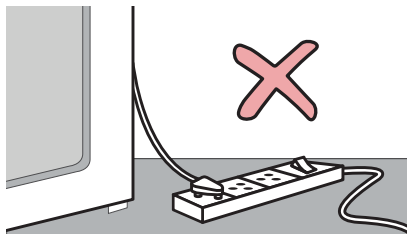

 A 16 Amp, 3 pin 220-240 V AC, 50 Hz electrical point with a 16 Amp MCB within 1 m of the machine is mandatory.



Make sure your home has proper earthing and the connection between the socket and the plug is firm.

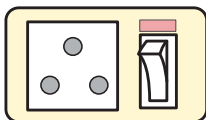

BEFORE YOU START

Make sure that the machine has been installed and connected as per the instructions above.

To remove any water leftover from factory testing of your machine, the first wash cycle should be carried out without any laundry in the machine.

Turn ON the water tap,


- › Pull out the detergent drawer completely
- › Pour approximately 20 g of detergent in the dispenser
- › Close the drawer
- › Set the program selector knob to Cotton and maximum Temperature
- › Press Start/Pause
- › Switch OFF the machine when 'End' message is displayed.

Running Your Machine

6 Easy Steps for Doing Your Laundry

1

SORT THE LAUNDRY

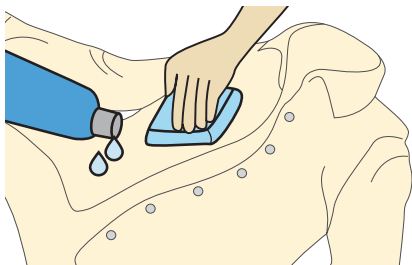


Pre treat collars, cuffs and stains.

Check for wash care symbols.


Close zippers, hooks and strings.

Empty the pockets of your clothes.

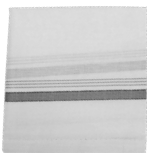


Running Your Machine

6 Easy Steps for Doing Your Laundry

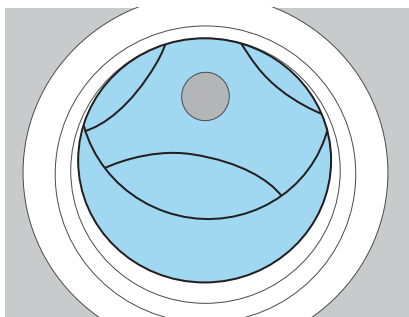2**LOAD THE LAUNDRY**

Make sure the laundry drum is empty.


Load garments one by one.

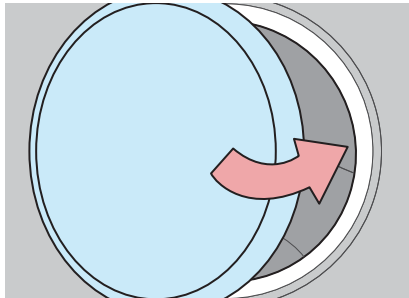

Close the door and press till you hear a click.

6 Easy Steps for Doing Your Laundry


3 ADD DETERGENT

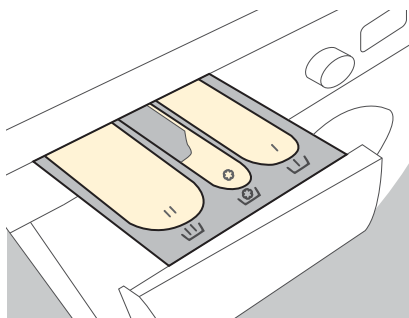

Pull out detergent dispenser drawer completely.


Add the correct amount of detergent.

- For heavily soiled clothes use Pre wash 'I' option.
 - For every other wash program use 'II'.
- ⊗ 'Settings' to be used to dispense additives. Use the fabric conditioner additives chamber and take care not to exceed the maximum level.

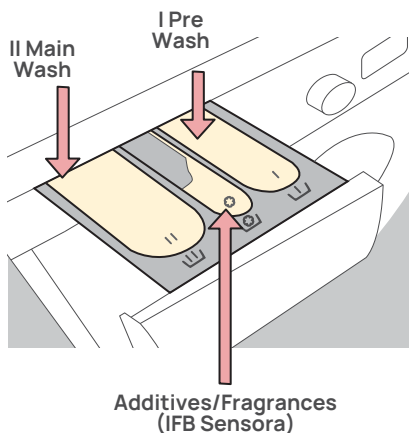

Note To be used to dispense Fragrances (Sensora) only during Refresh cycle.

If liquid detergent is used, use the liquid detergent dispenser supplied in the main wash chamber.

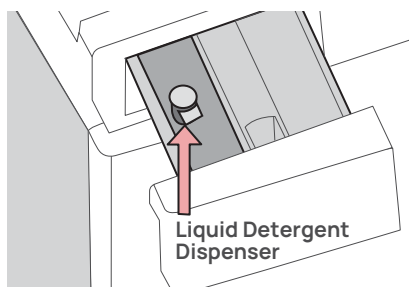

Running Your Machine


**Note**

Always use detergents that are recommended for front load washing machines. Using the wrong detergent can cause laundry issues. Avoid using soap flakes or granulated soap powders in your washing machine. When washing woollens or silk, make sure to use the detergent type recommended by the manufacturer. If you notice too many suds, reduce the amount of detergent you're using.

Running Your Machine

6 Easy Steps for Doing Your Laundry

4 SELECT PROGRAM

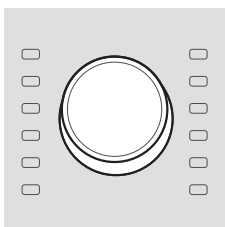

Switch ON the machine.

Turn the Program Selector knob to the required program.

Start/Pause LED will flash.

Choose Wash Option.

To change/cancel the program during the wash, press the Power ON/OFF button and wait for 2 secs, then select the new program.

For more information scroll to the **Program Guide** section.

5 SELECT WASH OPTIONS

Touch the Option you want and select button for the desired Wash Option.

For more information scroll to the **Wash Options** section.

6 START WASHING



Press the flashing Start/Pause LED button to start washing.

To interrupt the cycle and change Wash Options or to add/remove laundry, press the Start/Pause button.

6 Easy Steps for Doing Your Laundry


6

START WASHING (contd)



Door status will be displayed after pressing the Start/Pause button.

If the water level inside the drum is above the rubber or the temperature inside the drum is high, the door won't open.

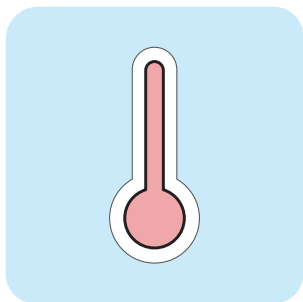


Once the wash is complete the 'END' message will appear. The door can be opened after this message.



The machine has been programmed to switch OFF all visual displays such as LEDs to save energy. Start/Pause LED will slowly blink after END of program. This is in line with the latest 'Energy Using Product' norms (EUP).



Finishing

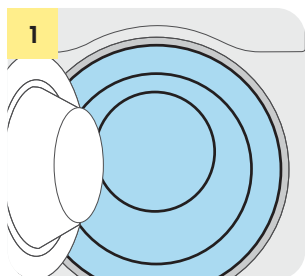

1 Remove the laundry and wipe the moisture from the door and door seal. Leave the door slightly open.

2 Wipe the panel and cabinet with a dry cloth to remove the moisture.

3 Turn OFF the tap.

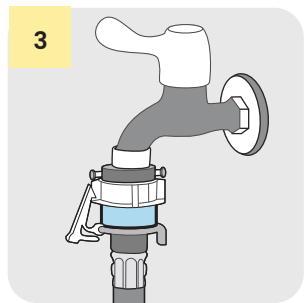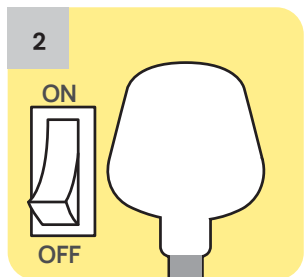

Running Your Machine

Program Guide

PROGRAM	TYPE OF LAUNDRY
Mixed Soiled 	Cotton, synthetic and easy-care garments. Not recommended for special garments like silk/delicates, dark clothes, wool, duvets, curtains, etc.
Cotton Normal/ Cotton Eco 	Cotton colour-fast garments. Shirts, pants, uniforms, bed and table linen, towels, night dresses, pyjamas, underwear, etc.
Synthetic/Daily 	Polyester, acrylic or polyamide daily wear garments.
Baby Wear 	High temperature and extra rinses for better rinse performance. Recommended for baby clothes, underwear, cloth diapers, pillows, bedsheets, etc.
CradleWash®	Hand wash and delicate wash garments. Silk, lingerie, satin, synthetic or sheer fabrics.
Express Wash	Lightly soiled coloured laundry made of cotton, linen, synthetic or blended fabrics.

Running Your Machine

Program Guide

PROGRAM	TYPE OF LAUNDRY
Woollens	Machine washable woollen garments only. Use appropriate detergent.
Fitness Wear*	Sportswear such as singlets, leggings, jogging clothes and running wear.
HYGIENE* 	Cotton and linen fabrics in direct contact with skin, such as bed linen, pillows, underwear, nappies, towels etc.

*Only in 7 Kg models



Running Your Machine

Wash Options

OPTIONS**Details**

Temp**Temperature**

You can change the default temperature in the given range. Press the Temperature button on the control and select from Cold, 30°C, 40°C, 60°C, 95°C and Repeat.

Spin**Spin Speed**

You can change the default spin speed in the given range.

Press the Spin Speed button on the control panel and select from No Spin, 400 RPM, 600 RPM, 800 RPM, 1000 RPM, Rinse Hold and Repeat (for 6510) and No Spin, 400 RPM, 600 RPM, 800 RPM, 1000 RPM, 1200 RPM. Rinse, Hold and Repeat (for 7012/8012 models).

Options**Options**

Press the Options and Select buttons on the control panel to select different options, such as Pre Wash, Soak, Extra Rinse, Steam, Time Saver and Delay Start.

Press the Options button to navigate through the different options available. Keep doing this till the desired option symbol and navigation LED are highlighted. The option name and symbol glows to indicate that the option is selected.

Running Your Machine

Wash Options

OPTIONS

Details



Pre Wash

Pre Wash

If the Pre Wash option is selected, the clothes are given a preliminary wash before the main wash.

Press the Options button on the control panel to select the Pre Wash option. The Pre Wash option symbol flashes on the display. You can select or deselect the Pre Wash option by pressing the Select button within 4 secs.

Pre Wash symbol and navigator LED glows indicating the option has been selected.

You can select more wash options or press the Start/Pause button to start the program.



Soak

Soak clothes in hot, soapy water for a calculated amount of time to dislodge dirt during the main wash.

During soaking, the clothes will remain stationary for about 10 mins and then continue with the regular wash.

Select the Soak option in the control panel and press the Select button within 4 secs.

It is advisable not to soak coloured garments as they may bleed colour.

Running Your Machine

Wash Options

OPTIONS

Details



Extra Rinse

An extra rinse cycle is executed to remove left over detergent from clothes.

Select the Extra Rinse option in the control panel and press the Select button within 4 secs.



Steam

When the Steam option is selected, steam is produced inside the drum—at the optimum wash time to enhance the wash.

Press the Option button on the control panel till the Steam option symbol flashes.

Press the Select button to select or deselect the Steam option within 4 secs.

Steam LED will glow indicating that the Option has been selected.

You can select more wash options or touch the Start/Pause button to start the program.

***Note** Steam option can be selected for Mixed Soiled, Cotton Normal, Synthetic/Daily and Baby Wear programs (6.5 Kg). Mixed Soiled, Cotton Normal, Hygiene and Baby Wear programs (7 Kg)

It is normal that steam may not be visible during the Wash/Steam cycle.

Do not touch the door during the Steam cycle as the surface may be very hot.

Do not attempt to open the door forcibly or reach into the machine the Steam cycle. The steam can cause severe burns.

Running Your Machine

Wash Options

OPTIONS

Details



Time Saver

This option allows you to save time by decreasing the programmed wash time.

Select the option in the control panel and press the Select button within 4 secs.



Delay Start

This option allows you to specify the time a program should start .

The delay can be chosen from a minimum of 30 mins to a maximum of 24 hours.

A program time in steps of 30 mins, up to the first 5 hours, in steps of 1 hour, up to 12 hours and in steps of 2 hours, up to 24 hours can be selected.

Select the Delay Start option in the control panel after pressing the Options button on the control panel.



Rinse Hold

If clothes are left unattended for a long time it may cause creasing.

This option pauses the program during its final rinse to prevent this.

'rinS HOlD' message will appear on the display.

You can cancel the current program or input your desired Speed/Spin and continue.

Press Spin Speed option till **£=££** is displayed.

Running Your Machine

Wash Options

OPTIONS**Details**

Tub Clean

Run this program to eliminate impurities, scaling, bacteria and unpleasant smell from the washing machine.

**IMPORTANT**

Do not put laundry in the washing machine during Tub Clean. Before running the Tub Clean program, empty the washing machine drum.

Do not use any Descale or any cleaning agents/additive with Tub Clean program.

To run the Tub Clean program—

Switch ON the washing machine.

With no laundry in the drum, rotate the Program Selection knob to Additives/Rinse + Spin Program. Keep the Temperature button pressed for 3 secs.

Display will show Tub for 1 sec and cln for 1 sec indicating the Tub Clean program has been selected.

Touch the Start/Pause button to start the Tub Clean program.

END message will be displayed when the program is over.

Running Your Machine

Wash Options

OPTIONS	Details
---------	---------

Tub Clean Reminder

The Tub Clean program reminder will appear on your washing machine after every 40 wash cycles. You can run the Tub Clean program or skip.

It is recommended to run the Tub Clean program after every 40 cycles to keep our washing machine clean

***Note** Tub Clean reminder will be displayed for 5 wash cycles and go OFF.

Spin



Option

Child Lock

This activates protection against unintentional changes to the program sequence.

To select Child Lock, press the Spin and Option buttons simultaneously for 2 secs.

No changes can be made while the program is running.


If the appliance is switched OFF, it will resume from where it was interrupted in this mode.

The door will remain locked till the end of the program.

You can disable this option the same way you enabled it.

Running Your Machine


EMERGENCY DOOR LOCK RELEASE

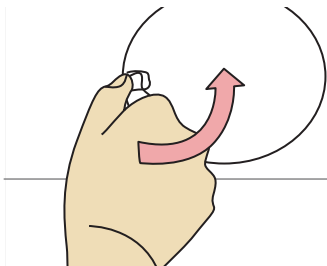

Note Emergency door lock release should be used only during power OFF/power failure. Using this ends the current program.



PRECAUTIONS TO BE TAKEN FOR THE ABOVE

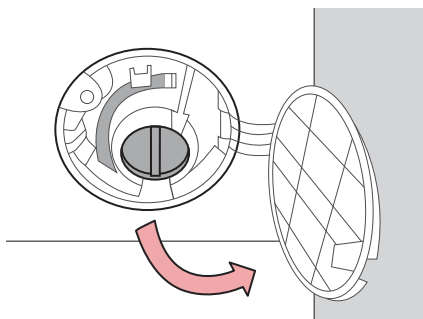


Let the wash water cool down if it is hot.

Don't remove laundry from the drum while it is rotating.

Drain the water from the drum using the emergency drain pipe before releasing the door lock to avoid damage.

EMERGENCY DOOR LOCK RELEASE DURING POWER FAILURE

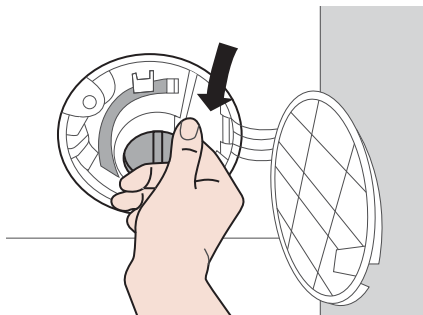

Program will continue after power supply resumes. If you still want to remove the laundry, switch OFF the power supply from the mains. Open the filter door, drain the water through the drain hose and then pull down the emergency lever to open the door.

Running Your Machine

Washing Symbols—A Guide



RESISTANT MATERIAL



DELICATE FABRIC



WASHABLE AT 95°C



WASHABLE AT 60°C



WASHABLE AT 40°C



WASHABLE AT 30°C



HAND WASH



DRY CLEAN ONLY



WOOL SEAL



BLEACHABLE IN COLD WATER



DON'T BLEACH



DON'T DRY CLEAN



DRY FLAT



HANG TO DRY



DRY ON CLOTHES HANGER



TUMBLE DRY, NORMAL HEAT



TUMBLE DRY, REDUCED HEAT



DON'T TUMBLE DRY

Running Your Machine

Wash Guide Map

	PRE WASH	SOAK	EXTRA RINSE	STEAM	TIME SAVER	DELAY START	RINSE HOLD	LAUNDRY WEIGHT in KG		
								6510	7012	8012

PROGRAM

Mix Soiled

✓	✓	✓	✓	✓	✓	✓	✓	3	3	3
---	---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–1000/No Final Spin

Cotton Normal

✓	✓	✓	✓	✓	✓	✓	✓	6.5	7	8
---	---	---	---	---	---	---	---	-----	---	---

Temperature °C Cold, 30, 40, 60, 95

Spin Speed RPM 400–1000/No Final Spin (6510)
400–1200/No Final Spin (7012/8012)

Synthetic/Daily

✓	✓	✓	✓	✓	✓	✓	✓	3	3	3
---	---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 30, 40, 60

Spin Speed RPM 400–800/No Final Spin

Note For 7012/8012 models the Steam option is not available for the Synthetic/Daily Program.

****** Program setting for BEE test in conformity with IEC 60456 with 1400 Spin Speed selection settings.

✓ Option available for selection

✗ Option not available for selection

— Not applicable

● Option available by default and can be deselected

Running Your Machine

Wash Guide Map

	PRE WASH	SOAK	EXTRA RINSE	STEAM	TIME SAVER	DELAY START	RINSE HOLD	LAUNDRY WEIGHT in KG		
								6510	7012	8012

PROGRAM

Hygiene

✗	✓	✓●	✓	✓	✓	✓	✓	—	3	3
---	---	----	---	---	---	---	---	---	---	---

Temperature °C 40, 60

Spin Speed RPM 400–1000/No Final Spin
(7012/8012)

Baby Wear



✗	✓	✓	✓	✓	✓	✓	✓	3	3	3
---	---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 40, 60

Spin Speed RPM 400–800/No Final Spin

CradleWash®

✗	✗	✓	✗	✗	✓	✓	✓	2	2	2
---	---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–600/No Final Spin

Express Wash

✗	✗	✓	✗	✗	✓	✓	✓	2	2	2
---	---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–800/No Final Spin

Note For 7012/8012 models the Steam option is not available for the Synthetic/Daily Program.

****** Program setting for BEE test in conformity with IEC 60456 with 1400 Spin Speed selection settings.



Option available for selection



Option not available for selection



Not applicable



Option available by default and can be deselected

Running Your Machine

Wash Guide Map

	PRE WASH	SOAK	EXTRA RINSE	STEAM	TIME SAVER	DELAY START	RINSE HOLD	LAUNDRY WEIGHT in KG		
								6510	7012	8012

PROGRAM

Fitness Wear

✓	✓	✓	✗	✓	✓	✓	—	2	2
---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–800/No Final Spin (7012/8012)

Woollens

✗	✗	✓	✗	✗	✓	✓	2	2	2
---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 30, 40

Spin Speed RPM 400–800/No Final Spin

Cotton Eco Plus

✗	✓●	✓	✗	✗	✓	✓	6.5	7	8
---	----	---	---	---	---	---	-----	---	---

Temperature °C 40, 60**

Spin Speed RPM 400–1000/No Final Spin (6510)
400–1200/No Final Spin (7012/8012)

Note For 7012/8012 models the Steam option is not available for the Synthetic/Daily Program.

****** Program setting for BEE test in conformity with IEC 60456 with 1400 Spin Speed selection settings.

✓ Option available for selection
 ✗ Option not available for selection
 — Not applicable
 ✓● Option available by default and can be deselected

Running Your Machine

Wash Guide Map

	PRE WASH	SOAK	EXTRA RINSE	STEAM	TIME SAVER	DELAY START	RINSE HOLD	LAUNDRY WEIGHT in KG		
								6510	7012	8012

PROGRAM

Spin Dry/Drain	✗	✗	✗	✗	✓	✓	✗	6.5	7	8
----------------	---	---	---	---	---	---	---	-----	---	---

Spin Speed RPM 400–1000/No Final Spin (6510)
400–1200/No Final Spin (7012/8012)

Additives/ Rinse+Spin	✗	✗	✓	✗	✓	✓	✓	6.5	7	8
--------------------------	---	---	---	---	---	---	---	-----	---	---

Spin Speed RPM 400–1000/No Final Spin (6510)
400–1200/No Final Spin (7012/8012)

Tub Clean	✗	✗	✗	✗	✗	✗	✓	—	—	—
-----------	---	---	---	---	---	---	---	---	---	---

Temperature °C Cold, 60, 95

Note For 7012/8012 models the Steam option is not available for the Synthetic/Daily Program.

****** Program setting for BEE test in conformity with IEC 60456 with 1400 Spin Speed selection settings.

✓ Option available for selection
 ✗ Option not available for selection
 — Not applicable
 ● Option available by default and can be deselected

Running Your Machine

Note

With Cotton Eco 60** program, the actual wash temperature attained will be lower than 60°C, although the wash performance will be at par with the Cotton 60°C program.

The actual performance of the machine can vary based on a few factors like water pressure, water hardness, temperature, the amount and type of laundry, detergent used, and other conditions like foam or unbalance detection.

That's why the numbers mentioned in the user manual or with the machine might not always match with your experience, since they're tested in lab conditions.

Program time can also skip or extend due to above mentioned conditions.

Last run program is selected by default.

Machine automatically detects the weight of the laundry during the program and accordingly adjusts the Time/Rinse Water. Press and hold the Options button once during the program run to check the total number of wash cycles completed by the machine.

The design and specifications (includes colour, shades, aesthetics, features etc) are subject to change without prior notice due to continuous improvement and product development.

Note 40E, 60E programs—some options are not available | ** PowerSteam® program only available for 9.0/10 Kg models only via My IFB App | ** Program setting for BEE test in conformity with IEC 60456 with 1400 Spin Speed selection settings.



Option
available for
selection



Option not
available for
selection



Not
applicable




Option available
by default and can
be deselected

Running Your Machine

Key Features

ADVANCED WASH TECHNOLOGY

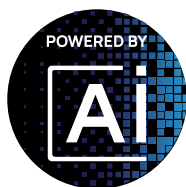

Powered by Ai

The intuitive sensing logic in the machine detects two parameters important for fabric care during cleaning—

- **Type of fabric** Cotton, Mixed or Synthetic
- **Weight of the fabric**

The Ai model, based on thousands of parameters, selects the optimised configuration suitable for the type of garment and its weight. Thus it helps in reducing the washing time and water consumption while ensuring the best care for your clothes without any manual intervention.

Note Available on selected models only.



7 Swirl

Powered by Ai

Swirl technology that gently cares for your clothes.

Running Your Machine


Key Features

ADVANCED WASH TECHNOLOGY



3D Wash

Jets of water and showers from the paddles completely soak the clothes. The water and detergent mixture is sprayed onto the clothes in a special mechanism for a better wash.

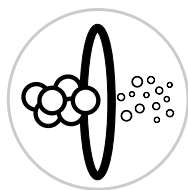

Aqua Energie

The technology that energises water to carry the detergent deep into the fabric.



CradleWash®

India's first wash program for the care of delicate fabrics.



Crescent Moon Drum

The crescent moon design of the drum allows the water to cushion the wash and protect the fabric.

Running Your Machine

Key Features

WASH PROGRAMS AND OPTIONS

More than 100 thoughtfully designed programs and options to give your clothes the ultimate wash experience.

Time, Energy, Water Saving

Cotton Eco Plus
Express Wash
Time Saver

Fabric Friendly Wash

Cotton Normal, Synthetic/Daily,
CradleWash®, Woollens,
Mixed Soiled

Hygienic Wash

Hygiene, Baby Wear,
Tub Clean, Hot Rinse

Customisable Modes


Fitness Wear,
Additives/Rinse + Spin,
Spin Dry/Drain

User Friendly Options

Pre Wash, Soak, Temperature,
Extra Rinse, Steam, Rinse Hold,
Spin Speed, Delay Start

Key Features

MACHINE CARE

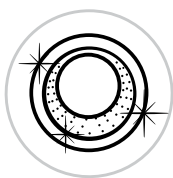

Auto Tub Clean

Automatically ensures tub hygiene after the wash.



Auto Foam Control System

Auto detection and control of excess foaming.



High-Low Voltage Protection

A micro controller continuously monitors the voltage fluctuations and stops the program if it goes below $150 \pm 10V$ or rises above $270 \pm 10V$. The program will resume once the voltage is within a safe range.



Program Memory Backup

The program remembers where to pick up from when power is restored after failure, thus saving on time, water, and energy, while adding longevity to the machine.



Auto Imbalance System

This system automatically balances the clothes inside to stabilise the spin cycle.

Running Your Machine

Key Features

USER CONVENIENCE



Child Lock

Prevents children from tampering with the machine settings.



Laundry Add

Lets you add laundry even after the cycle has started.



Anti Crease

Reduces wrinkling of clothes for easy ironing.

Get More From Your Machine

Tips for best results

BEFORE WASHING



Empty all pockets. Remove everything including coins, keys, pins, notes etc.

Close all zips and fasten all hooks.

Check the wash care label and avoid non-machine washable items.



WHILE SORTING



Separate polyester fabrics from cotton.

Try to have a mix of large and small clothes in each load.

Wash dark clothes separately.



Get More From Your Machine

Tips for best results

WHILE LOADING



Load large items first.

Don't wash single items, add similar items.

Place small items in a laundry bag.

WATER SOFTENING



Do you live in an area with hard water?

You need to use water softening agents to get the best wash results.

You may also adjust the detergent dosage to improve your wash. To do so follow the dose recommended by the detergent manufacturer.



Get More From Your Machine

Tips for best results

EASY TIPS TO REMOVE STAINS



Soak or pre wash the stained laundry in warm water.

Try to wash immediately after staining.

Understand the fabric, the nature of the stain and check the wash care label before treating it.

Start with cold or warm water as hot water can set the stain in.

Use fabric safe bleach if recommended.

Put the stained area face down on a paper towel or white cloth.

Apply the stain remover to the back of the stain so that the stain is forced out of the cloth.

Get More From Your Machine

Stain Treatment



Get More From Your Machine

Stain Treatment

STAIN	TREATMENT
Chewing gum Adhesive Tape Rubber Cement	Use ice in a plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits.
Blood	Rinse and soak immediately in cold water with an enzyme pre wash.
Chocolate Cocoa	Sponge with cold water and soak in enzyme pre wash. Rub in a little detergent and rinse in cold water.
Coffee	Rinse in cold water. Rub in detergent and wash in the maximum temperature allowed for the fabric.
Cream Milk Ice-cream	Rinse in cold water and wash normally. Sponge with white spirits.
Deodorant	Rub affected area with white vinegar and then rinse in cold water. Sponge with white spirits and then treat stiffened areas with an enzyme pre wash.
Egg	Soak in cold enzyme pre wash, rinse and wash.
Fabric Softener	Rub affected areas with bar soap and wash.

Get More From Your Machine

Stain Treatment

STAIN	TREATMENT
Fruit	Treat as soon as possible by sponging with cold water. Rub a little detergent on the stain and wash.
Grass	Sponge with white spirits. Rub in an enzyme pre wash and then wash.
Grease Oil	Sponge with white spirits or dry-cleaning fluid and then wash.
Iron Rust	Apply lemon juice and salt and place in the sun before washing.
Collars Cuffs Cosmetics	Pre-treat with a pre wash stain remover or rub with a bar soap.
Mildew	Rub affected area with white vinegar and then rinse in cold water. Sponge with white spirits and then treat stiffened areas with an enzyme pre wash.
Mud	Brush off the mud and rinse in cold water. Rub a little detergent and wash.
Oil Paint	Scrape off any fresh paint. Sponge with a non-flammable dry cleaning fluid and wash.

Get More From Your Machine


Stain Treatment

STAIN	TREATMENT
Water Based Paint	Treat while still wet. Rinse in warm water and wash.
Scorch Marks	Dampen a cloth with hydrogen peroxide. Lay it over the affected area and press with a hot iron.
Ink	Some inks are impossible to remove. However, try using a pre wash stain remover, denatured alcohol or non-flammable dry cleaning fluid.
Nail Polish	Try applying nail polish remover to the back of the stain. Blot with paper towels and repeat. Don't use acetate fabrics. However, it may be impossible to remove in some cases.
Shoe Polish	Liquid Pre-treat with a paste of granular detergent and water. Paste Scrape the residue and pre-treat with a pre wash stain remover or non-flammable dry cleaning liquid. Apply detergent to the dampened area and wash using bleach safe for the fabric.
Candle Wax Crayon	Scrape off surface wax. Press with warm iron until wax is absorbed into a paper towel. Treat remaining stain with a pre-wash stain remover or non-flammable dry cleaning fluid. Hand wash to remove solvent and wash using bleach safe for the fabric.

Get More From Your Machine

Maintenance and Cleaning


CLEANING THE DETERGENT DISPENSER DRAWER

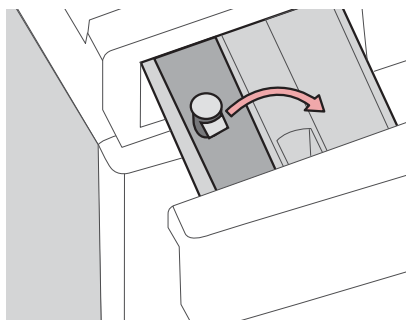

Remove detergent residue regularly.

Clean the detergent dispenser drawer with warm water.

Remove and clean the siphon under running warm water.

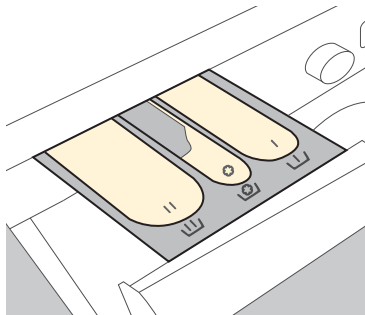


Detergent residue can build in the dispenser housing, clean it before reinstalling the dispenser.

Get More From Your Machine

Maintenance and Cleaning


CLEANING THE WATER HOSE MESH FILTER

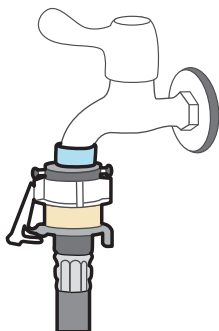

Turn OFF taps and disconnect the power supply to the machine.


Unscrew the inlet hose from the machine and tap the drain water from the hose.

Remove the filter mesh from the tap end of the inlet hose and clean under running water with a brush.

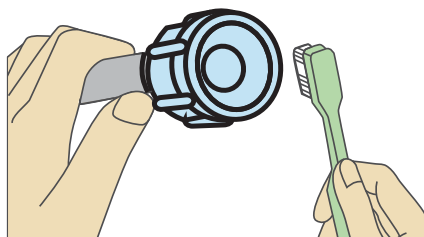

Pull out the sieve of the magnetic valve with a pair of flat nosed pliers.


Clean the sieve under running water with a brush.

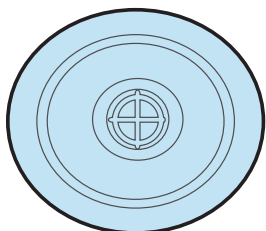

Fit the sieve back into the valve.

Screw the inlet hose back to the machine and the tap.

Turn ON the water tap to check if the connection is watertight.

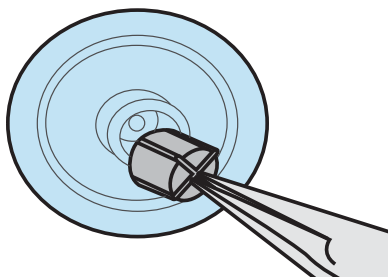


Note Dirt, sediments or sand in the water can affect both your wash quality and the water valve.

Get More From Your Machine


Maintenance and Cleaning

CLEANING THE FILTER

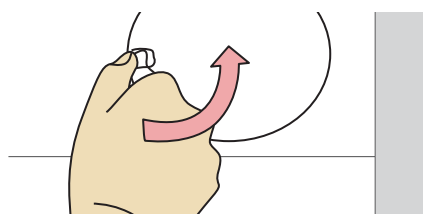

The filter should be cleaned frequently in order to increase the life of the drain pump.


Open the detachable bottom door with a coin or a key.

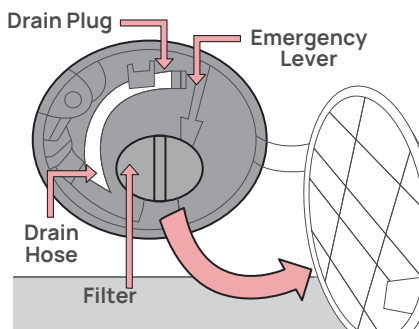

Place a shallow container near the bottom drawer.


Pull out the drain hose and open the drain plug.

Once the water is drained, turn the filter anti-clockwise to open it and take out any coins, pins, hooks, or other objects.

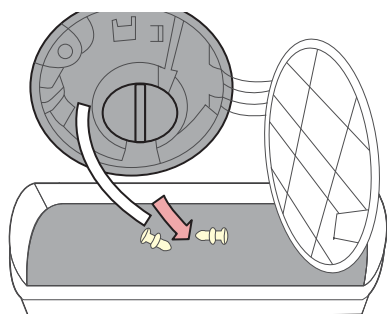

Tighten the filter and drain plug to their original positions, then close the bottom door.

Don't open the filter when a program is running.

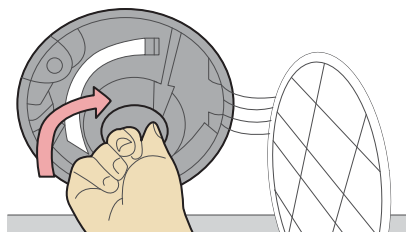

Get More From Your Machine

Let's make washing easier.

Here is a list of clothes and their approximate weights to help you figure out a perfect wash load.

CLOTHING WEIGHTS

Bottoms

Lungi/Dhoti	200 g
Skirts	200 g
Trousers	250 g
Jeans	400 g

Tops

Cotton Shirts	280 g
Other Shirts	200 g
Cotton Blouses	140 g
Other Blouses	100 g
Woollen Sweaters	400 g
Heavy Sweaters	300 g
Light Sweaters	150 g

Other Clothes

Cotton Sarees	650 g
Synthetic Sarees	350 g
Bath Towels	600 g
Hand Towels	250 g
Pyjama Kurta	400 g
Panties	60 g
Cotton Vests	100 g
Underslips	100 g
Long Socks, 2 pairs	150 g
Short Socks, 2 pairs	85 g
6 Handkerchiefs	85 g
12 Napkins	1.1 Kg

Sheets

Cotton (Double)	1 Kg
Cotton (Single)	500 g
Non Cotton (Double)	650 g
Non Cotton (Single)	400 g

Pillow slips

Cotton Pillow Slips	110 g
Other Pillow Slips	85 g

Table Cloths

Small	230 g
Large	600 g
Table Napkins (4)	150 g

Bedspread

3 Kg

Blankets

Wool	2 Kg
Acrylic	1.5 Kg

Get More From Your Machine

This table may help you plan a laundry load of 6.5, 7 or 8 Kg.

LAUNDRY ITEMS	6.5 Kg	7 Kg	8 Kg
Bath Towels	2	2	2
Shirts	4	4	4
Blouses	2	3	3
Skirts	3	4	5
Pair of Pants	1	1	1
Pair of Jeans	2	3	3
T-shirts	3	3	4
Set of Pyjamas	4	4	4
Tea Towels	2	2	4

The chart indicates average weights of clothes. Make sure not to overload your machine beyond the recommended weight. This way, your clothes will get a thorough wash. Suggested weights are approximate and may vary.

Useful Information About Your Washing Machine

Troubleshooting

In case of machine malfunction, check the following points before contacting your service provider.

SYMPTOM	PROBABLE CAUSE	SOLUTION
LED Display is not lit.	Power supply switch is not turned ON.	Turn ON the power supply switch.
	Electrical power cord is not plugged in or is loose.	Plug the electrical power cord in securely and check.
	No program is selected.	You need to select a program.
Washing Machine Door is stuck and won't open.	Machine is in operation.	Ensure that the program isn't active. If active, pause the program and check the door symbol on display. The door cannot be opened mid-operation, due to high water level, temperature and speed.
	Opening the door is not possible.	Check if the machine is displaying the 'dL Er' message.
	Child Lock is active.	Disable the Child Lock and wait until the Door display glows.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Program does not start.	Start/Pause button is not pressed ON.	Press the Start/Pause button. The display will glow to indicate activity.
	Water supply faucet is not turned ON  there is no or low water pressure.	Turn ON the water faucet fully. Ensure that the water pressure is normal.
	Machine door is not securely closed.	Close the machine door properly.
	Pause/Soak or Rinse Hold mode is active.	Check the status of the programs on display and refer to the user manual.
Water is not supplied to the machine. Detergent is not flushed into the drum.	Water supply faucet is not turned ON  there is no or low water pressure.	Turn ON the water faucet fully. Ensure that the water pressure is normal.
	Machine door is not securely closed.	Close the machine door properly.
	Inlet hose is bent, sieve, inlet valve or the hose is clogged.	Straighten the inlet hose. Check  unclog the sieve, valve and hose.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Detergent dispenser is leaking suds.	Unsuitable detergent is used.	Use detergents recommended for Front Load Washing Machines only.
Excessive foam in drum.	Excessive detergent is used.	Use less detergent.
Detergent residue on clothes.	Machine is overloaded with clothes.	Do not overload the machine. Put fewer clothes per load.
	Cold Wash program is active.	Choose the Hot Wash program.
	Water pressure is low.	Ensure that the water pressure is optimum.
Water leakage in the machine.	Inlet hose connection is loose.	Check and tighten the inlet hose connection.
	Filter is not securely tightened.	Check and tighten the filter.
	Inlet hose is leaking.	Contact IFB Care.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Machine water is not draining.	Filter is clogged.	Clean the filter. Make sure that it is not clogged.
	Drain hose end is placed 1 m above floor level.	Measure 1 m from the ground level, place the drain hose end below the level.
	Drain hose is kinked or clogged.	Ensure that the drain hose is straight, clean and unclogged.
	Wash only machine washable door/bath mats in the washing machine. Washing of non-washable mats will cause lint/fibre build up. This may lead to drain pump clogging.	
Machine vibrates excessively during spinning.	Machine is not properly levelled.	Ensure that the machine is levelled properly.
	Filter is partially clogged.	Clean and ensure that the filter is unclogged.
	Load is unbalanced.	Add a few clothes to balance the load. Rearrange the load to allow proper spinning.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Machine is not spinning or clothes remain wet.	Load is too small, causing disbalance.	Add a few clothes to balance the load. Rearrange the load to allow proper spinning.
	Machine is overloaded with clothes.	Load clothes as per the fabric type and capacity recommended for the selected program. Reduce a few items.
	Spin Speed is set to 0 RPM or is too low.	Select a higher Spin Speed.
	Rinse Hold mode is active.	Select the Start/Pause button at Rinse Hold stage.
	Filter is clogged.	Clean and ensure that the filter is unclogged.
	Excessively foaming detergent is used.	Use detergents recommended for Front Load Washing Machines only.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Ineffective treatment of soiled clothes.	Detergent quantity is insufficient.	Use the recommended amount of detergent based on load size and hardness of water.
	Cold Wash program is active.	Opt for the Hot Wash program.
	Incorrect load size as per capacity.	Ensure that the load is within the capacity.
	Untreated stains on clothes.	Make sure to treat stains before washing. Scroll up to the 'Easy Tips to Remove Stains' section.
	Heavily and lightly soiled clothes are washed in the same load.	Wash heavily and lightly soiled clothes in separate washes.
Blue stains on clothes.	Excessive use of fabric additives.	Use only the required amount of fabric additives. Do not pour additives directly on the fabric.
	Additives of inferior quality being used.	Use good quality fabric additives.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM	PROBABLE CAUSE	SOLUTION
Black or grey stains on clothes.	Detergent quantity insufficient as per hardness of water.	Use the recommended amount of detergent based on load size and hardness of water.
	Pre-existing stains on some clothes.	Separate stained clothes from the unsoiled ones.
Yellow or brown, rust-like stains.	The water supply for the wash is dirty.	Before washing—run the faucet to check if the water is clean. Wash only when the water is clean. To restore a discoloured load of whites use a rust remover safe for fabric.
Detergent residue left on clothes.	Overloading of clothes.	Do not overload the washing machine.
	Excessive use of detergent.	Use proper amount of detergent.
	Cold wash program.	Use hot wash program.
Buttons not working.	Button not pressed properly.	All the buttons are sensitive and need to be pressed softly.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Troubleshooting

SYMPTOM

Motor noise.	While in operation, it is normal for the motor to make some noise.
---------------------	--

Pump noise.	Unless the filter is clogged, it is normal for the pump to make some noise during the process of draining. Anyway do check for filter clogging.
--------------------	--

Program cycle time is delayed.	It is normal for the program cycle time to be delayed based on factors such as type and quantity of laundry load, inlet water pressure and temperature, fluctuation in power supply etc.
---------------------------------------	--

Balance time on display remains unchanged.	In case of a disbalance in load, the machine makes attempts to redistribute the clothes to minimise vibrations. This can extend the duration of the program.
---	--

Machine vibrates more during spinning	Machine not levelled properly.	Check and level the machine.
	Filter clogged partially	Check and clean the filter.
	Unbalanced load.	Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning.

If the problem persists, contact IFB Care.

Useful Information About Your Washing Machine

Display



THE LED DISPLAY GIVES YOU COMPLETE INFORMATION

- Program Selection
- Wash Option Selection
- Program Balance Time
- Program Status
- Problem/Fault Indications, if any
- Child Lock Selection
- Door Status

Useful Information About Your Washing Machine

Display Messages & Error Codes

For any code displayed that is not present in the following list or if the suggested solution does not fix the problem, contact IFB Care or an authorised dealer.

DISPLAY	PROBABLE CAUSE	SOLUTION
rinS HOLD	rinS HOLD—Indicates that the machine is in the Rinse Hold mode.	Press Start/Pause button or select the drain program.
dLAY	dLAY—Indicates Delay Start.	
door	door—Indicates that the door is not closed securely.	Close the door properly.
dLEr	dLEr—Indicates that the washing machine door is stuck or jammed.	Switch OFF the washing machine and wait for 2 mins before attempting to open the door again. Do not forcibly open the door. If the problem and/or the display persists, contact IFB Care

Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
tAP	tAP—Water supply tap is turned OFF.	Ensure that the Water supply tap is turned ON.
	tAP—Water supply is unavailable or water pressure is insufficient.	Operations will restart when water supply is available/normal.
	tAP—Sieve or filter in inlet hose is clogged.	Clean and unclog the sieve/filter. (Refer to 'Cleaning the water hose mesh filter' section).
	tAP—Water inlet hose is bent/damaged.	Remove and replace the bent/damaged water inlet hose.
tACO	tACO trC—Cloth trapped between drum and door area.	Switch OFF the washing machine and wait for 2 secs. Run Drain program. After END, rearrange the clothes and restart the program. If the same message appears again, switch OFF the appliance and contact IFB Care.
trC		



Useful Information About Your Washing Machine

Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
dPEr	dPEr—Water not drained.	Touch Start/Pause button to restart the Drain program.
	Filter is blocked.	Switch OFF the appliance, drain out the water using the drain pump and then clean the filter.
	Exhaust hose clogged/bent.	Clean exhaust hose/remove bend.
HEAt	HEAt—Water temp is above 60°C at the start of the program.	Start new/Drain program once the water cools down to approximately 60°C. Switch OFF the washing machine, wait for 2 secs and restart.
OFEr Pr5	OFEr Pr5	Switch OFF the washing machine, wait for 2 secs and restart. If the same message appears again, turn OFF the tap, switch OFF the appliance and contact IFB Care.

Useful Information About Your Washing Machine

  Display Messages & Error Codes

DISPLAY	PROBABLE CAUSE	SOLUTION
	h260 —Input voltage is high.	Machine will start automatically after the voltage decreases to a safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.
	L 175 —Input voltage is low	Machine will start automatically after the voltage increases to safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.
	UnbL —Indicates that the laundry load is not balanced.	If the laundry load is small, it can cause disbalance in the drum and operations. Add a few clothes to balance and rearrange to allow proper functioning.

For further assistance please download My IFB App for service registrations or you call us on our call centre number

08045845678/ 080 695 45678

Useful Information About Your Washing Machine

Technical Specifications

MODEL	Elena ZWS/ZSS 6510 Elite MXS/ZRS/ZLS/ZSS/MSS/ZMS 7012 Senator ZMS 8012
POWER SUPPLY	220–240 V Single Phase 50 Hz
DIMENSIONS mm Net Size WxDxH	598 x 518 x 875 (6510) 598 x 618 x 875 (7012) 598 x 613 x 875 (8012)
NEW WEIGHT	65 Kg (6510), 71 Kg (7012), 75 Kg (8012)
CAPACITY	6.5 Kg of Dry Cotton (6510) 7 Kg of Dry Cotton (7012) 8 Kg of Dry Cotton (8012)
WASH CARE PROGRAMS	10 (> 100 with options) (6510) 12 (> 100 with options) (7012/8012)
SELECTOR BUTTONS	Spin, Temperature, Options, Select, Power ON, Start/Pause
SELECTOR KNOB	Program Selector
SPIN SPEED	400–1000 RPM or Spin Cancel (6510) 400–1200 RPM or Spin Cancel (7012/8012)
WATER CONSUMPTION	≤ 9 Ltr/Kg/cycle
WATER PRESSURE	0.3 Bar–10 Bar (3.5–10 Ltr/min)
RATING	Refer to the product label
DRAIN PUMP RATING	30 W
HEATER RATING	2000 W
DRUM	Stainless Steel

Revisions Sheet

TITLE User Manual Elena ZWS/ZSS 6510 Elite MXS/ZRS/ZLS/ZSS/MSS/ZMS 7012 Senator ZMS 8012		
Characteristic Symbol Critical (Cc) Significant (Sc)		
MATERIAL Paper	MANUAL No UF421PKMAN653	Revision I
IFB Industries Limited, Goa		

Rev	Information	Change Ref	Date	Checked By	Date	Approved By	Date
A	New model		06/05 2022				
B	Elite ZSS model added. Updated call centre number		06/04 2022				
C	Elite MSS 7012 model added		05/01 2023				
D	Details updated as per ECN 36341/PR 57873 and Customer Care number update		21/03 2023 20/04 2023				
E	Changes as per ECN 45181		30/08 2023				
F	Elite/Senator ZMS 8012 models added		04/10 2023				
G	Updated for Soak for BEE program and power rating		13/12 2023				
H	Updated as per PR No-74533		10/05 2024				
I	Updated for BIS Compliance Obligations note as per PR 77673		14/08 2024				

TRUSTED BY OVER
7 MILLION
CUSTOMERS



+91 080 458 45678/080 695 45678

     +91 92310 04321

www.ifbappliances.com