

ITPP075 Thermal Printer

Easy Setup Guide

MUNBYN

MORE CHOICE FOR YOUR
GROWING BUSINESS



Contents

1.0. Introduction	3
2.0. Check the Packing List	4
3.0. Paper Loading	6
4.0. Initial Setup	7
4.1. Set Up the ITPP075 for First Use on Windows	7
4.1.1 Download Windows Driver	7
4.1.2 USB Interface	7
4.1.3 LAN Interface	8
4.1.4 COM Interface	9
4.2 Set Up the ITPP075 for First Use on MacBook	10
4.2.1 Download MacBook Driver	10
4.2.2 USB Interface	10
4.2.3 LAN Interface	11
4.3 Set Up the ITPP075 for First Use on Ubuntu	12
4.3.1 Download Ubuntu Driver	12
4.3.2 USB Interface	12
4.3.3 LAN Interface	13
4.4 Set Up the ITPP075 for First Use on ChromeOS	13
4.4.1 Download ChromeOS Driver	13
4.4.2 USB Interface	14

1.0. Introduction

This document describes the setup procedure for the ITPP075.

Please read the instructions before using the printer.

For detailed instructions, please refer to the ITPP075 Thermal Printer manual.

ITPP075 Thermal Printer Manual: munbyn.biz/075UserManual



Notice: When dealing with links that require attention to **case-sensitive letters and numbers**, it's important to be mindful of the exact casing used in the link.

2.0. Check the Packing List



In case of omission or damage, please contact us via the contact details below.




support@munbyn.com

 

+1 6502062250


munbyn


Monday to Friday 24 hours

3.0. Paper Loading

1. Press the cover opening button and then open the cover.
2. Insert a roll of paper in the direction shown in the illustration.

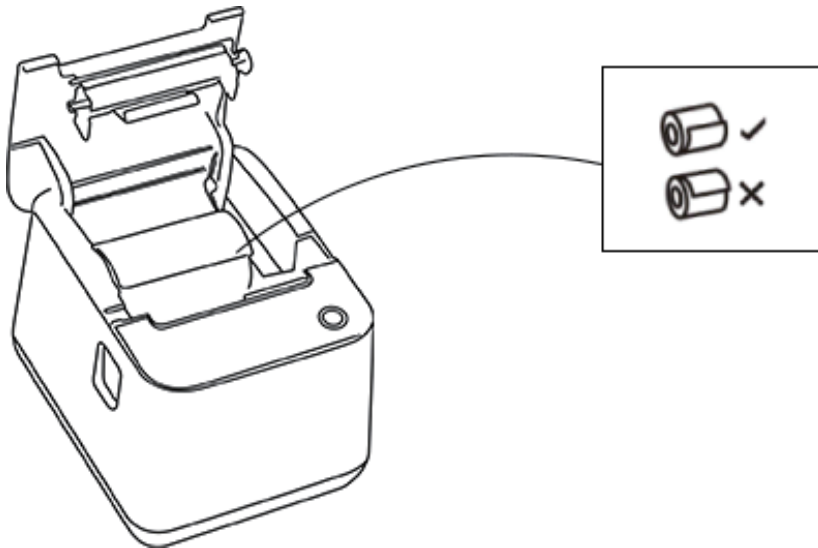

3. Pull the end of the paper out straight, and push down the printer cover to close.

4.0. Initial Setup

4.1 Set Up the ITPP075 for First Use on Windows

4.1.1 Download Windows Driver

You can get the driver by clicking the link below to download the driver.

 
Driver download: munbyn.biz/driverW

Setting tool download: munbyn.biz/WTool

Notice: When dealing with links that require attention to **case-sensitive letters and numbers**, it's important to be mindful of the exact casing used in the link.

4.1.2 USB Interface

- 1) Connect the printer to the power outlet via the power cord.
- 2) Connect the printer to your Windows computer via USB.
- 3) Place the thermal paper into the printer and power it on.

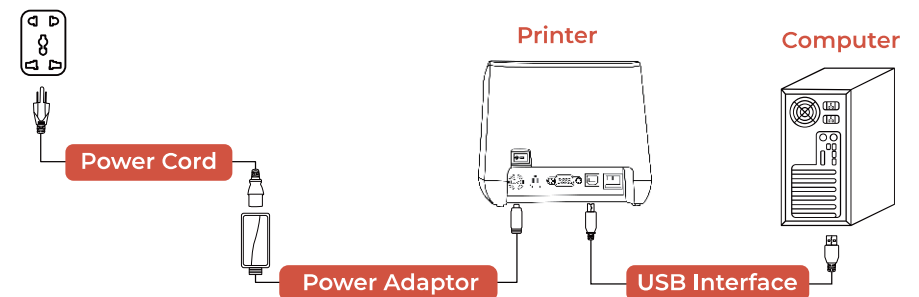



Open the downloaded driver and install it.

Demo video: munbyn.biz/075WindU



4.1.3 LAN Interface

  1) To connect the printer to the router, use a network cable when the printer is turned off. Power on the printer and wait for it to automatically configure the IP address, which should take around 15 seconds.

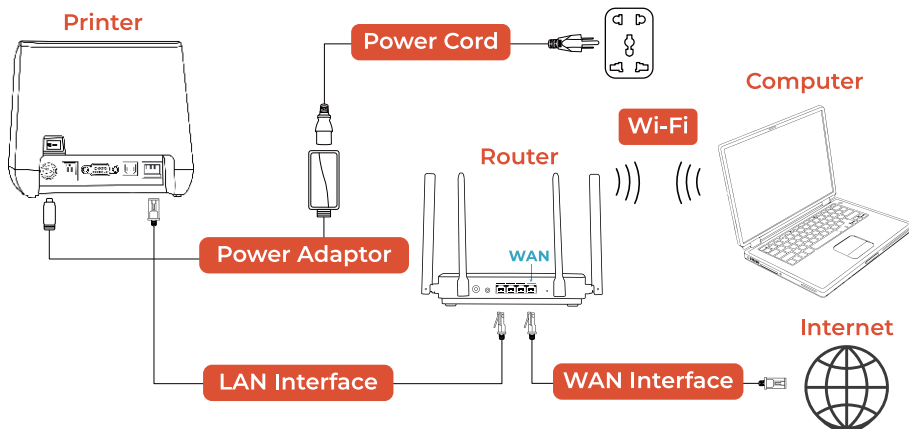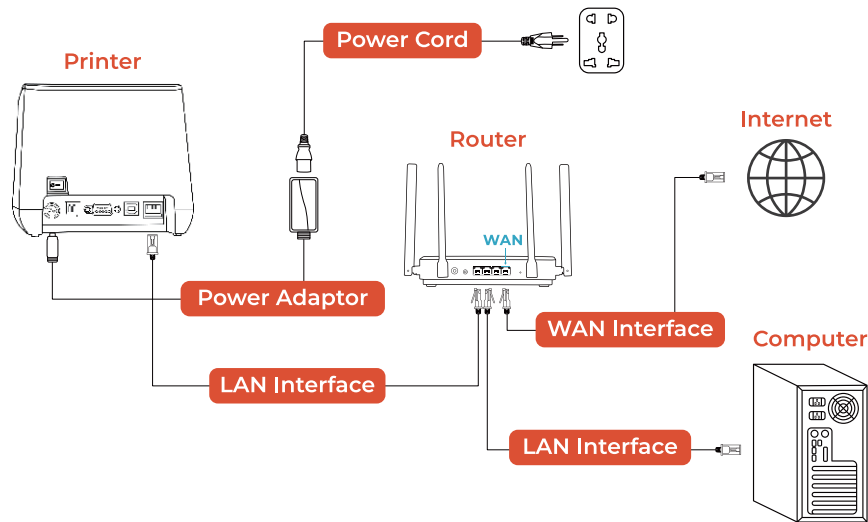

2) Open the driver on your Windows computer and follow the installation Path:

 
- 1.Printer interface: Select **[LAN]**, the printer IP address will be displayed in the white box on the right.
- 2.IP address Check: Select and double-click the printer's IP address in the white box until the IP address is also displayed in the bottom white box.
- 3.Click **[installing the printer driver]**

Demo video: munbyn.biz/075WindLAN



4.1.4 COM Interface

- 1) Connect the printer to the power outlet via the power cord.
- 2) Connect the printer to your Windows computer via the serial cable.
- 3) Take the thermal paper into the printer and power it on.

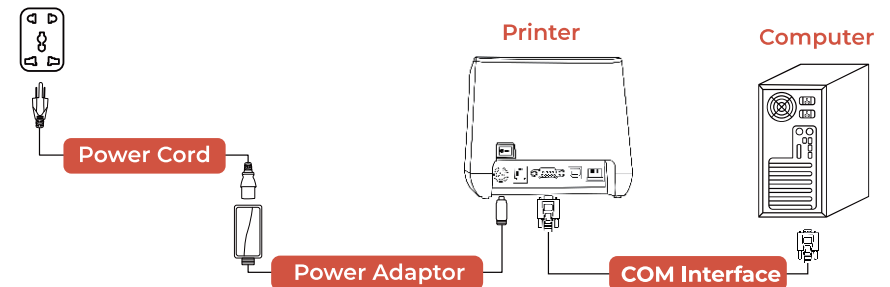

Open the downloaded driver and install it.

Demo video: munbyn.biz/075WindCOM



4.2 Set Up the ITPP075 for First Use on MacBook

 
4.2.1 Download MacBook Driver

You can click the link below to download the driver.

Driver download: munbyn.biz/MACD

4.2.2 USB Interface

- 1) Connect the printer to the power outlet via the power cord.
- 2) To connect the printer to your Mac, plug one end of the USB cable into your Mac's USB port and the other end into the printer. If needed, use a USB-A to USB-C adapter for Macs with a USB-C port.
- 3) Place the thermal paper into the printer and power it on.

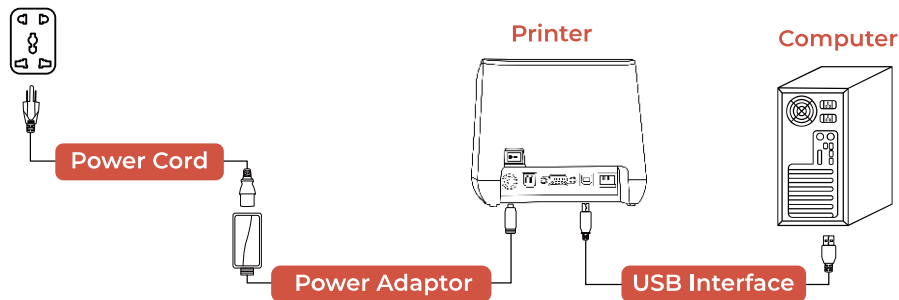


Open the downloaded driver and install it.

Demo video: munbyn.biz/075MACU



4.2.3 LAN Interface

 To connect the printer to the router, use a network cable when the printer is turned off. Power on the printer and wait for it to automatically configure the IP address, which should take around 15 seconds.

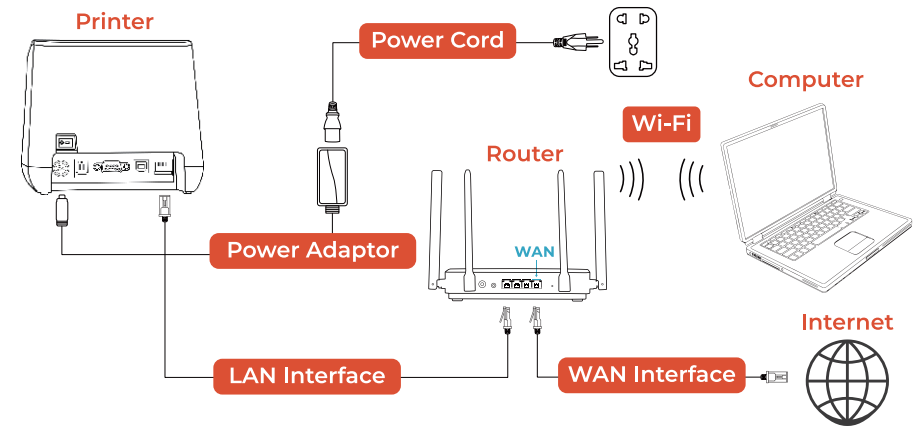

Open the downloaded driver and install it, then follow the demo video to configure the LAN.

Demo video: munbyn.biz/075MACLAN



4.3 Set Up the ITPP075 for First Use on Ubuntu

4.3.1 Download Ubuntu Driver

 
You can click the link below to download the driver.

Ubuntu driver or Raspberry Pi driver download link: munbyn.biz/ubuntuud

Notice: This driver file is not compatible with 32-bit.

4.3.2 USB Interface

- 1) Connect the printer to the power outlet via the power cord.
- 2) Connect the printer to your Ubuntu computer via USB.
- 3) Place the thermal paper into the printer and power it on.

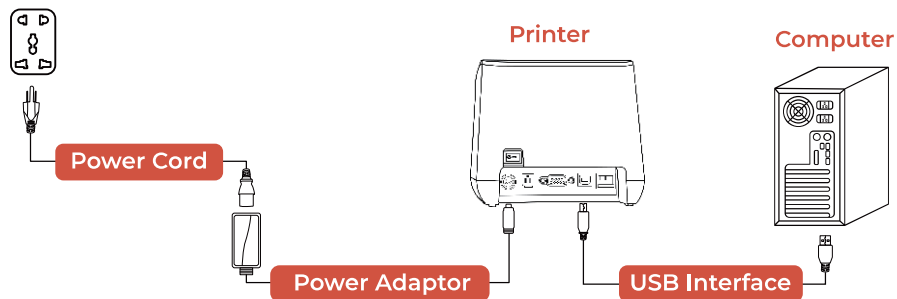


- 4) Open the downloaded driver and install it according to the video.

Demo video: munbyn.biz/075ubuntuU



4.3.3 LAN Interface

 Connect your computer to the wireless router. Please see the picture below.

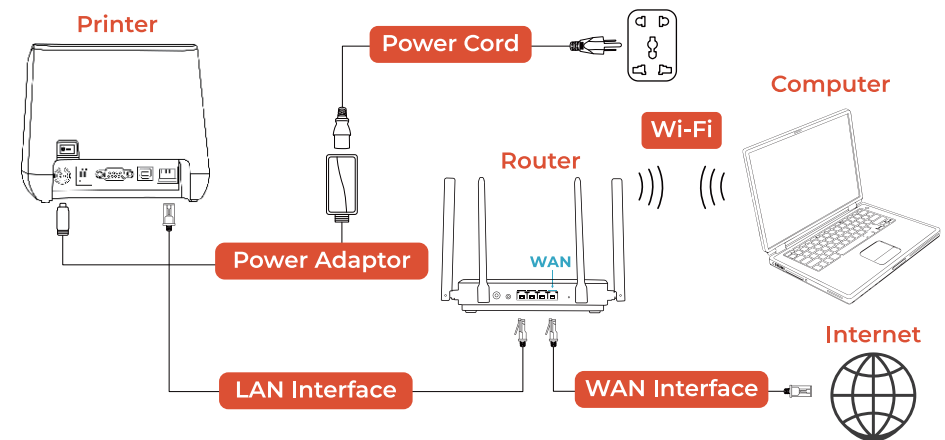

Setting IP address of the printer. Open your favorite web browser and navigate to [\[http://localhost:631/printers\]](http://localhost:631/printers) to add the printer port according to the video.

Demo video: munbyn.biz/075ubuntuLAN



4.4 Set Up the ITPP075 for First Use on ChromeOS

4.4.1 Download ChromeOS Driver

You can click the link below to download the driver.

 
Driver download link: munbyn.biz/chromeos

4.4.2 USB Interface



1) To install the [POS Printer Manager] extension and connect your ticket printer, you need to add the extension in your browser.


Specific steps are as follows:

a. Open the browser and click on the three dots in the top right corner of the browser menu. Select [More tools], and select [Extensions].

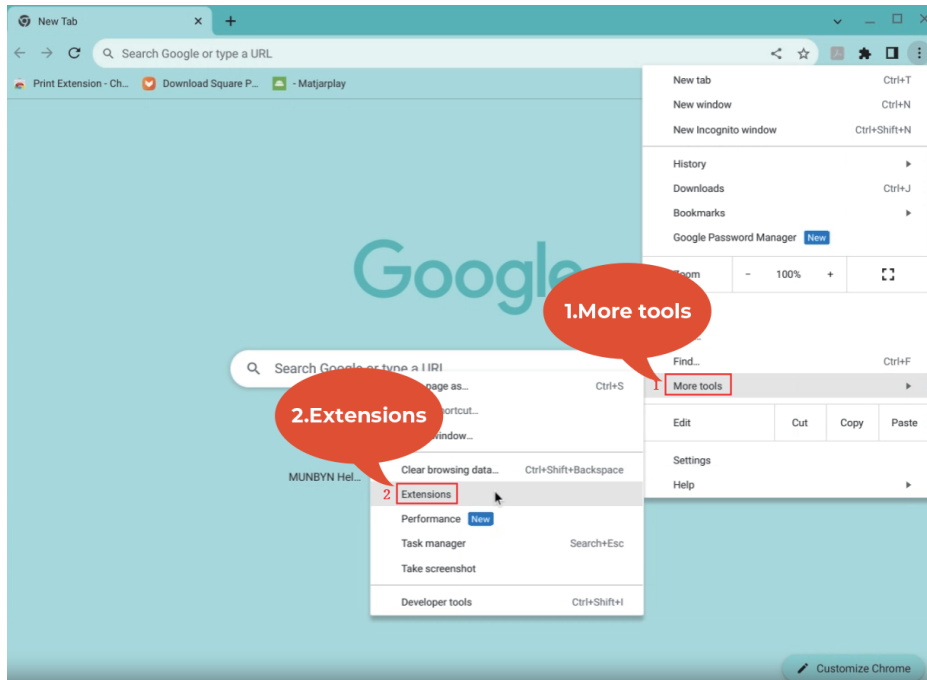


   b. Turn on the developer mode in the upper right corner of the extension page, click [Load unpacked] extension in the upper left corner, and select the unzipped extension program folder, at this time, you can see the installed [POS Printer manager] extension program on the page.

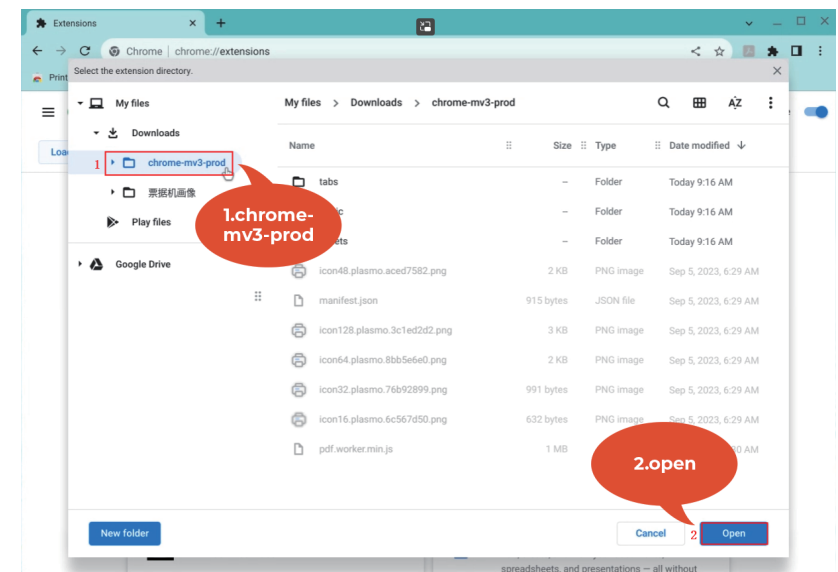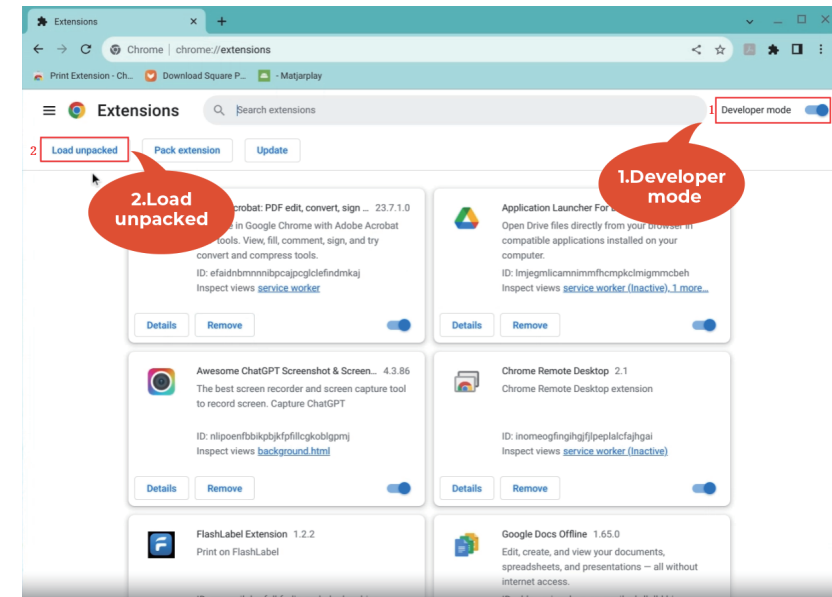

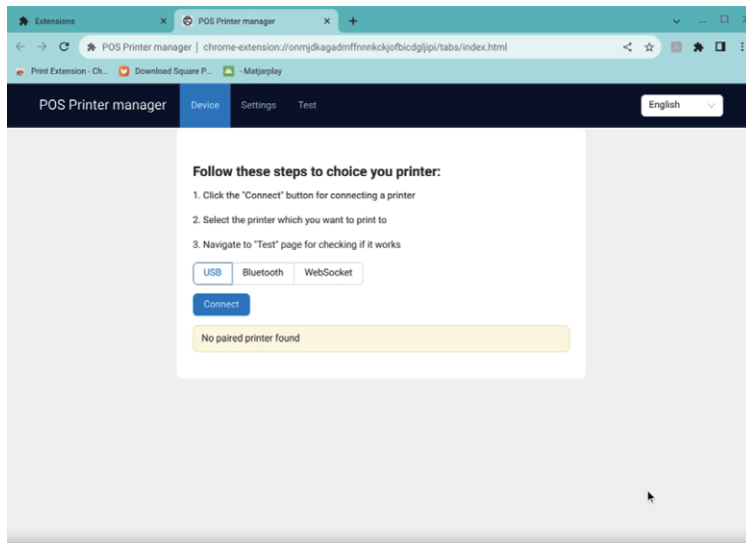

 2) Connect the printer to the power outlet via the power cord, and connect the printer to your ChromeBook computer via USB. Place the thermal paper into the printer and power it on.

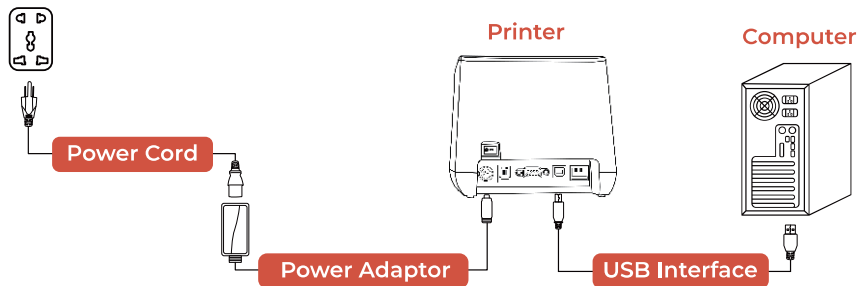

Connect the printer according to the video.

ChromeOS Connection System demo video:

munbyn.biz/072chromeosvideo



Contact us

MUNBYN provides 18 months warranty and lifetime free service. If you encounter any issues with the product, please contact the MUNBYN team to promptly receive troubleshooting tips or a replacement.

Email:
support@munbyn.com
(24-7 online support)

WhatsApp:
+8618144898200

Website:
www.munbyn.com
(how-to videos)

+1 6502062250