

85mm

65mm

128g铜版纸 单色双面印刷 折页



MICROPACK®
Digitally Yours

MP-V03VV

WIRELESS ERGONOMIC VERTICAL MOUSE

 
U S E R M A N U A L

EN



Cautions

1. Do not expose the product to rain or damp conditions.
2. Do not disassemble, repair or modify the product.
3. Please store and use the product at room temperature.
4. Do not drop, in case the product is damaged.
5. Unauthorized removal will void the warranty.
6. Only replace batteries of the same type or equivalent type.
7. Batteries should not be exposed to sunlight, fire or similar overheating conditions.


Overview

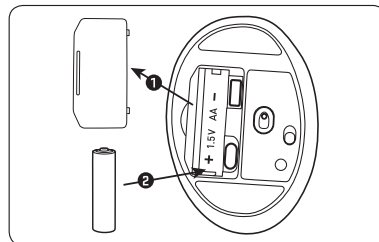

EN

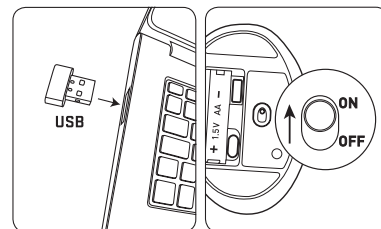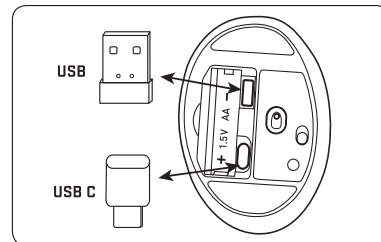  


EN

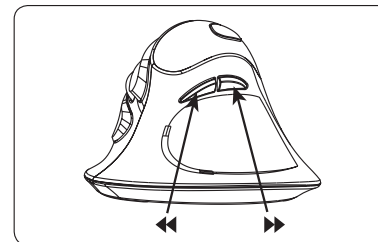 

Step

 1. Open the battery cover of the mouse, take out the USB-A and insert it into the USB-A socket of the computer. Or insert it into the USB-C socket of the notebook.
2. Install 1 AA battery in the battery compartment according to the positive and negative poles, install the cover and flip the power on/off switch at the bottom.
3. Replace the receiver: turn off the mouse switch, take out the USB-A receiver, insert USB-C receiver and turn on the switch and you can use.

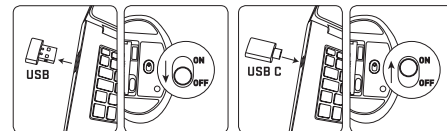

EN

Features

1. Ergonomic design
2. 3 DPI levels
3. Power-saving
4. Work on almost any surface
5. Stable 2.4g wireless connection

Troubleshooting

1. Failed to connect
 - (1) Confirm whether the USB receiver is correctly connected to the USB interface of the host.
 - (2) Confirm whether the USB receiver automatically identifies the host and installs the program automatically.
 - (3) Confirm whether the positive and negative poles of the battery are correctly installed and whether the battery is charged.
 - (4) Confirm whether a new computer can be connected.
 - (5) Confirm that the USB receiver is replaced with a USB socket can be work.
 - (6) Confirm whether the power switch is on.
2. Wake up and others
 - (1) The product enters standby state after 60 seconds without operation.
 - (2) The product enters hibernation after 15 minutes without operation.
 - (3) After the product enters the hibernation state, press any left or right key to wake up.

EN

Specification

Wireless technology	RF 2.4 GHz
Wireless range	Approx 10 meters
Sensor	Optical sensor
Resolution	800 - 1200 - 1600 DPI
Numbers of buttons	6 (left key, right key, scroll, DPI switch, forward, backward)
Battery type	1 AA battery
Receiv	USB-A nano receiver + USB-C nano receiver
Rating voltage/current	1.5V / 15mA(Max) 4.35-5.25V / 40mA(USB receiver)
Dimension	108.8 × 76.7 × 82.5 ± 0.5mm

Box Includes

1. Wireless mouse
2. USB-A & USB-C receiver
3. User manual

System Requirement

USB specification version 1.1, 2.0 or above.
Support Windows 10 / 8 / 7 / XP / Mac.