
Ultimate Mobile Gaming Controller for Xbox


English

猎户座拉伸手柄(Xbox)



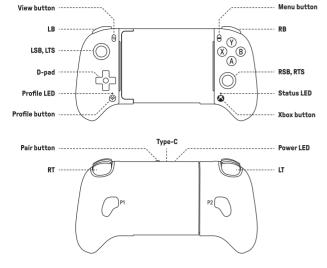

- Press the Xbox button to turn on the controller
- · Hold the Xbox button for 6 seconds to turn on the controller
- Hold the **Xbox button** for 12 seconds to force controller to shut down

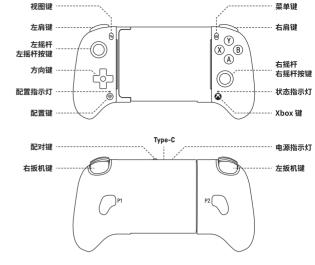

2. 按住配对键,3 秒至 状态指示灯 快速闪烁,进入配对状态。(仅首次连接时需要配对) 3. 打开 Android 设备蓝牙,搜索 **8BitDo Ultimate MGX** 连接,连接完成后 **状态指示灯** 常亮。

2. 按住配对键3秒至状态指示灯快速闪烁,进入配对状态。(仅首次连接时需要配对) 3. 打开 iOS 设备蓝牙,搜索 8BitDo Ultimate MGX 连接,连接完成后 状态指示灯 常亮。

使用 USB 线将手柄连接到 Windows 设备的 USB 端口,等待系统识别完成后即可使用。

==

Android

蓝牙连接

蓝牙连接

Windows

有线连接

1. 按下 Xbox 键 开启手柄

ios

- 开机:按下 Xbox 键。 关机:按住 Xbox 键 6 秒。
- 强制关机:按住 Xbox 键 12 秒。

1. 按下 Xbox 键 开启手柄。

* 要求 Android 设备系统版本为 Android 13.0 或更高版本。

* 要求 iOS 设备系统版本为 iOS 18.5 或更高版本。

Android



· System requirement: Android 13.0 or above

Bluetooth Connection

- 1. Press the Xbox button to turn on the controller.
- 2. Press and hold the Pair button for 3 seconds to enter the pairing mode, the Status LED will start to blink Press and note the Pair button for 3 seconds to enter the pairing mode, the Status LED will start to rapidly. (This is required for the very first time only)
 Go to your Android device's Bluetooth list and pair with "BBitDo Ultimate MGX", the Status LED will
- remain solid when the connection is successful.

iOS

System requirement: iOS 18.5 or above

Bluetooth Connection

- 1. Press the Xbox button to turn on the controller.
- Press the Xbox button to turn on the controller.
 Press and hold the Pair button for 3 seconds to enter the pairing mode, the Status LED will start to blink rapidly. (This is required for the very first time only)
 Go to your iOS device's Bluetooth list and pair with "8BitDo Ultimate MGX", the Status LED will remain solid when the connection is successful.

Windows

=

· System requirement: Windows 10(1903) or above

Wired Connection

Fast Button Swap

is powered off or disconnected.

Connect the controller to your Windows device via the USB cable and wait utill the controller is successfully recognized by the device

The Profile LED will blink continuously when the swapped function button is pressed.
The button swap settings will not be saved permanently and will revert to default settings after the controller

快速按键交换

* 要求 Windows 设备系统版本为 Windows 10 (1903) 或更高版本。

已交换过功能的按键,按下时 配置指示灯 会持续闪烁。 交换功能不会保存,关机或断开后恢复默认。 Xbox、P1、P2 键 不支持交换。

$(A + (B) + (A)) = (A) \leftrightarrow (B)$


P1/P2 Buttons Configuration

• Single button on the controller can be mapped to the P1/P2 buttons.

Xbox button, P1/P2 buttons are not supported for the button swap

 $|A| + |B| + |\otimes| = |A| \leftrightarrow |B|$

 - SBJLTS and RSB/RTS configurations are not supported.
 The button configuration settings will not be saved permanently and will revert to default settings after the
- controller is powered off or disconnected.
- The Profile LED will blink continuously when the mapped button is pressed.



配置 P1 / P2 键

- 可将手柄上的单个按键复制到 P1 / P2 键。
- 左/右摇杆不支持配置。 配置功能不会保存,关机或断开后恢复默认。
- 已配置的按键使用时 配置指示灯 会持续闪烁。



Battery

Low battery Battery charging Fully charged

ver LED Green LED blinks Green LED remains solid

- $Built-in\ 300 mAh\ battery\ pack, 15\ hours\ of\ usage\ time\ and\ rechargeable\ with\ 1\ hour\ charging\ time.$
- The controller will automatically shut down if it fails to connect within 1 minute of startup, or if there are
- no operations within 15 minutes after establishing a connection. The controller will not shut down during wired connection.

电源

安全警示

电源指示灯状态

Α

产品包含小部件,可能造成窒息危险,不适合3岁以下儿童使用。 本产品使用时包含闪烁灯光效果,若有癫痫病史或光敏性反应者使用时请关闭灯光。

产品线缆可能造成绊倒或缠绕危险,请勿放置在行走区域,并远离儿童及宠物。 如产品使用过程中出现头晕、视力异常、肌肉抽搐等症状,请立即停止使用并就医。

- 电源状态 电量不足 红灯闪烁 正在充电 绿灯闪烁
- 配备 300mAh 可充电式锂电池,可持续使用约 13 小时,充电时间约 1 小时。
- 开机后1分钟内无连接,或连接后15分钟无操作会自动关机。

在用户使用第三方的配件时,制造商不能对用户的安全负责。

对设备的任意变动或改装,将导致制造商对设备不予保修。

使用有线连接时不会自动关机。

请使用制造商的电池、充电器、配件。

请勿自行拆卸、改装或修理设备。请勿挤压、拆解、刺穿或尝试改装设备及电池。

Safety Warnings

Δ

- Please always use batteries, chargers, and accessories provided by the manufacturer. The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approximately in the safety issues arising from the use of non-manufacturer approximately in the safety issues arising from the use of non-manufacturer.
- $\bullet \ \, \text{Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in } \\$
- serious injury.
- · Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these
- actions can be dangerous.

 Any unauthorized changes or modifications to the device will void the manufacturer's warranty.
- · This product contains small parts that may cause choking. Not suitable for children under three years old. • This product features flashing lights. Individuals with epilepsy or photosensitivity should disable the lighting
- effects before use. Cables may cause tripping or entanglement hazards. Keep them away from walkways, children, and pets
- Stop using this product immediately and seek medical attention if you experience dizziness, visua disturbances, or muscle spasms.

自定义配置 请访问 app.8bitdo.cn 获取 精英软件 使用。

*请访问 support.8bitdo.cn 了解详细信息。

Ultimate Software

• Please visit app.8bitdo.cn to download the Ultimate Software to get the latest firmware

Support











· Please visit support.8bitdo.com for further information & additional support.

