



Dear VIZIO Customer,

Congratulations on your new VIZIO M320NV or M370NV television purchase. To get the most out of your new VIZIO HDTV, read these instructions before making any adjustments, and retain them for future reference. We hope you will experience many years of enjoyment from your new VIZIO HDTV High Definition Television.

For assistance, call **877-MYVIZIO** (877-698-4946) or e-mail us at www.VIZIO.com.

To purchase or inquire about accessories and installation services for your VIZIO HDTV, visit our website at www.VIZIO.com or call toll free at **888-849-4623**.

We recommend you register your VIZIO HDTV either at our website www.VIZIO.com or fill out and mail your registration card. For peace of mind and to protect your investment beyond the standard warranty, VIZIO offers on-site extended warranty service plans. These plans give additional coverage during the standard warranty period. Visit our website or call us to purchase a plan.

Write down the serial number located on the back of your HDTV for easy reference when obtaining warranty support:

Serial #: _____	Purchase Date _____
-----------------	---------------------

HDMI logo and "High Definition Multimedia Interface" are registered trademarks of HDMI Licensing LLC.

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.



TruSurround HD and TruVolume are trademarks of SRS Labs, Inc.

TruSurround HD and TruVolume technologies are incorporated under license from SRS Labs, Inc.



This product qualifies for ENERGY STAR in the "factory default (Home Use)" setting and this is the setting in which power savings will be achieved. Changing the factory default picture setting or enabling other features will increase power consumption that could exceed the limits necessary to qualify for Energy Star rating.

© 2010. All rights reserved. The V, VIZIO, VIZIO XVT, VIZIO VIA, TruLED, 240Hz SPS, Slim Line, Smooth Motion, Where Vision Meets Value names, phrase and symbols are trademarks or registered trademarks of VIZIO, Inc. All other trademarks are of their respective owners. Contents subject to change without notice.

Important Safety Instructions

Your HDTV is designed and manufactured to operate within defined design limits. Misuse may result in electric shock or fire. To prevent your HDTV from being damaged, the following rules should be observed for the installation, use, and maintenance of your HDTV. Read the following safety instructions before operating your HDTV. Keep these instructions in a safe place for future reference.

- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to your HDTV.
- Unplug the power cord before cleaning your HDTV. A damp cloth is sufficient for cleaning your HDTV. Do not use a liquid or a spray cleaner for cleaning your HDTV. Do not use abrasive cleaners.
- Always use the accessories recommended by the manufacturer to insure compatibility.
- When moving your HDTV from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on your HDTV to avoid causing fire, electric shock, or component damage.
- Use only with the cart, stand, tripod, bracket, or table specified by manufacturer or sold with your HDTV. When a cart is used, use caution when moving the cart/HDTV combination to avoid injury from tip-over. Do not place your HDTV on an unstable cart, stand, or table. If your HDTV falls, it can injure a person and cause serious damage to your HDTV. Use only a cart or stand recommended by the manufacturer or sold with your HDTV.
- A distance of at least three feet should be maintained between your HDTV and any heat source, such as a radiator, heater, oven, amplifier etc. Do not install your HDTV close to smoke. Operating your HDTV close to smoke or moisture may cause fire or electric shock.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of your HDTV and to protect it from overheating, be sure these openings are not blocked or covered. Do not place your HDTV in a bookcase or cabinet unless proper ventilation is provided.
- Never push any object into the slots and openings on your HDTV cabinet. Do not place any objects on the top of your HDTV. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on your HDTV.
- Your HDTV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Do not apply pressure or throw objects at your HDTV. This may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.
- The power cord must be replaced when using different voltage than the voltage specified. For more information, contact your dealer.
- Your HDTV is equipped with a **three-pronged grounded plug (a plug with a third grounding pin)**. This plug will fit only into a grounded power outlet. This is a safety feature. If your outlet does not accommodate the three-pronged, have an electrician install the correct outlet, or use an adapter to ground your HDTV safely. **Do not defeat the safety purpose of the grounded plug.**
- When connected to a power outlet, power is always flowing into your HDTV. To totally disconnect power, unplug the power cord.



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of your HDTV that may be of sufficient magnitude to constitute a risk of electric shock to persons.



- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying your HDTV.

- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- The wall socket should be installed near your HDTV and easily accessible.
- Only power of the marked voltage can be used for your HDTV. Any other voltage than the specified voltage may cause fire or electric shock
- Do not touch the power cord during lightning. To avoid electric shock, avoid handling the power cord during electrical storms.
- Unplug your HDTV during a lightning storm or when it will not be used for long period of time. This will protect your HDTV from damage due to power surges.
- Do not attempt to repair or service your HDTV yourself. Opening or removing the back cover may expose you to high voltages, electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel.
- Keep your HDTV away from moisture. Do not expose your HDTV to rain or moisture. If water penetrates into your HDTV, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use your HDTV if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair your HDTV yourself.
- Avoid using dropped or damaged appliances. If your HDTV is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact your dealer for repair. Continued use of your HDTV may cause fire or electric shock.
- Do not install your HDTV in an area with heavy dust or high humidity. Operating your HDTV in environments with heavy dust or high humidity may cause fire or electric shock.
- Follow instructions for moving your HDTV. Ensure that the power cord and any other cables are unplugged before moving your HDTV.
- When unplugging your HDTV, hold the power plug, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When your HDTV will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert batteries in accordance with instructions. Incorrect polarities may cause the batteries to leak which can damage the remote control or injure the operator.
- If any of the following occurs, contact the dealer:
 - The power cord fails or frays.
 - Liquid sprays or any object drops into your HDTV.
 - Your HDTV is exposed to rain or other moisture.
 - Your HDTV is dropped or damaged in any way.
 - The performance of your HDTV changes substantially.

Television Antenna Connection Protection

External Television Antenna Grounding

If an outside antenna/satellite dish or cable system is to be connected to the TV, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and static charges.


Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of the grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements of the grounding electrode.

Lightning Protection

For added protection of the TV during a lightning storm or when it is left unattended or unused for long periods of time, unplug the TV from the wall outlet and disconnect the antenna or cable system.

Power Lines

Do not locate the antenna near overhead light or power circuits, or where it could fall into such power lines or circuits.

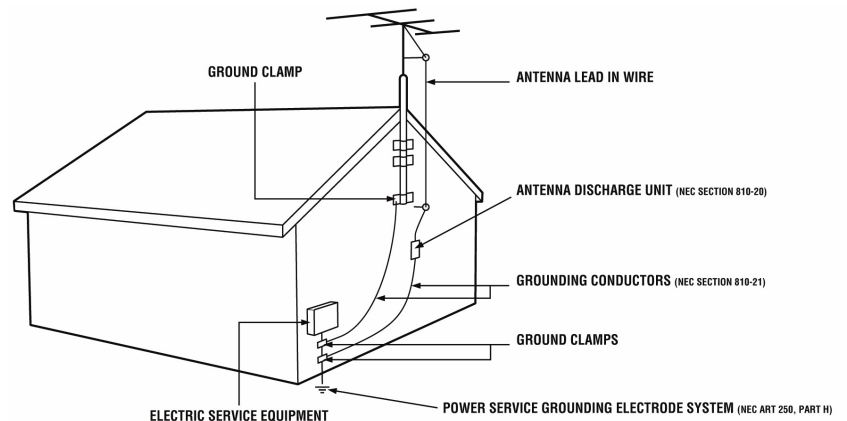

Remember, the screen of the coaxial cable is intended to be connected to earth in the building installation.

Advisory of the DTV Transition

The nationwide switch to digital television broadcasting will be complete on June 12, 2009, but your local television stations may switch sooner. After the switch, analog-only television sets that receive TV programming through an antenna will need a converter box to continue to receive over-the-air TV. Watch your local stations to find out when they will turn off their analog signal and switch to digital-only broadcasting. Analog-only TVs should continue to work as before to receive low power, Class A or translator television stations and with cable and satellite TV services, gaming consoles, VCRs, DVD players, and similar products.

For additional information, contact the parties listed below, as appropriate:

FCC (US Federal Communications Commission)

<http://www.fcc.gov/>

Phone: 1-888-CALL-FCC (1-888-225-5322)

TTY: 1-888-TELL-FCC (1-888-835-5322)

Fax: 1-866-418-0232

E-mail: fccinfo@fcc.gov

NTIA (National Telecommunications and Information Administration)

<http://www.ntia.doc.gov/>

1-888-DTV-2009

Listings of US Television Stations

<http://www.high-techproductions.com/usTVstations.htm>

Note: Your VIZIO HDTV is capable of receiving Digital Broadcasts, and no Digital Converter Box is required.

Table of Contents

Important Safety Instructions	2
Television Antenna Connection Protection	4
Advisory of the DTV Transition	5
CHAPTER 1 SETTING UP YOUR HDTV	10
Finding a Location for Your HDTV	10
Attaching the TV Stand	10
Wall Mounting your HDTV	11
CHAPTER 2 BASIC CONTROLS AND CONNECTIONS	12
Front Panel	12
Jag Wheel Control	12
Side Panel Connections	13
Rear Panel Connections	13
CHAPTER 3 VIZIO REMOTE CONTROL	14
Installing the Batteries	14
Remote Control Range	14
VIZIO Remote Control Precautions	14
Remote Control Buttons	15
CHAPTER 4 GETTING STARTED	16
CHAPTER 5 USING YOUR HDTV FOR THE FIRST TIME	17
Select an Input Source	17
Watching a TV Program	17
Viewing Digital TV Program Information	18
CHAPTER 6 CONNECTING EQUIPMENT	19
Which Video Connection Should I Use?	19
Connecting Your Cable or Satellite Box	20
Using HDMI (Best)	20
HDMI Connections for Cable or Satellite Boxes with DVI	20
Using Component Video (Better)	21
Using Composite Video (Good)	21
Using Coaxial (Antenna) (Good)	21
Connecting Your DVD Player	22
Using HDMI (Best)	22
HDMI Connections for DVD Players with DVI	22
Using Component Video (Better)	23
Using Composite (AV) Video (Good)	23
Connecting Coaxial (RF)	24
Using Your Antenna or Digital Cable for Standard or Digital TV	24
Connecting Your VCR or Video Camera	24
Connecting a Home Theater System	25
Using RCA	25
Connecting the cables	25
Turning TV speakers off	25
Using Optical (S/PDIF)	25
Connecting a Computer	26
RGB (VGA)	26
Using HDMI	26

CHAPTER 7 VIEWING PICTURES	27
Viewing Pictures	27
Adjusting Photo Settings	27
Adjusting Photo Settings	28
Slideshow Mode.....	28
Repeat.....	28
Sort By	28
Duration	28
Slideshow Effect	28
Thumbnail Size	28
Info	28
CHAPTER 8 ADJUSTING YOUR HDTV SETTINGS.....	29
Using the On-screen Display (OSD)	29
Input Menu.....	29
Wide Menu	30
Normal.....	30
Wide	30
Panoramic.....	30
Stretch.....	30
CC (Closed Caption) Menu	31
Analog Closed Caption	31
Digital Closed Caption	31
Digital CC Style.....	31
Sleep Timer Menu	31
Picture Menu	31
Picture Mode.....	31
Backlight	31
Brightness	32
Contrast	32
Color.....	32
Tint	32
Sharpness.....	32
More	32
Audio Menu	34
Audio Mode	34
Balance	34
Lip Sync	34
TV Speakers	34
Advanced Audio.....	34
Equalizer Settings	35
Reset Audio Mode	35
Settings Menu.....	35
Tuner.....	35
Name Input	36
Parental Controls	37
Menu Language	39
Time & Local Settings.....	39
CEC.....	39
Media Menu	40
Slideshow Mode.....	40
Repeat.....	40
Sort By	40
Duration	40

Slideshow Effect	40
Thumbnail Size	40
Info	40
Help Menu	41
System Info	41
Reset TV Settings	41
Clear Memory (Factory Default)	41
Start Setup Wizard	41
CHAPTER 9 PROGRAMMING THE VIZIO UNIVERSAL REMOTE CONTROL	42
Using a Cable or Satellite Box Remote	42
Programming other devices	42
Programming your Blu-Ray or DVD Player	42
Programming your Home Theater System	42
Programming your Cable or Satellite Set-Top Box.....	43
Searching for Device Codes	43
Reset Remote Control to Factory Settings.....	43
Remote Control Codes	44
Television Codes	44
Satellite Receiver Codes.....	51
PVR Codes	52
DVD Player Codes.....	52
Amplifier / Receiver / Tuner Codes.....	54
Audio Accessory Codes.....	56
VCR Codes	56
CHAPTER 10 MAINTENANCE AND TROUBLESHOOTING	58
Cleaning the TV and Remote Control	58
Troubleshooting Guide	58
Telephone & Technical Support	61
Compliance.....	61
FCC Class B Radio Interference Statement	61
CHAPTER 11 SPECIFICATIONS	62
Preset PC Resolutions	65
Resolution through RGB Input	65
WARRANTY	66
INDEX	67

Opening the Package

Your HDTV and its accompanying accessories are carefully packed in a cardboard carton that has been designed to protect it from transportation damage. After you have opened the carton, check that your HDTV is in good condition and that all of the contents are included.

The glass surface can easily be scratched or broken, so handle your HDTV gently and never place your HDTV with the glass facing downwards on a surface without protective padding.

IMPORTANT: Save the carton and packing material for future shipping.

Package Contents

- VIZIO M320NV or M370NV
- VIZIO remote control VUR12
- AAA batteries for the remote control (2)
- Power cord
- Detachable base with thumbscrew
- Cleaning cloth
- This user manual
- Quick Setup Guide
- Registration Card



HDTV Accessories and Services

Additional certified accessories for your HDTV are sold separately, including:

- Wall mounts
- High Definition cables
- Extra or replacement remote controls
- Sound Bars
- Blu-ray DVD Players

VIZIO also offers installation services and extended warranty services for your HDTV.

To purchase or inquire about additional accessories and services for your VIZIO HDTV, visit our website at www.VIZIO.com or call us toll free at **877-MYVIZIO** (877-698-4946).

Caution: Do not apply pressure or throw objects at your HDTV (including game controllers). This may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

Chapter 1 Setting Up Your HDTV

Finding a Location for Your HDTV

Here are some things you should consider when deciding on a proper location for your HDTV:

- The power consumption of your HDTV is about 57.1W (M320NV) and 56W (M370NV) (AVG)
- Use the included power cord.
- When an extension cord is required, use one with the correct power rating. The 3-pronged cord must be grounded and the grounding feature (3rd prong) must not be compromised.
- Install your HDTV on a flat surface to avoid tipping.
- For proper ventilation, you must allow space between the back of your HDTV and the wall.
- Avoid installing your HDTV in places with high humidity, dust, or smoke so you do not shorten the service life of the electronic components.
- Install your HDTV in a level, landscape orientation, with the VIZIO logo at the bottom to prevent poor ventilation and excessive component damage.
- If you want to mount your HDTV on the wall, see below for additional information.
- Read this user manual carefully before installing your HDTV.

VIZIO offers professional installation services including home networking. Contact VIZIO for more information on these services at **877-MYVIZIO** (877-698-4946) or www.VIZIO.com.

Attaching the TV Stand

Note: We strongly recommend that two people perform the setup and assembly due to the weight and size of the TV.

Unpack the TV and stand base:

1. Remove the two top foam end caps.
2. Remove the stand base and accessory box from packaging.
3. Remove the TV from the box and lay it face down on a clean, padded, flat surface.

Note: Make sure that the surface is free of debris to prevent the TV screen from getting scratched.

Attach the TV stand base:

1. Align the stand base to the back of the TV.
2. Insert the four screws provided and tighten.



Wall Mounting your HDTV


Your HDTV can be mounted on the wall for viewing. If you choose to mount your HDTV on the wall, follow the instructions below.

1. Write down the serial number located on the back of your HDTV in the space provided on page 1 to have it handy if you need to call for support.
2. Remove the stand base and neck:
 - a. Disconnect the cables from your HDTV.
 - b. Place your HDTV face down on a soft, flat surface to prevent damage to the screen.
 - c. Remove the four (4) screws holding the stand neck, and then remove the neck and base.

Note: To remove the base from the neck, unscrew thumbscrew on bottom.

1. Mount your HDTV on the wall:
 - a. Attach your HDTV to a wall mount (sold separately) using the mounting holes in the back panel of your HDTV.
 - b. Read the instructions that came with your specific wall mount to properly hang your HDTV.

Wall Mounting Specifications	
Screw Size	M4
Screw Length	18.0 mm
Screw Pitch	1.0 mm
Hole Pattern	VESA standard 100 x 100 mm spacing

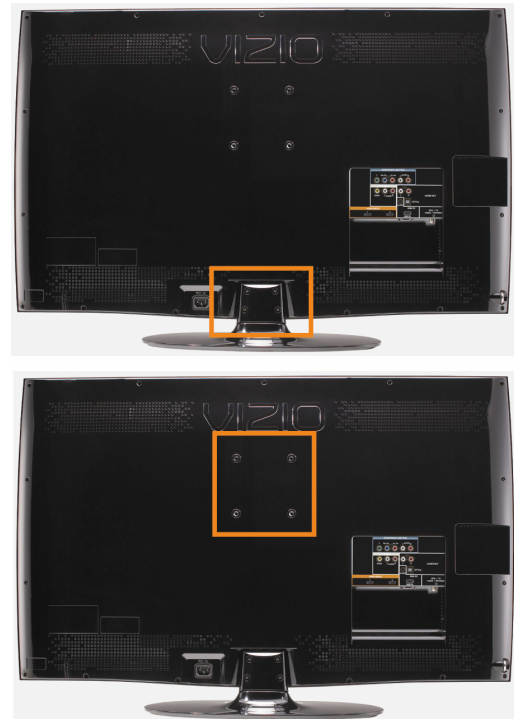

Chapter 2 Basic Controls and Connections

Front Panel

1. **Remote Control Sensor**—Point the remote control directly at this window on the lower left corner of your HDTV for the best response to the remote signal.
2. **POWER 'VIZIO' LIGHT**—The VIZIO name lights white when powered on and orange when powered off.




Jag Wheel Control

The Jag wheel on the side of your HDTV performs all of the same functions you might see as buttons on other TVs, including volume, power, and channel change. All of these functions have been combined into a single wheel on your M320NV or M370NV.

- Press the Jag wheel once to turn your HDTV on.
- Press and hold the Jag wheel for three seconds to turn your HDTV off.
- When watching TV, scroll the Jag wheel up and down to turn the volume up and down.
- To open the Quick Menu, press the Jag wheel for two seconds, scroll the wheel up and down to highlight an option, and then press in the wheel again to confirm your selection. If you do not press anything, the menu will automatically close after 10 seconds.




- **Volume**—Press to increase or decrease the speaker volume.
- **Channel**—Press to open a channel list. Choose the channel with the wheel and then press the wheel to go to that channel.
- **Input Source**—Press to cycle through the various devices connected to your TV (called Inputs). The inputs cycle in the following sequence: TV, AV, Comp, HDMI-1, HDMI-2, HDMI SIDE, RGB, and Media. After you have stepped through the entire sequence, you will return to the beginning.
- **Exit**—Press to close the Quick Menu.
- **Power Off**—Press to turn your HDTV off.

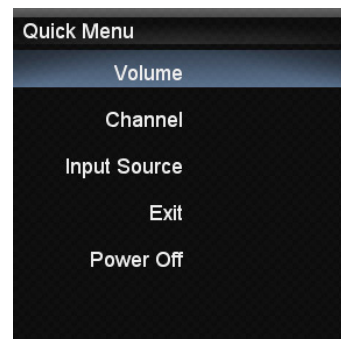


Note: The Jag wheel does not operate in the OSD menu. Please use your remote control to change your HDTV settings.

Side Panel Connections

1. **USB:**
 - Insert a FAT/FAT32 formatted USB drive to view pictures.
 - Service port for use by a professional service technician.
2. **HDMI SIDE**—Connect digital video devices such as a DVD player or Set-Top Box through this all digital connector. There are additional HDMI connectors on the back.

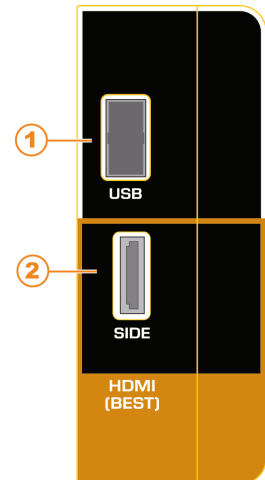

Rear Panel Connections

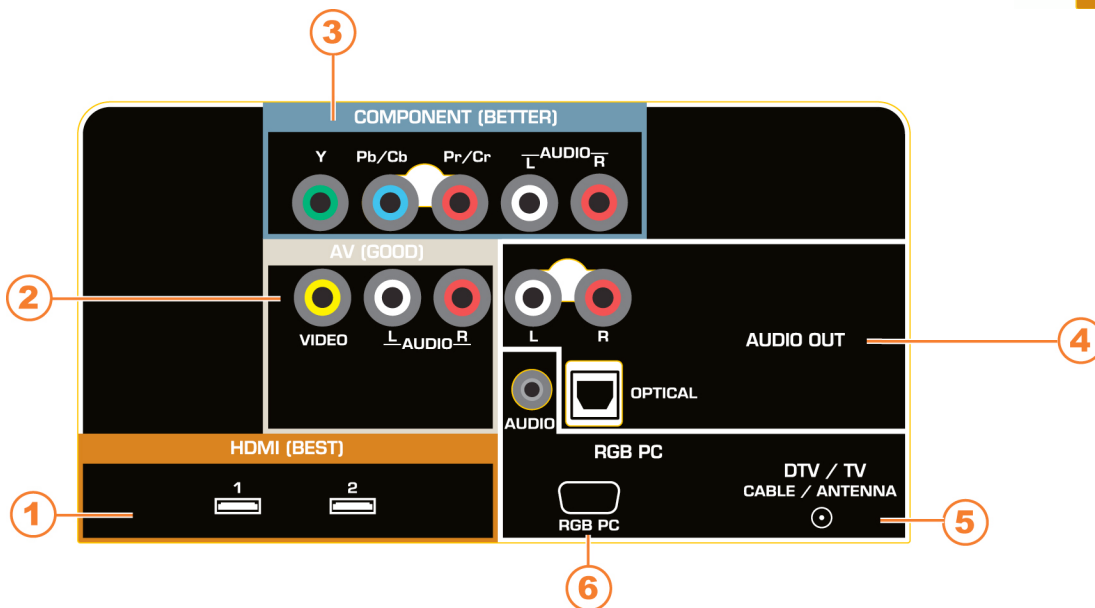

1. **HDMI 1 and 2** —Connect digital video devices such as a DVD player or Set-Top Box through this all digital connector. There is an additional HDMI connector on the side.
2. **AV**—Connect Composite video devices, such as a VCR or game console. Use the white and red connectors to connect the external audio from the same source.
3. **COMPONENT (Y Pb/Cb Pr/Cr with L/R Audio)**—Connect Component video devices such as a DVD Player or Set Top Box here.
4. **AUDIO OUT:**
5. **OPTICAL**—When digital TV is selected for viewing, the audio associated with the programming will be available on the S/PDIF Optical connector for connection to a VIZIO Sound Bar or your Home Theater system.
6. **ANALOG L/R**—Connect the audio from the HDTV to an external device, such as a Home Theater System, external amplifier, or stereo. Speakers cannot be connected directly here.
7. **DTV/TV**— Connect to an antenna or digital cable source. For digital TV stations in your area visit www.antennaweb.org. For Cable and Satellite Set Top Boxes, we recommend that you use a HDMI or Component cable connection for high definition image quality.
8. **RGB PC**—Connect the video and audio from a computer here. Connect a 1/8" mini plug stereo connector from the computer to the TV if you want the sound to come from the HDTV speakers.

Chapter 3 VIZIO Remote Control

Installing the Batteries

1. Remove the battery cover.
2. Insert two AAA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment.
3. Replace the battery cover.



Precautionary Tips for Inserting the Batteries:

- Only use AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage that may cause a fire or lead to personal injury.
- Inserting the batteries incorrectly may also result in cracking or leakage that may cause a fire or lead to personal injury.
- Dispose of batteries according to local hazardous waste regulations.
- Keep the batteries away from children and pets.

Remote Control Range

- Point the remote control directly at this sensor for the best response to the remote signal.
- Do not place any obstacles between the remote control and the remote control sensor.
- The effective range of the remote control is approximately 22 feet (7 meters) from the front of the remote control sensor, 30° to the left and right, 20° up and down.



VIZIO Remote Control Precautions

- The remote control should be kept dry and away from heat sources. Avoid humidity.
- If the TV responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.
- When not using the remote control for a long period of time, remove the batteries.
- Do not take the batteries apart, heat them, or throw them into a fire.
- Do not subject the remote control to undue physical stress, such as striking or dropping it.
- Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.

Remote Control Buttons

POWER ()—Press to turn the TV on from the Standby mode. Press it again to return to the Standby mode.

Device Buttons:

- **DVD**—Press to select a DVD player that has been programmed to work with this remote.
- **AUDIO**—Press to select a Home Theater System or Audio Amplifier that has been programmed to work with this remote.
- **CABLE**—Press to select a Cable or Satellite Set Top Box that has been programmed to work with this remote.
- **TV**—Press to return to TV mode. If the remote is not working, press this button to return the functions back to TV.

CEC-Supported Buttons:

CEC needs to be set up and enabled for these buttons to work. See *CEC* on page 39 for more information.

- (Record)—Press to begin recording on your CEC-supported device.
- II** (Pause)—Press to pause playback on your CEC-supported device.
- ▶ (Play)—Press to start Playback on your CEC-supported device.
- (Stop)—Press to stop playback/recording on your CEC-supported device.
- ⏮ (Previous)—Press to skip the previous track on your CEC-supported device.
- ◀◀ (Reverse)—Press to reverses playback on your CEC-supported device.
- ▶▶ (Fast Forward)—Press to fast forward playback on your CEC-supported device.
- ⏭ (Next)—Press to skip to the next chapter on your CEC-supported device.

EXIT—Press to exit from open menus.

MENU—Press to open the On-Screen Display (OSD) menu.

OK—Press this button to display the Channel List. Press to confirm selections for On-Screen Display (OSD) menus.

▲ ▼ ◀ ▶—Press to navigate the OSD menu. They will also be used as value settings when the slide bar is shown on the screen and option settings to turn a feature off or on.

BACK—Press to return to a previous OSD menu. Press repeatedly to close the OSD.

GUIDE—Press to display detailed program information when viewing a digital TV program.

Color Buttons (Yellow, Blue, Red, & Green):

- **Yellow**—Press to perform the same function as the “A” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.
- **Blue**—Press to perform the same function as the “B” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.
- **Red**—Press to perform the same function as the “C” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.
- **Green**—Press to perform the same function as the “D” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.



VOL +/- —Press to turn the volume up or down.

MEDIA — Use this button to access the USB drive to view your pictures.

MUTE—Press to turn the sound on and off.

LAST— Press to recall the previously viewed channel.

CH +/- —Press to change the channels up or down

HDMI—Press to select the HDMI input. Press repeatedly to cycle between both HDMI inputs.


AV—Press to select the AV input.

TV—Press to select the TV input.

Number Button Pad—Press to select a channel or enter a password.

INPUT—Press to cycle through the various devices connected to your TV (called Inputs). The inputs cycle in the following sequence: TV, AV, Comp, HDMI-1, HDMI-2, HDMI SIDE, RGB, and Media. After you have stepped through the entire sequence, you will return to the beginning.


- **(DASH)**—Press to insert a dash between the main and sub-channels. For example, channel 28-2 would be selected by the button sequence 2, 8, DASH, 2.

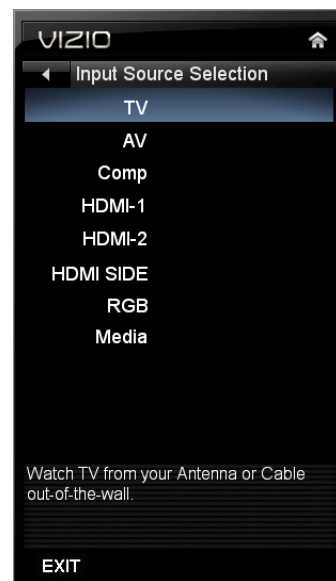

Chapter 4 Getting Started

Your HDTV has a built-in setup App that runs when you turn on your TV for the first time. Follow the on-screen directions to easily setup your new HDTV.

1. Insert the batteries into the remote control.
2. Connect the power cord to the power cord connector on the back of your HDTV, and then plug the power cord into an AC wall socket.
3. Connect your devices to your HDTV (see Connecting Equipment on page 19 for detailed steps).
4. Turn on your TV. The Setup App will automatically play and guide your thru the initial setup of your HDTV. Use the arrow and OK buttons to navigate through the Setup App. During the setup process you will:
 - Choose your Menu language
 - Set the TV to Home Mode for the best picture and most efficient energy usage.
 - Set your Time Zone and Daylight Savings preferences
 - Add your TV channels (unless you have a Cable/Satellite Set-Top Box)

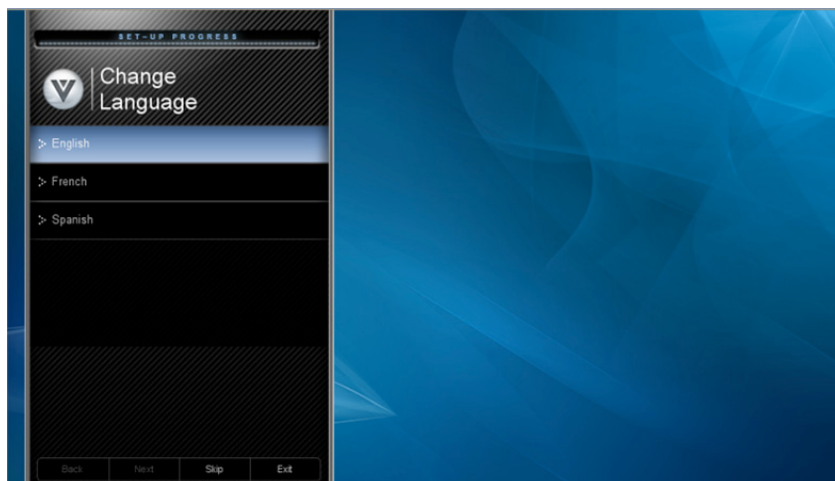


Chapter 5 Using your HDTV for the first time

Select an Input Source

1. Select the input source for your HDTV by pressing the **INPUT** button on the remote control or the front of your TV. Pressing this button will cycle you through the following options: TV, AV, Comp, HDMI-1, HDMI-2, RGB, and Media.
2. Turn on your device and you will see a picture on your HDTV. If there is no picture, make sure you have selected the correct input on your HDTV.

Note: If the selected device is RF connected, your HDTV needs to be in **TV** mode and on either channel 3 or channel 4 matching the channel which has been selected on the back of the VCR, Cable Box, External TV Tuner or Satellite Receiver. Refer to Owner or User's Manual of such equipment for details.

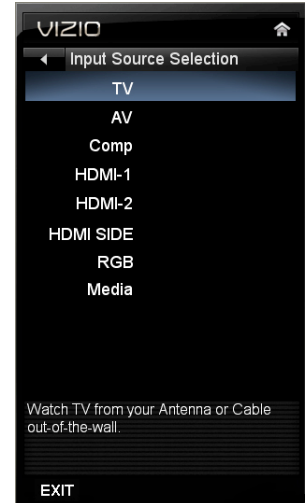

Watching a TV Program

Before you start watching TV, make sure that any cable, satellite or off-air antenna connections are secure. Also, verify that the AC/DC power adapter is plugged into a correctly grounded electrical outlet or surge protector.

1. Press the power button on the remote control. The VIZIO logo on the front will light up white.
2. Select the input to which your device is connected that provides TV programming (i.e. TV, HDMI, COMP).

Note: You should be able to see a picture. If you do not, make sure that all of your HDTV connections are secure and you have selected the correct video input source. Each press of the **INPUT** button on the remote control will cycle through the available inputs. Press the button until the input associated with the device you want to view is shown.

3. When using the TV input, press the channel buttons on the remote control or the TV to change the channel. The channel buttons will not work if you are watching a program using HDMI, Component, or AV inputs.

Viewing Digital TV Program Information

When the channel is changed or when you press the **GUIDE** button, an information header is shown over the picture for a few seconds. Each press of the **GUIDE** button will display more information about the program:

Time Warp: Mouse Trap			Ch 50-123	KCAL DTV	CABLE
11:00 AM - 12:00 AM	TV-PG (V)	CC-OFF	ENGLISH	DOLBY 5.1	720p HD
In this hour-long special, the Time Warp team runs off to join the circus with trap-testing Rev. Tommy Gunn and with high-flying Cirque du Soleil, explore their inner stuntmen, and put everything but wood in a chipper.					



Chapter 6 Connecting Equipment

Which Video Connection Should I Use?

You have six options for connecting your video equipment box to your HDTV from a basic connection to the most advanced for digital displays. Based on your Home Theater configuration, you can decide which option is the right one for you.

Connection Quality (type)	Connector	Description
Best (digital)	 HDMI	HDMI delivers the best image quality of any of the cable types available and it's all done over one cable. You get a great picture and cut down on your cable clutter. HDMI provides digital quality and amazing sound so if your TV has HDMI, this is the connection type you should be using.
Best (digital) ----- Good (analog)		Connect your antenna or coaxial cable to watch TV programming. This cable usually comes from your cable box or right out of the wall.
Best (analog)	 VGA	The RGB (VGA) port allows you to connect your computer so you can use the TV as your monitor.
Better (analog)	 Y Pb L Pr R	Component consists of three cables for transmitting video and two cables for transmitting audio: one red and one white. Component video provides a sharper image than Composite video and should be used instead of composite when possible. However, because it is still an analog connection, it won't provide the high-quality video and audio that HDMI can produce.
Good (analog)	 VIDEO L R	Composite consists of one yellow cable for transmitting video and two cables for transmitting audio: one red and one white. It is capable of transmitting stereo sound and standard definition video (480i). While it provides a good image, it has lower image quality than HDMI or Component. So try to use one of those connections first.

Note: To maintain the display quality, use a VIZIO certified HDMI cable. This cable is available in 6, 8, and 12 foot lengths. Visit www.vizio.com or call 1-888-VIZIOCE (1-888-849-4623) for details.

Connecting Your Cable or Satellite Box

Using HDMI (Best)



Cable and Satellite Boxes that have a HDMI digital interface should be connected using HDMI for optimal results. To maintain image quality, use a VIZIO certified HDMI cable. This cable is available in 6, 15, and 30 foot lengths. Visit www.VIZIO.com or call **877-MYVIZIO** (877-698-4946) for details.

1. Turn off your HDTV and Cable/Satellite box.
2. Connect an HDMI cable to the HDMI output of your Cable/Satellite box and the other end to the **HDMI 1, 2, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your Cable/Satellite box.
4. Select **HDMI-1, HDMI-2, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.


Note:

- The HDMI input on your HDTV supports High-bandwidth Digital Content Protection (HDCP). HDCP encrypts the transmission between the video source and the digital display for added security and protection.
- Refer to your Cable/Satellite Set Top Box user manual for more information about the video output requirements of the product or consult your Cable or Satellite operator.

HDMI Connections for Cable or





Satellite Boxes with DVI

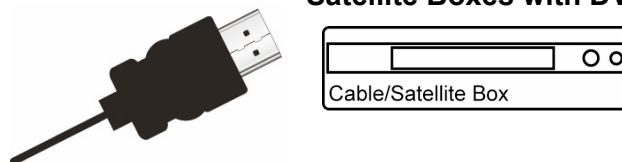

1. Turn off your HDTV and Cable/Satellite box.
2. Using a HDMI-DVI cable, connect the DVI end to your Cable/Satellite box and the HDMI end to the **HDMI 1, 2, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your Cable/Satellite box.
4. Select **HDMI-1, HDMI-2, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.



Note: There are no dedicated audio ports for HDMI so there may or may not be audio from the TV with this connection.

Using Component Video (Better)

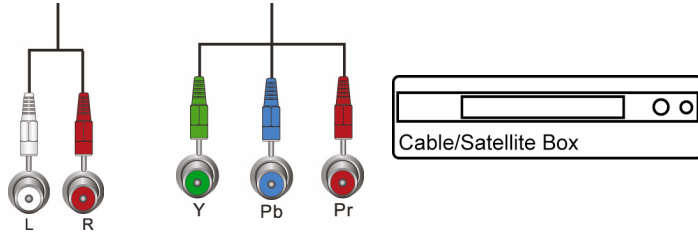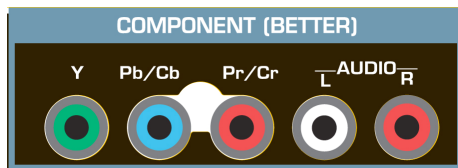


1. Turn off your HDTV and Cable/Satellite box.
2. Connect the Component cables (green, blue, and red) from your Cable/Satellite box to the **COMPONENT** jacks on your HDTV.
3. Connect the audio cables (white and red) from your Set Top Box to the **COMPONENT L and R AUDIO** jacks on your HDTV.
4. Turn on your HDTV and Cable/Satellite box.
5. Select **Comp** using the **INPUT** button on the remote control or side of the TV.

Using Composite Video (Good)

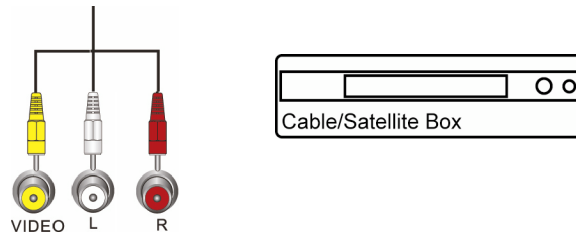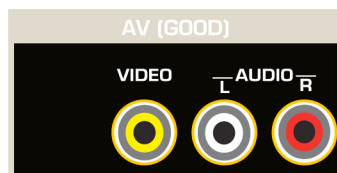

1. Turn off your HDTV and Set Top Box.
2. Connect the video cable (yellow) from your Set Top Box to the **AV** jack (yellow) on your HDTV.
3. Connect the audio cables (white and red) on your Set Top Box to the **AV L and R AUDIO** jacks on your HDTV.
4. Turn on your HDTV and Set Top Box.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

 
Using Coaxial (Antenna) (Good)



1. Turn off the power to your HDTV.
2. Connect the coaxial (RF) connector from your antenna or digital cable to the **DTV/TV CABLE/ANTENNA** connector on your HDTV.
3. Turn on the power to your HDTV.
4. Select **TV** using the **INPUT** button on the remote control or side of the TV.
5. Search for new channels. See *Auto Channel Search* on page 35 for more information on scanning for channels.

Connecting Your DVD Player

Using HDMI (Best)

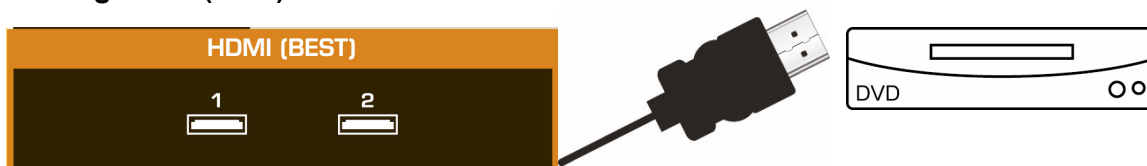

DVD players that have a HDMI digital interface should be connected using HDMI for optimal results. To maintain image quality, use a VIZIO certified HDMI cable. This cable is available in 6, 15, and 30 foot lengths. Visit www.VIZIO.com or call **877-MYVIZIO** (877-698-4946) for details.

1. Turn off your HDTV and DVD player.
2. Connect a HDMI cable to the HDMI output of your DVD player and the other end to the **HDMI 1, 2,** or **HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your DVD player.
4. Select **HDMI-1, HDMI-2,** or **HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

Note:

- The HDMI input on your HDTV supports High-bandwidth Digital Content Protection (HDCP). HDCP encrypts the transmission between the video source and the digital display for added security and protection.
- Refer to your DVD player user manual for more information about the video output requirements.


HDMI Connections for DVD Players with DVI



1. Turn off your HDTV and DVD player.
2. Using a HDMI-DVI cable, connect the DVI end to your DVD player and the HDMI end to the **HDMI 1, 2,** or **HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your DVD player.
4. Select **HDMI-1, HDMI-2,** or **HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.


Note: There are no dedicated audio ports for HDMI so there may or may not be audio from the TV with this connection.

Using Component Video (Better)

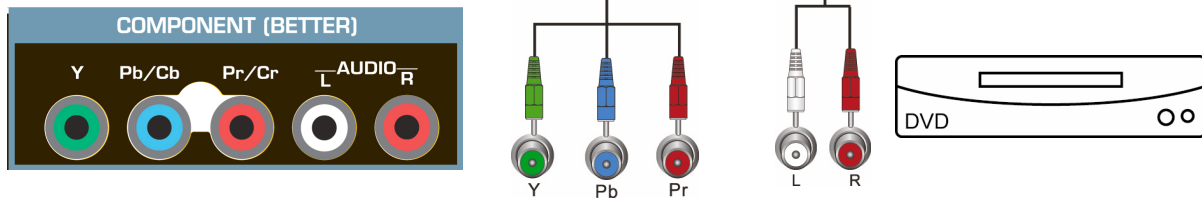

1. Turn off the power to your HDTV and DVD player.
2. Connect the Component cable (green, blue, and red) from your DVD player to the **COMPONENT** jacks on your HDTV.
3. Connect the audio cables (white and red) from your DVD player to the **COMPONENT L** and **R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and DVD player.
5. Select **COMP** using the **INPUT** button on the remote control or side of the TV.

Using Composite (AV) Video (Good)

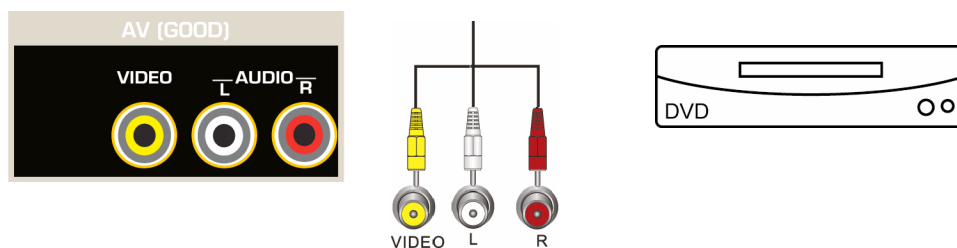

1. Turn off the power to your HDTV and DVD player.
2. Connect the Video cable (yellow) from your DVD player to the **AV** jack on your HDTV.
3. Connect the audio cables (white and red) on your DVD player to the **AV L** and **R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and DVD Player.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.


Connecting Coaxial (RF)

Using Your Antenna or Digital Cable for Standard or Digital TV



1. Turn off the power to your HDTV.
2. Connect the coaxial (RF) connector from your antenna or cable to the **DTV/TV CABLE/ANTENNA** connector on your HDTV.
3. Turn on the power to your HDTV.
4. Select **TV** using the **INPUT** button on the remote control or side of the TV.
5. Search for new channels. See *Auto Channel Search* on page 35 for more information on scanning for channels.

Connecting Your VCR or Video Camera

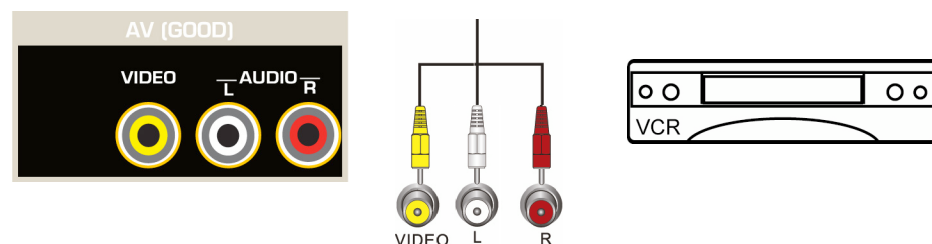


Note: Refer to your VCR or Video Camera user manual for more information about the video output requirements of the product.

1. Turn off the power to your HDTV and VCR or video camera.
2. Connect the yellow AV cable from your VCR or video camera to the **AV** jack on your HDTV.
3. Connect the audio cables on your VCR or video camera to the corresponding **L** and **R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and VCR or video camera.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

Connecting a Home Theater System

Using RCA

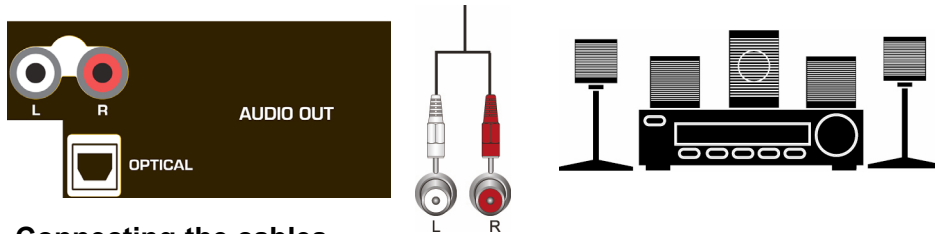

Connecting the cables


1. Turn off the power to the HDTV and Receiver/Amp.
2. Using an audio cable (white and red connectors), connect the cable to the audio input connectors on the Receiver/Amp and connect the other end to the **AUDIO OUT** audio connectors on the back of the HDTV.
3. Turn on the power to the HDTV and Receiver/Amp.

Turning TV speakers off

1. Press **MENU** to open the OSD.
2. Press **▼** to highlight *Settings*, and then press **OK** to select.
3. Press **OK** to select *Audio*, and then press **▼** to select **TV SPEAKERS**.
4. Press **►** to select **OFF** so the sound from the HDTV will be routed through your Receiver/Amp system.

Notes:

- Refer to your Receiver/Amp user manual to select the corresponding audio input.
- The audio output is not amplified and cannot be connected directly to external speakers.

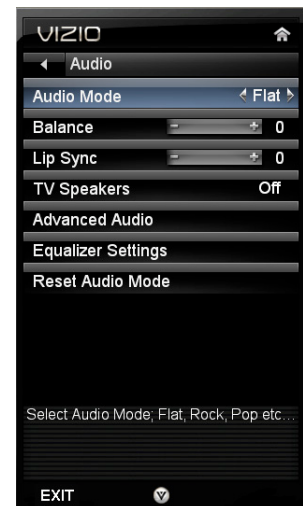


Using Optical (S/PDIF)



If your sound system has a S/PDIF (optical) digital audio input you can connect it from your sound system to the **OPTICAL** digital audio out on your HDTV. This is active when receiving audio with the programs being viewed no matter what input is being used.

1. Connect one end of the optical cable to optical connectors on the Home Theater and the other end to the **OPTICAL** jack on your HDTV.
2. Turn on the power to your HDTV and home theater.
3. Change the input on your Home Theater to optical. See your Home Theater user manual for more information.

Connecting a Computer

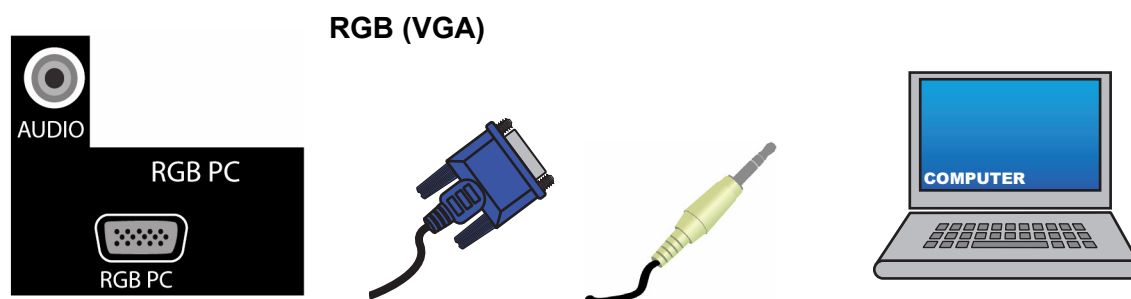

1. Set computer to a resolution supported by your HDTV (see *Preset PC Resolutions* on page 65). If your computer supports it, we recommend 1920x1080.
2. Turn off the power to your HDTV and computer.
3. Connect the RGB (VGA) cable from your computer to the **RGB PC** jack on of your HDTV.
4. Connect the 1/8-inch audio cable from your computer to the **RGB PC Audio** jack on your HDTV. This step is optional and only needed if you want to transmit audio from the computer through the TV.
5. Turn on the power to your HDTV and computer.
6. Select **RGB (VGA)** using the **INPUT** button on the remote control or side of the TV.

Note: Refer to your PC computer user manual for more information about the video output requirements.

Using HDMI



1. Turn off your HDTV and computer.
2. Connect a HDMI cable to the HDMI output of your computer and the other end to the **HDMI 1, 2,** or **HDMI SIDE** jack on your HDTV.
3. Connect the 1/8-inch audio cable from your computer to the **RGB PC Audio** jack on your HDTV. This step is optional and only needed if you want to transmit audio from the computer through the TV.
4. Turn on the power to your HDTV and your computer.
5. Select **HDMI-1, HDMI-2,** or **HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

Chapter 7 Viewing Pictures


Connect a USB flash drive to the USB port on your HDTV to view pictures.

- USB drives that are USB 2.0 and FAT or FAT32 are supported. The USB Port does not support external hard drives or USB hubs.
- If your USB drive is oversized and does not physically fit in the USB port, use a USB extension cable. Connect one end of the cable to your USB drive and the other end to the USB port.
- Supported file extensions include .jpg and .jpeg.

Note: Even the supported format files listed above may or may not play properly or completely, depending on the USB device, bit rate stream, and other content characteristics, as well as other factors.

Viewing Pictures

1. Insert a USB device with digital content such as photos, music, and movies into the Multimedia port on the side of your HDTV. If a USB device is already connected, press **MENU** on the remote control and select *Media*. A message will appear asking if you want to play multimedia content.
2. Press **◀** or **▶** to highlight **OK**, and then press **OK** to select it. The *Picture* folder will be displayed.
3. Press **OK** to select it. A menu will be displayed showing the folders and files that are on your USB device.
4. Press **◀** or **▶** to highlight the folder or file you want to play, and then press **OK** to select it. The file will play. See *Adjusting Photo Settings* on page 28 to adjust various settings including setting up a slideshow and setting picture duration.
5. When finished, press **EXIT** once to return to the previous screen or repeatedly to return to the main menu.

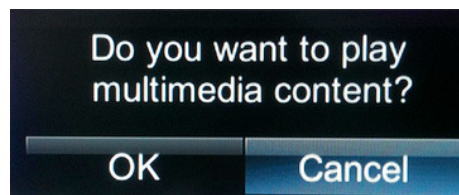

Adjusting Photo Settings

When viewing pictures you can adjust various settings, including slideshow, picture duration, etc.

1. Insert a USB device containing pictures and select the folder or files that you want to play.
2. Press **MENU**. The Picture menu will be displayed.
3. Press **▲** or **▼** on the remote control to highlight a Picture menu option, and then press **◀** or **▶** to adjust the setting.
4. Press **MENU** once to close the menu.

Slideshow Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the slideshow mode. Press **OK** to begin the slideshow. Press **OK** to stop the slideshow.

- **Single** will display one picture selected from the thumbnails for the interval set in the *Duration* option and return to the thumbnails. If the **Repeat** option is set to **On**, the selected picture will be displayed until you press **EXIT**.
- **Sequence** will show your pictures in the order they are listed on your USB device until you stop the slideshow.
- **Shuffle** will show your pictures in random order until you stop the slideshow.

Repeat

Choose from **On** or **Off** to repeat the slideshow.

Sort By

You can choose to sort the pictures on the USB device by **Photo Date**, **File Date**, or alphabetically (**File A-Z**).

Duration

Set the amount of time the picture will remain on the screen during the slideshow. Choose a time between 5 seconds and 32 seconds.

Slideshow Effect


Choose from **Random**, **Dissolve**, **Wipe Right**, **Wipe Left**, **Wipe Up**, **Wipe Down**, **Box In**, or **Box Out** to set the transition type when changing from one picture to another during a slideshow.

Thumbnail Size

Set the size of the preview pictures (thumbnails) in the menu. Choose from **Small**, **Medium**, or **Large**.

Info

When set to **On**, information about the picture briefly appears on your HDTV.

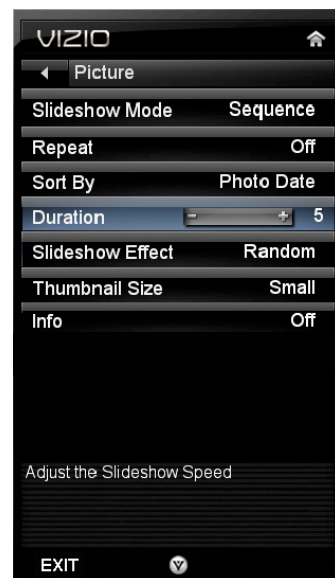

Chapter 8 Adjusting Your HDTV Settings


Using the On-screen Display (OSD)

The remote control or the control buttons on the side of the TV can control all the function settings. The *OSD* allows you to adjust contrast, brightness and other settings. The TV will save changes made to the settings, even if the TV is turned off.

The OSD consists of several menu options. The main menu options may vary depending on your selected input source.


Note: Some of the main menu options may have additional submenus, for example, the TV Rating submenu for Parental Controls.

1. Press **MENU**. The *OSD* opens.
2. Press **◀**, **▶**, **▲**, or **▼** on the remote control to select one of the menu options:
 - Input
 - Wide
 - CC
 - Sleep Timer
 - Picture
 - Audio
 - Settings
 - Media
 - Help
3. Press **OK** to select the option or feature you want to adjust.
4. After the menu option is displayed, press **▲** or **▼** on the remote control to select one of the items to adjust.
5. Press **OK** to select it, and then press **◀**, **▶**, **▲**, or **▼** to adjust the selection.
6. Press **BACK** once to return to the previous screen. To return to your program once adjustments have been completed, press the **EXIT** button on the remote control.

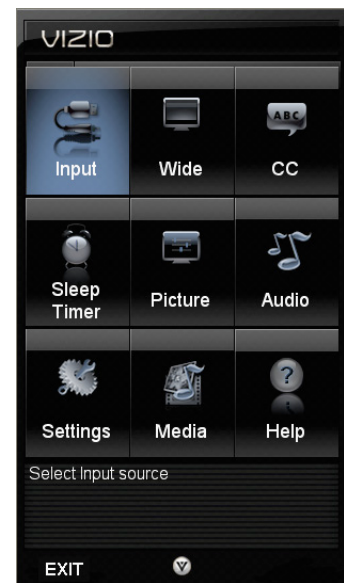

Input Menu

Select the Input Source for your HDTV. Choose from *TV*, *AV*, *Comp*, *HDMI-1*, *HDMI-2*, *HDMI SIDE*, *RGB*, and *Media*.

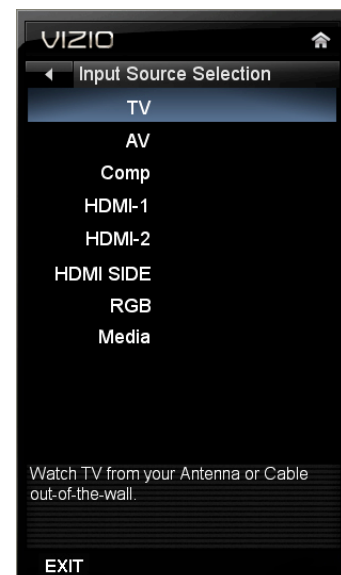


Wide Menu

Select how the picture displays on the screen. As you select an option, you will see the screen adjusting to the different sizes. The options vary depending on the selected input and the TV program:

Normal

The original 4:3 aspect ratio (1.33:1 source) is preserved, so black bars are added to the left and right of the display image. Standard TV broadcasts are displayed with a 4:3 Aspect Ratio. Movies in 4:3 Aspect Ratio may be referred to as pan-and-scan or full frame. These movies were originally filmed in 16:9 (widescreen), and then modified to fit a traditional TV screen (4:3).

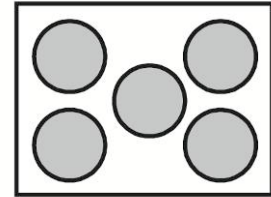


Wide

Wide mode allows you to view the entire picture. Recommended for HDMI and RGB / Computer viewing so you can see the complete picture without the image overstretching beyond the viewing area. If you experience “noise” along the border switch to Zoom 1. For 720p, 1080i, 1080p only.


Panoramic

When watching a standard broadcast or full frame movie in this mode, the 4:3 Aspect Ratio (1.33:1 source) display image is stretched horizontally on the left and right sides to fill the TV screen. The center of the image is not stretched.

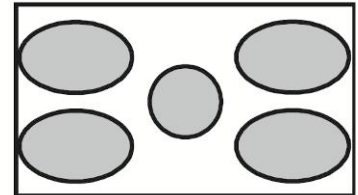

Stretch

When watching a widescreen program (1.78:1 source) with black bars on the sides, the display image will stretch to fill the TV screen. People will appear wider than they really are. If you are watching a widescreen (1.85:1 or 2.35:1 source) program or movie, there will still be black bars at the top and bottom. This mode is available only when watching a widescreen program.

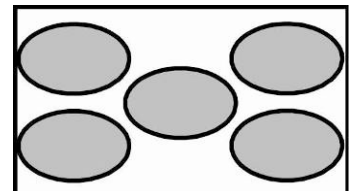

CC (Closed Caption) Menu

Adjust closed caption options.

Analog Closed Caption

The CC feature is available when watching regular analog TV. Select from **Off**, **CC1**, **CC2**, **CC3**, and **CC4**. Closed Caption for regular TV is usually **CC1** or **CC2**.


Digital Closed Caption

The CC feature is available when watching digital TV. Select from **CC1**, **CC2**, **CC3**, **CC4**, or **CS1**, **CS2**, **CS3**, **CS4**, **CS5**, **CS6**, or **Off**.

Digital CC Style

The Digital CC Style feature is available when watching digital TV.

- **Caption Style:** Select either **As Broadcaster** or **Custom**. If **Custom** is selected you can customize the way Closed Caption is displayed. The options available are:
- **Text Size:** Make CC text larger or smaller.
- **Color:** Choose a text color for CC display.
- **Opacity:** Make text more or less transparent.
- **BG Color:** Choose a background color for CC text.
- **BG Opacity:** Make the background for CC text more or less transparent.
- **Window Color:** Choose a text frame color for CC text.
- **Window Opacity:** Make the text frame for CC text more or less transparent.

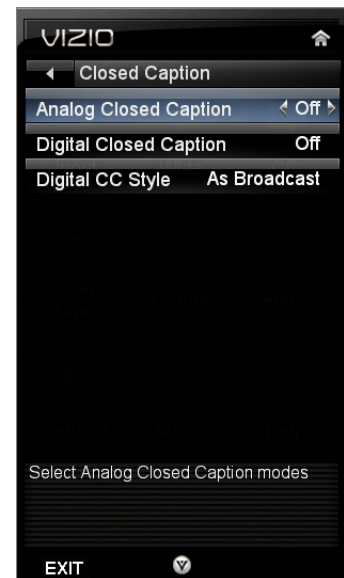

Sleep Timer Menu

Select the timer to turn off the TV in **30**, **60**, **90**, **120** or **180** minutes.

Picture Menu

Adjust picture options including brightness, contrast, and advanced picture settings.

Picture Mode

Choose from **Standard**, **Movie**, **Game**, **Vivid**, or **Custom**. Each input (i.e. HDMI, COMP, etc) remembers the custom setting you created. Select **Custom** to manually adjust *Backlight*, *Brightness*, *Contrast*, *Color*, *Tint*, *Sharpness*, and to access the *More* menu where further adjustments can be made.

Backlight

Adjust the LED brightness to affect the overall brilliance of the picture not the Brightness (black level) or Contrast (white level) of the picture.

Note: Backlight is only available when *Picture Mode* is set to **Custom**.



Brightness

Adjust black levels in the picture. If the brightness is too low you will not be able to see the detail in darker parts of the picture and if the brightness is too high the picture will look washed out.

Note: Brightness is only available when *Picture Mode* is set to **Custom**.

Contrast

Adjust the white levels in the picture. If the contrast is too low the picture will look washed out and if the contrast is too high you will not be able to see any detail in the bright parts of a picture.

Note: Contrast is only available when *Picture Mode* is set to **Custom**.

Color

Adjust the amount of color in the picture.

Note: Color is only available when *Picture Mode* is set to **Custom**.

Tint

Adjust the hue of the picture. The easiest way to set tint is to look at flesh tones and adjust for a realistic appearance. In most cases, the default middle position is correct. If people's faces look too orange try reducing the level of color first.

Note: Tint is only available when *Picture Mode* is set to **Custom**.

Sharpness

Adjust the sharpness of the edges of elements in the picture. It does not produce detail that otherwise does not exist. This adjustment is helpful when viewing Standard Definition sources.

Note: Sharpness is only available when *Picture Mode* is set to **Custom**.

More


Select **More** to adjust advanced options for fine tuning the picture.

Note: The *More* menu is only available when *Picture Mode* is set to **Custom**.

Size & Position

To select the options in the Size & Position sub-menu, press the **MENU** button or the ► button. A new menu will be displayed showing the following Size & Position settings:

- **Horiz. Position**
Adjust the horizontal position of the picture.
- **Vertical Position**
Adjust the vertical position of the picture.
- **Horizontal Size**
Adjust the horizontal size of the picture.
- **Vertical Size**
Adjust the vertical size of the picture.
- **Auto Phase (for Component input only)**
The TV will automatically look for the phase of the signal to fine tune the picture.

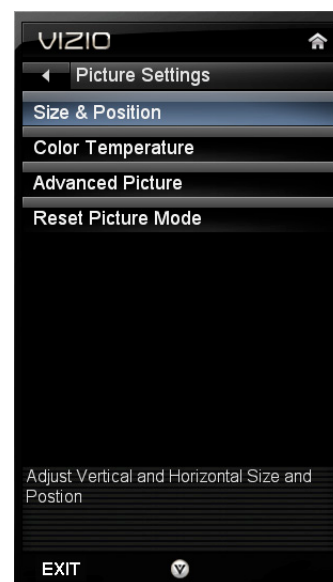

Note: The *Size & Position* function is only available in HDMI, Component, or RGB modes.

Color Temperature

Color Temperature is the “warmness” or “coolness” of the white areas of the picture. Choose from **Custom**, **Cool**, **Normal**, or **PC**. **Normal** is the setting for television broadcasting. **Custom** allows you to set a preset calibrated for a white point to suit individual preferences. **Cool** produces a blue-hued image. **PC** sets the white point at the established setting for a computer display (9300K). Each preset may also be adjusted for a customized setting.

Advanced Picture

To select the options in the Advanced Picture sub-menu, press **OK**. A new menu will be displayed showing the advanced functions available for fine tuning of the picture.

- **Noise Reduction**

This feature diminishes picture artifacts caused by the digitizing of image motion content that may be present in the picture. Choose from **Off**, **Low**, **Medium**, or **High**.

- **Color Enhancement**

This feature increases the picture reproduction performance of the picture by reducing oversaturation of certain colors and improving flesh tones. Choose from **Off**, **Normal**, **Rich Color**, **Green/Flesh**, and **Green/Blue**.

- **Adaptive Luma**

Large areas of brightness in the picture will result in a higher Average Picture Level (APL) and the overall picture will look too light. This feature will lower the APL to counteract this effect. Choose from **Off**, **Low**, **Medium**, **Strong**, or **Extend**.

- **Film Mode**


Choose from **Off** or **Auto**. When set to **Off** it will stay at 60 fps. When set to **Auto**, the TV will detect the cadence (for example at 24 frames/second for film, or normal video at 60 fps).

- **Backlight Control**

Set this feature to **OFF**, **DCR**, or **OPC**. **DCR** (Dynamic Contrast Ratio) improves the black level performance and increases contrast ratio. **OPC** (Optimum Power Control) Reduces power consumption while maintaining the same picture brightness.

- **Ambient Light Sensor**

Choose **Off**, **Low**, **Medium**, or **High**. When set to on, your HDTV will automatically adjust to light changes in the room.

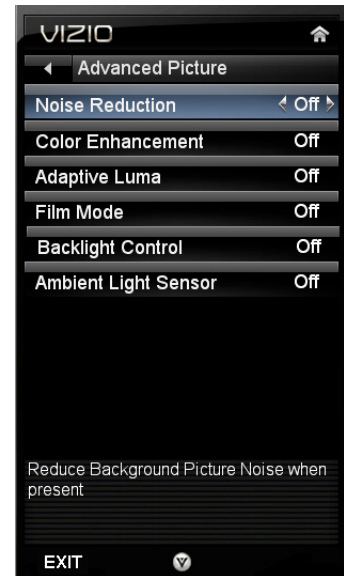

Reset Picture Mode

Return all Picture settings to factory default. A screen will come up to confirm your selection or to cancel it. Press **◀** or **▶** to make the selection, and then press **OK** to accept it.

Note: Only settings under the Picture will be reset.

Audio Menu

Adjust audio options including balance, equalizer, and advanced audio settings.

Audio Mode

Choose from Flat, Rock, Pop, Classic or Jazz.

Balance

Adjust the sound to the left or the right.

Lip Sync

Lip Sync is designed to adjust the audio of the program being viewed so that it matches the movement of the lips of someone talking on the screen.

TV Speakers

Turn the internal speakers On or Off. You may want to turn the internal speakers off when listening to the audio through your Home Theater System.

Advanced Audio

To select the options in the Advanced Audio sub-menu, press ►. A new menu will be displayed showing the advanced functions available for fine tuning of the audio.

SRS TruSurround HD™

This option sets the SRS True Surround HD™ surround sound process. Choose from On or Off.

Note: When SRS TruSurround HD™ is ON, Equalizer adjustments are not available.

SRS TruVolume



When the programming switches to a commercial or when changing from channel to channel, volume fluctuations occur. When turned ON, SRS TruVolume™ provides the listener with a comfortable and consistent volume level. Turn this option Off when listening to music.

Digital Audio Out

This option allows selection of the type of processing for the S/PDIF (Optical connector) when used with a Receiver/Amplifier/Home Theater system. Select to choose from OFF, Dolby Digital or PCM.

Analog Audio Out

This option sets the volume control properties when using the RCA (white and red) connectors as audio line out to connect a Receiver/Amplifier/Home Theater system. Choose from Fixed or Variable. When set to Variable, volume from the external speakers will change according to the volume setting on the TV. If it is set to Fixed, the volume can only be changed by the settings on the external stereo system.

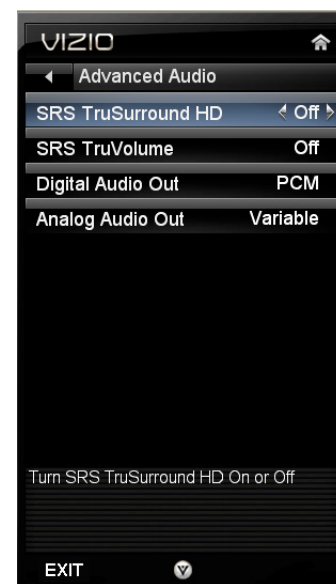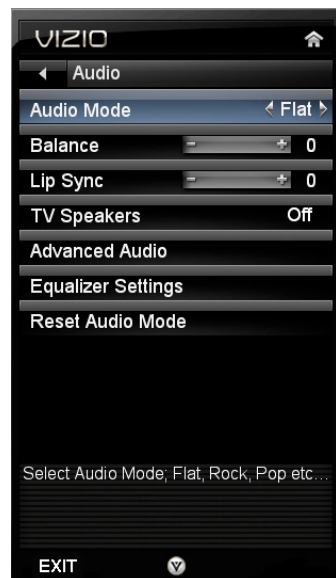

Equalizer Settings

To select the options in the Equalizer sub-menu, press **OK**. A new menu will be displayed showing the volumes of different frequencies.

Starting from lowest to the highest, they are 120Hz, 500Hz, 1.5kHz, 5kHz and 10kHz.


1. Press ◀ or ▶ to select the frequency to be adjusted.
2. Use ▲ or ▼ to adjust the selected frequency to your preference. Values above 0 will boost the frequency and values below 0 will attenuate the frequency.

Note: The Equalizer adjustment will only be available when SRS TSHD is set to Off.

Reset Audio Mode

Return all Audio settings to factory default. A screen will come up to confirm your selection or to cancel it. Press ◀ or ▶ to make the selection, and then press **OK** to accept it.

Note: Only settings under the Audio menu will be reset.

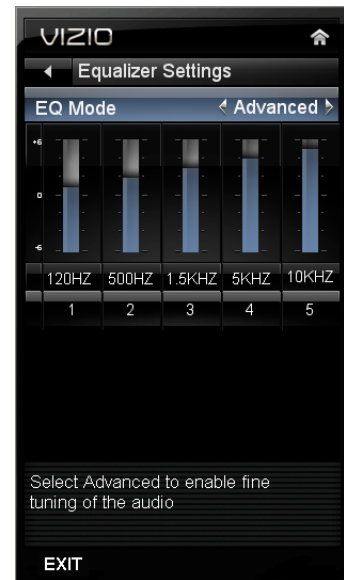

Settings Menu

Tuner

Note: The tuner option can only be selected when your HDTV is in TV input mode.

Tuner Mode


Select Cable or Antenna depending upon which you have attached to the DTV / TV Input.

Auto Channel Search

Automatically search for TV channels that are available in your area. Be sure to first select the correct tuner mode above. The TV will search for analog and digital channels. When the search is done, press **OK** to begin watching your programs.

Partial Channel Search

If you believe channels are missed from the auto search, you can do a partial channel search to look for channel in a certain channel range again. Select to scan for Analog, Digital, or both Analog/Digital channels, then press the ▼ button to highlight the "From" and "To" selection. Press the ▶ button to select the range of channel numbers you want to start searching in. Press **OK** to start channel search.

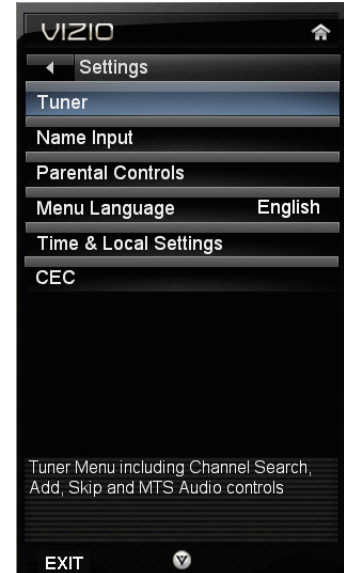


Skip Channel

After the TV has stored all of the available digital channels in memory you will find that some channels are too weak to watch comfortably or they may be channels you do not want to see. Press **OK** to select the channel to be skipped when using the CH+ or CH- button. An X will appear in channels you have selected to skip. You will still be able to select this channel using the number buttons on the remote control.

MTS

This feature allows you to select the different languages the broadcaster is transmitting the audio with the program you are watching. This signal is usually Spanish. Choose from **Mono**, **Stereo**, or **SAP**.

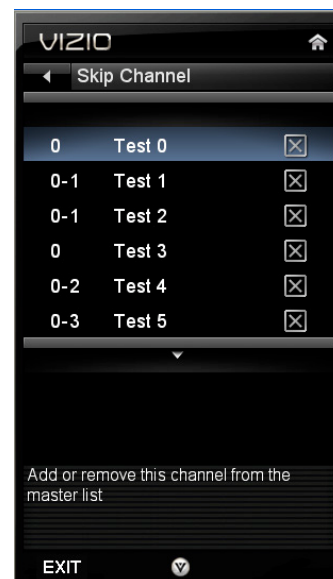


Name Input

This feature makes it easier for you to recognize the devices you have connected to your HDTV when you press **INPUT**. For example, if you have a Blu-Ray DVD player connected to the HDMI-1 input, you can have the input label read *HDMI-1 BluRay* instead of just *HDMI-1*. You can select from 10 preset labels.

To use one of the 10 preset labels:

1. Select *Input Source*, and then press **OK** to show the list of inputs.
2. Press ▼ to select the input label you want to change, and then press **OK**.
3. Press ▼ to select *Input Labels*, and then press **OK** to show the list of 10 preset labels.
4. Press ▼ to select the new input label name, and then press **OK**.

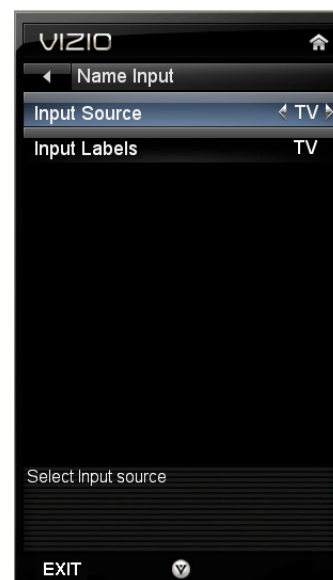

Parental Controls

If you want to restrict certain channel and program viewing, you can do this by turning on the Parental Control. Selected programs, movies and channels can then be made available only after an authorized password has been entered and accepted by the TV.

To select the options in the Parental sub-menu, press **OK** and then create and/or enter a password. A new menu will be displayed showing the following Parental settings:

Note: The Parental menu does not appear when the input mode is set to HDMI or RGB.

Channel Locks

Block individual channels from being displayed.

USA-TV



Note: When Rating Enable is **OFF**, the USA-TV Rating adjustments are not available.

Press **OK** to block (locked) or allow (unlocked) channels by the following US TV ratings:

- TV-Y – All children
- TV-Y7 – Older children
- TV-G – General audience
- TV-PG – Guidance suggested
- TV-14 – Strongly cautioned
- TV-MA – Mature audience

You can also customize the TV ratings for the following content:

- A – All sub-ratings
- FV – Fantasy violence
- D – Sexual dialog
- L – Adult language
- S – Sexual situations
- V - Violence

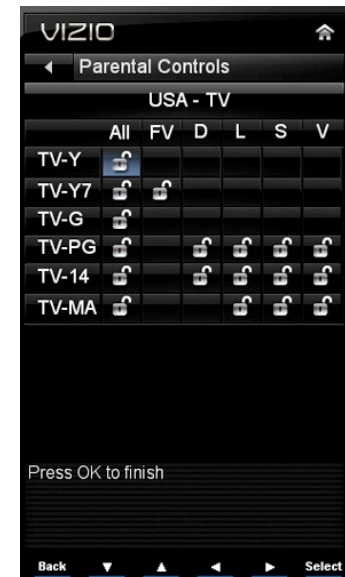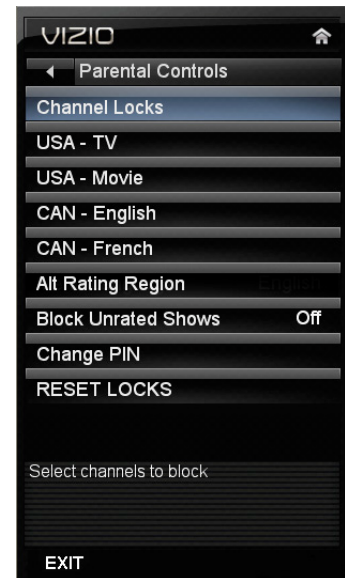

USA-Movie

Note: When Rating Enable is **OFF**, USA-Movie Rating adjustments are not available.

Press the **OK** button to block (locked) or allow (unlocked) channels by the following US Movie ratings:

- G – General audience
- PG – Parental guidance suggested
- PG-13 – Recommended for children 13 years of age or older
- R – Mature audience
- NC-17 – No one under 17 years of age
- X – No one under 17 years of age

CAN-English

Note: When Rating Enable is **OFF**, Canadian English Rating adjustments are not available.

Press the **OK** button to block (locked) or allow (unlocked) channels by the following Canadian English ratings:

- C – Children
- C8+ – Children 8 years or older
- G – General Programming, suitable for all audiences
- PG – Parental guidance
- 14+ – Viewers 14 years or older
- 18+ – Adult programming

CAN-French

Note: When Rating Enable is **OFF**, Canadian French Rating adjustments are not available.

Press the **OK** button to block (locked) or allow (unlocked) channels by the following Canadian French ratings:


- G – General audience
- 8 ans+ – General – not recommended for young children
- 13 ans+ – Not suitable for children under 13 years of age
- 16 ans+ – Not suitable for under 16 years of age
- 18 ans+ – Adults only

Alt Rating Region

This is reserved for future use in the event the parental control system is ever updated. Your HDTV will be able to receive and update the new rating system to it.

Block Unrated TV

Block programming that does not have a rating.

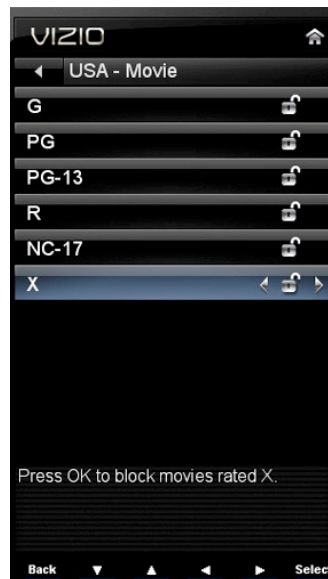


Change PIN (Password)

Enter a new, 4-digit password using the number buttons on the remote control. Enter it a second time to confirm you entered it correctly.

Note: Make sure you write down and store the new password in a secure place. The *Reset Locks* feature does NOT reset the password.

RESET LOCKS

Return all Parental Control lock settings to factory default. A screen will come up to confirm your selection or to cancel it. Press ◀ or ▶ to make the selection, and then press **OK** to accept it.

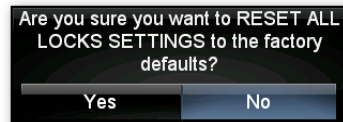

Menu Language

Select to change the language of the menu. The default is **English**. You can also select **French** or **Spanish**.

Time & Local Settings

Time Zone

Setting the correct Time Zone for your area will ensure that the correct time is shown after pressing the **GUIDE** button on the remote control.

Daylight Saving

Setting the daylight saving time for your area will ensure that the correct time is shown after pressing the **GUIDE** button on the remote control.

CEC

Consumer Electronics Control allows you to control other devices using your HDTV remote control when those devices are connected via HDMI. For example, if a CEC-supported Blu-ray DVD player is connected to your HDTV through HDMI-2 and that player is powered on, your HDTV will automatically change to the HDMI-2 input. Similarly, if your HDTV is powered on first and you change the input to HDMI-2, your Blu-ray player will automatically power on.

Also, you can control your CEC-supported device using the transport keys on your HDTV remote control (e.g. Play, Stop, Prev, etc.). When you press one of the buttons on your HDTV, the action will occur on your device.


Contact your devices' user manual or manufacturer to check whether your device supports CEC.

CEC Function

Turn CEC On or Off. When set to Off, your HDTV will not send or receive any CEC commands.

Device Discovery

Register device with TV. Before CEC will work, perform a Device Discovery to see if there are any CEC supported devices connected to your HDTV.

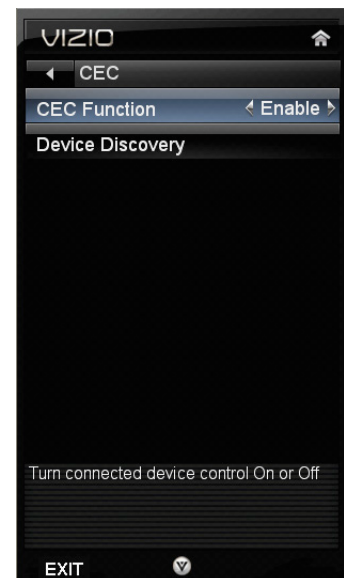

Media Menu

When viewing pictures you can adjust various settings, including slideshow, picture duration, etc.

1. Insert a USB device containing pictures and select the folder or files that you want to play.
2. Press **MENU**. The Picture menu will be displayed.
3. Press **▲** or **▼** on the remote control to highlight a Picture menu option, and then press **◀** or **▶** to adjust the setting.
4. Press **MENU** once to close the menu.

Slideshow Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the slideshow mode. Press **OK** to begin the slideshow. Press **EXIT** to stop the slideshow.

- **Single** will display one picture selected from the thumbnails for the interval set in the *Duration* option and return to the thumbnails. If the *Repeat* option is set to **On**, the selected picture will be displayed until you press **EXIT**.
- **Sequence** will show your pictures in the order they are listed on your USB device until you stop the slideshow.
- **Shuffle** will show your pictures in random order until you stop the slideshow.

Repeat

Choose from **On** or **Off** to repeat the slideshow.

Sort By

You can choose to sort the pictures on the USB device by **Photo Date**, **File Date**, or alphabetically (**File A-Z**).

Duration

Set the amount of time the picture will remain on the screen during the slideshow. Choose a time between 5 seconds and 32 seconds.

Slideshow Effect


Choose from **Random**, **Dissolve**, **Wipe Right**, **Wipe Left**, **Wipe Up**, **Wipe Down**, **Box In**, or **Box Out** to set the transition type when changing from one picture to another during a slideshow.

Thumbnail Size

Set the size of the preview pictures (thumbnails) in the menu. Choose from **Small**, **Medium**, or **Large**.

Info

When set to **On**, information about the picture briefly appears on your HDTV.

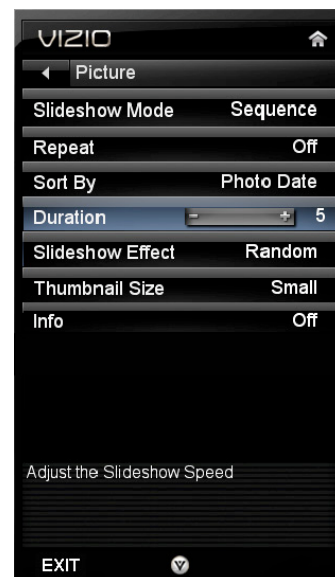

Help Menu

System Info

Display the technical information including model name, version and revision of firmware, source type, and resolution.

Reset TV Settings

Return all Picture and Audio settings to factory default. A screen will come up to confirm your selection or to cancel it. Press Left or Right Navigation buttons to make the selection, and then press **OK** to accept it.

Note: This does **NOT** reset the Parental Control Password.

Clear Memory (Factory Default)

Use this function to reset the TV to the default factory settings. The screen will display a message to confirm that you want to reset the values to factory settings. Press ◀ or ▶ to make the selection, and then press **OK** to accept it.

Note: This does **NOT** reset the Parental Control Password.

Start Setup Wizard

Use this function to return to the Initial Setup menu. Use this function if you want to have a guided setup when you move your TV. Refer to Chapter 3 for more information.

Note: Previously scanned channels will be removed.



Chapter 9 Programming the VIZIO Universal Remote Control

Using a Cable or Satellite Box Remote

Your VIZIO remote uses codes 000, 047, 050, 067, 329, 331 and 339 to work your HDTV. To use a Cable or Satellite remote to work the HDTV, refer to your Cable or Satellite remote user guide for more information on how to program the remote.

If your Cable or Satellite remote uses a 5-digit code (like most Direct TV units), first try 11758 and then, if that does not work, 10178. If your Cable or Satellite remote uses a 4-digit code, try 1758 and then 0178 as an alternative. If your Cable or Satellite remote uses a 3-digit code (Echostar or Dish Network for example), use code 627.

Note: Some buttons may not function as expected on your Cable or Satellite remote. Typically power, volume and mute will work.

Programming other devices

Your remote control is programmable and supports up to three different devices. Listed below are the steps for programming your DVD player, Home Theater System, and a Cable or Satellite box. After you find your codes, write them in the table provided.

Programming your Blu-Ray or DVD Player

1. Turn on the DVD player.
2. Press and release the **DVD** button on your VIZIO universal remote control.
3. Press and hold the **SET** button until the LED flashes twice.
4. Find the programming code for your DVD player in the code list below and enter it using the number buttons. If the code is accepted, the LED flashes twice after the last digit is entered. If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed.
5. Point the remote control at the DVD player and press **POWER**. The DVD player will turn off. If the DVD player does not turn off, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.

Notes:

- If the codes do not work or your brand is not listed, see *Searching for Device Codes* on page 43.
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

Programming your Home Theater System

1. Turn on the Home Theater System.
2. Press and release the **AUDIO** button on your VIZIO universal remote control.
3. Press and hold the **SET** button until the LED flashes twice.
4. Find the programming code for your Home Theater System and enter it using the number buttons. If the code is accepted, the LED flashes twice after the last digit is entered. If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed.
5. Point the remote control at the Home Theater System and press **POWER**. The Home Theater System will turn off. If the Home Theater System does not turn off, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.

Notes:

- If the codes do not work or your brand is not listed, see *Searching for Device Codes* on page 43.
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

Programming your Cable or Satellite Set-Top Box

1. Turn on the Cable or Satellite Set-Top Box.
2. Press and release the **CABLE** button on your VIZIO universal remote control.
3. Press and hold the **SET** button until the LED flashes twice.
4. Find the programming code for your Cable or Satellite Set-Top Box and enter it using the number buttons. If the code is accepted, the LED flashes twice after the last digit is entered. If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed.
5. Point the remote control at the Cable or Satellite Set-Top Box and press **POWER**. The Cable or Satellite Set-Top Box will turn off. If the Cable or Satellite Set-Top Box does not turn off, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.

My Codes	
DVD Player	
Home Theater	
Cable Box	
Satellite Box	
VCR	
Other	
Other	
Other	

Notes:

- If the codes do not work or your brand is not listed, see *Searching for Device Codes* on page 43.
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

Searching for Device Codes

If you cannot find the manufacturer in the list or the program code does not work, you can use the remote control to search for the correct device code.

1. Turn on the device.
2. Press the matching device button on your VIZIO universal remote control.
3. Press and hold **SET** until the LED flashes twice.
4. Press **9 9 1**. The LED flashes twice.
5. Point the remote control at the device and then press and hold **POWER** until the device turns off.

Reset Remote Control to Factory Settings

1. Press and hold **SET** until the LED flashes twice.
2. Press **9 1 9 1 9**. The LED flashes twice.

Remote Control Codes

Television Codes

(Including TV/DVD, TV/VCR, and TV/DVD/VCR)

3M 10195, 888, 10462

A.R. Systems 10352

Abex 10065, 10256

ACE 10449

Acer 10164

Addison 10048, 10231

Admiral: 10045, 10078, 10232, 10236

Advent 10221, 10291

Adventura 10066, 10261

Aiko 10053, 10231

Aim 10353

Aiwa 10178, 10207

Akai 10027, 10046, 10127, 10153, 10196, 10229, 10238, 10240, 10254, 10267, 10304, 10353

Akiba 10353

Akito 10348, 10353

Akura 10277, 10353

Alaron 10246, 10273, 10275

Alba 10353

Albatron 10219, 10222, 10286

Alfide 10240

Alleron 10055

Allstar 10353

A-Mark 10248

America Action 10234

Ampro 10220, 10289

Amstrad 10279, 10353

Amtron 10054

Anam 10234

Anam National 10054, 10264

Anhua 10455

Anitech 10353

AOC 10047, 10048, 10049, 10112, 10229, 10248, 10252, 10254, 10263, 10274, 10316

Aolinpiya 10462

Aolinpu 10465

Apex 10075, 10095, 10233

Apex Digital 10288

Archer 10248

Archos 10156

Ardem 10353

Aristona 10353

Asberg 10353

Astar 10163

Atlantic 10353

Audinac 10234, 10278

Audiosonic 10352, 10353

Audiovox 10054, 10099, 10231, 10234, 10248, 10280, 10287, 10326

Aventura 10042

Awa 10048, 10351

Axion 10154, 10326

Baihehua 10461

Baihua 10460, 10462

Baile 10458, 10460

Bang & Olufsen 10244

BaoHuaShi 10462

Baosheng 10457, 10460

Barco 10282

Basic Line 10352, 10353

Baur 10249, 10281, 10353

Baysonic 10234

Beijing 10358, 10360, 10362, 10364, 10365, 10366, 10367, 10368, 10369, 10370, 10371, 10372, 10373, 10374, 10376, 10377, 10378, 10379, 10380, 10383, 10384, 10385, 10392, 10394, 10428, 10431, 10448, 10457, 10458, 10460, 10461, 10462

Belcor 10047, 10252

Bell & Howell 10045

Benq 10116, 10159, 10226, 10300

Beon 10353

Bestar 10352, 10353

Bestar-Daewoo 10352

Blaupunkt 10281

Blue Sky 10282, 10353

Boots 10348

Boxlight 10290

BPL 10275, 10353

Bradford 10054, 10234

Brilliant 10160

Brinkmann 10353

Brockwood 10047, 10252

Broksonic 10078, 10234, 10236, 10248

Bush 10348, 10352, 10353

byd:sign 10214

Caihong 10360, 10362, 10368, 10457, 10460

Cailing 10464

Caixing 10366, 10367, 10378, 10380, 10390, 10461

Candle 10047, 10049, 10050, 10066, 10229, 10254, 10261, 10265

Carena 10353

Carnivale 10229, 10254

Carver 10034, 10044, 10271

Cascade 10353

Casio 10353

Cathay 10353

Caton 10355

CCE 10246, 10258, 10353

Celebrity 10046

Celera 10075

Centurion 10051, 10353

Changcheng 10357, 10360, 10362, 10363, 10364, 10366, 10367, 10368, 10369, 10370, 10371, 10372, 10373, 10374, 10376, 10378, 10379, 10380, 10384, 10385, 10392, 10448, 10455, 10457, 10458, 10460, 10461, 10462

Changfei 10360, 10362, 10368, 10379, 10457, 10460, 10467

Changfeng 10360, 10367, 10376, 10381, 10382, 10384, 10385, 10392, 10457, 10462

Changhai 10360, 10362, 10368, 10457, 10460, 10467

Changhong 10075, 10356, 10358, 10359, 10360, 10361, 10362, 10369, 10371, 10376, 10383, 10386, 10387, 10388, 10389, 10393, 10394, 10412, 10427, 10433, 10436, 10448, 10457, 10460

Chaparral 10442

Chengdu 10360, 10368, 10457

Chimei 10217

Ching Tai 10231

Chun Yun 10222, 10231, 10234, 10329, 10342

Chunfeng 10362, 10368, 10376, 10384, 10385, 10392, 10405, 10460, 10462

Chung Hsin 10048, 10234, 10332

Chunlan 10397, 10468
 Chunsun 10360, 10362, 10368, 10457, 10460
 Cinego 10327
 Cinal 10231, 10280
 Citizen 10047, 10049, 10050, 10053, 10054, 10062, 10064, 10229, 10231, 10238, 10254, 10259, 10261, 10265, 10325, 10347
 Clairtone 10274
 Clarion 10234
 Clarivox 10353
 Clatronic 10353
 Coby 10108
 Colortyme 10047, 10049
 Colt 10344
 Commercial Solutions 10230
 Concerto 10047, 10049, 10265
 Condor 10353
 Conrowa 10422, 10460, 10462
 Contec 10234, 10268, 10269, 10274, 10353
 Contec/Cony 10052, 10054
 Cosmel 10353
 Craig 10054, 10234
 Crosley 10034, 10044, 10076
 Crown 10054, 10058, 10234, 10240, 10259, 10353
 Crown Mustang 10240
 CTX 10115
 Curtis Mathes 10016, 10027, 10034, 10044, 10047, 10049, 10062, 10064, 10229, 10230, 10232, 10238, 10239, 10254, 10259, 10265, 10280
 CXC 10054, 10234
 CyberHome 10294
 Cytron 10152, 10310
 Daewoo 10047, 10048, 10049, 10053, 10064, 10076, 10231, 10240, 10252, 10259, 10280, 10325, 10347, 10352, 10353
 Dansai 10353
 Dawa 10353
 Daytron 10047, 10049, 10064, 10252, 10352, 10353
 Dayu 10458
 De Graaf 10275
 Decca 10348, 10353
 Dell 10019, 10124
 Denon 10239

Denstar 10284
 Denver 10353
 Desmet 10353
 Diamant 10353
 Diamond Vision 10216, 10328
 Digatron 10353
 Dimensia 10016
 Disney 10093
 Dixi 10353
 DongBao 10448
 DongDa 10362, 10368, 10448, 10460
 Donghai 10362, 10368, 10460
 DongHua 10448
 Donglin 10391
 Dual 10353
 Dumont 10020, 10047, 10228, 10252, 10266
 Durabrand 10042, 10078, 10227, 10234, 10236, 10248, 10272
 Dux 10353
 D-Vision 10353
 Dwin 10232, 10293
 Dynatech 10262
 Dynatron 10353
 Dynex 10143, 10189
 Ectec 10278
 Eiki 10169, 10170
 Electroband 10046, 10274
 Electrograph 10206, 10321
 Electrohome 10046, 10047, 10049, 10078
 Elektra 10228
 Element 10136
 ELG 10353
 Elin 10353
 Emerson 10042, 10047, 10049, 10052, 10054, 10055, 10064, 10076, 10078, 10135, 10234, 10236, 10252, 10259, 10269, 10272, 10273, 10274, 10325, 10347, 10353
 Emprex 10215
 Envision 10047, 10049, 10112, 10229, 10254, 10316
 Epson 10113, 10302
 Erres 10250, 10353
 ESA 10042, 10127
 ESC 10353
 Ether 10330
 Euroman 10353

Europa 10353
 Exquisit 10353
 Feilang 10362, 10368, 10460
 Feilu 10360, 10362, 10368, 10457, 10460
 Feiyan 10376, 10384, 10385, 10392, 10462
 Feiyue 10360, 10362, 10366, 10367, 10368, 10378, 10380, 10457, 10460, 10461
 Fenmenti 10353
 Fenner 10352
 Ferguson 10048
 Fidelity 10353
 Filmnet 10440
 Finlandia 10275
 Finlux 10266
 Firstline 10352, 10353
 Firstar 10340
 Fisher 10270, 10275
 FlexVision 10287
 Flint 10353
 Fraba 10353
 Friac 10353
 Frontech 10277
 Fujitsu 10050, 10055, 10208, 10273
 Funai 10042, 10054, 10055, 10234, 10273, 10324
 Furi 10336
 Futuretech 10054, 10234, 10277
 Galaxis 10353
 Ganxin 10457, 10461
 Gateway 10119, 10206, 10241, 10322
 GBC 10352
 GE 10016, 10047, 10049, 10056, 10057, 10070, 10088, 10230, 10253, 10264, 10272, 10280, 10345
 GEC 10353
 Geloso 10352
 Genexxa 10353
 GFM 10040, 10140
 Gibraltar 10020, 10047, 10228, 10229, 10252, 10254
 GoldStar 10047, 10048, 10049, 10052, 10064, 10065, 10229, 10252, 10254, 10256, 10272, 10346, 10353
 Goodmans 10352, 10353

Gradiente 10036, 10118, 10265, 10271	Hitachi Fujian 10048, 10457, 10459, 10461, 10462	Intervision 10277, 10353
Granada 10048, 10275, 10353	Hornophone 10353	IR 10351, 10352, 10353
Grandin 10352, 10353	Hongmei 10359, 10360, 10362, 10366, 10367, 10368, 10376, 10378, 10380, 10385, 10386, 10387, 10392, 10457, 10460, 10461, 10462	Irradio 10353
Great Wall 10349	Hongyan 10457, 10462	IRT 10280, 10284
Grundig 10240, 10258, 10266, 10281, 10353	Hotel TV 10447	Isukai 10353
Grunpy 10054, 10055, 10234, 10273	HP 10301	ITS 10353
Haier 10139, 10148, 10174, 10209, 10227, 10247, 10354, 10380, 10395, 10396, 10399, 10403, 10404, 10414, 10416, 10417, 10418, 10419, 10421, 10423, 10424, 10466	Huafa 10460	ITV 10352, 10353
HaiHong 10362, 10368, 10369, 10370, 10371, 10372, 10373, 10391, 10395, 10448, 10460	Huanghaimei 10362, 10368, 10460	Janeil 10066, 10261
Haile 10375	Huanghe 10360, 10362, 10366, 10367, 10368, 10378, 10380, 10383, 10395, 10406, 10457, 10460, 10461	JBL 10034, 10044, 10058
Haiyan 10360, 10366, 10367, 10376, 10378, 10380, 10384, 10385, 10392, 10457, 10461, 10462	Huanglong 10362, 10368, 10460	JC Penney 10016, 10047, 10048, 10049, 10050, 10056, 10057, 10062, 10064, 10065
Hallmark 10047, 10049, 10272	Huangshan 10360, 10362, 10366, 10367, 10368, 10375, 10376, 10378, 10380, 10384, 10385, 10392, 10457, 10460, 10461, 10462	JCB 10046
Hankook 10234, 10330, 10339	Huanyu 10352, 10359, 10360, 10366, 10367, 10376, 10378, 10380, 10384, 10385, 10386, 10387, 10392, 10457, 10459, 10461, 10462	Jean 10231, 10331, 10338, 10340
Hannspree 10315	Huaqiang 10376, 10384, 10385, 10392, 10462	Jensen 10047, 10049, 10291
Hanseatic 10353	Huari 10462	Jiahua 10357, 10363, 10375, 10376, 10411, 10455
Hantarex 10313, 10353	Humax 10197	JiaLiCai 10414, 10448, 10460, 10462
Hantor 10353	Huodateji 10455	Jinfeng 10357, 10360, 10365, 10455, 10457
Harley Davidson 10260, 10273, 10324	Hypson 10277, 10353	Jinhai 10359, 10386, 10387
Harman/Kardon 10034, 10044	Hyundai 10171, 10224	Jinlipu 10386
Harvard 10054, 10234	Iberia 10353	Jinque 10457, 10460, 10462
Harwood 10353	ICE 10277	Jinta 10460, 10461, 10462
Hauppauge 10353	Ilo 10149, 10151, 10307, 10320	Jinxing 10333, 10336, 10338, 10358, 10360, 10367, 10368, 10375, 10376, 10377, 10383, 10386, 10389, 10390, 10392, 10394, 10397, 10408, 10426, 10457, 10462
Havermy 10232	IMA 10054	Juhua 10457, 10461, 10462
HCM 10279, 10353	Imperial 10353	JVC 10036, 10037, 10038, 10052, 10057, 10059, 10078, 10257
Helios 10145	Imperial Crown 10458, 10462	Kaige 10457, 10460, 10461, 10462
Hello Kitty 10210, 10280	Indiana 10353	Kaisui 10353
Hewlett Packard 10101, 10301	Infinity 10034, 10044, 10058	Kamp 10246
Highline 10353	InFocus 10125, 10290	Kangchong 10359, 10386, 10387
Himitsu 10234, 10284	Initial 10151, 10320	Kanghua 10395
Hinari 10353	Innova 10258	Kangli 10422, 10448, 10457, 10458, 10460, 10461, 10462
Hisense 10121, 10288, 10338, 10350, 10356, 10358, 10361, 10368, 10381, 10382, 10386, 10395, 10396, 10397, 10400, 10401, 10407, 10408, 10416, 10417, 10418, 10419, 10426, 10428, 10431, 10459	Insignia 10141, 10142, 10143, 10181, 10310	Kangyi 10390, 10460, 10462
Hitachi 10047, 10048, 10049, 10052, 10131, 10184, 10239, 10256, 10265, 10324, 10353	Inteq 10228	Kawasho 10046, 10047, 10049, 10246, 10269
	Interbuy 10353	Kaypani 10263
	Interfunk 10353	KDS 10295
	Internal 10353	KEC 10234
		Kendo 10353

Kenwood 10047, 10049, 10229, 10252, 10254
 Kioto 10034, 10282
 Kiton 10353
 KLH 10075
 Kloss 10261
 Kloss Novabeam 10054, 10066
 Kneissel 10352, 10353
 Kolin 10048, 10234, 10337
 Kongque 10457, 10460, 10461, 10462
 Konka 10211, 10237, 10284, 10353, 10355, 10360, 10363, 10372, 10375, 10388, 10389, 10391, 10392, 10397, 10402, 10430
 Korpel 10353
 Kost 10306
 Kreisen 10298
 KTV 10054, 10064, 10229, 10234, 10246, 10254, 10259, 10274
 Kuaile 10460, 10462
 Kunlun 10357, 10360, 10365, 10368, 10376, 10377, 10378, 10379, 10455, 10457, 10458, 10462
 Lecson 10353
 Lenco 10352, 10353
 Leyco 10277, 10353
 LG 10019, 10048, 10100, 10129, 10167, 10175, 10185, 10198, 10199, 10200, 10219, 10225, 10245, 10254, 10265, 10272, 10286, 10323, 10353
 Liesenk & Tter 10353
 Lifetec 10352, 10353
 Lihua 10457
 Lloyd's 10324
 Local India TV 10275
 Loewe 10058
 Loewe Opta 10353
 Logik 10045, 10351
 Longjiang 10360, 10376, 10384, 10385, 10392, 10457, 10462
 Lumatron 10353
 Lux May 10353
 Luxman 10047, 10049, 10265
 LXI 10016, 10034, 10044, 10049, 10058, 10230, 10233, 10272
 M & S 10034
 Melectronic 10352, 10353

Madison 10353
 MAG 10295
 Magnasonic 10325, 10347
 Magnavox 10034, 10044, 10047, 10049, 10050, 10058, 10073, 10086, 10089, 10134, 10229, 10254, 10257, 10273, 10316, 10324, 10351
 Magnin 10345
 Magnum 10353
 Majestic 10045
 Manesth 10277, 10353
 Manhattan 10353
 Marantz 10034, 10044, 10047, 10049, 10058, 10114, 10212, 10229, 10254, 10258, 10353
 Mark 10352, 10353
 Matsui 10275, 10348, 10351, 10353
 Matsushita 10235, 10285
 Maxent 10144, 10201, 10206, 10292
 Mediator 10250, 10353
 Medion 10353
 Megapower 10219, 10286
 Megatron 10049, 10239, 10248, 10272
 MEI 10274
 Meile 10457, 10461, 10462
 MeiShi 10390
 Memorex 10042, 10045, 10048, 10049, 10078, 10236, 10272, 10273, 10343, 10346
 Mengmei 10461
 Mercury 10353
 Metz 10281, 10353
 MGA 10047, 10048, 10049, 10229, 10252, 10254, 10272, 10345
 Micromaxx 10353
 Midland 10020, 10057, 10064, 10065, 10228, 10230, 10256, 10259
 Minato 10353
 Minerva 10048, 10266, 10281
 Minoka 10279, 10353
 Mintek 10151, 10320
 Minutz 10056, 10253
 Mitsubishi 10047, 10048, 10049, 10092, 10182, 10183, 10232, 10252, 10267, 10272, 10281, 10353

MoDeng 10390
 Monivision 10219, 10222, 10286
 Montgomery Ward 10045
 Morgans 10353
 Motorola 10232, 10264, 10295
 Moxell 10295
 MTC 10047, 10048, 10049, 10062, 10229, 10238, 10246, 10252, 10254, 10262, 10265, 10274
 MTEC 10348
 MuDan 10380, 10411, 10438, 10455, 10457, 10460, 10462
 Multitec 10353
 Multitech 10054, 10234, 10246, 10262, 10353
 Multivision 10060
 NAD 10049, 10233, 10258, 10265, 10272
 Naiko 10353
 Nakamichi 10318
 Nanbao 10460, 10462
 Nansheng 10360, 10376, 10384, 10385, 10392, 10457, 10462
 NEC 10047, 10048, 10049, 10162, 10212, 10218, 10229, 10252, 10254, 10257, 10265, 10271, 10351, 10352
 Neckermann 10353
 NEI 10353
 Neovia 10313
 Netsat 10258, 10353
 Net-TV 10158, 10206, 10292
 Neufunk 10353
 New Tech 10353
 Newave 10231, 10335, 10339
 Nikkai 10277, 10353
 Nikko 10049, 10053, 10229, 10231, 10254, 10272
 Nisato 10278
 Nokia 10352
 Norcent 10112, 10288, 10301, 10316
 Nordmende 10353
 Normerel 10353
 Norwood Micro 10307
 Noshi 10251
 Novatron 10352, 10353
 NTC 10053, 10231
 Okano 10353

Olevia 10096, 10105, 10111, 10242, 10243, 10303, 10305, 10311	Philips Magnavox 10031, 10034, 10072, 10073	RadioShack 10016, 10229, 10230, 10234, 10252, 10254, 10256, 10259, 10265, 10272, 10324, 10353
Olympus 10314	Phoenix 10353	Radiotone 10353
Onwa 10054, 10234	Phonola 10250, 10353	RBM 10266
Opera 10353	Pilot 10047, 10064, 10229, 10252, 10254, 10259, 10450, 10451, 10452, 10453, 10454	RCA 10016, 10017, 10018, 10047, 10048, 10049, 10068, 10077, 10081, 10188, 10230, 10238, 10251, 10252, 10345
Oppo 10155	Pioneer 10047, 10049, 10212, 10353	Realistic 10016, 10229, 10234, 10252, 10254, 10256, 10259, 10265, 10272
Optimus 10235, 10285, 10343	Pionier 10353	Recor 10353
Optoma 10126, 10194	Plantron 10353	Rectiligne 10353
Optonica 10061, 10232	Plasmsync 10165	Reflex 10353
Orbit 10353	Playsonic 10353	Revox 10353
Orion 10078, 10193, 10236, 10273, 10351, 10353	Polaroid 10075, 10100, 10109, 10136, 10145, 10190, 10295, 10306, 10310	Rex 10277
Online 10353	Polestar 10441	RFT 10353
Osaki 10277, 10279, 10348, 10352, 10353	Portland 10047, 10048, 10049, 10053, 10064, 10231, 10252, 10259, 10352	Rhapsody 10246, 10274
Osio 10353	Powerpoint 10353	R-Line 10353
Osume 10353	Praxis 10443	Roadstar 10277, 10353
Otto Versand 10249, 10281, 10353	Price Club 10062	Rowa 10429
Palladium 10353	Prima 10117, 10148, 10213, 10221, 10291	Runco 10020, 10212, 10218, 10228, 10229, 10254
Palsonic 10353	Princeton 10219, 10286	Ruyi 10457, 10459, 10461
Panama 10277, 10353	Prism 10057	Saige 10457, 10460
Panasonic 10010, 10011, 10012, 10013, 10014, 10015, 10048, 10057, 10058, 10080, 10085, 10102, 10173, 10176, 10235, 10264, 10285, 10343	Profitronic 10353	Saisho 10277, 10351
Panasonic/National 10353	Proline 10353	Saivod 10353
Panavision 10353	Proscan 10016, 10230	Sampo 10047, 10049, 10064, 10065, 10161, 10206, 10229, 10254, 10256, 10259, 10263, 10292
Panda 10357, 10359, 10360, 10362, 10365, 10366, 10367, 10368, 10369, 10371, 10376, 10378, 10380, 10383, 10384, 10385, 10386, 10387, 10390, 10392, 10394, 10405, 10406, 10415, 10422, 10455, 10457, 10460, 10461, 10462	Prosonic 10352, 10353	Samsung 10026, 10027, 10028, 10047, 10048, 10049, 10052, 10062, 10064, 10065, 10127, 10128, 10132, 10137, 10138, 10168, 10229, 10238, 10252, 10254, 10256, 10258, 10265, 10272, 10277, 10353
Penney 10229, 10230, 10233, 10238, 10248, 10251, 10252, 10253, 10254, 10256, 10259, 10272, 10345, 10346	Protech 10277, 10353	Samsux 10259
Perdio 10353	Proton 10047, 10049, 10052, 10248, 10255, 10263, 10272	Sanjian 10462
Perfekt 10353	Prottron 10106, 10309	Sansei 10280
Philco 10034, 10044, 10047, 10048, 10049, 10050, 10052, 10058, 10078, 10229, 10252, 10254, 10353	Proview 10120, 10136, 10295	Sansui 10078, 10107, 10236, 10324, 10353
Philips 10029, 10030, 10031, 10032, 10033, 10034, 10035, 10044, 10047, 10048, 10050, 10052, 10058, 10072, 10074, 10104, 10134, 10177, 10187, 10250, 10258, 10282, 10352, 10353	Provision 10353	Sanyo 10047, 10048, 10097, 10192, 10202, 10270, 10275, 10345, 10351
	Pulsar 10020, 10047, 10228, 10252	Sanyuan 10360, 10362, 10366, 10367, 10368, 10378, 10380, 10457, 10460, 10461
	Pye 10250, 10352, 10353	SBR 10250, 10353
	Qingdao 10455, 10457, 10462	Sceptre 10123
	Quasar 10057, 10235, 10264, 10285, 10343	
	Quelle 10249, 10266, 10281, 10351, 10353, 10437	
	Radio Shack/Realistic 10016, 10047, 10049, 10052, 10054, 10061, 10064, 10065	
	Radiola 10250, 10353	
	Radiomarelli 10353	

Schneider 10353	Sinudyne 10249, 10353	Symphonic 10041, 10042,
Scimitsu 10252	Sky 10258, 10353	10054, 10067, 10234, 10324
Scotch 10049, 10272	Skygiant 10234	Synco 10231, 10280, 10329,
Scott 10047, 10049, 10052,	Skyworth 10360, 10368, 10376,	10334, 10335, 10339
10054, 10055, 10150, 10234,	10381, 10382, 10389, 10390,	Syntax 10105, 10243, 10303,
10252, 10272, 10273	10392, 10397, 10409, 10413,	10305, 10311
Sears 10016, 10034, 10042,	10415, 10420, 10432, 10457,	Syntax-Brilliant 10105, 10160
10044, 10047, 10049, 10055,	10462	Sysline 10353
10059, 10067, 10160, 10230,	Solavox 10353	Tacico 10231, 10339
10233, 10265, 10270, 10272,	Songbai 10460	Tactus 10348
10273, 10324, 10346	SongRi 10448	Tai Wah 10444
Seg 10277, 10353	Soniko 10353	Taishan 10360, 10362, 10368,
SEI 10249, 10353	Sonitron 10275	10370, 10371, 10372, 10373,
SEI-Sinudyne 10353	Sonneclair 10353	10374, 10379, 10457, 10460
Semivox 10234	Sonoko 10353	Tandy 10232
Shancha 10457, 10462	Sonolor 10275	Tantec 10348
Shangguangdian 10445	Sontec 10353	Tashiko 10353
Shanghai 10359, 10360, 10362,	Sony 10000, 10001, 10002,	Tatung 10147, 10179, 10241,
10363, 10366, 10367, 10368,	10003, 10004, 10005, 10046,	10248, 10262, 10264, 10307,
10376, 10378, 10380, 10384,	10071, 10084, 10130, 10172,	10322, 10331, 10334, 10338,
10385, 10386, 10387, 10392,	10249, 10324, 10351, 10353	10348, 10351
10457, 10460, 10461, 10462,	Sound & Vision 10352	TCL 10383, 10384, 10389,
10467	Soundesign 10047, 10049,	10390, 10398, 10410, 10420,
Shanshui 10358	10050, 10054, 10055, 10234,	10425, 10429, 10463
Shaofeng 10356, 10360, 10366,	10272, 10273	Teac 10277, 10279, 10353
10457, 10459, 10461	Soundwave 10353	Tec 10353
Sharp 10022, 10023, 10024,	Sova 10309	Tech Line 10353
10025, 10047, 10049, 10052,	Sowa 10334, 10338	Technics 10057, 10235
10061, 10064, 10103, 10232,	SOYO 10180, 10319	Technol Ace 10273
10259, 10268	Spectricon 10248	Technovision 10446
Shen Ying 10231	Spectroniq 10295	Techview 10223, 10296
Shencai 10362, 10368, 10376,	Squareview 10042, 10067	Techwood 10047, 10049, 10057,
10384, 10385, 10392, 10460,	Srypton 10353	10248, 10265
10462	SSS 10047, 10054, 10234,	Teco 10331, 10335, 10339
Sheng Chia 10232, 10335	10252	Teknika 10034, 10044, 10045,
ShengCai 10386, 10448	Standard 10352, 10353	10047, 10048, 10049, 10050,
Shengli 10456	Starlite 10054, 10234, 10353	10052, 10053, 10054, 10055,
Shenyang 10360, 10362, 10368,	Strato 10353	10062, 10064, 10231, 10234,
10376, 10381, 10382, 10457,	Studio Experience 10222	10238, 10252, 10259, 10265,
10460, 10462	Sunstar 10353	10273
Sherwood 10460	Sunwood 10353	Telecaption 10063
Shintoshii 10353	SuperScan 10041, 10232,	Telecor 10353
Shivaki 10353	10297	Telefunken 10027, 10265,
Shogun 10047, 10252	SuperTech 10353	10353
Shuyuan 10422	Supre-Macy 10066, 10261	Telefusion 10353
Siemens 10281, 10353	Supreme 10046	Telegazi 10353
Signature 10045	SVA 10145, 10247, 10283,	Telesonic 10353
Signet 10306	10288	Telestar 10353
Silva 10353	Sylvania 10034, 10035, 10039,	Teletech 10353
Silva Schneider 10353	10040, 10041, 10042, 10043,	Televue 10353
SIM2 Multimedia 10308	10044, 10047, 10049, 10050,	Tennessee 10353
Simpson 10050	10058, 10133, 10229, 10254	Tensai 10352, 10353
Singer 10353		

Tera 10255
 Tevion 10353
 Texet 10352
 Thomas 10324
 Thomson 10016, 10353
 Thorn 10348, 10353
 Thorn-Ferguson 10438
 Tiane 10457
 TMK 10047, 10049, 10265, 10272
 TNCi 10228
 TOBO 10460, 10462
 Tokai 10352, 10353
 Tongguang 10376, 10384, 10385, 10392, 10462
 Tophouse 10234
 Toshiba 10006, 10007, 10008, 10009, 10062, 10063, 10079, 10082, 10083, 10087, 10090, 10091, 10212, 10233, 10238, 10245, 10257, 10266, 10285
 Tosonic 10274
 Totevision 10064, 10259
 Trans Continens 10353
 Transonic 10353
 Trical 10268
 Trutech 10146
 Tuntex 10231, 10330
 TVS 10078, 10236
 Uher 10352, 10353
 Ultra 10278
 Ultravox 10353
 Unic Line 10353
 United 10353
 Universal 10056, 10353
 Universum 10277, 10281, 10351, 10353
 Univox 10353
 US Logic 10307
 Vector Research 10229, 10254
 Vegavox 10439
 Vestel 10353
 Vexa 10353
 Vibrant 10348
 Victor 10036, 10059
 Video Concepts 10267
 Videocon 10436
 Videosystem 10353
 Vidikron 10034, 10044, 10212, 10276

Vidtech 10047, 10048, 10049, 10252, 10257, 10272
 Viewsonic 10094, 10110, 10191, 10203, 10204, 10205, 10206, 10297, 10299, 10314
 Viking 10066, 10261
 Viore 10149, 10304
 Visart 10312
 Visco 10157
 Vision 10353
 Vito 10434
 Vizio 10047, 10094, 10122, 10166, 10241, 10297, 10299, 10322, 10323, 11000
 Vortec 10353
 Waltham 10353
 Wards 10016, 10034, 10044, 10045, 10047, 10048, 10049, 10055, 10056, 10058, 10061, 10229, 10252, 10253, 10254, 10265, 10272, 10273
 Warumaia 10458
 Watson 10353
 Wega 10353
 Wega Color 10435
 Weipai 10460
 Westinghouse 10094, 10098, 10186, 10299
 Wharfedale 10353
 White Westinghouse 10076, 10078, 10236, 10353
 WinBook 10317
 Wyse 10316
 Xiahua 10360, 10362, 10367, 10368, 10370, 10376, 10380, 10384, 10385, 10390, 10392, 10425, 10457, 10460, 10462
 Xiangyang 10376, 10384, 10385, 10392, 10462
 Xiangyu 10362, 10368, 10375, 10460
 Xihu 10360, 10366, 10367, 10376, 10378, 10380, 10384, 10392, 10422, 10457, 10461, 10462
 Xinaghai 10460, 10462
 Xingfu 10362, 10368, 10460
 Xinghai 10362, 10368, 10376, 10384, 10385, 10392
 Xinsida 10467
 Xuelian 10359, 10366, 10367, 10378, 10380, 10386, 10387, 10461

Yamaha 10047, 10048, 10049, 10229, 10252, 10254
 Yamishi 10353
 Yapshe 10341
 YingGe 10448, 10460, 10461
 Yoko 10277
 Yonggu 10460, 10461
 Youlanasi 10457, 10461
 Yousida 10460
 Yuhang 10362, 10368, 10460
 Zenith 10019, 10020, 10021, 10045, 10047, 10069, 10078, 10198, 10228, 10231, 10236, 10245, 10272, 10324
 Zhuhai 10362, 10368, 10379, 10460
 Zonda 10248
Cable Box Codes
(Including Cable / PVR Boxes)
 ABC 40030, 40031, 40032, 40034, 40053, 40107, 40126, 40127
 Adelphia 40001
 Allegro 40038
 Antronix 40036, 40037
 Apache 40124
 Archer 40037, 40038, 40123
 AT&T 40003
 BBT 40129
 Belcor 40125
 Bell & Howell 40033
 Bell South 40113
 Cable Star 40125
 Cable Vision 40005
 Cabletenna 40036
 Cableview 40035
 Century 40038
 Citizen 40038, 40118
 Clearmaster 40112
 ClearMax 40112
 Colour Voice 40039
 Comcast 40000, 40007
 Comtronics 40040
 Contec 40041
 Coolmax 40112
 COX 40000
 Daeryung 40071
 Digi 40117
 Director 40007
 Dumont 40117

Eastern 40042
 Emerson 40123
 Everquest 40040, 40108
 Focus 40111
 Garrard 40038
 GC Electronics 40037, 40125
 GE 40030, 40031
 Gehua 40007
 Gemini 40043, 40108, 40123
 General Instrument 40007, 40031, 40105
 GoldStar 40040, 40109
 Goodmind 40123, 40124
 Hamlin 40044, 40045
 Hitachi 40031
 Hytex 40126
 Illico 40119
 Jasco 40038, 40108
 Jerrold 40007, 40031, 40043, 40053, 40067, 40105, 40108
 LG 40116
 Linsay 40132
 Magnavox 40046
 MegaCable 40007
 Memorex 40047, 40107
 Motorola 40000, 40003, 40007, 40072, 40105
 Movie Time 40048
 Multitech 40112
 Multivision 40120
 NEC 40033
 NET Brazil 40070
 Nexus 40124
 Nova Vision 40121
 Novaplex 40134
 NSC 40048
 Oak 40041, 40126
 Pace 40006, 40110
 Panasonic 40051, 40107
 Panther 40117
 Paragon 40107
 Philips 40038, 40039, 40046
 Pioneer 40002, 40049, 40071, 40109
 Popular Mechanics 40111
 Prelude 40124
 Proscan 40030, 40031
 Pulsar 40107
 Quasar 40107

RadioShack 40108, 40112, 40123
 RCA 40035
 Realistic 40037
 Recoton 40111
 Regal 40045
 Regency 40042
 Rembrandt 40031
 Rogers 40119
 Runco 40107
 Samsung 40006, 40040, 40049, 40069, 40109
 Scientific Atlanta 40001, 40002, 40003, 40034, 40071, 40106
 Signal 40040, 40043, 40108
 Signature 40031
 SL Marx 40040
 Sony 40005, 40114
 Standard Component 40050
 Starcom 40043, 40053, 40108
 Stargate 40040, 40043, 40108, 40123, 40124
 Starquest 40043, 40108
 StarSight 40131
 Supercable 40105
 Supermax 40112
 Sylvania 40127
 Tandy 40128
 Telecaption 40130
 TeleView 40040
 Texscan 40127
 TFC 40133
 Time Warner 40004
 Timeless 40040
 Tocom 40032
 Torx 40115
 Toshiba 40107
 Trans PX 40105
 Tristar 40112
 TS 40115
 Tusa 40043, 40108
 TV86 40048
 US Electronics 40105
 Unika 40036, 40037, 40038
 United Artists 40126
 United Cable 40053
 Universal 40036, 40037, 40038, 40125
 V2 40112

Videotron 40122
 View Star 40041, 40046, 40048
 Viewmaster 40112
 ViewStar 40128
 Vision 40112
 Vortex View 40112
 Zenith 40052, 40068, 40107, 40113
 Zentek 4011

Satellite Receiver Codes (Including Sat / PVR Boxes)

AccessHD 40096
 Alpha Digital 40096
 AlphaStar 40064
 Apex Digital 40103
 Artec 40092
 CaptiveWorks 40088
 Channel Master 40097
 Chaparral 40056
 Coolsat 40089
 Coship 40093
 Crossdigital 40146
 Digital Stream 40102
 DirecTV 40014, 40015, 40016, 40017, 40018, 40019, 40020, 40023, 40024, 40025, 40028, 40029, 40054, 40055, 40077, 40078, 40079, 40135, 40136, 40138, 40141
 Dish Network System 40008, 40009, 40010, 40011, 40021, 40137, 40139, 40144
 Dishpro 40137, 40139, 40144
 Drake 40057
 Echostar 40008, 40021, 40137, 40139, 40144, 40145
 Expressvu 40139, 40144, 40145
 GE 40012, 40013, 40098
 General Instrument 40058, 40142
 GOI 40144
 Goodmind 40098
 Hisense 40143
 Hitachi 40029, 40065
 HTS 40144
 Hughes Network Systems 40016, 40018, 40019, 40023, 40025, 40054, 40135
 Humax 40090
 Ilo 40143

Insignia 40082
Jerrold 40142
JVC 40008, 40021, 40144
Lasonic 40099
LG 40082
Magnavox 40028, 40094
Memorex 40028
MicroGem 40100
Mitsubishi 40023, 40085
Motorola 40140, 40142
Next Level 40142
Panasonic 40017, 40083
Pansat 40086
Paysat 40028
PCT 40097
Philco 40094
Philips 40016, 40023, 40025,
40027, 40028, 40079, 40135
Pioneer 40016
Primestar 40063
Proscan 40012, 40013, 40138
Proton 40143
RadioShack 40142
RCA 40012, 40013, 40014,
40025, 40055, 40073, 40075,
40077, 40078, 40080, 40091
Realistic 40059
Samsung 40016, 40018, 40024,
40025, 40026, 40081
Sharp 40084
Sonicview 40101
Sony 40015, 40022, 40074,
40076, 40136
Star Choice 40140, 40142
STS 40066
STS1 40060
STS3 40061
STS4 40062
Tivax 40096
Tivo 40016, 40025
Toshiba 40019
UltimateTV 40136
Uniden 40028
US Digital 40143
Viewsat 40087
Voom 40142
Winegard 40104
Zenith 40020, 40082
Zentech 40095

PVR Codes

ABS 20410
Alienware 20410
AT&T 20245
Bang & Olufsen 20412
CyberPower 20410
Dell 20410
DirecTV 20238, 20240, 20241,
20243, 20405, 20406, 20409,
20411
Dish Network 20408
Dishpro 20408
Echostar 20408
Expressvu 20408
Gateway 20410
GOI 20408
Hewlett Packard 20410
Howard Computers 20410
HTS 20408
Hughes Network Systems 20240,
20238, 20241, 20243, 20407
Humax 20238
Hush 20410
iBUYPower 20410
JVC 20238, 20408
Linksys 20410
Media Center PC 20410
Microsoft 20410
Mind 20410
Niveus Media 20410
Northgate 20410
Panasonic 20245
Philips 20238, 20240, 20241,
20242, 20243, 20407
RCA 20238, 20243, 20407,
20409, 20411
ReplayTV 20244
Samsung 20241, 20243, 20407
Sonic Blue 20244
Sony 20239, 20410
Stack 20410
Systemax 20410
Tagar Systems 20410
Tivo 20238, 20239, 20240,
20242, 20243
Toshiba 20410
Touch 20410
UltimateTV 20411
Viewsonic 20410

Voodoo 20410
ZT Group 20410
Blu-Ray DVD Player Codes
Denon 20143, 20144
Insignia 20142
LG 20132
Marantz 20145, 20146
Panasonic 20128, 20129, 20130,
20197, 20198
Pioneer 20134, 20147
Samsung 20015, 20125
Sharp 20139, 20140, 20141
Sony 20005
Vizio 22000

DVD Player Codes

Accele Vision 20137
Accurian 20311
Advent 20288
Aiko 20348
Aiwa 20207
Akai 20161, 20282, 20317
Akishi 20349
Akustic 20348
Alco 20286
Allegro 20306
Alpine 20152
Amphion Media Works 20151,
20330
AMW 20151
Anam 20392
Aodeiong 20358
Apex 20024, 20025, 20026,
20027, 20085, 20111, 20300,
20301
Apple 20189
Arrgo 20307
Aspire 20209, 20290
Astar 20181
ATLM 20369
Audiovox 20106, 20116, 20286
Axion 20162
Bang & Olufsen 20302
Blaupunkt 20136, 20301
Blue Parade 20298
Bose 20076, 20086, 20393,
20394
BOSS 20138
Boston Acoustics 20331
Brand 20383

Broksonic 20007, 20282	Gradiente 20158, 20284	LG 20091, 20100, 20117, 20132, 20180, 20303, 20306
Caixing 20389	Greenhill 20301	Linshuma 20378
California Audio Labs 20284	Grundig 20297	Liquid Video 20292
Cambridge Sound Works 20203	Haier 20165, 20340	LiteOn 20102, 20235, 20236, 20311, 20327
Caravell 20362	Haitai 20364	Loewe 20313, 20320
CAVS 20210	Haoji 20384	Longzhipai 20354
Changhong 20285, 20345	Harman/Kardon 20124, 20305	Magnavox 20081, 20142, 20283, 20294, 20297, 20310
CineVision 20114, 20306	Hisense 20344	Malata 20346
Clarion 20154	Hitachi 20013, 20232	Marantz 20145, 20146, 20297
Classic 20131	Hiteker 20300	Maxview 20368
Coby 20087, 20095, 20123, 20289	Huabao 20375	McIntosh 20211
Conic 20370	Huabaojamo 20334	Memorex 20090, 20282
Curtis 20095	iLive 20205	Microsoft 20296
Curtis Mathes 20308	Ilo 20159	Mintek 20159, 20301
CyberHome 20028, 20070, 20307, 20323, 20326	iLuv 20174	Mitsubishi 20092, 20295
Cytron 20160	Initial 20159, 20301	Mitsui 20353
Daewoo 20093, 20306, 20317	Insignia 20142, 20150, 20164, 20202, 20310	Mitzu 20348
Dayu 20388	Integra 20285, 20298	NAD 20156, 20333
DCS 20363	iSymphony 20190	Nakamichi 20170, 20400
Denca 20367	Jamo 20206	Napa 20350
Denon 20108, 20115, 20143, 20144, 20284	JBL 20104, 20305	Nesa 20301
Desay 20185	Jensen 20171, 20289, 20397	Next Base 20312
Diamond Vision 20237	Jieke 20390	NexxTech 20187
Dihe 20338	Jingewangpai 20375	Niro 20401
Ding Tian 20342	Jingwei 20336	Norcent 20095, 20221
Disney 20090, 20096	Jinwang 20377	Okon 20385
Dual 20172	Jugao 20359	Onkyo 20099, 20110, 20285, 20294
Durabrand 20309	JVC 20029, 20030, 20031, 20032, 20033, 20034, 20035, 20036, 20037, 20098, 20119, 20195, 20299	Oppo 20163, 20188
DVD2000 20295	Jwin 20169, 20219	Oritron 20101, 20292
Dynex 20193	Kawasaki 20286	Other Brand 20373
Eclipse 20126	KEF 20398	Pai Gao 20360
Electrohome 20395	Kenwood 20386	Panasonic 20016, 20017, 20018, 20019, 20020, 20021, 20022, 20023, 20073, 20075, 20080, 20118, 20128, 20129, 20130, 20197, 20198, 20222, 20229, 20230, 20232, 20233, 20284, 20294
Emerson 20041, 20135, 20283, 20303, 20310	Kenwood 20122, 20284	Panda 20379
Enterprise 20303	Ketai 20376	Parasound 20212
ESA 20182, 20310	KLH 20286, 20301	Philco 20286, 20351
Fisher 20168, 20304	Klipsch 20332	Philips 20006, 20040, 20041, 20081, 20294, 20297, 20314
Funai 20310	Konka 20316	Pioneer 20042, 20043, 20044, 20045, 20134, 20147, 20234, 20298
Gateway 20327	Koss 20101, 20199, 20292	
GE 20082, 20296, 20301	Lafayette 20351	
Gewang 20361	Landel 20312	
GFM 20149	Lasonic 20155, 20220, 20399	
Giec 20355	Legend-V 20365	
Go Video 20306, 20327, 20396	Lenoxx 20291, 20309	
GoldStar 20167	Lexicon 20314	
GPX 20112		

Polaroid 20027, 20133, 20208, 20402
 Polk Audio 20297
 Portland 20317
 Power Sound 20348
 Prima 20192, 20403
 Primas 20335
 Princeton 20315
 Proceed 20300
 Proscan 20082, 20296
 Prottron 20213
 Pye 20166
 Qinghuatongfang 20382
 Qisheng 20372
 Qixing 20391
 Qwestar 20101
 RCA 20038, 20039, 20082, 20286, 20296, 20298, 20301
 Regent 20291
 Rio 20306
 Rotel 20214, 20299
 Rowa 20287
 Royal 20351
 Saba 20404
 Sampo 20157, 20325, 20328
 Samsung 20011, 20012, 20013, 20014, 20015, 20077, 20079, 20083, 20088, 20125, 20176, 20191, 20231, 20284
 Sansui 20127, 20282
 Sanyo 20200, 20282, 20304
 Sast 20336
 Sensory Science 20327
 Shanshui 20374
 Sharp 20120, 20139, 20140, 20141, 20204, 20328
 Sharper Image 20323
 Sherwood 20203, 20317
 Shinco 20136
 Shinsonic 20159, 20293
 Shumaling 20337
 Sigma Designs 20315
 Skyworth 20375
 Sonashi 20356
 Sonic Blue 20306, 20396
 Sonico 20352
 Sony 20000, 20001, 20002, 20003, 20004, 20005, 20071, 20074, 20078, 20084, 20089, 20177, 20178, 20179, 20194, 20223, 20224, 20225, 20293

Sowa 20347
 Spectroniq 20215
 Sungale 20184
 Superscan 20103, 20283
 Supersonic 20351
 SVA 20319
 Sylvania 20041, 20103, 20148, 20149, 20283, 20310, 20329
 Symphonic 20103, 20183
 Tatung 20366
 TCL 20371
 Teac 20136, 20286
 Technics 20284
 Techwood 20153
 Terapin 20321
 Theta Digital 20298
 Tianli 20343
 Toshiba 20006, 20007, 20008, 20009, 20010, 20072, 20105, 20109, 20121, 20196, 20226, 20227, 20228, 20282, 20294
 Tredex 20318
 Trutech 20186, 20218
 Tsinghuatongfang 20357
 Tview 20173
 Urban Concepts 20294
 US Logic 20159
 Venturer 20201, 20286
 Victor 20380
 Vizio 20322, 20324, 22000
 Vocopro 20175, 20216
 VocoStar 20217
 Wanbao 20355
 Wanyan 20346
 Weifa 20381
 Westinghouse 20113
 Xbox 20296
 Xianpai 20338
 Xindai 20387
 Yamaha 20016, 20107, 20284, 20297
 YMT 20356
 Youbishen 20341
 Yuxing 20339
 Zenith 20091, 20094, 20097, 20294, 20303, 20306

Amplifier / Receiver / Tuner Codes

Accurian 30164
 ADA 30165
 ADC 30133
 Adcom 30104
 Aiwa 30087, 30162, 30260
 Alco 30139
 Altec Lansing 30166
 AMC 30167
 Amphion Media Works 30140, 30145
 Amplifier Technologies 30200
 AMW 30140
 Anam 30135, 30149
 Antex 30168
 Apex 30099
 Apple 30169
 Aragon 30201
 Atlantic Technology 30170
 Audio Access 30202
 Audio Authority 30203
 Audio Tron 30171
 Audiophase 30204
 AudioSource 30205
 Audiotronic 30136
 Audiovox 30098, 30139
 B & K 30105
 Bang & Olufsen 30144
 Blaupunkt 30206
 Bondstec 30207
 Bose 30062, 30076, 30150, 30151, 30261
 Boston Acoustics 30146
 Cambridge Soundworks 30121
 Capetronic 30133, 30208
 Carver 30136, 30162
 Casio 30209
 Celestion 30210
 Clarion 30211
 Classic 30109
 Clatronic 30212
 Coby 30092, 30213, 30262
 Compaq 30172
 Creative 30173
 Crown 30214
 Curtis 30103, 30215
 Curtis Mathes 30129

Daewoo 30216
 DBX 30174
 Dell 30217
 Delphi 30218
 Denon 30051, 30052, 30053,
 30054, 30055, 30102
 D-Link 30175
 EAD 30219
 Eclipse 30220
 Elan 30176
 Electrohome 30152
 Emerson 30112, 30256
 Fahrenheit 30221
 Felston 30177
 Fonmix 30163
 Fosgate 30170
 GE 30046, 30128
 Go Video 30153
 GPX 30100, 30257
 Griffin 30178
 Hanwah 30222
 Harman/Kardon 30130, 30162
 iHome 30263
 iLive 30124
 iLuv 30258
 Imerge 30179
 Inkel 30223
 Insignia 30120
 Insten 30180
 Integra 30132
 iPort 30181
 iSymphony 30125, 30258
 Jamo 30126
 JBL 30097
 Jensen 30154
 Jerrold 30182
 JVC 30031, 30032, 30033,
 30034, 30035, 30259
 Jwin 30265
 KEF 30155
 Kenwood 30036, 30037, 30038,
 30039, 30040, 30065, 30071,
 30077, 30137
 KLH 30139
 Klipsch 30147
 Koss 30117, 30138
 Krell 30110
 Lasonic 30156
 Left Coast 30130

Lexicon 30224
 LG 30093, 30264
 Ligitek 30183
 Linn 30162
 Luxman 30184
 LXI 30225
 Magnadyne 30226
 Magnat 30227
 Magnavox 30066, 30133, 30136,
 30162
 Magnum Dynalab 30228
 Marantz 30106, 30130, 30136,
 30162
 Mark Levinson 30185
 Matrix Audio 30229
 MCE 30230
 McIntosh 30111
 Mediacom 30231
 Memorex 30186
 Meridian 30232
 Micromega 30233
 Mitsubishi 30096
 Motorola 30234
 Musical Fidelity 30235
 NAD 30143, 30148
 Nakamichi 30142, 30157
 NEC 30131, 30236
 Netgear 30187
 Nikko 30237
 Niles 30238
 Niro 30158
 Nubert 30188
 Nuvo 30239
 Olive 30189
 Omnifi 30190
 Onkyo 30041, 30042, 30043,
 30044, 30045, 30067, 30069,
 30070, 30075, 30080, 30091
 Optimus 30129, 30133, 30134,
 30135
 Oritron 30138
 Panasonic 30019, 30020, 30021,
 30022, 30023, 30115, 30116,
 30255
 Parasound 30113
 Penney 30240
 Performance Technique 30241
 Philips 30094, 30130, 30136,
 30162

Pioneer 30024, 30025, 30026,
 30027, 30028, 30029, 30030,
 30060, 30063, 30078, 30127,
 30129, 30133, 30134
 Polaroid 30159
 Polk Audio 30107, 30130, 30162
 Prima 30160
 Primare 30242
 Proscan 30046
 RCA 30046, 30047, 30048,
 30049, 30088, 30129, 30133,
 30134, 30135, 30139
 Revox 30243
 Rio 30141
 Roku 30191
 Russound 30244
 Saba 30161
 Samsung 30073
 Sangean 30245
 Sansui 30162, 30246
 Sanyo 30118
 Sharp 30101, 30122, 30259
 Sherwood 30089, 30123
 Shure 30131
 SII 30247
 Sonic Blue 30141, 30153
 Sony 30000, 30001, 30002,
 30003, 30004, 30005, 30006,
 30007, 30056, 30057, 30058,
 30059, 30061, 30064, 30074,
 30077, 30082, 30083, 30084,
 30085, 30086
 Soundesign 30128
 Soundmatters 30114
 Soundstream 30248
 Spatializer 30192
 SpeakerCraft 30249
 Stereophonics 30134
 Sunfire 30137
 SuperTech 30250
 Teac 30135, 30139, 30258
 Technics 30022, 30050
 Techwood 30251
 Teknika 30193
 Thorens 30136
 Tivoli Audio 30194
 Topline 30252
 Toshiba 30108
 Universum 30253
 Vector Research 30254
 Velodyne 30195

Venturer 30119, 30139
 Wards 30127, 30128, 30162
 Xantech 30196
 Xitel 30197
 Yamaha 30008, 30009, 30010,
 30011, 30012, 30013, 30014,
 30015, 30016, 30017, 30018,
 30068, 30072, 30079, 30081,
 30095, 30132
 Zektor 30198
 Zenith 30090
 Zon 30199

Audio Accessory Codes (Including CD Players and Soundbars)

Acoustic Research 30294
 ADC 30291
 ADS 30295
 Aiwa 30283
 Akai 30292
 ASI 33000
 Audiophase 30282
 Bose 30284
 California Audio Labs 30296
 Cambridge Audio 30297
 Capetronic 30298
 Carrera 30299
 Carver 30300, 30331, 30332
 Cary Audio Design 30301
 CCE 30302
 Clarion 30303
 Classic 30304
 Coby 30287
 Cox Cable 33001
 Creative 30305
 DBX 30306
 Denon 30267
 Direct TV 33002
 Dish Network 33003
 DKK 30328
 DMX Electronics 30331
 Dynamic Bass 30332
 Emerson 30279
 Garrard 30307
 Genexxa 30329
 GPX 30280
 Harman/Kardon 30273
 Hitachi 30308
 iHome 30288

iLuv 30286
 Inkel 30309
 iSymphony 30286
 JVC 30269, 30281
 Jwin 30290
 Kenwood 30310, 30330
 KLH 30311
 Koss 30312
 Krell 30331
 LG 30289
 Linn 30331
 Luxman 30293
 Magnavox 30313
 Marantz 30314
 Mark Levinson 30315
 McIntosh 30316
 Memorex 30317
 Miro 30328
 Mission 30331
 Musical Fidelity 30318
 NAD 30319
 Nakamichi 30320
 NEC 30321
 Nikko 30322
 NSM 30331
 Onkyo 30268
 Optimus 30328, 30329, 30332
 Panasonic 30278
 Philips 30275, 30276
 Pioneer 30272
 Polk Audio 30331
 Proton 30331
 QED 30331
 Quad 30331
 RCA 30266
 Realistic 30332
 Rotel 30331
 SAE 30331
 Samsung 30323
 Sansui 30331
 Sanyo 30324
 SAST 30331
 Sharp 30281
 Sherwood 30325
 Silsonic 30330
 Sonic Frontiers 30331
 Sony 30270, 30271, 30274
 Super Atlas 33004

TAG McLaren 30331
 Teac 30286
 Technics 30277
 Techwood 30326
 Tivoli Audio 30327
 Vizio 33005
 Wards 30331
 Yamaha 30285
 Zonda 30331

VCR Codes

ABS 20410
 Adventura 20050, 20250
 Aiwa 20050, 20250
 Akai 20061
 Alienware 20410
 American High 20249
 Apex 20415
 Asha 20054, 20247
 Audio Dynamics 20058
 Audiovox 20248, 20267
 Beaumark 20054, 20247
 Bell & Howell 20246
 Broksonic 20279
 Calix 20248
 Candle 20247, 20248
 Canon 20249
 CineVision 20280
 Citizen 20247, 20248, 20420
 Colortyme 20058
 Colt 20417
 Craig 20054, 20247, 20248
 Curtis Mathes 20058, 20247,
 20249
 Cybernex 20054, 20247
 CyberPower 20410
 Daewoo 20060, 20250, 20420
 Davidson 20050
 DBX 20058
 Dell 20410
 Denon 20055
 DIRECTV 20407
 Durabrand 20067
 Dynatech 20050, 20250
 Electrohome 20052, 20248
 Electrophonic 20248
 Emerson 20050, 20052, 20062,
 20248, 20249, 20250, 20420
 Fisher 20246

Fuji 20249
 Funai 20050, 20062, 20250
 Garrard 20050, 20250
 Gateway 20410
 GE 20054, 20247, 20249, 20418
 Go Video 20054
 GoldStar 20058, 20066, 20248, 20419
 Gradiente 20050, 20250
 Harley Davidson 20250
 Harman/Kardon 20058
 Headquarter 20246
 Hewlett Packard 20410
 Hitachi 20050, 20055
 Howard Computers 20410
 Hughes Network Systems 20055, 20407
 Humax 20407
 Hush 20410
 iBUYPOWER 20410
 Instant Replay 20249
 JC Penney 20058, 20246, 20247, 20248, 20249
 JCL 20249
 JVC 20056, 20057, 20058, 20246, 20254, 20264, 20265, 20266, 20268, 20269, 20270, 20271
 Kenwood 20058, 20246
 Kodak 20248, 20249
 LG 20248
 Linksys 20410
 Lloyd's 20050, 20250
 LXI 20248
 Magnasonic 20062, 20420
 Magnavox 20050, 20062, 20067, 20069, 20249
 Magnin 20054, 20248, 20418
 Marantz 20058, 20246, 20249
 Marta 20248
 Matsushita 20249
 Media Center PC 20410
 MEI 20249
 Memorex 20050, 20054, 20067, 20246, 20247, 20248, 20249, 20250, 20414, 20416, 20419
 MGA 20052, 20054, 20418
 MGN Technology 20054, 20247
 Microsoft 20410
 Mind 20410

Minolta 20055
 Mitsubishi 20052, 20255
 Motorola 20249
 MTC 20050, 20054, 20247
 Multitech 20050, 20247, 20250
 NEC 20058, 20246
 Nikko 20248
 Niveus Media 20410
 Noblex 20054, 20247
 Northgate 20410
 Olympus 20249
 Optimus 20062, 20248, 20416
 Optonica 20065
 Orion 20258, 20414
 Panasonic 20017, 20018, 20019, 20046, 20249, 20273, 20274, 20413, 20416
 Penney 20054, 20055, 20418, 20419
 Pentax 20055
 Philco 20249
 Philips 20065, 20249, 20256, 20278, 20407
 Philips Magnavox 20256
 Pilot 20248
 Polaroid 20415
 Profitronic 20054
 Pulsar 20067
 Pye 20281
 Quarte 20246
 Quartz 20246
 Quasar 20249, 20416
 RadioShack 20050, 20065, 20248, 20249, 20065, 20246, 20247, 20250
 Radix 20248
 Randex 20248
 RCA 20053, 20054, 20055, 20247, 20249, 20252, 20275, 20276, 20418
 Realistic 20050, 20065, 20246, 20247, 20248, 20249, 20250, 20065
 ReplayTV 20413
 Ricavision 20410
 Runco 20067
 Samsung 20054, 20059, 20060, 20061, 20247, 20263, 20277, 20407
 Sankyo 20067
 Sansui 20050, 20258, 20414

Sanyo 20054, 20246, 20247, 20418
 Scott 20052, 20060
 Sears 20050, 20055, 20246, 20248, 20249, 20419
 Sharp 20064, 20065, 20257
 Shogun 20054, 20247
 Singer 20249
 Sonic Blue 20413
 Sony 20047, 20048, 20049, 20050, 20251, 20253, 20260, 20261, 20262, 20272, 20410
 Stack 20410
 STS 20055, 20249
 SuperScan 20063
 Sylvania 20050, 20052, 20062, 20063, 20249, 20250
 Symphonic 20050, 20062, 20063, 20250
 Systemax 20410
 Tagar Systems 20410
 Tandy 20246
 Tashiko 20248
 Teac 20050, 20250
 Technics 20249
 Teknika 20050, 20248, 20249, 20250
 Thomas 20050
 Tivo 20407
 TMK 20054, 20247
 Toshiba 20051, 20052, 20060, 20259, 20410
 Totevision 20054, 20247, 20248
 Touch 20410
 Unitech 20054, 20247
 Vector 20060
 Vector Research 20058
 Video Concepts 20058, 20060
 Videosonic 20054, 20247
 Viewsonic 20410
 Villain 20050
 Voodoo 20410
 Wards 20050, 20054, 20055, 20065, 20247, 20248, 20249, 20250
 XR-1000 20050, 20249, 20250
 Yamaha 20058, 20246
 Zenith 20050, 20066, 20067, 20068
 ZT Group 20410

Chapter 10 Maintenance and Troubleshooting

Cleaning the TV and Remote Control

1. Remove the power adapter cable from the TV.
2. Use a soft cloth moistened with diluted neutral cleaner to clean the TV and remote control. VIZIO recommends using an HDTV cleaning solution which can be purchased at any major retailer.
3. Wring liquid out of the cloth before cleaning to prevent water from penetrating into the housing.
4. Wipe the TV and remote control with a dry cloth after cleaning.

Important:

- Do not use volatile solvent (such as toluene, rosin and alcohol). Such chemicals may damage the housing, screen glass, and remote control, and cause labeling to peel.
- The screen glass is very fragile. Do not scrape it with any sharp object.
- Do not press or tap the screen to avoid cracking.

Troubleshooting Guide

If the TV fails or the performance changes dramatically, check the following troubleshooting guide for possible solutions. Remember to check the peripherals to pinpoint the source of the failure. If the display still fails to perform as expected, contact the VIZIO for assistance by calling 1-877-MYVIZIO (698-4946) or e-mail us at techsupport@vizio.com.

General TV Problems	Solution
Receive the error message "No Signal."	1. Press the INPUT button on the remote control to select a different input source. 2. If you are using cable connected directly to the TV or an antenna, scan for channels from the Tuner menu in the OSD. 3. Press the TV button on the top of the remote to return to the TV mode.
No power.	4. Make sure the power button is ON (VIZIO logo glows white). 5. Make sure the AC power cord is securely connected to the AC socket. 6. Plug another electrical device to the power outlet to verify that the outlet is working.
No sound.	• Press Volume + (Up) on the remote control. • Press MUTE on the remote control to make sure that MUTE is not ON. • Check your audio settings. The audio may be set to SAP, or the speakers are set to off. • Check the audio connections of external devices that may be connected to the HDTV. • If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.
If the screen is black.	• Make sure the power button is ON (VIZIO Logo glows white). • Press the INPUT button on the remote control to select a different input source. • Check the connections of external devices that may be connected to the HDTV. • Press the TV button on the top of the remote to return to the TV mode.

General TV Problems	Solution
Power is ON but there is no image on the screen.	• Make sure all cables attached to the HDTV are connected to the correct output on the external device. • Adjust brightness, contrast or backlight. • Press the INPUT button on the remote control to select a different input source. • Press the TV button on the top of the remote to return to the TV mode.
Wrong or abnormal colors appear.	• Check Color and Tint settings in Picture Menu. • Reset Picture settings. • Check the video cables to make sure they are securely connected. • If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.
Control buttons do not work.	• Press only one button at a time. • Press the TV button on the top of the remote to return to the TV mode.
Remote control does not work.	• Point the remote control directly at the remote sensor on your TV. • Remove any obstacles between the remote control and the remote sensor. • Replace dead batteries with new ones. • Press the TV button on the top of the remote to return to the TV mode.
There appear to be image quality issues.	• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window. • For best image quality, view HD wide-screen programs where possible. • If HD content is not available view "Standard Definition" from a digital source. • Standard, analog TV will always be noticeably inferior to HD because your digital flat panel TV has video that is many times better than old TV so you will see interference and deficiencies you did not know you had.
You cannot see a picture.	• Make sure the power button is ON (VIZIO logo glows white). • Make sure the AC power cord is securely connected to the AC socket. • Press the INPUT button on the remote control to select a different input source. • Press the TV button on the top of the remote to return to the TV mode. • Check the connections of external devices that may be connected to the HDTV. • If your HDTV is connected to a computer, press any button on your keyboard to "wake" your computer. • If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.
You see a distorted picture or hear unusual sound.	• You may be getting interference from electrical appliances, cars, motorcycles, or fluorescent lights. If you have not mounted it on the wall, try moving your HDTV to another location to see if this is the cause of the problem.
The picture has abnormal patterns.	• Check the connections of external devices that may be connected to the HDTV. • Make sure the specifications of external devices meet the specifications of your HDTV (like resolution). • If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.

General TV Problems	Solution
The display image does not cover the entire screen.	- If you are in RGB mode (Computer), make sure that H-Size and V-Position in the On Screen Display (OSD) are set correctly. - If you are using TV, AV1, AV2 or Component with 480i input, press the WIDE button on the remote control to scroll through various screen modes.
You can see a picture but you cannot hear sound.	- Press Volume + (Up) on the remote control. - Press MUTE on the remote control to make sure that MUTE is not ON. - Check your audio settings. The audio may be set to SAP, or the speakers are set to off. - Check the audio connections of external devices that may be connected to the HDTV.
The TV has pixels (dots) that are always dark or colored.	Your HDTV is manufactured using an extremely high level of precision technology, however, sometimes some pixels of your HDTV may not display. Pixel defects within industry specifications are inherent to this type of product and do not constitute a defective product.
You see "noise" or "trash" on the screen.	- When your HDTV's digital capabilities exceed a digital broadcast signal, the signal is up-converted (increased) to match your TV's display capabilities. Up-converting can cause noise or trash. - If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.
You switch to a different input and the volume changes.	The TV remembers the volume level from the last time you adjusted it. If the sound level is higher or lower from another source, then the volume will change.
You switch to a different input and the screen size changes.	The TV remembers the viewing mode from the last time you used a particular input (AV-1, AV-2, Component, HDMI and TV).
Tips for High-Definition Users.	- Your HDTV is an ideal platform for viewing High Definition Content. - Best image quality will be achieved by HDMI. The next best is Component, followed by Composite. - Due to variances in broadcast practices, it is possible some image distortions can occur.
Tips for Letterbox Content Users.	Some Letterboxed (or "Widescreen") versions of DVD movies are formatted for standard 4:3 Televisions. Your HDTV has the ability to expand this content so the entire screen is filled at the expense of image accuracy. To use this function, press ZOOM on the remote control to cycle among the options.

Media Viewer Problems	Solution
USB device is not recognized.	- Make sure the device is correctly inserted. - Make sure the device is FAT or FAT32 - Make sure it contains the supported files.
Image or sound is interrupted or distorted.	- Make sure the device is correctly inserted. - Make sure that the file complies with the supported format, bit rate and/or profile. Also check the file for damage. - Some files that comply with the supported format may not play back or display properly.
Slideshow doesn't start.	Make sure the viewer isn't in pause, rotation, or zoom mode.

Telephone & Technical Support

Products are often returned due to a technical problem rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, contact our Support Department at the number below.

Customer support and quality service are integral parts of VIZIO's commitment to service excellence.

For technical assistance contact our VIZIO Technical Support Department via email or phone.

Email: techsupport@VIZIO.com

(877) 698-4946 Fax: (949) 585-9563

Hours of operation: Monday - Friday: 6 am to 9 pm

Saturday – Sunday: 8 am to 4 pm

Have your VIZIO model number, serial number, and date of purchase available before you call.

VIZIO

Address:

39 Tesla

Irvine, CA 92618, USA

Telephone: (888) 849-4623 (949) 428-2525 Fax: (949) 585-9514

Web: www.VIZIO.com

Compliance

Caution: Always use a power cable that is properly grounded. Use the AC cords listed below for each area.

USA: UL

Canada: CSA

Germany: VDE

UK: BASE/BS

Japan: Electric Appliance Control Act

FCC Class B Radio Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC AC/DC power adapter, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

Chapter 11 Specifications

Product specifications may change without notice or obligation.

M320NV Specifications	
Panel	31.55" Diagonal, 16:9 Aspect Ratio
Resolution	1920 x 1080 pixels
Pixel (Dot) Pitch	0.363mm(H) x 0.363mm(V)
Display Compatibility	1080P (FHDTV)
Colors	16.7 million
Brightness cd/m2 (typical)	450nits
Contrast	1300:1
Response Time	5ms (typical)
Viewing Angle	178° (horizontal/vertical)
Inputs	3 x HDMI with HDCP (2 back, 1 side) 1 x RF 1x Composite Video and Stereo Audio 1x Component YPbPr plus Stereo Audio 1x Computer RGB plus Stereo Audio 1x USB (side)
Outputs	1x 5.1 S/PDIF Optical Digital Audio, 1x Stereo Audio
Features	60 Hz E-LED panel, 1080P FHDTV, HDMI v1.3, 3D Comb Filter, Digital Audio Amplifier, Dolby Digital for ATSC/QAM, Signal Compatibility: 480i(SDTV), 480P(EDTV), 720P(HDTV), 1080i(HDTV), 1080P(FHDTV), Channel Skip/Add, VIDEO/INPUT Naming Capability, Closed Caption, Parental Control/V-CHIP 2.0, Programmable Timer, PIP/POP, SRS TSHD,SRS TruVolume ,HD Game Port, Noise Reduction, MTS Stereo Decoder, Dolby Digital for ATSC/QAM, VESA Mount Compatible, Multimedia(JPG only)
Technical Features	ATSC/Clear QAM tuner, NTSC video decoding, 3:2 or 2:2 reverse pull-down, Motion adaptive de-interlace, Progressive video scan via Component/VGA/HDMI, FHDTV via HDMI or Component, Color temperature adjustments of 6500K/9300K/11000K, Independent Red/Green/Blue adjustments for color temperature fine tuning, Signal Compatibility 480i (SDTV), 480P (EDTV), 720P (HDTV), 1080i (HDTV), 1080P (FHDTV), Computer support at 640x480/800x600/1024x768/ 1920x1080 via VGA/HDMI
Special Features	• Multimedia: support JPG only • Jag Wheel Key • HDMI CEC • Light Sensor • Detachable Base
Speakers	2xBuilt-in, 10W Speakers
Panel Life	30,000 hours to half the original brightness
Power	
Input	IEC Connector for direct power line connection
Voltage Range	100~240 Vac at 50/60Hz
Power Consumption	57.1W (Avg), 0.29W standby
Environmental Conditions	
Dimensions	31.63" W x 21.96" H x 7.87" D with stand; 31.63" W x 20.07" H x 1.69" D without stand

M320NV Specifications	
	803.4 x 558 x 200mm with stand; 803.4 x 510 x 43mm without stand
Net Weight	21.61 lbs without stand; 23.81 lbs with stand 9.8 kg without stand; 10.8 kg with stand
Gross Weight	30.42 lbs; 13.8 kg
Certifications	CSA, CSA-US, FCC Class B
Compliances	Energy Star 4.0, ATSC Spec A/65, EIA/CEA-766-A

M370NV Specifications	
Panel	37" Diagonal, 16:9 Aspect Ratio
Resolution	1920 x 1080 pixels
Pixel (Dot) Pitch	0.426mm(H) x 0.426mm(V)
Display Compatibility	1080P (FHDTV)
Colors	16.7 million
Brightness cd/m2 (typical)	450nits
Contrast	1400:1
Response Time	5ms (typical)
Viewing Angle	178° (horizontal/vertical)
Inputs	3 x HDMI with HDCP (2 back, 1 side) 1 x RF 1x Composite Video and Stereo Audio 1x Component YPbPr plus Stereo Audio 1x Computer RGB plus Stereo Audio 1x USB (side)
Outputs	1x 5.1 S/PDIF Optical Digital Audio, 1x Stereo Audio
Features	60 Hz E-LED panel, 1080P FHDTV, HDMI v1.3, 3D Comb Filter, Digital Audio Amplifier, Dolby Digital for ATSC/QAM, Signal Compatibility: 480i(SDTV), 480P(EDTV), 720P(HDTV), 1080i(HDTV), 1080P(FHDTV), Channel Skip/Add, VIDEO/INPUT Naming Capability, Closed Caption, Parental Control/V-CHIP 2.0, Programmable Timer, PIP/POP, SRS TSHD, SRS TruVolume, HD Game Port, Noise Reduction, MTS Stereo Decoder, Dolby Digital for ATSC/QAM, VESA Mount Compatible, Multimedia(JPG only)
Technical Features	ATSC/Clear QAM tuner, NTSC video decoding, 3:2 or 2:2 reverse pull-down, Motion adaptive de-interlace, Progressive video scan via Component/VGA/HDMI, FHDTV via HDMI or Component, Color temperature adjustments of 6500K/9300K/11000K, Independent Red/Green/Blue adjustments for color temperature fine tuning, Signal Compatibility 480i (SDTV), 480P (EDTV), 720P (HDTV), 1080i (HDTV), 1080P (FHDTV), Computer support at 640x480/800x600/1024x768/ 1920x1080 via VGA/HDMI
Special Features	• Multimedia: support JPG only • Jag Wheel Key • HDMI CEC • Light Sensor • Detachable Base
Speakers	2xBuilt-in, 10W Speakers
Panel Life	30,000 hours to half the original brightness

M370NV Specifications	
Power	
Input	IEC Connector for direct power line connection
Voltage Range	100~240 Vac at 50/60Hz
Power Consumption	56W (Avg), 0.29W standby
Environmental Conditions	
Dimensions	36.39" W x 24.58" H x 8.26" D with stand; 36.39" W x 22.75" H x 1.69" D without stand 924 x 624 x 210mm with stand; 924 x 578 x 43mm without stand
Net Weight	26.59 lbs without stand; 29.23 lbs with stand 12.06 kg without stand; 13.26 kg with stand
Gross Weight	35.94 lbs; 16.3 kg
Certifications	CSA, CSA-US, FCC Class B
Compliances	Energy Star 4.0. ATSC Spec A/65, EIA/CEA-766-A

Note: The Federal Communications Commission (FCC), the Consumer Electronics Association (CEA) and the Consumer Electronics Retailers Coalition (CERC) have made a new tip sheet available for digital television (DTV) retailers to reproduce and distribute to consumers on the sales floor. The file may be downloaded online at www.dtv.gov. While you're there, check out the other useful information in the FCC is making available to consumers interested in learning more about the analog to digital transition.

Preset PC Resolutions

If connecting to a PC through the RGB PC input, set the TV timing mode to VESA 1920x1080 at 60Hz for best picture quality (refer to the graphic card's user guide for questions on how to set this timing mode). See the table below for the factory preset resolutions.

Mode No.	Resolution	Refresh Rate (Hz)	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Horizontal Sync Polarity (TTL)	Vertical Sync Polarity (TTL)	Pixel Rate (MHz)	Remark
1	640 x 480	60	31.469	59.941	N	N	25.175	Windows
2	640 x 480	75	37.500	75.000	N	N	31.500	Windows
3	800 x 600	60	37.879	60.317	P	P	40.000	Windows
4	800 x 600	72	48.077	72.188	P	P	50.000	Windows
5	800 x 600	75	46.875	75.000	P	P	49.500	Windows
6	1024 x 768	60	48.363	60.004	N	N	65.000	Windows
7	1024 x 768	70	56.476	70.069	N	N	75.000	Windows
8	1024 x 768	75	60.023	75.029	P	P	78.750	Windows
9	720 x 400	70	31.469	70.087	N	P	28.322	DOS
10	©1920 x 1080	60	66.587	59.934	P	N	138.50	Windows

Note: P: positive, N: negative, ©: Primary mode

Resolution through RGB Input

If your PC supports VESA Reduce Blanking timing via the VGA card drive program (usually offered by the VGA Card Manufacturer), your TV set is equipped to have the 1920x1080 resolution display through this connection using the following timing 138.5MHz. The following parameters are often the values required by the software or programs to set up the display:

Parameters	Horizontal Values (Pixels)	Vertical Values (Lines)
Address	1920	1080
Front Porch	48	3
Sync Width	32	5
Back Porch	80	23
Total	2080	1111
Frequency	66.587 KHz	59.934 Hz
Sync Polarity	P	N
Pixel Rate (MHz)	138.5	
Refresh Rate (Hz)	60	

Warranty

ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

(Covers units purchased as new in United States and Puerto Rico Only)

VIZIO provides a warranty to the original purchaser of its products against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a VIZIO product is defective within the warranty period, VIZIO will either repair or replace the unit at its sole option and discretion.

To obtain warranty service, contact VIZIO Technical Support via email: TechSupport@VIZIO.com or via phone at 877 MY VIZIO (877.698.4946) from 6:00AM to 9:00PM Monday through Friday and 8:00AM to 4:00PM Saturday and Sunday, Pacific Time, or visit www.VIZIO.com. Proof of purchase in the form of a purchase receipt or copy thereof is required.

Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and units may be new or recertified at VIZIO's option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is later.

Types of Service

Units 30" or larger will usually be serviced in-home. In-home service requires complete and easy access to the unit and does not include de-installation or re-installation of the product. However, in some cases, it may be necessary to send the unit to a VIZIO service center. VIZIO will cover the transportation charges to and from the same customer location.

Units less than 30" must be sent to a VIZIO service center. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. **PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY UNIT IN FOR SERVICE.**

Any returns to VIZIO's service centers must utilize either the original carton box and shipping material or a replacement box and material provided by VIZIO. VIZIO technical support will provide instructions for packing and shipping the unit to the VIZIO service center.

Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. Items not covered include but are not limited to cosmetic damage, normal wear and tear, misuse, signal issues, power surges, and damages from shipping, acts of God, any sort of customer misuse, installation, customer modifications, adjustments, and set-up issues. Units with unreadable or removed serial numbers, "image burn-in", and routine maintenance are not covered. This warranty does not cover products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE DISPLAY. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE. CHECK www.VIZIO.com FOR THE MOST CURRENT VERSION.

Personal Data

If your VIZIO product is capable of storing personal data and other information, **ALL CONTENTS AND INFORMATION WILL BE DELETED IN THE COURSE OF SOME IN-HOME AND ALL SHIP-IN WARRANTY SERVICE.** If this occurs, your product will be restored to you configured **as originally purchased.** You will be responsible for restoring all applicable data and passwords. Recovery and reinstallation of user data is not covered under this Limited Warranty. **In order to protect your personal information, VIZIO recommends that you always clear all personal information from the unit before it is serviced, regardless of the servicer.**

ZERO BRIGHT PIXEL DEFECT GUARANTEE

This policy covers "zero bright pixel" defects for the duration of the limited "ONE YEAR WARRANTY" on select new product purchases. To determine if this guarantee applies to your product, refer to the "DETAILS" tab of the model's product information page (www.VIZIO.com) or look for the "zero bright pixel" guarantee on the box.

Index

16:9	30	Jag Wheel	12
4:3	30	Daylight Savings setting	39
Accessories	9	DTV Transition	5
Adjustments		DVD Player	
Advanced	29	Connecting	22
Advanced Adjustments	29	DVI	
Ambient Light Sensor	33	Cable Box	20
Antenna	19	Satellite Box	20
Aspect Ratio	30	EPG	18
Audio Menu		Getting Started	16
Advanced Audio	34	Grounding	4
Analog Audio Out adjustments	34	GUIDE Button	18
Audio Mode adjustments	34	HDMI	19
Balance adjustments	34	HDTV Location	10
Digital Audio Out	34	Help Menu	
Equalizer adjustments	35	Reset All Settings	41
Lip Sync adjustments	34	Setup Wizard	41
Reset Audio Mode	35	System Info	41
Speaker adjustments	34	Help Menu	41
SRS TruVolume	34	Home Theater	
SRS TSXD (surround sound) adjustments	34	Connecting	25
AV connector	19	Horizontal/Vertical Position adjustments	32
Blackbars	30	Input Source	
Blocking Channels	37	Choosing	17
Brightness	32	Inputs	
Cable Box		Antenna	4
Connecting	20	Connectors	19
CC Closed Caption	31	Jag Wheel	12
CEC	39	Maintenance of TV	58
Cleaning	58	Media Menu	
Coaxial connection		Duration	28, 40
Satellite box	24	Info	28, 40
Coaxial Connection		Repeat	28, 40
Cable TV	24	Slideshow	28, 40
Color	32	Slideshow Effect	28, 40
Component Connector	19	Sort By	28, 40
Composite Connector	19	Thumbnail Size	28, 40
Computer		Media Menu	40
Connecting	26	Menu Language	39
Preset Resolutions	65	Name Input	36
Resolution through RGB	65	OSD	29
Connecting		CC Menu	31
Computer	26	Help Menu	41
RGB	26	Input Menu	29
VGA	26	Media Menu	40
Connecting Equipment		Picture Menu	31
Cable	20	Settings Menu	35
DVD	22	Sleep Timer Menu	31
Home Theater	25	Wide Menu	30
Rear Panel Connections	13	Parental Controls	
Satellite Box	20	Alt Rating Region	38
Sound system	25	Block Unrated TV	38
VCR	24	Canadian English Rating	38
Video Camera	24	Canadian French Rating	38
Contents	9	Change the Password	39
Contrast	32	Channel Block	37
Controls		Reset Locks	39
Front Panel	12	USA Movie Rating	38

USA TV Rating	37	Satellite Box	
Parental Controls	37	Connecting	20
Password	39	Search for channels	35
Photos		Setting Up	10
Adjusting Settings	28	Settings Menu	
Viewing	27	Audio	34, 36
Picture		CEC	39
Reset Picture Mode	33	Menu Language	39
Picture Menu	31	Parental Controls Menu	37
Adaptive Luma	33	Time & Local Settings	39
Advanced Video	33	Tuner	35
Ambient Light Sensor	33	Setup Wizard	16
Backlight	31	Sharpness	32
Backlight Control	33	Skip Channel	36
Brightness	32	Slideshow	
Color	32	Duration	28, 40
Color Enhancement	33	Effect	28, 40
Color Temperature	33	Mode	28, 40
Contrast	32	Repeat	28, 40
Film Mode	33	Specifications	62
Noise Reduction	33	Technical Support	61
Picture Mode	31	Time Zone setting	39
Sharpness	32	Tint	32
Tint	32	Troubleshooting	58
Pictures		Tuner Menu	
Adjusting Settings	28	Analog MTS	36
Create Slideshow	28, 40	Auto Search	35
Info	28, 40	Skip Channel	36
Sort	28, 40	Tuner Mode	35
Thumbnail Size	28, 40	TV Menu	29
Viewing	27	Partial Channel Search	35
Remote		TV Stand	
Programming Satellite Box	43	Attaching	10
Remote Control	14	USB Port	27
Batteries	14	VCR	
Buttons	15	Connecting	24
Codes	43	Video Camera	
Precautions	14	Connecting	24
Programming	42	Wall mounting	11
Programming Cable Box	43	Warranty	66
Programming DVD Player	42	Watching TV	
Programming Home Theater System	42	Getting your Programs	17
Range	14	Program Information	18
RGB	19	Wide	30
Safety Instructions	2	Wizard	41