


LONDON


miatone

# QUICK START GUIDE

## PACKAGE CONTENTS

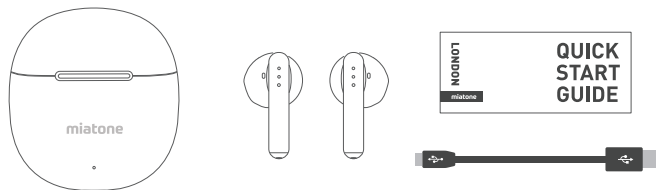


## HOW TO WEAR

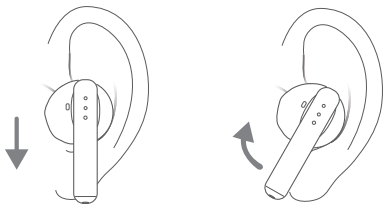


Insert the earbuds directed towards your ear canal.

Twist gently until the earbuds fit comfortably and get better sound experience.


## FIRST USAGE

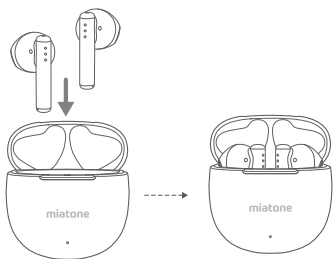


## POWER ON & PARING

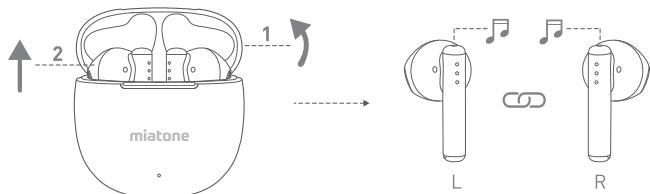


## CONNECTED

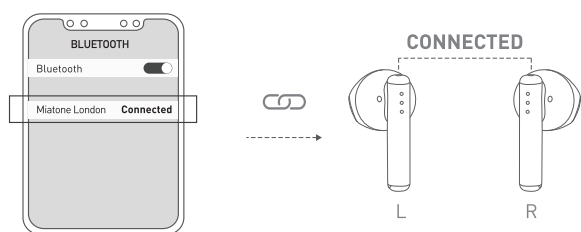


## CONTROL

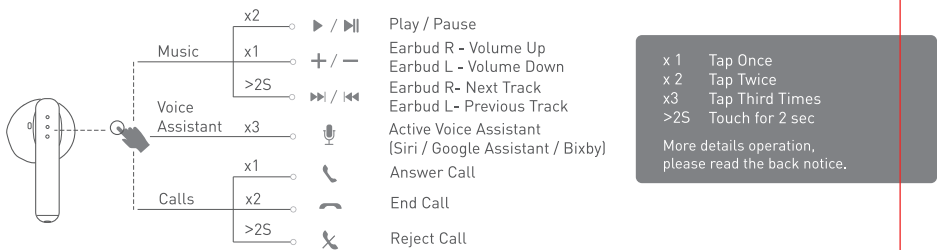

## POWER OFF

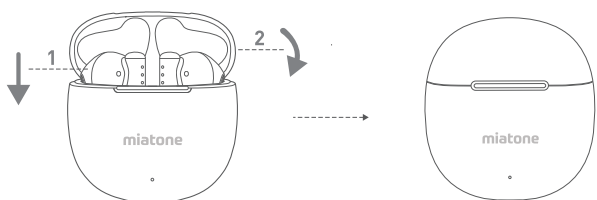


## CHARGING

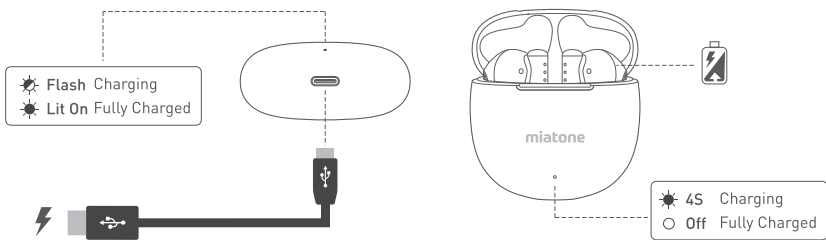


## MANUAL CONTROL

① POWER ON

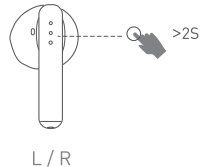

L / R

② POWER OFF

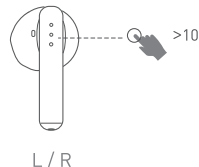

L / R

\*When case is out of battery, please power on or off the earbuds by manual operation.\*

## SPECIFICATION

Model: Miatone London  
Bluetooth Version: V5.3  
Wireless Working Frequency: 2.402-2.480GHz  
Wireless Transmission Distance: Up to 33 ft(10M)  
Charging Time: Approx 2 hrs  
Charging: DC 5 V ± 0.5 A  
Driver Size: 13mm  
Impedance: 32 ohm ± 15%  
Sensitivity: 102 ± 3dB  
Maximum Operation temperature: 46°C

### Important Notice for Charging

- Before charging, be sure the TWS earbuds are at room temperature, between 46° F (8° C) and 102° F (39° C).
- Use this product only with an agency-approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) which support 5V / 0.5 A .
- Use the included charging cable to charge the TWS earbuds.
- For the first use, please fully charge the product.

2. You should charge the case when you see low battery tips from the case, the indicator will flash 4 times in green and then be off. It's recommended to charge your case on time

**The earbuds won't power on or off automatically when the case is out of battery.**

3. To prolong battery lifes, you should fully charge the case at least once every 3 months. Battery life varies based on use and settings.

### Troubleshooting

- Charge the earbuds and the charging case.
- Power on the earbuds.
- Make sure your mobile device supports Bluetooth connections.
- Put your mobile device closer to the earbuds and away from any interference or obstructions.
- Increase the volume on the earbuds per operation, or increase volume from your mobile or other connected device.
- Try to connect another mobile or devices support Bluetooth connections.

earbuds are out of battery. Place both earbuds in the charging case and then charge the case. The indicator of case will flash in green while charging and indicator will be lit green once fully charged.

**Q: Earbuds don't connect with mobile device.**

Delete the earbuds' pairing name from the Bluetooth list on your device, including any duplicate listings. Power on the earbuds according to the above operation to finish the connection with your mobile.

**Q: Earbuds won't power on.**

Check whether the case has a battery. If not, power on the earbuds manually (touch the button for 2 secs) . In case, you can't hear the prompt sound from earbuds that means

**Q: Two earbuds don't pair.**


Place both earbuds in the charging and close the lid. Then open the lid and take them from the case, they will pair automatically.

### Troubleshooting

**Q: Earbuds can't be charged.**

- Check whether the case has battery. If not, charge the case by included cable.
- Clean the charging contact of case and earbuds by dry, soft cotton swab or equivalent.

**Clean contact by dry, soft cotton swab.**

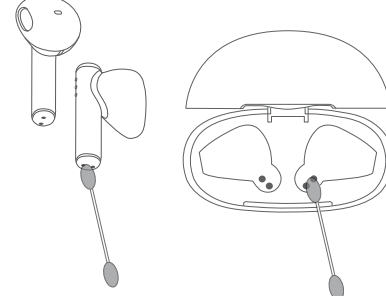

**Q: No sound from earbuds.**

- Make sure the volume is turned up.
- Make sure audio is playing.
- Play audio from a different app or music server.
- Play audio from download list on your device.
- Restart your mobile device.
- Place earbuds back into case, take them out of the case and put into your ears again.

### Care and Maintenance



This logo means that no naked flames, such as a candle can be placed on or near the device.



The electrical and electronic equipment are part of a separate collection. Do not throw electrical or electronic equipment away with unsorted municipal waste, but ensure that it is collected separately. Collection systems and locations

- (Sorting centres, rubbish dumps) are provided for you by local councils and retailers. By entrusting your end-of-life product to the proper recycling process, you are helping to protect the environment and your health.
- Use this device in temperate climates only.
- This device may be used by children aged 8 years or older and by those with reduced physical, sensory or mental abilities, or those lacking experience or knowledge,

provided they are correctly supervised, or if the instructions related to the use of the device have been adequately given and if the risks involved have been understood. Children must not play with this device. Children should not clean or maintain the device without supervision.

5. Always unplug the device before cleaning it.

6. Clean the device with a soft dry cloth only. Never use solvents.

7. Attention should be drawn to the environmental aspects of battery disposal.

8. The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

### FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

Electromagnetic Compatibility Regulations 2016.  
Electrical Equipment (Safety) Regulations 2016.

### EC Declaration

This product complies with the below listed UK Directives.

Radio Equipment Regulations 2017

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The Batteries and Accumulators (Placing on the Market) Regulations 2008 (as amended) and the Waste Batteries and Accumulators Regulations 2009 (as amended).

FCC ID: 2AWG3-JSU21



Copyright © 2023 MIATONE Inc. All rights reserved.  
Bluetooth is a registered trademark of Bluetooth SIG, Inc.  
MIATONE products are registered trademark of MIATONE in the US.  
**Service contact: support@miatone.com**  
MIATONE Inc. Oxnard, CA 93022

[www.miatone.com](http://www.miatone.com)