



CONTROLLER 63

WIRELESS VARIABLE CONTROLLER

USER MANUAL

WELCOME

Thank you for choosing AC Infinity. We are committed to product quality and friendly customer service. If you have any questions or suggestions, please don't hesitate to [contact](#) us. Visit www.acinfinity.com and click contact for our contact information.

EMAIL

support@acinfinity.com

WEB

www.acinfinity.com

LOCATION

Los Angeles, CA

MANUAL CODE WSC2011X1

PRODUCT

CONTROLLER 63

MODEL

CTR63A

UPC-A

819137021730

PRODUCT CONTENTS



WIRELESS VARIABLE
CONTROLLER
(x1)



WIRELESS
RECEIVER
(x1)



MOLEX
ADAPTER
(x1)



AAA
BATTERIES
(x2)

 


WOOD SCREWS
(WALL MOUNT)
(x2)

INSTALLATION

STEP 1

Plug your device's USB type-C connector into the wireless receiver.




FOR DEVICES WITH MOLEX CONNECTORS: If your device uses a 4-pin molex connector instead of USB type-C, please use the included molex adapter. Plug the device's 4-pin molex connector into the adapter, then plug the wireless receiver into the USB type-C end of the adapter.



STEP 2

 Insert the two AAA batteries into the wireless receiver controller.

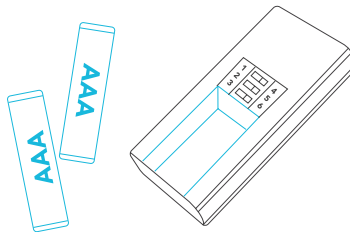


INSTALLATION

STEP 3

Adjust the sliders on the controller and receiver so that their numbers match. Close the controller's battery door when you are finished. The receiver's indicator light will flash when connected.

Any number of devices may be controlled using the same controller, as long as the fans' sliders match the controller's.

 Any number of controllers may control the same device, as long as the controllers' sliders match the fan's.

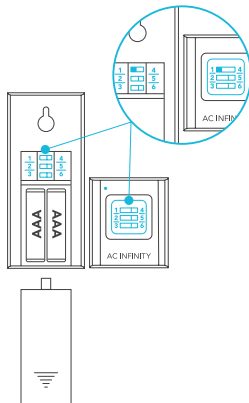

SPEED CONTROLLER

LIGHT INDICATOR

Features ten LED lights to signify the current level. The LEDs will briefly light up before shutting off. Pressing the button will light up the LEDs.

 
ON

Press the button will turn your device on at level 1. Continue pressing it to cycle through the ten device levels.

OFF

Hold the button to turn your device off. Press it again to return the device level back to the last setting.

Pressing the button after speed 10 will also turn your device off.

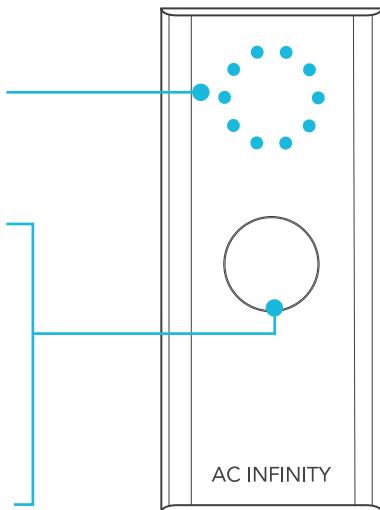

WARRANTY

This warranty program is our commitment to you, the product sold by AC Infinity will be free from defects in manufacturing for a period of two years from the date of purchase. If a product is found to have a defect in material or workmanship, we will take the appropriate actions defined in this warranty to resolve any issues.

The warranty program applies to any order, purchase, receipt, or use of any products sold by AC Infinity or our authorized dealerships. The program covers products that have become defective, malfunctioned, or expressively if the product becomes unusable. The warranty program goes into effect on the date of purchase. The program will expire two years from the date of purchase. If your product becomes defective during that period, AC Infinity will replace your product with a new one or issue you a full refund.

The warranty program does not cover abuse or misuse. This includes physical damage, submersion of the product in water, incorrect Installation such as wrong voltage input, and misuse for any reason other than intended purposes. AC Infinity is not responsible for consequential loss or incidental damages of any nature caused by the product. We will not warrant damage from normal wear such as scratches and dings.

To initiate a product warranty claim, please contact our customer service team at support@acinfinity.com



If you have any issues with this product, contact us and we'll happily resolve your problem or issue a full refund

COPYRIGHT © 2021 AC INFINITY INC. ALL RIGHTS RESERVED

No part of the materials including graphics or logos available in this booklet may be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine readable form, in whole or in part, without specific permission from AC Infinity Inc.

www.acinfinity.com