


Operating Instructions - Dryer Zanussi ZDP7203PZ

Control panel

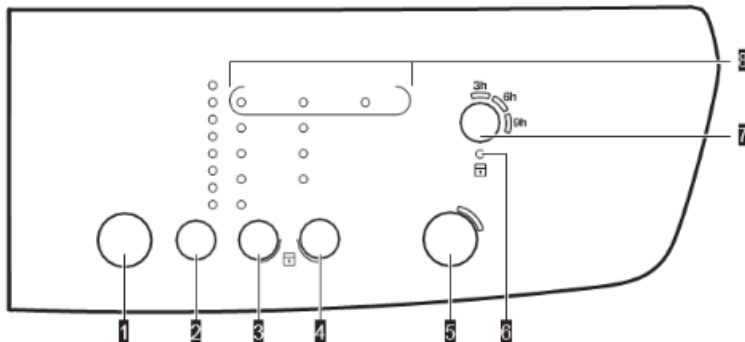

1. On / Off button ①
2. Programme selection touchpad **P**
3. Dryness selection touchpad ☀️
4. Options selection touchpad ☑️
5. Start/Pause touchpad ▶️||
6. Child lock indicator 🔒
7. Delay touchpad ⌚
8. Indicators: Filter 🌐, Condenser ➡️ Tank

Programme table




Programmes	Type of load	Load (max.) / Fabric mark
Cottons	Drying level: ☀️ Extra Dry, ☀️ Strong Dry, ☀️ Cupboard Dry, ☀️ Iron Dry	7kg/☀️☀️
Synthetics	Drying level: ☀️ Extra Dry, ☀️ Cupboard Dry ³⁾ , ☀️ Iron Dry	3kg/☀️☀️☀️
Mix	Cotton and synthetic fabrics. Low temperature programme. Delicate programme with warm air.	8kg/☀️☀️☀️
Easy Iron	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger.	1kg (or 5 shirts)/☀️☀️
Wool	Wool fabrics. Gentle drying washable woollens. Remove immediately the items when the programme is completed.	1kg
Duvet	To dry one or two duvet and pillows (with feather, down or synthetic fillings).	3kg/☀️☀️☀️
Refresh	Refreshing textiles that were in storage.	1kg
Time 30 min	Time programme to dry individual items of laundry.	1kg/☀️☀️☀️

Options

Dryness ☀️

This function helps to get the laundry more dried. There are 4 possible selections:

- ☀️ Extra Dry

-  Strong Dry (for Cotton only)
-  Cupboard Dry
-  Iron Dry


Anticrease 90min

Extends of 60 minutes the standard anticrease phase (30 minutes) at the end of the drying cycle. This function prevents the laundry from creasing.

Time 60min

Extends of 30 minutes the Time 30min programme.

Delicates

With this option you can set a delicate drying programme that has a low temperature. Use this option with fabrics that have the symbol  on the fabric label (e.g. acrylic, viscose).

Start a programme without delay start

1. Prepare the laundry and load the appliance.
2. Press the on/off button to activate the appliance.
3. Set the correct programme and options for the type of load.
4. Press the Start/Pause touchpad.
5. The programme starts.

Starting a programme with delay start

1. Set the correct programme and options for the type of load.
2. Press the delay start button again and again as necessary.
3. You can delay the start of a programme by 3, 6 or 9 hours.
4. Press the Start/Pause button.

Change a programme

1. Press the on/off button to deactivate appliance
2. Press the on/off button to activate the appliance.
3. Set the programme.

At the end of the programme

When the programme is completed:

- An intermittent acoustic signal operates.
- The indicators Filter and Tank comes on.
- The Start/Pause indicator is on.

The appliance continues to operate with the crease guard phase for approximately 30 minutes. This removes creases from your laundry.