
 


HARMONY™ AVIATION

Quick Start Guide

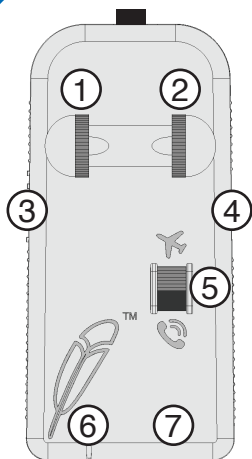

- 1) Left Ear Audio Volume
- 2) Right Ear Audio Volume
- 3) Mono/Stereo Source Select
1-bar for Mono Panels, 2-bar for Stereo
- 4) Microphone Gain
Adjusts Microphone Sensitivity & Volume
- 5) Aircraft / Auxiliary Audio
Microphone Routing Select
Device Microphone Output is Connected
- 6) Headphone Jack (*Pro only*)
Connect HARMONY Headphone Cable
- 7) Auxiliary Audio Jack
Connect Additional Audio Device



(*Pro Only*) Connect the HARMONY Headphone Cable to the Aviation Cable by aligning the Red Marks and inserting the plug, locking in place.

Disconnect by grabbing the plug by the Sliding Sleeve and pulling away from the Aviation Cable (retracts locks, then slides apart).

Position the Microphone so the White Dot is pointed directly at your mouth. The mic should be close enough that the windscreen barely touches your lips when pursed.





Customer Support
+1 (719) 531-7226
support@uflymike.com

Full User Guide:



Scan with your camera app
uflymike.com/downloads/

TROUBLESHOOTING

<i>No Incoming Audio or Audio in Only One ear</i>	• Turn up Left & Right Volume Controls • Clean and fully seat all plugs • Set Mono/Stereo Source Select to the mono position (<i>1-bar</i>) • Replace/Charge headphone battery • Test headphone functionality with another device separate from the HARMONY
<i>Weak or No Transmission Volume</i>	• Reposition Microphone Boom • Set Microphone Routing Select to the "Aircraft" position • (<i>Pro Only</i>) Set I/O Select to the "I" position (<i>on the back of the pill shaped in-line control, on the cord just below the headphone</i>) • Increase the Microphone Gain
<i>Excess Noise in the Microphone Output</i>	• Reposition Microphone Boom • Reduce the Microphone Gain
<i>Can Not Hear Audio from the Auxiliary Jack</i>	• Verify audio is currently playing on the attached device • Turn up the volume using the controls on the attached device • Turn up Left & Right Volume Controls • Clean and fully seat all plugs