

USER

B. OPERATION

GUIDANCE Press the switch to check the storage level of Lenercom Jump Starter

Unlit solid 2 solid 3 solid 4 solid Storage leve 0% 25% 509% 75% 100%

The indicator will flash one by one during the period of charging. Different number of solid indicators show different storage level of Lenercom Jump Starter. All indicators light off when the charging is paused or completed.

Lenercom Jump Starter Charging Instruction: . Plug the suitable home adaptor into the universal socket Connect the USB-C connector to the Lenercom Jump Starter host



Jump start 12V vehicle Instruction: Jump start 12V venicle instruction.

1. Connect the blue plug fully seated into the host and make sure the Cable Indicatoris off 2. Connect Red Clamp to the positive(+)batte terminal, Black Clamp to the negative (-) battery 3.Operate following the instruction of the Cable

4 Start the vehicle 5. When the vehicle is started, remove the jumper cable from the vehicle battery. Leave the vehicle's engine running Charging Cell Phone or Tablet Instruction: 1. Plug the switch cable to Quick Charge output port. 2. Select appropriate connector and connect it to yourmobile phones 3. Touch the switch button, it can recognise eletronic products's suitable parameters, start to charge for mobile phone/tabletc etc. For power supply to vehicle products or electronics 1. Plug the optional switch cable to 15V 10Aoutput port. Connect the optional switch cable and vehicle product or

Press the switch button to power supply.

sOS. off) if you press slightly. C. | PARTS | LIST: USB Type-AWall Charger ntelligent Jumper Cable 2V Car Cigarette LighterAdapte SB Type-Cto C Fast Charging Cable EVA Carrying Case JSB Type-Ato C Charging Cable User Manua TECHNICAL SPECIFICATIONS: Dimension:322x101x45mm Battery Capacity:24000mAh(88.8Wh) Output: USB-C(5V=3A); Quick Charge (5V=3A; 9V=2A; 12V-1.5A) 5V=2.4A;15V=10A;12V jump start Input: USB-C(5V=3A) Full charging time: About 4 hours Start current: 1500A Peak current:3000A Operating temperature:-20℃-60℃ Dustproof and waterproof grade: IP65

Press the switch 3 seconds to start the LED flash light

There are 4 modes of LED light appear in order (normal.strobe.

LED flash light

REVERSE RED LIGHT on:

Q. How long time to full charge the Lenercom Jump Starter? 4. To reduce the risk of injury, close supervision is necessary A. Approx. 4 hours through the USB-C input port. when the product is used near children. 5. Jump for 12V vehicles, it would be hazard if for other jumping. Q. How many times can this appliance charge for my cell phone? 6. Use of an attachment not recommended or sold by power pack A. Depend on the battery capacity of your cell phone, TakeiPhone6 as manufacturer may result in a riskoffire, electric shock, or example, can full charging 8 times injury to persons.
7. Do not connect the two clamps together. Q. How many times can this appliance jump startthe 3.OL Gasoline vehicle if it n full battery? A. Approx, 25 times 8. Before starting, ensure that there is no corrosion at the interface and no foreign matter adheres. Connect the main Q. What's the lifetime of Lenercom Jump Starter? unit to the battery holdertightly to avoid the impact of the A. Usually 3-5 years in normal condition interface connection

9. After successfully starting the car, please remove the product Q. How long the storage of battery will remain? A. 6-12 months, however, we suggest to recharge it every 3 months from the car battery within 30s,otherwise it may cause 10.Do not Jump Start more than 3 times in a row, It could damage the unit by overheating. When starting up multiple times, each F. TROUBLE SHOOTING: start-up interval is two minutes. 11. Don't use the jumper cable to charge other equipments 12.Do not store in locations where the temperature may exceed No response when Low voltage protection Polug the adaptor into the pressing the switch Lenercom Jump Starte USB-C input port to s started aetivl 13. Charge only at ambient temperature between 0°C and 45°C. 14.Do not expose the product to rain or water 15. Do not expose product to extreme heat or fire. AND HARMFULSUBSTANCES: G. TOXIC 16.Do not operate the product in explosive atmospheres, such Composition and amount of toxic and harmful substances in Lenercom as in the presence of flammableliquids, gases or dust, 17. Make sure someone should be within range of your voice or Jump Starter close enough to come to your aid when working with batteries. Pb Hg Cd Cr (Vi) PBB PBDE 18. Remove personalmetalitems like rings, bracelets 0 0 0 0 0 0 necklaces, etc. When using the products.

19. To reduce risk of damage to the electric plug and cord, pul 0: Indicate allhomogeneous materials' hazardous substances content are the plug rather than the cord when disconnecting the power oelow the MCV limit specified in the Standard 2002/95/EC(RoHs) 20. Do not use a battery pack or appliance that is damaged or

Q. How to turn off this appliance?

A. This appliance will power off automatically when no load or charging is

H. WARNING:

3. Do not use as a toy.

1. Read the instruction manual carefully before using this unit

modified. Damaged or modified batteries may exhibit

2.Do not use in place of a vehicle battery.

unpredictable behavior resulting in fire, explosion or risk of 21. Charge only using the charger provided with this unit or the same standard with the host input port.

22. After jump start the car, don't charge this unit immediately. 23.Do not use the unit to jump start a vehicle while charging the

24. Under extreme conditions, the battery may leak. If a liquidis

noticed coming from product do not handle with bare hands. In case of skin contact wash with soap and waterimmediately. If liquid comes in contact with eyes rinse eyes with cold running water for at least 10 minutes and get medical attention

25. Product contains lithium based battery, at end of product life dispose of product according tolocal regulation

.WARRANTY INFORMATION:
1.We offer a limited warranty for this product against any defects in material and workmanship for a period of one year from the date of purchase by the end user/consumer. The conditions of the warranty are as follows:

2. The warranty is only valid upon presentation of the origina receipt(from dealer/retailer) by the original purchaser with the oroduct to be renaired orreplaced.

3. The warranty is void if the serial number, date of purchase and label has been removed

4. The warranty does not cover damage or product failure resulting from normal wear and tear, physical abuse, improper installation, misuse, modification or repairs by unauthorized hird parties.

5.We do not assume responsibility for any loss or damage ncurred during shipment or as a result of a force majeure.

6. We are not liable for any incidental or consequential damages arising from the use or misuse of this product.

7. All warranty claims are limited to repair or replacement of the

defective product and at the sole discretion ofus

8. If we repair or replace the product, the product will be covered for the remaining time of the original warranty period Repair or replacement may involve the use of reconditioned units which are equivalent in function. Replaced part or product becomes he property of us.

9. Consumable components such as batteries are not covered by the warranty

CEFCis

Made in China