

125 mm

Welcome to selected the Smart Gamepad U6.  
The smart gamepad U6, is a six-in-one smart gamepad.

#### 1. Gamepad function:

Android game mode, PC (keyboard / mouse) game mode, PC360 game mode.

#### 2. Wireless mouse function:

Touchpad mouse function, one finger click is mouse left key function, double fingers click is mouse right key function, double fingers move up and down is scroll bar.

#### 3. Wireless microphone function:

In the U6 power on state, the microphone function remains open, can transmit sound to the device.

#### 4. Wireless headphone function:

Can be sent the voice from computer equipment, Android box, Smart TV to U6, through the headphone into the ear.

#### 5. Wireless remote control:

Standard Android function key codes, can realize to control the common function of Android box, Smart TV.


#### 6. Wireless keyboard function:

QWERTY keyboard, to meet the text, letter and symbol input.


#### Note:

Point 2~6 function is limited to Android game mode and PC (keyboard / mouse) game mode. U6 is a pure game handle function under the PC360 game mode.

#### Key Layout-Fornt :

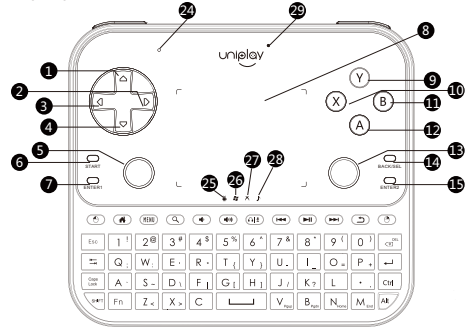

#### Key Layout-Back :

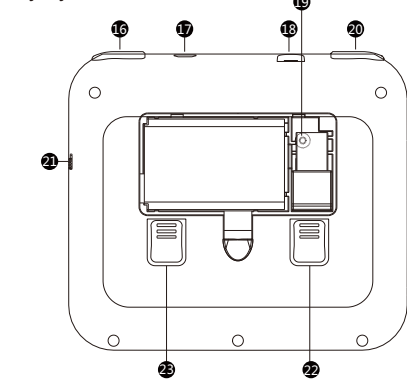

-1-

-2-

#### The key indication and hole position indication

NO.	Key Mark	Key Function		
		Android Game Mode	PC (Keyboard/ Mouse) Game Mode	PC 360 Game Mode
1	Up	Up	Up	Up
2	Right	Right	Right	Right
3	Left	Left	Left	Left
4	Down	Down	Down	Down
5	Left Joystick Up, down, left, Right	PC Keyboard W, S, A, D	Left Joystick Up, down, left, Right	
6	Game Function key START	PC Keyboard O	Game Function key START	
7	Game Function key LS (L3)	PC Keyboard C	Game Function key LS (L3)	
8		Touchpad Area		
9	Game Function key Y	PC Keyboard 4	Game Function key Y	
10	Game Function key X	PC Keyboard 3	Game Function key X	
11	Game Function key B	PC Keyboard 2	Game Function key B	
12	Game Function key A	PC Keyboard 1	Game Function key A	
13	Right Joystick Up, down, left, Right	PC Keyboard I / K / J / L	Right Joystick Up, down, left, Right	
14	Game Function Back, Is Also U6 Game Mode Select	PC Keyboard 9, Is Also U6 Game Mode Select	Game Function Back, Is Also U6 Game Mode Select	
15	Game Function key RS (R3)	PC Keyboard N	Game Function key RS (R3)	
16	Game Function key RB (R1)	PC Keyboard 6	Game Function key RB (R1)	
17		Micro USB charging port		
18		Headphone port		

-3-

NO.	Key Mark	Key Function		
		Android Game Mode	PC (Keyboard/ Mouse) Game Mode	PC 360 Game Mode
19		Pairing Key		
20		Game Function key LB (L1)	PC Keyboard 5	Game Function key LB (L1)
21		U6 Power on/off		
22		Game Function key LT (L2)	PC Keyboard 7	Game Function key LT (L2)
23		Game Function key RT (R2)	PC Keyboard 8	Game Function key RT (R2)
24		MIC		

#### U6 indicator description

NO.	KEY MARK	LED name	Color	Function
25		Android mode LED	Blue	Android game mode/Low voltage mode indicator
26		PC mode LED	Blue	PC game mode indicator
27		PC360 LED	Blue	PC360 game mode indicator
28		Two-way Voice LED	Blue	Two-way voice working status indicator
29		Charge LED	Red	Charge status indicator

#### Instruction:

1. No. 25 LED lights up, indicating that U6 is in Android mode. At the same time one-way voice function, touch pad function, wireless remote and keyboard function supported.  
No. 25 LED flash means Low voltage indication.  
2. No. 26 LED lights up, indicating that U6 is in PC mode. At the same time one-way voice function, touch pad function, wireless remote and keyboard function supported.  
3. No. 27 LED lights up, indicating that U6 is in PC360 gaming mode, only gaming supported, do not support other function  
4. No. 28 LED will light up together with Android LED or PC LED, indicates that U6 in Android/PC mode, and 2-way voice function activated, Touch pad function not working at the current mode.

-4-

5. No. 29 LED light up, indicates U6 is on charging, No.29 LED turn off when U6 is fully charged.

#### Gamepad U6 basic instructions:

##### Connect the device

1. Take out the USB dongle from the battery compartment and insert into the device (some devices, such as Android PAD/Phone, need to be connected with OTG lines). The USB dongle is plug and play, and no installation driver is required.  
2. Power on then Android LED is light up, it can work now.



The power switch of U6

##### Re-pairing methods:

The gamepad U6 has been paired with the USB receiver one-on-one at the factory.


If you find that the U6 is not paired with the USB receiver, or if it needs to be re-paired for other reasons, please follow the steps below to re-pair:

There is a Pairing button in the battery compartment.

1. Unplug the USB receiver from the device, press any button on the QWERTY keyboard, the four blue LED are flashing, press the pairing key, the four blue LED blink rapidly to indicate that the U6 enters the pairing mode  
2. Plug the USB receiver into the device, after the four blue LED flash rapidly a few seconds change to the Android light Solid to indicate successful pairing.

##### Note:

The effective time of pairing is 10s. If the pairing mode can not be completed within 10s. It indicates that the pairing failed after the four blue LED flashes 20s and goes off.  
Pairing distance: The recommended distance between the receiver and the U6 is within 30cm.

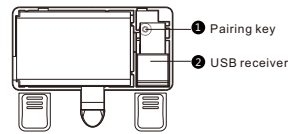

USB receiver and pairing keys inside the battery compartment

-5-

#### Gamepad functional instructions

Gamepad U6 has three game modes, including Android, PC (keyboard / mouse) and PC360, boot default is Android game mode.

##### Game mode switching method is as follows:

1. Press the **BACK / SEL** key about 3s, the current mode of work indicator (such as Android indicator light) from flashing to constant light, means entering the game mode switch state.  
2. Then each time you press the **BACK/SEL** button, the game mode switches forward one, the corresponding mode LED will light simultaneously.  
3. After switching to the desired game mode, wait for 3 seconds and the four blue LEDs flash until the LED for the current game mode is lit, indicating that the game mode was successfully switched.

Android Game Mode	Connect to Android device (Note: some Android devices such as Android PAD/Phone, need to connect with OTG line. The key code of U6 is the standard HID CODE.)
PC(keyboard/ Mouse) Game Mode	Connected to the PC device. Because of the game function keys are PC keyboard key, need to set up in the game interface during use, so you can use the touch mouse function, ENTER, Esc and other keys to match the Settings.
PC360 Game Mode	Connected to the PC device The PC360 mode is Microsoft's official standard gamepad mode, in which the joystick fits in most Xbox 360 games on a PC platform.

##### Note:

About the Android mode  
1. Due to the custom systems, CPU chips, protocols and others reasons some Android devices do not support appearance settings  
2. The game function key in different Android devices may be different.  
3. Some of the Android games do not support gamepad control.

-6-

#### Wireless mouse function:

U6 in Android mode or PC game mode (is one-way voice mode), the touch mouse function remains on.

##### 1. The cursor position:

A finger swiping in the touchpad area can move the cursor to the desired location, precise positioning, high sensitivity, heart and move.

##### 2. Wheel function:

When two fingers slide up and down, the mouse wheel will also slide up and down.

##### 3. Mouse left button:

A finger clicks the touchpad or press the Mouse left button on the keyboard.

##### 4. Mouse right button:

Two fingers click the touchpad or press the mouse right button on the keyboard.

#### Microphone/headphone function

This Smart Gamepad U6 supports two way voice function (Microphone+headphone), whatever in Android Mode or PC Mode, Microphone is on by default, which can send the voice to terminal.

If two way voice function is need, pls press the key combination **Fn+ (Alt)** to turn on, the 4 LED indicators will flash until the indicator (Android LED or PC LED) and two way voice indicator keep on, then insert the headphone and turn on one song at your device, at the same time, you can also speak by microphone, what you speak will be upload to your device. If you want to turn off two way voice function, press the key **Fn+ (Alt)** again, the microphone function still on, the two way voice indicator light off.

**Note:** When first time use the two way voice function, as the voice function of USB receiver need time to unzip, so when you press the key **Fn+ (Alt)** only the 4 LED flash until the current working mode indicator+two way voice indicator keep on, then the two way voice connection succeed.


#### Key description of QWERTY keyboard:

The gamepad is equipped with a QWERTY keyboard to meet the users to text, letters, digital input and the use of multimedia shortcuts to control the multimedia playback, volume adjustment and other needs.

1. Press grey color button can achieves the key function of gray character.  
2. In Fn state, it can outputs the key function of blue character, it means if have to output "+" characters, there need to press **Fn & [P]** at the same time to output characters "+".

-7-

3. Hold **[P]** button more than 1s can also output character "+", long press and hold the button, the gamepad is also output a character "+", won't continuous output.

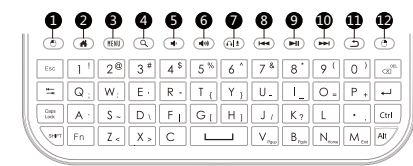


#### QWERTY keyboard function-table 1 (Multimedia shortcuts)


SN	button icon	Button functions
1		Mouse Left
2		Home
3		Menu
4		Search
5		Volume Down
6		Volume Up
7		Two-way voice switch button. Press this button and Fn at the same time, turn on/off two-way voice
8		Media Previous
9		Media Play/Pause
10		Media Next
11		Back
12		Mouse Right

-8-


#### QWERTY keyboard function-table 2 (independent keys)

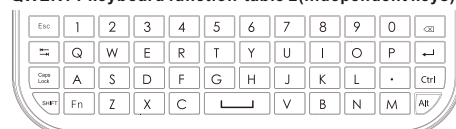

#### QWERTY keyboard function-table 3 (Press this button and Shift button at the same time to output this character, or press and hold this button more than 1 second to output this character.)

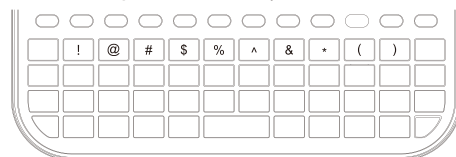

#### QWERTY keyboard function-table 4 (Press this button and Fn button at the same time to output this character, or press and hold this button more than 1 second to output this character.)

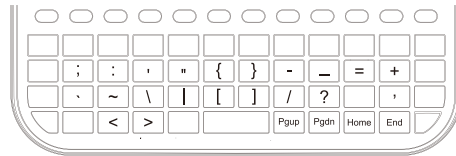

##### Note:

1. Long press the alphabets and characters of Mini keyboard (the four row button in arc area) is only send characters and letters in blue color. Except for **Esc, Tab, Caps Lock, Shift, Fn, Alt, Ctrl, Enter, Backspace**.  
2. Press **Fn + Backspace** this two button is equate to press Delete, long press **Fn + Backspace** has continuous Delete function.

-9-

#### Low voltage automatic detection function:

##### Low battery indicator:

This gamepad supports the function for battery low voltage detection and LED indication. When the battery voltage of the gamepad is less than 3.5V, the Android indicator will flashes, please recharge the gamepad timely.

##### Battery Charging:

Charging the Gamepad when Android charging indicator of the gamepad flashes to indicate that battery is low. The charging light indicator lights up constantly when charging. The charging light indicator lights out when charging finished.

##### Note:

1. This Gamepad has no power adapter with charging, please use the power adapter of the phone or connect USB port of computer and the cable packed with this Gamepad to charge  
2. The Micro USB cable is provided for the use of this Gamepad and no data transmission function.

##### Electronic property:

Power supply	800mAh rechargeable lithium battery
Rated Voltage	3.7V
Rated Current	55mA
Standby Current	33mA (If no working with 20 seconds, it will go standby)
Sleeping Current	30μA (If no press with 6 minutes, it will go sleeping)
Lowest Working Voltage	3.5V
Wireless distance	>10 meters (The maximum distance of voice transmission is 5 meters)
Charge one time can use	about 10 hours
Voice Continuous working time	about 20 hours
Continuous standby time	about half of one year

We reserve the right to make improvements to the products described in this operating instructions. The product is subject to change without notice. If the pictures and words mentioned in the instructions are different, please prevail in kind.

-10-

uniplay

## Smart Gamepad U6 Quick Start Guide



www.myuniplay.com