 
 
 
 
 
 
 




Original	Recharge
 Power	 Power
 Ambilight	 Shift + OK
 Play	 Shift + Yellow / YouTube /
 Windows	 Display / Media
 Rakuten Tv	 Shift + Blue / Prime
 Netflix	 Shift + Red / Netflix /
 Menu	 Menu / Home
 Smart Colors	 Smart / List
 Sources/Pair	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 ←	 Back / Return
 Home	 Shift + Menu /
 Tv Guide	 Guide / EPG / - / -

Original	Recharge
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol +	 Vol +
 Vol -	 Vol -
 Exit/TV	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1





Original	Recharge
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Li st	Shi ft + Smart / Li st
Opt i ons	Set up / OPT /

Original	Recharge

