 
 
 
 




Original	Recharge	Original	Recharge
 Power	 Power	 <<	 << / Tune-
 Ambilight	 Shift + OK	 Play	 Play / Slow
 Play	 Shift + YouTube /	 >>	 >> / Tune+
 Windows	 Display / Media	 Stop	 Stop / Hold
 Rakuten Tv	 Shift + Blue / Prime	 Pause	 Pause / Step / Freeze
 Netflix	 Shift + Red / Netflix /	 Rec	 Rec / Rec Mode
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Smart Colors	 Smart / List	 Green	 Green / APP / Repeat
 Sources/Pair	 AV / Input / RDS	 Yellow	 Yellow / YouTube / Repeat
 Up	 Up	 Blue	 Blue / Prime Video / Random
 Down	 Down	 Vol +	 Vol +
 Left	 Left	 Vol -	 Vol -
 Right	 Right	 Exit / TV	 Exit / Cancel / Clear
 OK	 OK	 Mute	 Mute / Dimmer
 Back	 Back / Return	 CH+	 CH+ / Page+
 Home	 Shift + Menu /	 CH-	 CH- / Page-
 Tv Guide	 Guide / EPG / -/-	 1	 1





Original	Recharge
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
List	Shift + Smart / List
Options	Set up / OPT /

Original	Recharge

