



Einhell

EXPERT PLUS



Cordless Lawn Trimmer

GE-CT 18 Li-Solo

Item No.: 3411172

Ident No.: 21051

Bar Code: 4006825588255

The GE-CT 18 Li Solo cordless grass trimmer is a powerful tool which helps you keep your lawn looking immaculate in those places which cannot be reached by a lawn mower. Thanks to its low weight and handy size the tool provides good service for the trimming of large grounds and allotments where there is no connection to the electric power grid.

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Infinitely adjustable second handle
- Telescopic long handle, infinitely adjustable
- Motor head rotateable +/- 90° for vertical surfaces + lawn edges
- Motor head can be tilted to 5 settings - versatile working
- Flower guard - protecting flowers and trees against damage
- Compartment for 20 blades integrated in second handle
- Incl. 20 plastic blades
- Soft grip - perfect comfort
- Supplied without battery and charger (available separately)

Technical Data

- | | |
|--------------------------|----------|
| - Revolutions of knife | 8500 rpm |
| - Cutting width of knife | 24 cm |

Logistic Data

- | | |
|---------------------------------|--------------------|
| - Product weight | 1.75 kg |
| - Gross weight single packaging | 2.71 kg |
| - Dimensions single packaging | 960 x 190 x 110 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 11.7 kg |
| - Dimensions export carton | 980 x 395 x 240 mm |



TILT- AND TURNABLE



TELESCOPIC




FLOWERGUARD



1x18V BATTERY POWERED
(NOT INCLUDED)



18 V

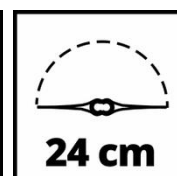

24 cm



**5 x
TILTABLE**

Available as special accessories



Spare Blade-set PXC Trimmer
Lawn Trimmer Accessory
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



Spare Blade-box PXC trimmer
Lawn Trimmer Accessory
Item No.: 3405736
Bar Code: 4006825646283
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times



trimming¹
(min.)

One Battery for All

1.5 Ah	40
2.0 Ah	55
2.5 Ah	65
3.0 Ah	80
4.0 Ah	125
5.2 Ah	160
6.0 Ah	180
8.0 Ah	250

Test setup:

1) lawn