

HEATED HOODIE INSTRUCTION MANUAL

IMPORTANT INSTRUCTION-RETAIN FOR FUTURE USE

Read the instruction manual thoroughly before use.
Do not discard- keep for future use.

Do not remove any labelling from this garment-
this contains important information.

Rated Power Input: 11W
Input: 5V --- Model: AW21



NOT TO BE
USED BY
CHILDREN
0-3 YEARS



WARNING!



ELECTRICAL
HAZARD



DO NOT
INSERT PINS

Safety Instructions

Apparel used for keeping a person warm in cold environments.
DO NOT use this product in any other way as stated for normal use.

DO NOT use this apparel with an infant, child, a helpless person,
Or anyone sensitive to heat, such as a person with poor
blood circulation.

Examine the garment frequently for signs of wear or damage
before connecting to battery pack. If any damage DO NOT plug in,
return to supplier before switching back on.

NEVER wear if inner liner is wet.

Maintain labels, these carry important information.

Heating elements are not recommended to touch
Bare skin.

DO NOT dispose of used battery packs in household rubbish
or by burning it.

Shut off power immediately if discomfort occurs. DO NOT allow
the cords to be pinched.

DO NOT store the battery pack together with metal objects
(Short circuit risk). Disconnect battery pack and allow to
cool before storing.

If improper operation of this apparel is observed, discontinue
its use immediately.

NEVER break open battery packs and chargers. Do Not attempt to
disassemble, repair or destroy the hoodie in any way.

Before connecting the power bank to the USB connector,
please ensure that your hoodie is completely dry.

Consult your medical practitioner if you have a pacemaker or
are wearing any other electronic health equipment.

Do Not use if you suffer from a serious illness of chronic health
condition such as heart disease, anaemia, low blood pressure,
paralysis, hypertension, diabetes or any other condition that causes
poor circulation.

Warning- In order to avoid the possibility of overheating or heatstroke
disconnect power bank from the garment when moving to environment
having a significantly higher temperature.

If the wearer experiences any discomfort related to overheating
or heatstroke such as dizziness, headaches, fatigue, confusion,
nausea, dehydration or muscle pain- Disconnect the battery pack
immediately.

Not to be worn if you are tired, unconscious or under the influence
of drugs, alcohol and/or medication.

Do Not sleep in hoodie.

Not suitable for use by pregnant women.

This appliance is not intended for medical use in hospitals.

Store out of the reach of children. Children should Not play with this appliance.

Cleaning and maintenance of this hoodie should not be made
by children.

When storing the appliance, allow it to cool before folding.

Not advised for children up to 14 years.

Operation Instructions

1. Insert power cable (inside the pocket) into port on battery pack, press and hold the power button for 3-5s, the apparel will begin to preheat, Power button will flash Red.
2. To set the temperature click through each setting on the power button;
Blue Light = Medium temperature
Green Light = Low temperature
Red Light = High temperature
3. For continuous use of the appliance please set to the green light.
4. To turn off, press and hold the power button, until LEDS turn off.
5. Unplug the battery if long time no use.



Note: Battery pack or mesh laundry bag is Not Included

We recommend using a qualified battery pack, 5V.

Washing Instructions

Before washing disconnect and remove any Attached battery packs. The switch or control unit must not be allowed to get wet during washing. Ensure that you cover the USB connector with the cap provided. When drying the cord must be positioned to ensure that water does not flow into the switch or control.

 Wash at 30°

 Do Not Bleach

 Do Not Tumble Dry

 Iron on Low Temperature

 Do Not Dry clean

ONE SIZE

KEEP AWAY FROM FIRE.

Online Home Shop, Priestley Road, Wardley Industrial Estate, Manchester, M28 2LX, UK

MADE IN CHINA

Disposal



According to the European waste regulation 2002/96/EC the bin symbol on this product or its packaging indicates that this product may not be treated as household waste.

Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.