



- Eng** Installation guide
D Montageanleitung
F Guide d'installation
E Guía de instalación
NL Installatiehandleiding


 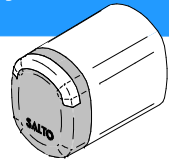


N x CL 1 19 M... series
 N x CL 1 19 W...


CAM LOCK CYLINDER

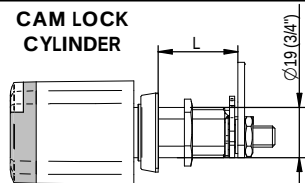


CAM LOCK CYLINDER PROFILE

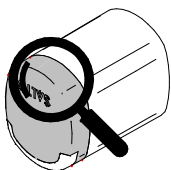


INDOOR Use!

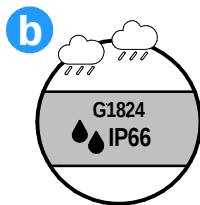


OUTDOOR Use!

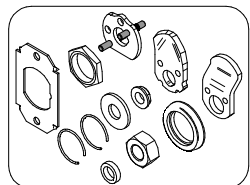

SALTO
 Recommended
 Batteries SP01926-5

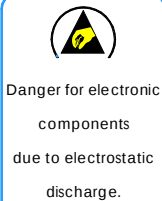

Danger for electronic
 components
 due to electrostatic
 discharge.

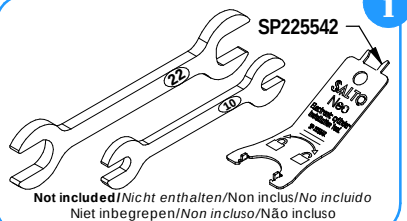

Not included / Nicht enthalten / Non inclus / No incluido
 Niet inbegrepen / Non incluso / Não incluso



www.saltosystems.com/en/quick-links/manuals-and-guides/

SALTO Neo

225776-ED- 23/06/2020

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.


CL

Eng Installation D Montageanleitung F Installation E Instalación NL Montage


1




1.1

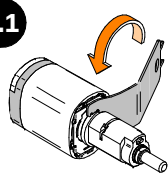


1.2

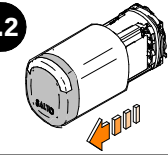


2

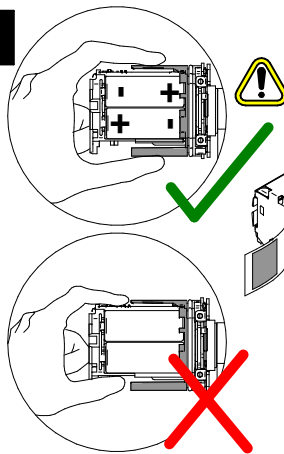

3

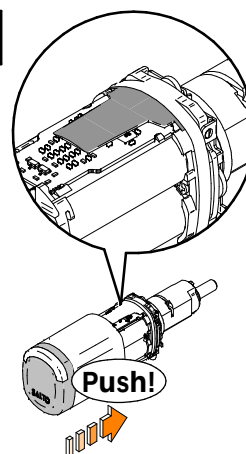

4

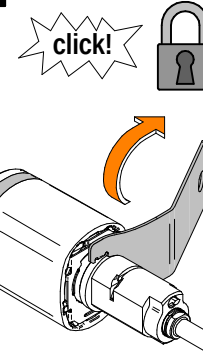


Eng Measure c distance - Select cam type - select components 5a,5b **D** Gemessene Entfernung c - Auswahl des Hebels - Auswahl der Komponenten 5a, 5b **F** Mesurer la distance c - Sélection cam - Sélectionner les composants 5a,5b **E** Medir distancia c - Seleccionar lengüeta - Seleccionar componentes 5a, 5b **NL** Meet afstand c - Selecteer lip - Selecteer componenten 5a,5b


"C" Door-strike distance				Cam Type and position	Number of spacer washers	Number spacer rings
NxCL119M...		NxCL119W...			5a	5b
22 to 23mm	57/64 "	29 to 30mm	1 - 5/32"		-	2
23 to 24mm	59/64 "	30 to 31mm	1 - 13/64"		-	1
24 to 25mm	31/32"	31 to 32mm	1 - 15/64"		-	-
25 to 26mm	1"	32 to 33mm	1 - 9/32"		1	2
26 to 27mm	1 - 3/64"	33 to 34mm	1 - 5/16"		1	1
27 to 28mm	1 - 5/64"	34 to 35mm	1 - 23/64"		-	2
28 to 29mm	1 - 1/8"	35 to 36mm	1 - 25/64"		-	1
29 to 30mm	1 - 5/32"	36 to 37mm	1 - 7/16"		-	-
30 to 31mm	1 - 13/64"	37 to 38mm	1 - 15/32"		1	2
31 to 32mm	1 - 15/64"	38 to 39mm	1 - 33/64"		1	1
32 to 33mm	1 - 9/32"	39 to 40mm	1 - 19/32"		-	2
33 to 34mm	1 - 5/16"	40 to 41mm	1 - 5/16"		-	1
34 to 35mm	1 - 23/64"	41 to 42mm	1 - 41/64"		-	-
35 to 36mm	1 - 25/64"	42 to 43mm	1 - 43/64"		1	2
36 to 37mm	1 - 7/16"	43 to 44mm	1 - 23/32"		1	1
37 to 38mm	1 - 15/32"	44 to 45mm	1 - 3/4"		1	-
38 to 39mm	1 - 33/64"	45 to 46mm	1 - 51/64"		1	-
39 to 40mm	1 - 19/32"	46 to 47mm	1 - 53/64"			

Door thickness
 $1 \leq t \leq 15$ mm
 Normally metal
 doors



Door thickness
 $15 \leq t \leq 22$ mm
 Normally wooden
 doors

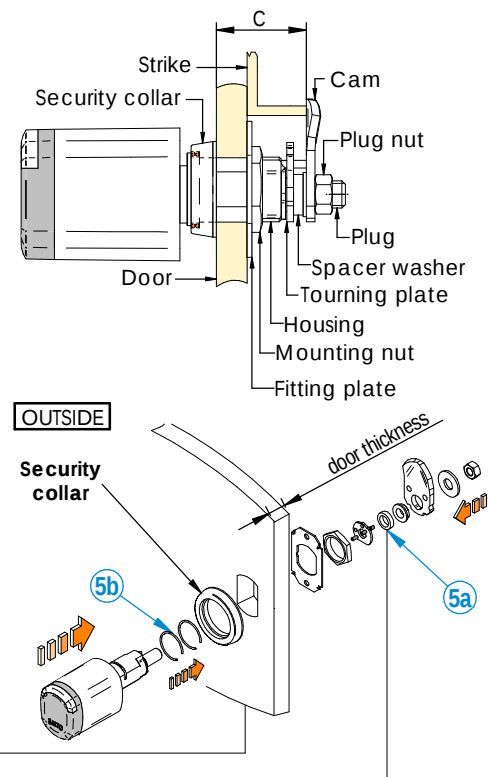


RH+ / LH+

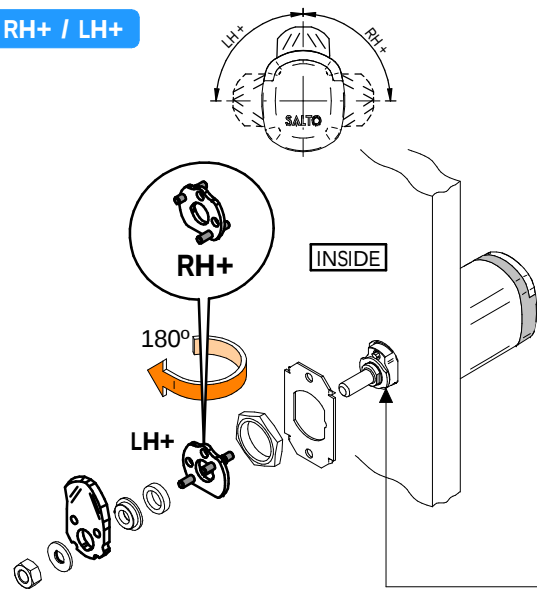


6
SELECT

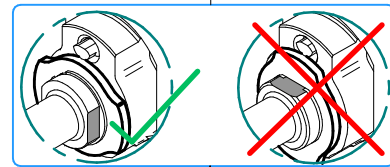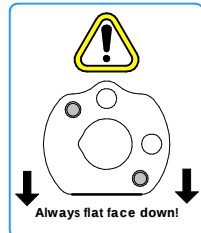

RH- / LH-









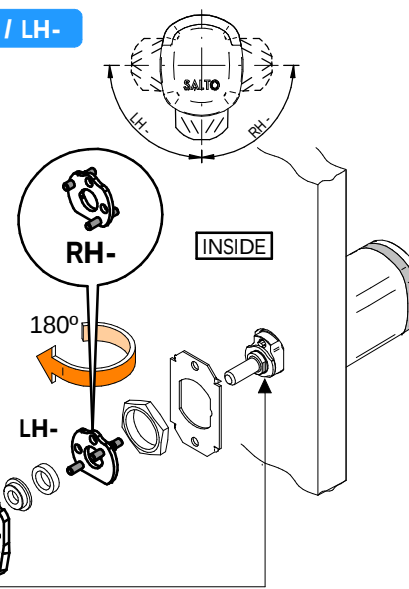


7




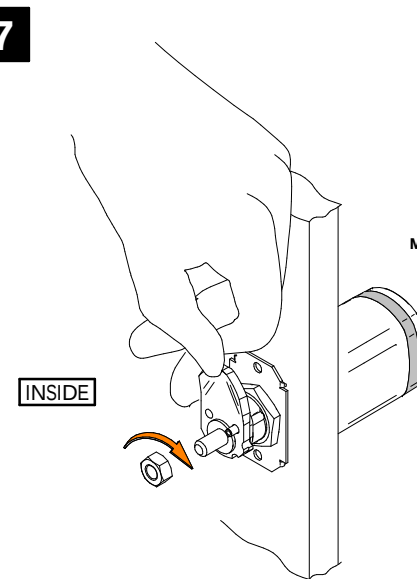


Hold the cam while
tightening the nut.
Maximum torque 3Nm

Eng Battery change D Batterie tauchen F Remplacer pile E Sustitución pilas NL Vervangen batterij

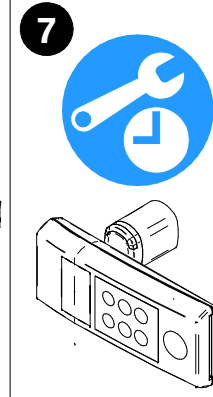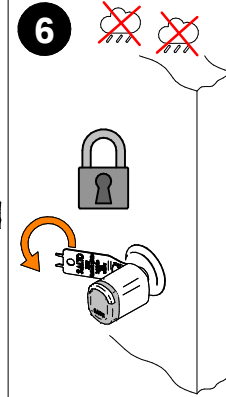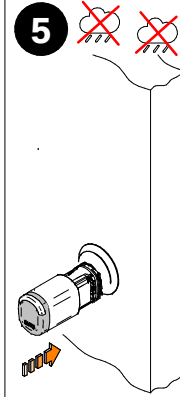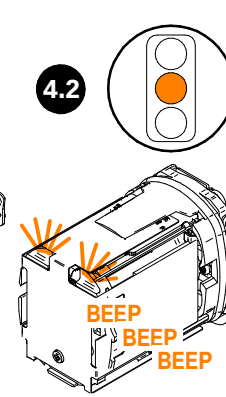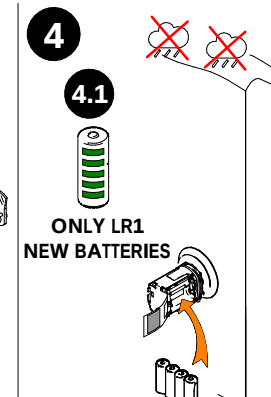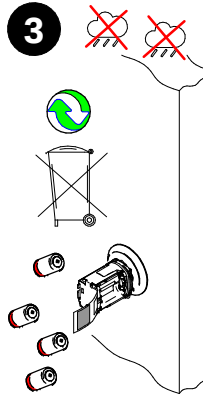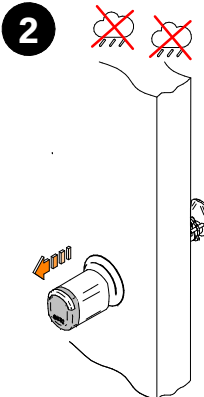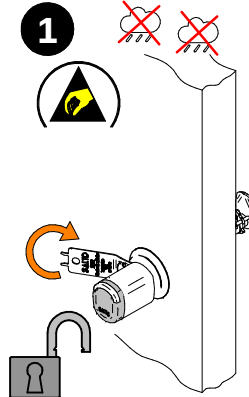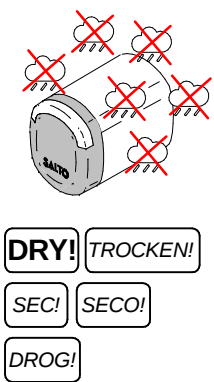

Eng Installation and use recommendations D Empfohlene Handhabung und installation F Recommendations d'utilisation et d'installation E Consejos de uso e instalación NL Aanbevelingen van de gebruik en installatie

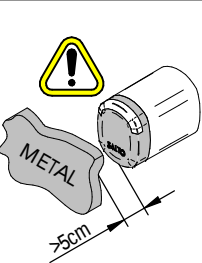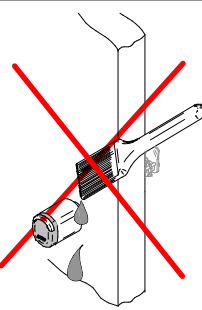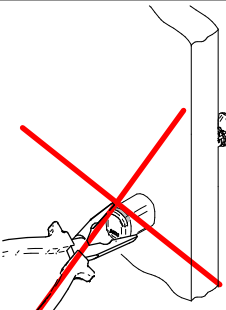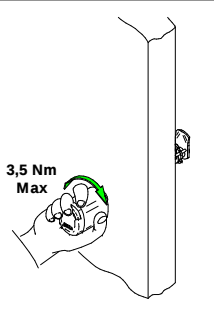

Eng Do not place any movable metallic object closer than 5cm in front of the reader.
D Platzieren Sie keine beweglichen Metallteile näher als 5 cm vor dem Leser.
F Ne placez aucun objet métallique mobile à moins de 5 cm du lecteur.
E No colocar ningún objeto móvil metálico delante del lector a menos de 5cm de distancia.
NL Plaats geen enkel beweegbaar metaal voorwerp dichterbij dan 5 cm voor de lezer



Eng The knob is uniquely paired to the cylinder, and will not work if you switch in a different SALTO cylinder.
D Der Knauf ist eindeutig mit dem Zylinder gekoppelt und funktioniert nicht, wenn Sie einen anderen SALTO-Zylinder verwenden.
F Le bouton du lecteur SALTO est appairé au cylindre. Le cylindre ne fonctionnera pas si vous l'inverse avec un autre cylindre SALTO.
NL El pomo está emparejado únicamente al cilindro, no funcionará si lo conecta a otro cilindro SALTO diferente.
De knop is uitsluitend gekoppeld aan deze Geo cilinder (getrouwd) en werkt NIET als u een andere SALTO-knop plaatst op deze Geo cilinder.