# Lacidoll

**USER MANUAL** 


# Ultrasonic Cool Mist Humidifier

LCD-MH-2303A

Need Assistance?

We're here to help!

- **+**1 888-405-0087
- support@lacidoll.com
- Mon-Fri, 9 AM-5 PM (EST)

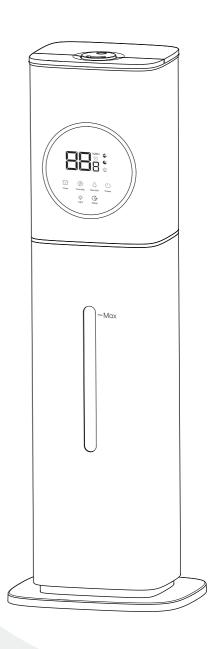

# Lacidoll

Your support means the world to us.
We hope you enjoy our product as much as
we enjoyed creating it.

Please read this manual carefully before use and keep it for future reference. All images shown are for illustration purposes only. The actual product may vary due to enhancements.

For more installation details, visit our website or scan the QR code:

https://lacidoll.com/pages/user-manual



# **Contents**

Important Safety Instructions	1-2	
Knowing Your Humidifier		
——Package Contents	3-4	
——Specifications	5	
——LED Display & Control Panel		
—Remote Control	9 <b>-</b> 10	
Using Your Humidifier		
——Getting Started	11	
——Filling Water	12	
White Dust (Mineral Residue)	13	
——Adding Essential Oil	14	
Cleaning & Maintenance		
—Regular Cleaning	16	
——Descaling Instructions		
——Aroma Pad Tray Cleaning	17	
——Pump Maintenance & Replacement		
——Seasonal Storage Guidelines		
Troubleshooting	19-22	
Warranty Policy	23-24	

# Important Safety Instructions

Please read and retain the following safety instructions before using this humidifier. Always follow these basic precautions to reduce the risk of fire, electric shock, and personal injury.

### 1. General Safety

#### Placement

- Place the humidifier on a firm, flat, and waterproof surface to ensure stability and prevent tipping.
- If using on a wooden floor, a waterproof mat is recommended to prevent excessive moisture buildup.
- Keep the humidifier at least 12 inches (30 cm) away from walls or wooden furniture.

#### Temperature

- -Before first use, let the humidifier sit at room temperature for **30 mins** to prevent potential damage to the water tank caused by sudden temperature changes.
- —Operate the humidifier within a room temperature range of  $41^{\circ}F$   $104^{\circ}F$  (5°C-40°C).
- —If the temperature drops below  $32^{\circ}F$  (0°C), empty the water tank to prevent freezing and potential damage.

#### Keep Away From Heat Sources

-**Do not** place the humidifier near heat sources such as stoves, ovens, radiators, or direct sunlight.

#### Keep out of Reach of Children and Pets

- Place the humidifier where children and pets cannot access it.
- -Children should not operate or clean the humidifier without supervision.

#### Indoor Use Only

- This humidifier is designed for indoor use only.
- Do not use it outdoors or in damp environments.
- Avoid running it in a closed room for extended periods without supervision.

1

### Important Safety Instructions

#### 2. Power & Cord Safety

- Cord
- Avoid pulling, twisting, or damaging the power cord.
- Plug and Outlet
- Ensure the plug fits securely into the outlet to prevent overheating.
- Unplug When Not in Use
- Always unplug the humidifier before refilling, moving, cleaning, or when not in use for an extended period.


### 3. Special Precautions

- Avoid Over-Humidification
- If condensation appears on walls, windows, or around the device, turn off the humidifier or lower the mist output.
- Do Not Inhale Mist Directly
- Avoid inhaling mist directly or directing mist toward people or objects.
- Do Not Add Substances
- Do not add essential oils, medications, or other additives to the water tank or mist outlet, as this may damage the unit or affect health.


### 4. Maintenance & Repairs


- No Self-Repair
- **Do not** disassemble, modify, or repair the humidifier yourself. Repairs should only be performed by the manufacturer or a qualified professional.
- Routine Inspections
- Regularly check the power cord, plug, and water tank for any signs of damage.
   If any issues are detected, stop using the humidifier and contact customer service.

# **Package Contents**

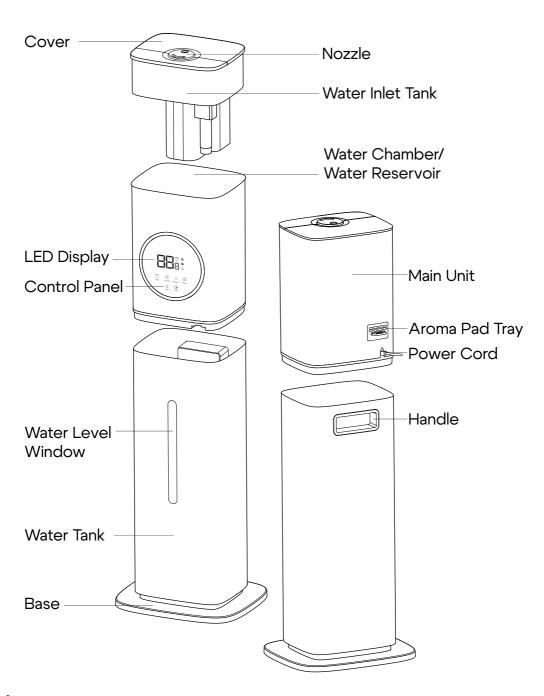

# **Package Contents**

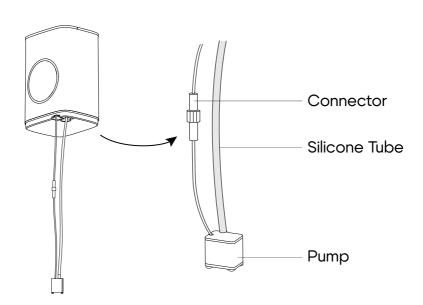

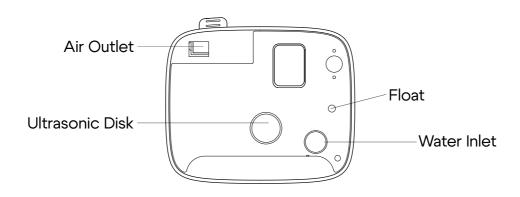







User Manual



Aroma Pad




Remote Control


# **Specifications**

Product Name	Ultrasonic Cool Mist Humidifier		
Model Number	LCD-MH-2303A		
Mist level	1(Low) 2(Medium) 3(High)		
Rated Power	25W		
Rated Voltage	120V~		
Noise	<35 dB		
Tank Capacity	2.1Gal / 8L		
Size	5.1"D x 5.7"W x 27"H		
	1-12 hours Timer		
Safety Functions	Waterless auto shut-off		
	Automatic shutdown when falling		

# **LED Display & Control Panel**

Relative Humidity(RH) Percentage Indicator

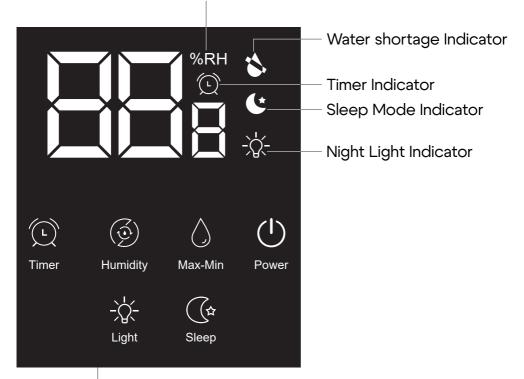

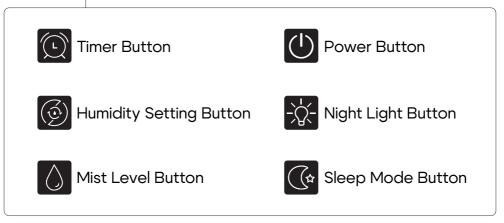

# **LED Display & Control Panel**

### (I) Power (ON/OFF)

- Press the button to turn the humidifier on or off.
- •If the tank is empty, the " " icon will blink 5 times, and the humidifier will shut off automatically.





If the humidifier has been in storage or transit for a long time, the sensor may briefly display a "Low Water" warning—even when the tank is full. Restart the humidifier **2–3 times** to reset the sensor.

### (L) Timer

- Press the button to set your desired time (adjustable between **1-12 hours**).
- The (icon on the screen will light up.

  To cancel or reset the timer, press the button repeatedly until the screen displays "--" and the icon turns off.
- The timer function is off by default when the humidifier is turned on.



### -X-Night Light

- Press to activate/deactivate the night light function.
- This -\$\frac{1}{\sqrt{2}}\$- function is off by default when the humidifier is turned on.



# **LED Display & Control Panel**



#### Max-Min

- The humidifier starts misting at the maximum level.
- Press and hold the button to set your desired mist levels:  $1(Low) \rightarrow 2(Medium) \rightarrow 3(High)$ .
- The value on the display will update accordingly.





If you see water pooling near the humidifier, the room may be too humid. Lower the mist setting to avoid excess moisture.

### 

- Press the button to turn the Sleep Mode on or off.
- When activated, the display will dim, and the 🌣 icon will light up.
- The Sleep Mode function is off by default when the humidifier is turned on.



### (§) Humidity


- Press the button to set your desired humidity level (adjustable between **45%-95%**).
- The 🔞 icon on the screen will light up.
- To cancel or reset, press the button repeatedly until the screen displays "--" and the icon turns off.
- The target humidity function is off by default when the humidifier is turned on.





- A comfortable humidity range is 40%-60%.
- After setting a target humidity, the display will show the current ambient humidity, not the target.
- The humidifier will automatically pause misting when reaching target humidity and resume when humidity falls below the set level.

### **Remote Control**

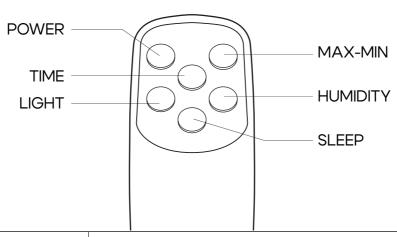

Timer Button	Sets the misting duration (1–12 hours).	
Humidity Button	Adjusts the desired humidity level (45%–95%).	
Max-Min Button	Adjusts the mist output level.	
Light Button	Controls the night light function.	
Power Button	Turns the humidifier on/off.	
Sleep Button	Enables or disables sleep mode.	



For safety during transportation, the remote control does not include batteries. Please install **AAA 1.5V batteries** before use.

### Remote Control


#### **Battery Safety Instructions**

- Install dry batteries strictly according to the polarity indication (+ and -) in the battery compartment.
- Incorrect installation may cause device malfunction or battery leakage.
- **Do not** mix new and used dry batteries, or different brands/types (e.g., alkaline, carbon zinc). Mixed use may reduce performance and increase leakage risk.
- Replace depleted dry batteries promptly. Recycle or dispose of used batteries following local regulations. **Do not** discard them in household trash.
- If battery leakage occurs, remove batteries from the remote control immediately and keep them away from the device. If skin or eyes contact the leakage, rinse with clean water thoroughly and seek medical help if needed.

# **Getting Started**


When using your humidifier for the first time, remove the wraps and follow the steps below.



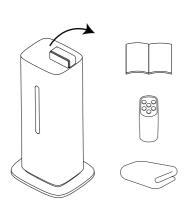


Remove the remote control, and user manual from the water tank.



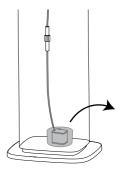

 
Remove the protective packaging from the water pump.





Place the main unit onto the tank. No need to secure the water pump to the bottom of the tank.



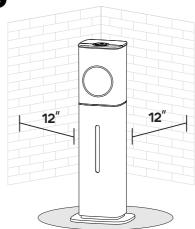


Place on a flat surface 12+ inches from walls. Use a waterproof mat underneath to catch spills.

# Filling Water

There are two ways to add water:


### Top Fill

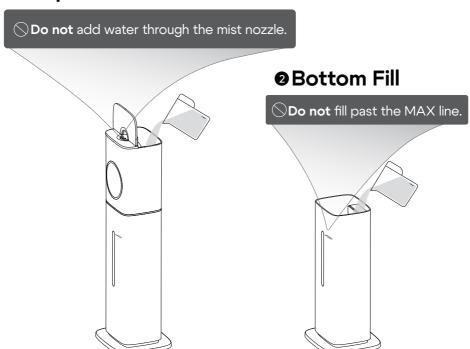

#### **Note**

- ① Use **purified or distilled water** to minimize white dust accumulation.
- Place a waterproof mat beneath the humidifier to contain spills.
- Fill with **room-temperature water** only never use hot water, boiling water, or other liquids.
- Avoid pouring water through the mist outlet to prevent internal damage and operational failure.
- ① Never add **essential oils** directly to the water tank as this may damage the tank components.

### White Dust (Mineral Residue)

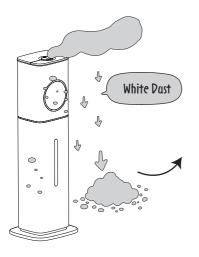

#### What Is White Dust?

White dust, also called mineral residue, is a powdery buildup that can appear near your humidifier.

It's caused by minerals (like calcium and magnesium) in your water—a common issue in areas with "hard water."

The harder your water, the more likely you'll see this dust.

### Why Does It Happen?

The humidifier doesn't create this dust it simply releases minerals that are already in your water.

If you live in a hard water area, switching to distilled water can greatly reduce or even eliminate white dust.

It's a natural process, not a problem with vour humidifier.



#### The demineralization cartridge can minimize white dust buildup.

- Replace the cartridge **every 30-40** water refills
- Replace more often if you have very hard water
- Switch to distilled water if dust persists after replacement
- To purchase replacement cartridges at: lacidoll.com


#### **Contact Our Customer**

Still experiencing issues?
Contact our customer support team.



# **Adding Essential Oil**

- 1 Locate & Remove Pull out the aroma pad tray.
- 2 Insert Pad Place an aroma pad inside the tray.
- 3 Add Oil Add 2-5 drops of essential oil directly onto the pad.
- 4 Reinsert Slide the aroma pad tray back into place securely.
- **5** Activate Turn on the humidifier to release scented mist.

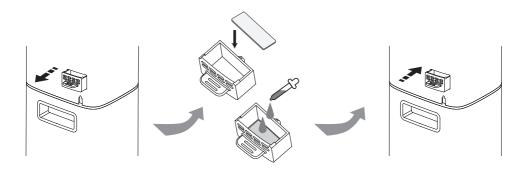

Only use the aroma pad
 Never add oils directly to the tray, water tank or other components.







No pad?

Use a same-sized sponge or folded paper towel as a substitute.

• Scent intensity
This humidifier is not a dedicated diffuser; fragrance will be subtle.

#### Before You Begin


- Always unplug the unit before maintenance.
- Work on a waterproof surface.

#### 

- Wipe surfaces with a damp cloth.
- Clean the mist nozzle regularly with a soft tissue.
- Change water regularly to prevent bacteria.
- For storage: Empty all water and dry completely.

#### 

- Never submerge or rinse the main unit.
- Keep water away from air outlet.
- Avoid using detergents, gasoline, thinners, solvents, or other chemicals for cleaning.

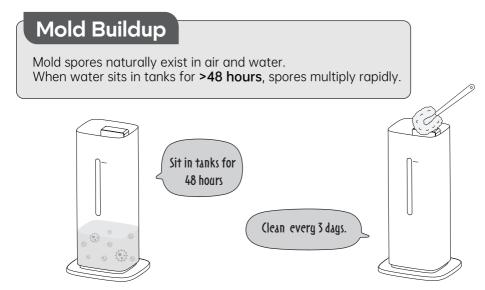


Regular cleaning is one of the most important steps you can take. According to the Environmental Protection Agency **(EPA)**, homeowners should clean their humidifiers at least every **3 days** to prevent mold buildup.

- •Use distilled or demineralized water (reduces mineral deposits that mold thrives on).
- Dry the tank completely between uses.
- Deep clean weekly with white vinegar.

### 1.Regular Cleaning




 


Remove the humidifier main unit from the water tank and empty any remaining water.



Clean the water inlet tank and water tank using a soft cloth or brush.

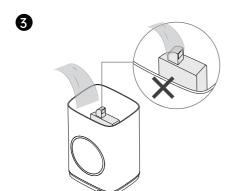

Gently clean the chamber interior with a soft brush, ensuring no water enters the **air outlet**.

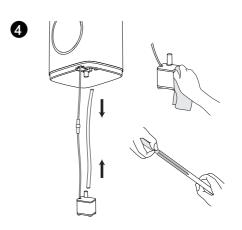


Clean the water pump with a soft brush and use a long, narrow brush to clean the silicone tube.



Note: Ensure all parts are fully dry before reassembling or storing the humidifier.

### 2.Descaling Instructions

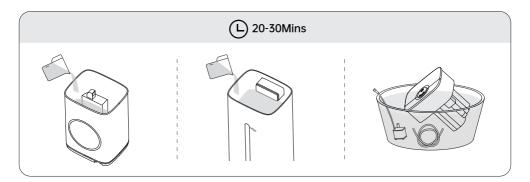


- 1 Pour white vinegar into the chamber and water tank.
- 2 Soak the water inlet tank, pump and silicone tube in white vinegar as well.
- 3 Let the solution sit for 20–30 minutes.
- 4 Scrub away scale buildup with a soft cloth or brush.
- **5** Rinse thoroughly with clean water.



- Do not allow water to enter the air outlet during cleaning.
- Avoid harsh scrubbing of the **ultrasonic disk** to prevent damage.
- White vinegar may leave a slight odor—ensure proper ventilation and let all parts air-dry completely before reuse.
- Citric acid can be used as an alternative descaler; follow the product instructions for proper usage.

### 3. Aroma Pad Tray Cleaning

 - 1 Pull out the aroma pad tray from the back of the humidifier.
- 2 Rinse the tray and pad with water and dry it before placing it back.




(!)

If the aroma pad remains stiff after cleaning, it needs to be replaced. **No pad?** Use a same-sized sponge or folded paper towel as a substitute.

### 4. Pump Maintenance & Replacement

If the water pump stops working, first try removing and reinstalling it.

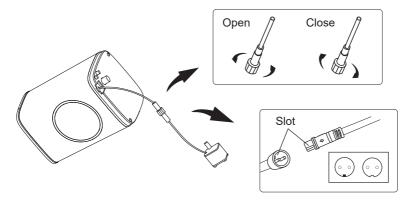

- **1 Disconnect:** Turn the locking nut counterclockwise, hold the cable near the connector, and firmly pull to separate the plug (pin end) from the socket (jack).
- **2 Reconnect:** Align the plug and socket, push in until secure, then tighten the locking nut clockwise.
- (!)

If pump is damaged, purchase replacement at: **lacidoll.com**. Still experiencing issues? Contact our customer support team.

### **5.Seasonal Storage Guidelines**

- Before storing the humidifier at the end of the season, follow the above cleaning steps.
- Ensure all parts are completely dry before storing.
- Pack the unit securely and store it in a cool, dry place.

### No Power / Unable To Turn On

Check Power Supply

Make sure the humidifier is plugged into a working electrical outlet.

If Recently Cleaned

Water may have entered the unit during cleaning, preventing startup. Place in a well-ventilated area to dry for at least **24 hours** before retrying.

Still No Working?

Contact customer support.

#### **Low Mist Output**

Check Water Level
 Make sure the tank is filled with enough water.

Adjust Mist Settings
Turn up the mist level if set too low.

Check Humidity Setting

In Auto Mode, misting stops when target humidity is reached, increase mist level or raise target humidity setting.

Clean Ultrasonic Disk
 If clogged, follow cleaning steps in "Descaling Instructions" (Page 17)

• Still Getting Weak Mist?

Contact customer support.

### Mist Escaping From The Water Tank

• Check Tank Installation
Ensure the tank is properly placed.

Adjust Mist Level

Reduce the mist output to prevent excessive mist buildup.

### No Mist Output With Red Light Flashing

#### Water Level

Ensure water tank is adequately filled.

#### Sensor Reset

After long storage/transit, sensor may falsely show "Low Water". Restart unit 2-3 times to recalibrate

#### If Issue Persists

#### - Inspect Water Pump

If failing to move water from tank to chamber: Follow "Descaling Instructions" & "Pump Maintenance & Replacement" (Page 17-18) procedures.

#### - Check Main Unit Float

Clean with cotton swab if stuck to verify float moves freely up/down.

#### - Examine Ultrasonic Disk

Clean per "Descaling Instructions" (**Page 17**) if clogged. Pour water into chamber while powered on - check for mist production.

For more details, visit our website or scan the QR code: https://lacidoll.com/pages/user-manual

#### Still Not Working?

Contact customer support for pump or main unit replacement options.



#### Insufficient Humidification

#### Adjust Mist Level

Increase the mist output.

#### Check Room Size

If the room is too large, the humidifier may not effectively increase humidity. Consider using a larger unit.

#### Check Environmental Humidity

If the air is very dry, it may take longer for humidity levels to rise.

### Inaccurate Humidity Reading

Normal Range

A difference of 5-10% between displayed and actual humidity is normal.

• Check The Humidity Sensor

Ensure the sensor is free from dust or moisture; wipe it dry if necessary.

Check Placement

Avoid placing the humidifier in corners or near walls. Ensure good airflow.

For Large Errors

If the humidity reading is significantly inaccurate, contact customer support.

### Water Leakage

Inspect Water Tank

Check for cracks/damage.

Never fill water past the MAX line.

Verify Placement

Place on perfectly flat, level surface.

#### Water Accumulation Around Unit

Check Humidity Settings

If set too high, excess moisture may form.

Reduce mist level.

For smallest settings: Move to larger space or use waterproof mat.

Verify Placement

Place on flat, stable surface.

Keep minimum 12 inches from walls/furniture for proper airflow.

Inspect Water Tank

Ensure proper installation to prevent leaks.

Never fill past MAX water line.

### Scale Buildup / Unpleasant Odor

Clean Regularly

Clean the water tank and main unit frequently to remove scale buildup.

Use White Vinegar

Soak parts with mineral deposits in distilled white vinegar for **20–30 minutes**, then rinse thoroughly.

Check The Aroma Pad

If using essential oils, clean or replace the aroma pad regularly. See the "Aroma Pad Tray Cleaning" (Page 17) section for details.

#### White Mist Or White Dust

Check Water Quality
 Use purified or distilled water instead of tap water with high mineral content.

Clean The Humidifier

Regularly clean the water tank and base to remove mineral deposits. See the "White Dust" (Page 13) section for details.

#### **Furnace Malfunctions**

 Tap Water Minerals Dispersed As "White Dust" Can Clog furnace air filters faster.
 Coat sensitive sensors/electronics.

- How To Prevent It
  - Only use distilled/demineralized water.
  - Replace furnace filter monthly during humidifier use.
  - Wipe down furnace exterior weekly.

### **Noisy Sound**

A slight noise during water intake is normal.

If the noise is excessive, Contact customer support.

# **Warranty Policy**

### Warranty Coverage

- We warrant to the original purchaser that this product shall be free from defects in material and workmanship under normal use and conditions for a period of **1 year** from the date of purchase.
- During the warranty period, we will, at its sole discretion, repair or replace the product if such defects occur.

#### **Warranty Exclusions**

This warranty does not cover the following:

- Unauthorized repairs/modifications: Any repair, modification, or disassembly not authorized by the manufacturer voids the warranty.
- Misuse or abuse: Damage caused by accidents, misuse, improper maintenance, or failure to follow instructions in the user manual.
- Commercial use: Products used for commercial, rental, or non-household purposes.
- Normal wear & tear: Deterioration due to regular use or consumable parts (e.g., aroma pad).
- External factors: Damage from natural disasters, shipping, power surges, or other external causes.
- Unauthorized sellers: Products purchased from unauthorized dealers or distributors.

### **Warranty Claim Process**

If your product exhibits a defect during the warranty period:

- Provide the product model, proof of purchase (invoice/order number), and photos/videos of the issue.
- We will evaluate the claim and provide a repair or replacement if eligible.

### **Product Registration**

- To streamline warranty services, register your product promptly on our official website: **lacidoll.com**
- Registration is quick, optional, and does not affect warranty rights.

# Warranty Policy

#### **Customer Support**

For warranty claims or inquiries

**+**1 888-405-0087

support@lacidoll.com

Mon-Fri, 9 AM-5 PM (EST)

### **Important Notes**



Voiding conditions

Unauthorized repairs, use of chemicals/oils, or improper cleaning void the warranty.

Safety alert

Discontinue use and contact support if the product exhibits abnormal noise, odors, or malfunction.

Your Rights

This warranty provides specific legal protections. Additional rights may apply under your state's consumer laws.

Model	LCD-MH-2303A		
Warranty Period	Within 1 year from the date of purchase		
Order Placed	Month	Date	Year
Sold by			
Order Number			
	Name		
Customer	Address		
	Phone Num	nber	

# Lacidoll