
## **Crate&Barrel**




Thank you for purchasing the **Windham Corner Media Stand**. This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components of this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Note: 2 people are required to safely assemble this product.

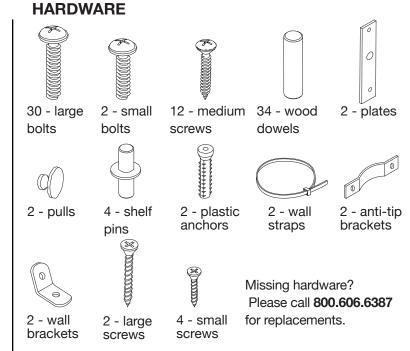


**TOOLS REQUIRED** 

phillips head screwdriver


### **COMPONENTS**

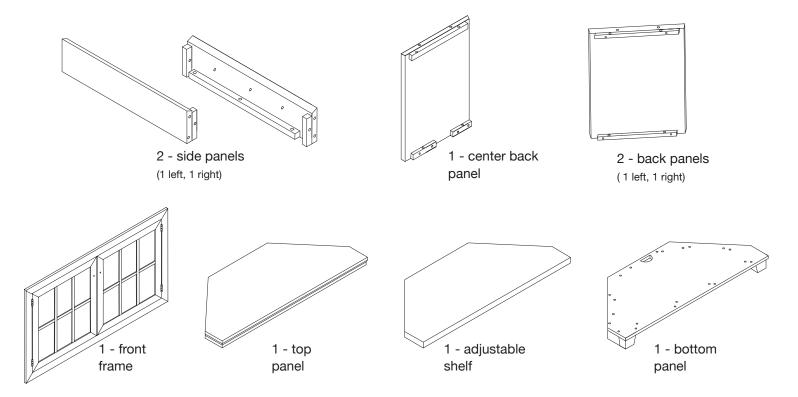

# WINDHAM CORNER MEDIA STAND

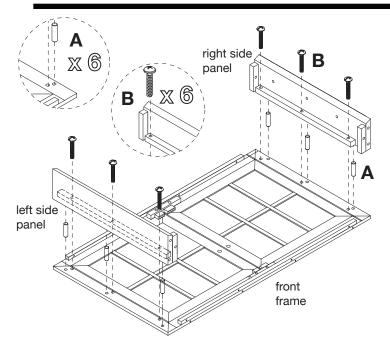


1) A) Insert 6 wood dowels into front frame as shown. B) Fit dowels of front frame into corresponding holes of left and right side panels as shown. Attach side panels with 6 large bolts as shown. Secure bolts with a phillips head screwdriver.

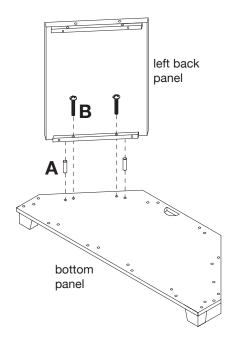


2 A) Insert 2 wood dowels into bottom panel as

B) Fit dowels of **bottom panel** into corresponding holes of **left back panel**, and secure left back panel with 2 **large bolts** as shown.

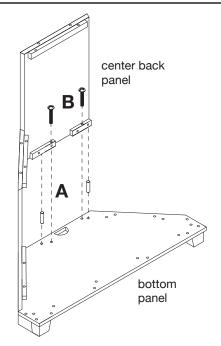


(3) A) Insert 2 wood dowels into bottom panel as shown.

B) Fit dowels of **bottom panel** into corresponding holes of **center back panel**, and secure with 2 **large bolts** as shown.

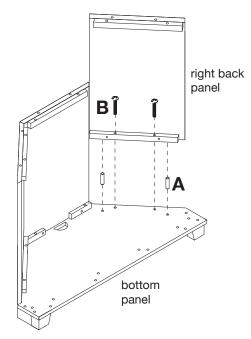


4 A) Insert 2 wood dowels into bottom panel as shown.


B) Fit dowels of **bottom panel** into corresponding holes of **right back panel**, and secure with 2 **large bolts** as shown.

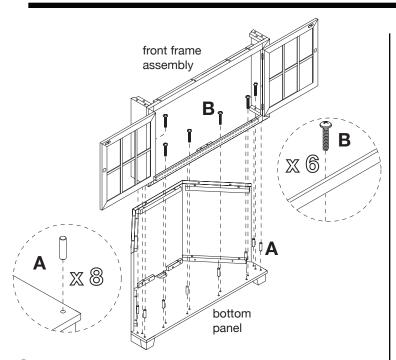

(5) A) Insert 8 wood dowels into bottom panel as shown.
B) With the assistance of another adult, fit dowels of bottom panel into corresponding holes of front frame assembly.
Secure front frame assembly with 6 large bolts as shown.

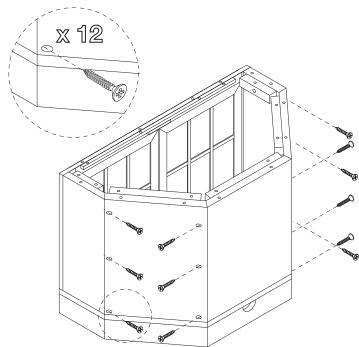


6 Insert 12 **medium screws** into left and right back panels of assembled unit as shown. Secure screws with a screwdriver.

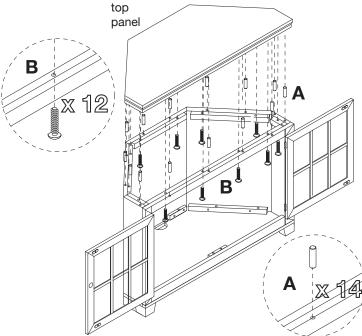


7 A) Insert 14 wood dowels into top of assembly as shown.

B) Fit **top panel** onto corresponding dowels of assembly. Secure from the inside with 12 **large bolts** as shown.

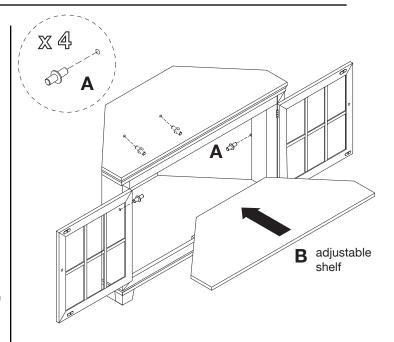


(8) A) Insert 4 **shelf pins** at desired shelf heights as shown.

B) Place **adjustable shelf** into assembled unit. Make sure each shelf pin is securely supported by each shelf pin.

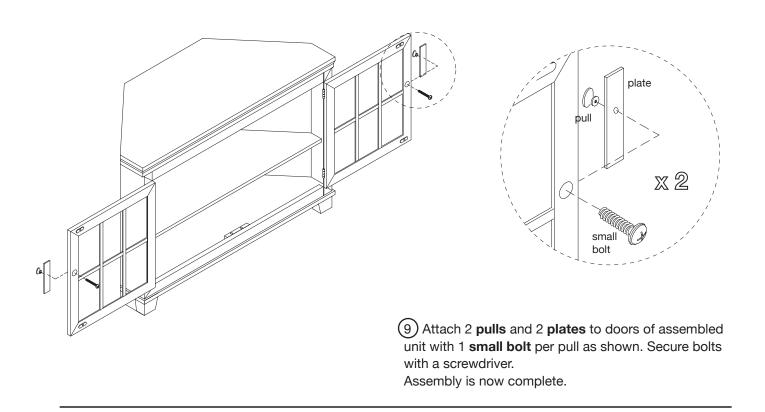

#### **CLEANING AND CARE**

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the wood is finished with a protective clear lacquer.

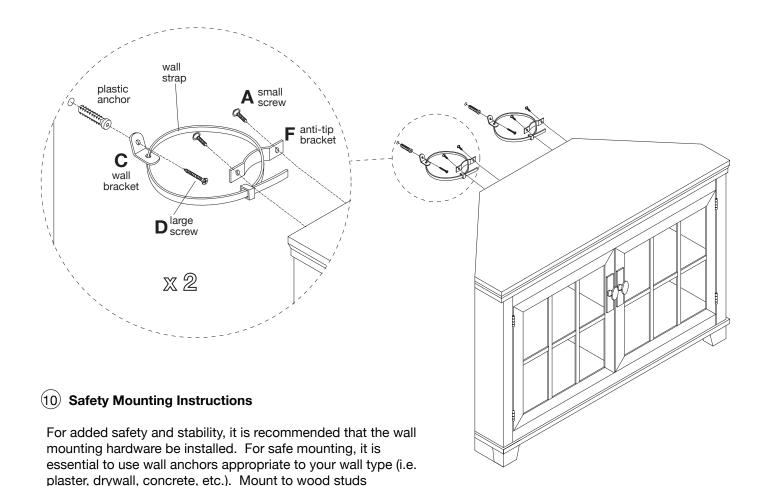

- A) Attach anti-tip bracket to top of media stand using 2 small screws as shown.
- B) Determine the final location of media stand. Mark position on the wall, approximately 2" below the anti-tip bracket mounted to the back of the media stand.
- C) Drill a hole in the wall stud. If the wall stud is not available, drill a hole in the wall that is slightly smaller in diameter than the anchor. Gently tap the **plastic anchor** until the flange of the anchor is flush with the wall.
- D) Attach the **wall bracket** to the wall by inserting 1 **large screw** through the wall bracket and into the wall anchor in the wall.
- E) Place the unit so the anti-tip bracket on the back edge is allowed with the wall bracketl.
- F) Lace one end of the **wall strap** through both brackets, and into the other end of the strap.
- G) Pull the strap tightly until secure.

#### Repeat steps A-G for remaining anti-tip and wall bracket.

#### NOTE:

If you are unsure about your wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

whenever possible.