



EN	User manual	TH	คู่มือผู้ใช้งาน
HI	उपयोगकर्ता मैन्युअल	VI	Hướng dẫn sử dụng
ID	Buku Petunjuk Pengguna	ZH-S	用户手册
MS	Manual pengguna		



©2021 Philips Domestic Appliances Holding B.V.  
All rights reserved.  
6102 055 10285



English

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your  
product at [www.Philips.com/welcome](http://www.Philips.com/welcome).

## 1 What's in the box

Fuzzy rice cooker main unit	Steam basket
Rice scoop	Soup ladle
Measuring cup	User manual
Safety leaflet	Warranty card
Power cord	

---

## Overview

①	Fuzzy rice cooker main unit	⑩	Lid release button
②	Power cord	⑪	Control panel
③	Rice scoop	⑫	Main body
④	Soup ladle	⑬	Power plug
⑤	Steam basket	⑭	Heating element
⑥	Measuring cup	⑮	Water level indications
⑦	Top lid	⑯	Cooker handle
⑧	Sealing ring	⑰	Inner lid
⑨	Instruction manual	⑲	Product booklet

- ⑥ Measuring cup
- ⑦ Top lid

⑧	Sealing ring	⑯	Inner lid
⑨	Inner pot	⑰	Detachable steam vent cap
<b>Controls overview</b>			
⑯	Preset time	㉓	Cook time
㉐	Time adjust	㉔	Reheat
㉑	Quick cook	㉕	Off/Warm

 Congee/Soup

- **Before first use**

  - 1 Take out all the accessories from the inner pot. Remove the sheet between the inner pot and the heating element.
  - 2 Clean the parts of the rice cooker thoroughly before using the rice

## Note

- Make sure all parts are completely dry before you start using the rice cooker.

## Preparations before use

- 1 Measure the rice using the measuring cup provided.
  - 2 Wash the rice thoroughly.
  - 3 Put the pre-washed rice in the inner pot.
  - 4 Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
  - 5 Press the release lever to open the lid.
  - 6 Put the inner pot in the rice cooker. Check if the inner pot is in proper contact with the heating element.
  - 7 Close the lid of the rice cooker, put the plug in the power socket.

proper contact with the heating element.  
7 Close the lid of the rice cooker, put the plug in the power socket.



