 


Smokeless Grill - Basic

home™
homelabs.com

HME050392N

Thank you for selecting our quality appliance. Please be sure to read this user manual carefully before using. Any question, please contact the professional service for help.

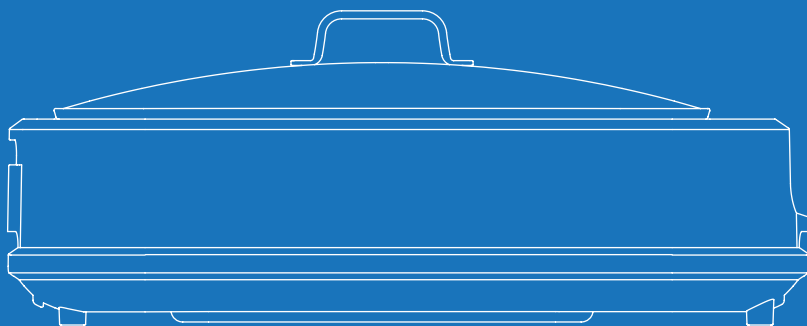

In the event this product malfunctions or customer believes it is defective, the customer should contact Customer Service and retain the defective product pending further instructions. Defective product should be clearly marked or stored where it cannot be used again by mistake. Failure to retain the product may impede hOme™'s ability to correct any legitimate problem and may limit the extent to which hOme™ may provide recourse.

TABLE OF CONTENTS

Important Safety Instructions	6-8
Operating Instructions	9-12
Cleaning and Maintenance	13-14
Troubleshooting	14
Warranty	15
Manufacturing Info	15
Warning	15
Contact Us	15

Congratulations

on bringing home your new appliance!



Don't forget to register your product at homelabs.com/reg for updates, coupons, and other relevant information.

Although greatly appreciated, product registration is not required to activate any warranty.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions.
- Do not touch hot surfaces.
- To protect against electric shock do not immerse cord, plugs in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn power button to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The product is not designed to be controlled by an external timer or a separate remote control system.
- The grill is intended only for indoor home/private use or use in similar environments such as kitchens in stores, offices and other workplaces, or use by individual clients in hotels, motels and other residential environments and Bed & Breakfast type rooms. Do not grill in closed rooms where adequate ventilation is not maintained.
- This appliance can be used by children above 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and maintenance should not be performed by children unless they are above 8 years and are supervised by an adult responsible for their safety.
- Store the device and its plug out of the reach of children.
- Attention! Charcoal and other similar fuels must not be used with this appliance.
- The device may only be used when is properly assembled in accordance with the assembly instructions.
- Do not use the accessories not recommended by the manufacturer, otherwise may cause injuries.
- Before use check if current and voltage are in compliance with the data on the rating plate.
- Use only properly earthed power supply source.
- When using the grill for the first time, it may produce smoke and unpleasant odor. This is normal.
- Do not use the appliance if the cable or the plug is damaged.
- The appliance and its parts shouldn't be repaired by the user. Otherwise the warranty becomes null and void. If any damage is found during the warranty period, contact the retailer where the product was purchased. After the warranty period contact a serviceman or a certified technician.
- Never use the grill near flammable materials such as wood, dry grass, shrubs etc. Keep the grill at a safe distance from the above mentioned objects.
- Do not keep kitchen oil near the appliance.
- Pay attention not to allow the grill contact flammable materials such as paper, walls, towels, chemicals etc.

Important Safety Instructions

- Do not move the appliance during use. Never carry the grill with hot oil or other hot liquids in the tray. Wait until the grill gets cold.
- Do not touch the grill plate or other hot surfaces during or just after grilling. Be careful.
- Do not allow fat or other dirt to accumulate on the surface or inside the device.
- When roasting with oil / fat, do not let it ignite. Do not use water to extinguish the fire. In case of fire, switch off the device, disconnect the grill from the power source and cut off the air supply with a damp cloth or a fire blanket.
- The appliance can be used according to the intended manner only. The manufacturer will not be held responsible for any damage arising from misuse or improper use.
- Do not use the grill under the influence of alcohol or when you are tired.
- Do not leave the grill switched on without supervision.
- Do not use the grill in high humidity environments.
- Do not use the appliance on boats or recreational vehicles.
- When disconnecting the cable from the socket, pull the plug out from the socket. Do not plug the cable.
- Never carry the appliance by the power cord.
- Keep the grill in a dry place. Do not expose the device to sunlight.
- Failure to observe the above precautions may lead to death, serious injuries or damage to property.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

- A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
 - If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and
 - The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

Important Safety Instructions

FCC Statement

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

 
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAVE THESE INSTRUCTIONS


For Household Use Only

Operating Instructions

PARTS LIST

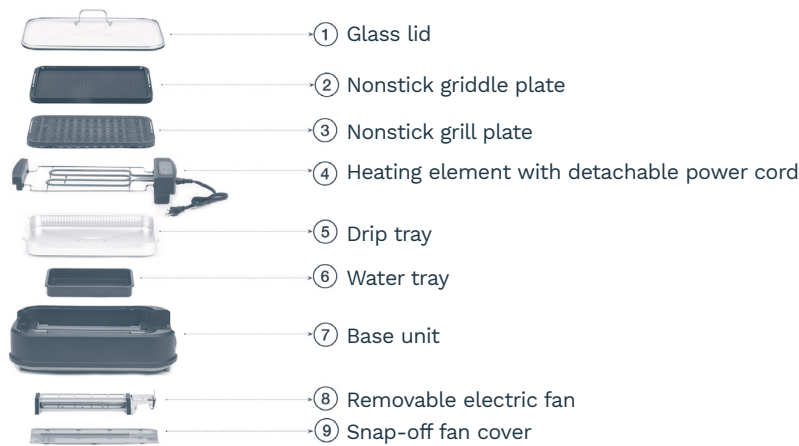

CONTROL PANEL

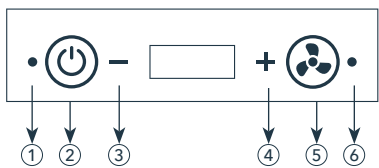 

Operating Instructions

Before first use

- Unpack the grill and remove all packaging materials. Wipe the cooking surface and base with a clean, damp cloth. Dry thoroughly. Do not use harsh or abrasive detergents to clean any part of the grill.
- Place the device on a stable, flat and heat-insulating surface.
- Place the water tray in the bottom of the base and fill in enough clean water according to the **MAX** and **MIN** fill line.
- Place the drip tray on the base unit. Align the arrows on the drip tray and the base. The appliance will not operate if the drip tray is installed incorrectly.
- Place the heating element on the base unit.
- Place the grill or griddle plate on the top.
- You are recommended a “trial run” at a high temperature to eliminate any protective substance or oil that may remained used for packing and shipping. Switch on the grill, set the temperature to 450°F. Let the grill run for 20 minutes. A small amount of smoke and odor may be detected. This is normal.
- Before first use, spread 2 teaspoons of vegetable oil with a soft cloth or folded paper towel over the entire grill surface to condition the nonstick surface. Set temperature to 450°F. After the grill reaches the set temperature for 6 minutes, turn off and cool the device completely. The grill is ready for use.

Warnings

- Make sure that the grill is assembled fully according to the assembly diagrams.

Use the grill

- Connect the cord to the grill first, and then plug the power cord into power socket. The power indicator flickers.
- Press the power button, the power indicator light will turn on.
- The temperature starts at 350°F (default setting). Press **+** or **-** button to set the temperature at 200°F, 250°F, 300°F, 350°F, 400°F or 450°F. The fan will run automatically. You can turn off the fan by pressing the fan button. The fan should be kept running during the whole grilling process.
- The default temperature system is in Fahrenheit. To switch between Celsius and Fahrenheit system, press and hold both the **+** and **-** buttons for a few seconds.
- After grilling, press the power button to shut down the appliance. Then the fan will power off automatically. Unplug the power cord from the outlet and allow the appliance to cool down completely. Then disassemble the appliance for cleaning.

Note:

- Use a meat thermometer to make sure the food is roasted at a safe temperature. The fan should be kept running throughout the grilling to prevent grease accumulating.
- You may adjust the cooking temperature during the cooking process. To keep food warm, set the temperature at 200°F.
- Before starting to grill, always connect the power cable to the device first, then plug the cord to the outlet. After grilling, always remove the plug from the outlet first, then disconnect the cable from the device.
- Do not block the holes in the drip tray with food particles, otherwise fat will not drain into the water tray.

Operating Instructions

Cooking Guide

Tips:

- Be careful not to transfer germs from raw meat to cooked meat. Use separate utensils and platters for raw and cooked meat.
- Always marinate in a tightly covered nonmetal dish and turn the food occasionally. Be sure to refrigerate all meats while marinating.
- If leftover wet marinade is to be used as a sauce with the cooked food, be sure to place it in a small pan and heat to a rolling boil before serving to eliminate bacterial growth.
- Similar to a stove top frying pan, grease from high-fat foods, such as bacon or sausage, may splatter on the countertop. Protect the countertop as necessary.
- Before grilling, partially cook bone-in chicken, ribs, and uncooked smoked or fresh sausages for best results. If not partially cooked, these meats may become overbrowned on the outside before the center is done.
- To prevent scratching the coating, use only nonmetallic utensils. Do not cut food on the grill plate using sharp utensils, such as forks or knives, that can scratch the cooking surface.
- Do not use steel wool or other metal pads. They could leave coarse scratches. Always rinse thoroughly and dry immediately with a soft towel.

Set the cooking temperature by referring to below **Grill Temperature Chart** and **Griddle Temperature Chart**.

Grill Temperature Chart

Food	Temperature
Chicken breast, boneless	350°F
Chops: Lamb, Pork, Veal	350°F
Fish	350°F
Hamburgers	450°F
Shrimp	350°F
Spare ribs	350°F
Steak	450°F

Griddle Temperature Chart

Food	Temperature
Bacon	350°F
Eggs	300°F
French Toast	350°F
Grill Cheese Sandwiches	350°F
Hash Browns	350°F
Pancakes	350°F
Sausages	350°F

Operating Instructions

During the cooking, you can use a thermostat to check the internal meat temperature by referring to below **Cooking Chart**. The cooking time depends upon the thickness and desired degree of doneness of food. Foods can be grilled at maximum temperature. However you may wish to reduce the temperature for certain items. Low temperatures will keep foods warm once cooked.

Cooking Chart

Food Item	Temperature
Fish	155°F
Shrimp	155°F
Chicken Drumsticks	176°F
Chicken Wings	176°F
Steak	140°F–165°F
Pork Chops	160°F
Burgers	160°F
Sausages	160°F

Cleaning and Maintenance

- Cleaning and maintenance must be carried out after the grill cools down.
- Before cleaning or maintenance, pull the plug out of the power socket first and then pull the detachable cord from the appliance.
- Never wash any of the parts in a self-cleaning oven. High temperature will damage the parts.
- Do not clean the fan. The water tray drip tray, griddle plate and grill plate can be cleaned in dishwasher, while the rest parts can only be cleaned by hands.
- Never immerse the appliance, power cord or the plug in water or other liquids. Improper maintenance may cause fire, property damage, serious injuries or death.
- Do not clean the grill with oven cleaning agents, abrasive cleaners, or cleaning agents contain acid or non-organic alcohol.
- Do not clean the grill with a metal scraper. Metallic parts may detach from the scraper and cause a short circuit between the electric parts.
- Do not put the hot plate in cold water. Always wait until the device cools down completely before cleaning.
- Do not soak the grill plate or the griddle plate. This could damage the non-stick coating.
- Clean the grill timely to avoid accumulating fat.
- Dry all parts completely after cleaning.

Clean the housing

- Before cleaning the housing, take the fan out first.
- Clean the housing with a soft cloth and mild detergent.
- Rinse the housing with clean water and dry completely.

Clean the heating element

- Wipe the heating element with a moist cloth. Do not scratch the heating element.
- Do not immerse the heating element in water.
- Use a dry cloth to dry the heating element.
- After cleaning, reassemble the grill according to the assembly instructions.

Cleaning and Maintenance

Remove the fan

Turn over the appliance



Slide out the fan cover



Take out fan



ATTENTION:

- Make sure the fan is assembled well and the fan cover is closed before use.
- Do not use the grill without fan. Fat will accumulate inside the grill and affect the operation of the grill.

Troubleshooting

PROBLEMS	SOLUTIONS
The power indicator does not light on.	Check if the power cord is connected to the appliance and the power socket securely.
The fan indicator lights on but the working sound can not be heard.	The fan cover maybe open. Disconnect the plug from the outlet and close the fan over.

Warranty

hOme™ offers a limited two-year warranty (“warranty period”) on all of our products purchased new and unused from hOme Technologies, LLC or an authorized reseller, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation: (a) normal wear and tear; (b) abuse, mishandling, accident, or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modifications of the product other than by hOme™; (e) commercial or non-household use.

The hOme™ warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. hOme™’s exclusive obligation under this warranty is limited to such repair or replacement.

A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. We recommend that you register your product on our website, homelabs.com/reg. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by hOme™, are used. You may also arrange for service after the warranty expires at an additional cost.

These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a hOme™ product, please contact us at 1-800-898-3002, and we will do our best to resolve it for you.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country or province to province. The customer may assert any such rights at their sole discretion.

Manufacturing Info

This manual is to be used with all items with the model number


HME050392N

SKU# : HME050392N
Rated voltage/Frequency/Power: 120V / 60Hz / 1500W


Warning

Keep all plastic bags away from children.


Contact Us

 CHAT WITH US

homelabs.com/chat
Mon–Fri 10AM–5PM EST

 CALL US

[1-\(800\)-898-3002](tel:1-800-898-3002)
Mon–Fri 10AM–5PM EST

 EMAIL US

help@homelabs.com
Respond within twelve hours



For household
Use Only

1-800-898-3002
help@homelabs.com
homelabs.com/help

© 2016 hOme Technologies, LLC
37 East 18 Street, 7th Floor
New York, NY 10003

All rights reserved. hOme®. Printed in China.