

Warnings and symbols used	Page 30
Introduction	Page 33
Intended Use.....	Page 33
Features	Page 34
Package contents.....	Page 34
Technical data	Page 35
General Safety Warnings.....	Page 36
Use.....	Page 40
Charging the rechargeable battery ...	Page 40
LED status	Page 41
Checking the rechargeable battery charge level	Page 41
Removing/inserting the rechargeable battery	Page 42
Maintenance and storage	Page 42
Cleaning	Page 43
Disposal.....	Page 43
Warranty and service	Page 45
Warranty.....	Page 45
Warranty claim procedure.....	Page 47
Service	Page 48

Warnings and symbols used

These instructions for use contain the following symbols and warnings:



DANGER! This symbol with the signal word “DANGER” indicates a hazard with a high level of risk which, if not avoided, will result in serious injury or death.



WARNING! This symbol with the signal word “WARNING” indicates a hazard with a medium level of risk which, if not avoided, will result in serious injury or death.



CAUTION! This symbol with the signal word “CAUTION” indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



ATTENTION! This symbol with the signal word “ATTENTION” indicates a potential property damage, if not avoided, could result in property damage.



NOTE: This symbol with the signal word “NOTE” provides additional useful information.



 
Direct current / voltage



WARNING! EXPLOSION HAZARD! A warning with this symbol and word “WARNING! EXPLOSION HAZARD” indicates the potential threat of explosion. Failure to observe this warning may result in serious or fatal injuries and potential property damage. Follow the instructions in this warning to prevent serious injuries, a danger to life or property damage!

Li-Ion


Lithium-ion battery

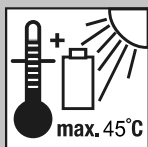

Protect the battery pack against heat and continuous intense sunlight.



 Protect the battery pack from fire.

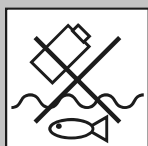

Protect the battery pack against water and moisture.



This symbol means that the operating instructions must be observed before using the product.



CE mark indicates conformity with relevant EU directives applicable for this product.

RECHARGEABLE BATTERY

20V 4Ah

● Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. The instructions for use are part of the product. They contain important information concerning safety, use and disposal. Before using the product, please familiarise yourself with all of the safety information and instructions for use. Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

● **Intended Use**

The rechargeable battery is compatible with all devices from the Parkside X 20 V Team series. The rechargeable battery may only be charged using chargers from the Parkside X 20 V TEAM series.

This rechargeable battery is not intended for commercial use. Any other usage of or modification to the appliance is deemed to be improper and carries a significant risk of accidents. The manufacturer accepts no responsibility for damage(s) attributable to misuse.

● **Features**

- 1 Release button for rechargeable battery
- 2 Rechargeable battery
- 3 Charging level LEDs (red/ orange/green)
- 4  button (charging level)
- 5 Power cord with power plug
- 6 Rapid battery charger (not included)
- 7 Charging control LED - red
- 8 Charging control LED - green

● **Package contents**

- 1 Rechargeable battery 20V 4Ah
- 1 Set of operating instructions

● Technical data

Battery:	PAP 20 B3
Type:	LITHIUM ION
Rated voltage:	max. 20 V ===
Capacity:	4 Ah
Cells:	10
Energy value:	80 Wh
Recommended ambient temperature:	max. 45 °C
While charging:	+4 to +40 °C
During operation:	+4 to +40 °C
During storage:	+20 to +26 °C

To charge the rechargeable battery, only use the chargers from the Parkside X 20 V TEAM series.

Charging time for battery PAP 20 B3:

Charger	PLG 20 C1 PLG 20 A4	120 minutes
	PLG 20 C3 PLG 20 A3 PDSL G 20 A1	60 minutes
	Smart PLGS 2012 A1	42 minutes (quick charging mode) 240 minutes (ECO charging mode)

Customers can obtain compatible replacement batteries and chargers from the LIDL online shop www.lidl.de.



General Safety Warnings

 
⚠ WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

- a) Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of rechargeable battery may create a risk of fire when used with another rechargeable battery.
- b) Use power tools only with specifically designated rechargeable battery.** Use of any other rechargeable batteries may create a risk of injury and fire.
- c) When the rechargeable battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) Under abusive conditions, liquid may be ejected from the rechargeable battery; avoid contact. If contact accidentally**

occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

 CAUTION! RISK OF EXPLOSION!

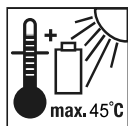

Never charge non-rechargeable batteries!



Protect the rechargeable battery from heat, for example from continuous exposure to sunlight, fire, water and moisture.



There is a risk of explosion.

e) Do not use a rechargeable battery for tool that is damaged or modified. Damaged or modified batteries exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.

f) Do not expose a rechargeable battery or tool to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause an explosion.

- g) Follow all charging instruction and do not charge the rechargeable battery or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of the fire.
- h)** The safety instructions of the compatible chargers must be observed.

Service

- a) Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- b) Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

● Use

● Charging the rechargeable battery

NOTE: The rechargeable battery [2] may be charged at any time without reducing the life. Interrupting the charging process does not damage the rechargeable battery [2].

- Charge the rechargeable battery [2] before use when it is at medium or low charging level.
- The charging control LEDs (red [7] and green [8]) indicate the status of the charger [6] (not included) and the rechargeable battery [2].
- Insert the rechargeable battery [2] into the charger [6] (not included).
- Connect the power plug [5] to a socket-outlet.
- When the rechargeable battery [2] is fully charged: Remove the rechargeable battery from the charger [6] (not included). Disconnect the power plug [5] from the socket-outlet.

● LED status

Red LED lights up The rechargeable battery is charging.

Green LED lights up The rechargeable battery is fully charged.

Green and red LED flashing The rechargeable battery is defective.

Red LED flashing The rechargeable battery is too cold or too warm.

Green LED lights up (without rechargeable battery) Charger is ready for use.

● Checking the rechargeable battery charge level

- Press the  button 4 to check the status of the rechargeable battery 2. The status/remaining charge will be shown on the charging level LED 3 as follows:
 - Red / orange / green = maximum charge
 - Red / orange = medium charge
 - Red = low charge

● Removing/inserting the rechargeable battery

Only insert the rechargeable battery [2] once the battery operated tool is ready for use. Risk of injury!

1. To insert the rechargeable battery [2], place it on the guide track and push it into the appliance. It will audibly snap in.
2. To remove the rechargeable battery [2] from the appliance, press the rechargeable battery release button [1] and pull out the rechargeable battery [2].

● Maintenance and storage

 
- Only store the rechargeable battery [2] partially charged. The rechargeable battery [2] should be charged to 40 to 60 % (red and orange LED in the charge indicator [3] light up) before storing for extended periods.
- Check the rechargeable battery [2] charge about every 3 months when storing for extended periods. Recharge as necessary.

● Cleaning

- Clean out dust and debris from charger vent and electrical contacts using a soft brush.
- Never use flammable or combustible solvents around battery packs, charger, or tools.

● Disposal

The packaging is made of environmentally friendly materials, which you be disposed through your local recycling facilities.

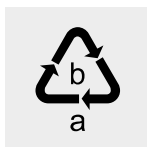


Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with following meaning:
1 - 7: plastics / 20 - 22: paper and fibreboard / 80 - 98: composite materials.

Product:



The product incl. accessories and packaging materials are recyclable and are subject to

 extended producer responsibility. Dispose them separately, following the illustrated Info-tri (sorting information), for better waste treatment. The Triman logo is valid in France only.

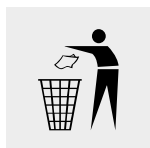

Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

Faulty or used batteries/rechargeable batteries must be recycled in accordance with Directive 2006/66/EC and its amendments. Please return the batteries/rechargeable batteries and/or the product to the available collection points.



**Environmental damage
through incorrect disposal of
the batteries/rechargeable
batteries!**

Remove the batteries/battery pack from the product before disposal.

Batteries/rechargeable batteries may not be disposed of with the usual domestic waste.

They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. The chemical symbols for heavy metals are as follows: Cd = cadmium, Hg = mercury, Pb = lead. That is why you should dispose of used batteries/rechargeable batteries at a local collection point.

● **Warranty and service**

● **Warranty**

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of material or manufacturing defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Keep the original sales

receipt in a safe location as this document is required as proof of purchase.

Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.

Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. The warranty period is not extended as a result of a claim being granted. This also applies to replaced and repaired parts.

This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty covers material or manufacturing defects. This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g. batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g. switches or glass parts.

● **Warranty claim procedure**

To ensure quick processing of your claim, observe the following instructions:

Make sure to have the original sales receipt and the item number (IAN 418077_2210) available as proof of purchase.

You can find the item number on the rating plate, an engraving on the product, on the front page of the instruction manual (bottom left), or as a sticker on the rear or bottom of the product.

If functional or other defects occur, contact the service department listed below either by telephone or by e-mail.

Once the product has been recorded as defective you can return it free of charge to the service address that will be provided to you.

Ensure to enclose the proof of purchase (sales receipt) and a short, written description outlining the details of the defect and when it occurred.

● Service

GB Service Great Britain

Tel.: 08000569216

E-Mail: owim@lidl.co.uk

IE Service Ireland

Tel.: 1800 200736

E-Mail: owim@lidl.ie



Avertissements et symboles utilisés.....	Page	50
Introduction	Page	53
Utilisation prévue.....	Page	53
Caractéristiques.....	Page	54
Contenu de l'emballage	Page	54
Données techniques	Page	55
Avertissements de sécurité générale.....	Page	56
Utilisation.....	Page	60
Chargement de la batterie rechargeable	Page	60
Statut de LED	Page	61
Vérification du niveau de charge de la batterie rechargeable.....	Page	62
Retrait/insertion de la batterie rechargeable	Page	62
Maintenance et stockage.....	Page	63
Nettoyage	Page	63
Mise au rebut	Page	64
Garantie et service	Page	66
Garantie.....	Page	66
Faire valoir sa garantie	Page	70
Service après-vente	Page	71