

**REPAIR
PARTS
LIST**

**587.15362101C
587.15363101C
587.15369101C**

**For Parts or Service:
Call
1-800-4-MY-HOME®
(1-800-469-4663)**

**Or Visit
www.sears.com**



24-INCH BUILT-IN DISHWASHER

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the right hand side of the front tub flange, directly behind the door of the dishwasher.


All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Parts & Repair Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free number listed to the left or visit sears.com.

When requesting service or ordering parts, always provide the following information:

- | | |
|----------------|--------------------|
| • Product Type | • Part Number |
| • Model Number | • Part Description |

CONTROL PANEL

CAUTION: Use the Kenmore part number to order part, not the illustration number.


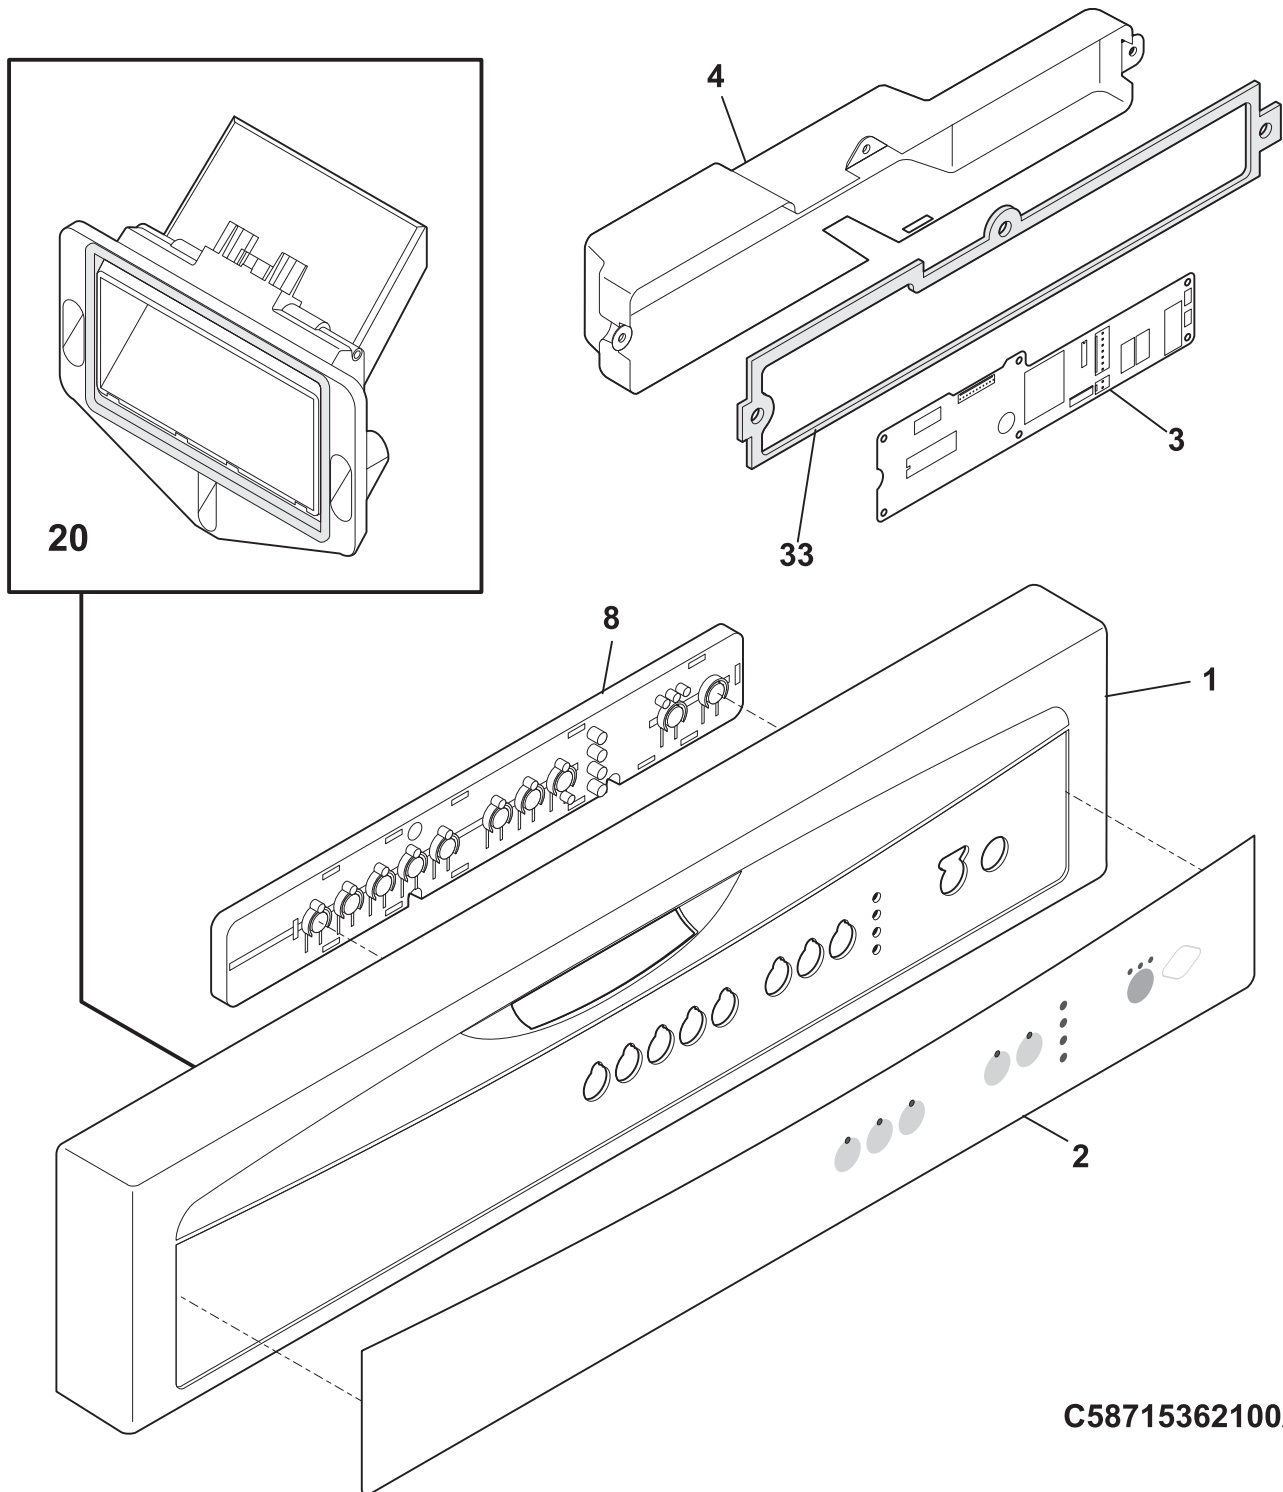
**C58715362100A**

CONTROL PANEL

CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1536 (587.15362101C)
 B 587.1536 (587.15363101C)
 C 587.1536 (587.15369101C)

POS. NO	PART NO.		DESCRIPTION
1	154645001	A - -	Panel, control, white
1	154645003	- B C	Panel, control, black
2	154856201	A - -	Insert, control panel, white
2	154856203	- B C	Insert, control panel, black
3 #	154783201	A B C	Control
4	154552101	A B C	Cover, control
8 #	154774501	A B C	Switch Assembly, tactile
20	154433001	A B C	Vent assy, static dry
20*	154793401	A B C	Screw, dry duct, (3)
33	154553501	A B C	Gasket, cover
* #	154866401	A B C	Harness, wiring, main
* #	154227501	A B C	Thermistor
*	5995607164	A B C	Repair Parts List
*	154885901	A B C	Owners Manual, English/French
*	154885903	A B C	Owners Manual, Spanish
*	154849001	A B C	Service Tech Sheet, w/wiring diagram
*	154847701	A B C	Instructions, installation
*	154849255	A B C	Energy Guide
*	154294701	A B C	Screw, #7 plas .375, (6), disp. assy.
*	154783101	A B C	Screw, PLT, 8-10

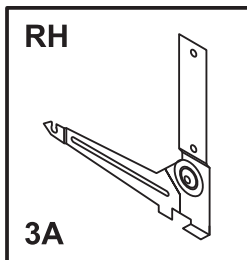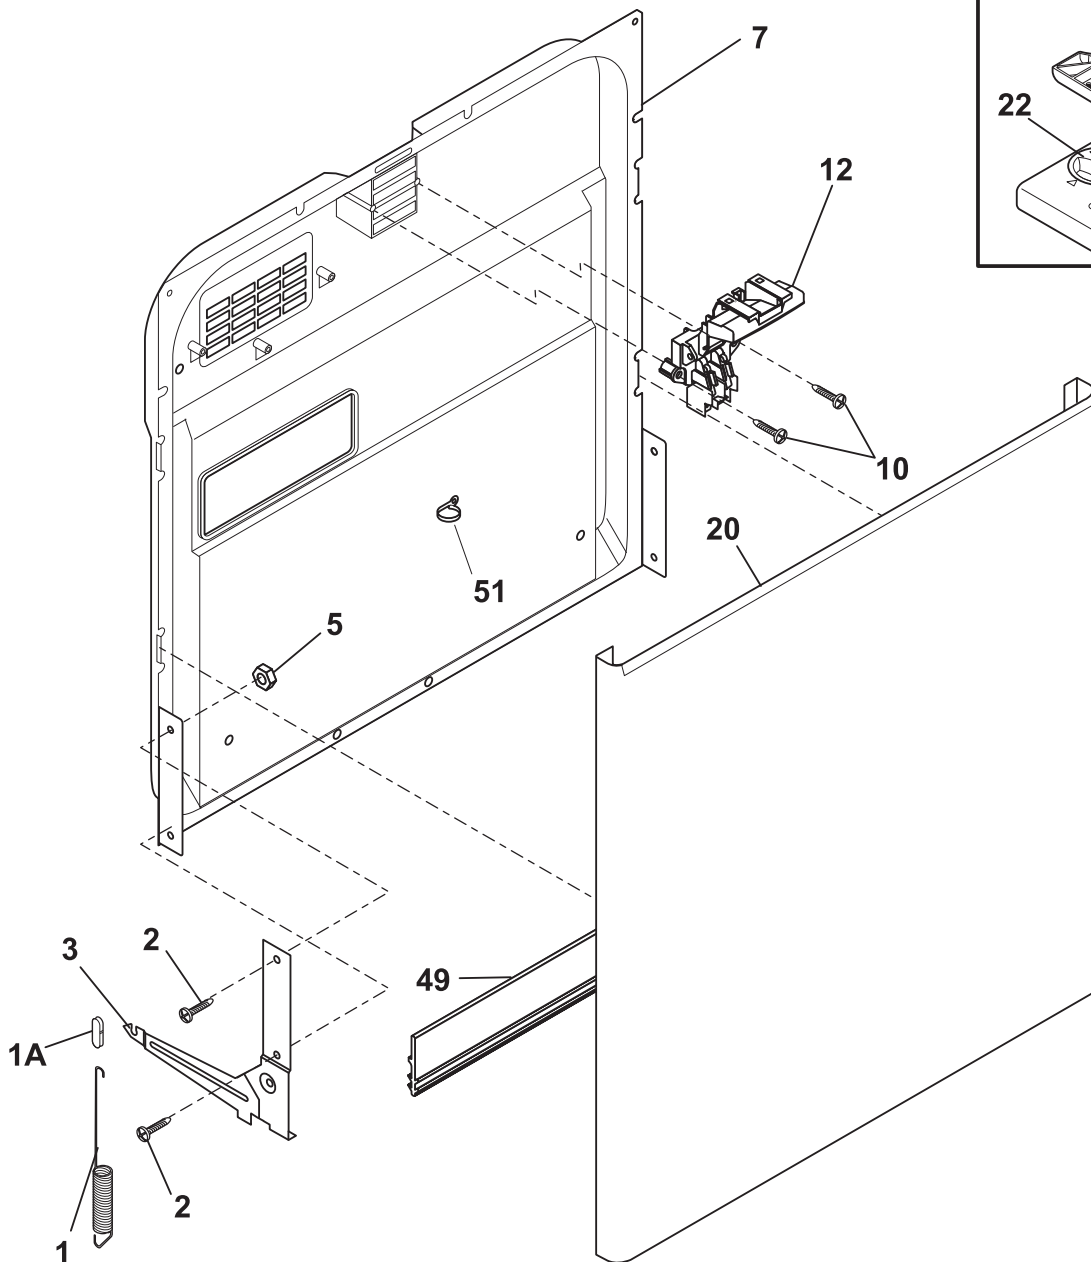

P30B0045

DOOR


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1536 (587.15362101C)
 B 587.1536 (587.15363101C)
 C 587.1536 (587.15369101C)

POS. NO	PART NO.		DESCRIPTION
1	154430501	A B C	Spring, door, (2)
1A	154325201	A B C	Linkage, door spring, (2)
2	154093301	A B C	Screw, arm assy, (4)
3	154691201	A B C	Arm Assy, LH
3A	154691101	A B C	Arm Assy, RH
*	154647101	A B C	Hinge Pin, arm assy
*	154686401	A B C	Bearing, hinge pin
5	154079601	A B C	Nut, arm assy, and handle mtg.
7	154494601	A B C	Liner, door assy.
9	154574401	A B C	Dispenser, det/rinse aid, w/o reed
9*	154294701	A B C	Screw, #7 plas .375, (6), disp. assy.
9*	154798401	A B C	Shield, dispenser
10	154103702	A B C	Screw, latch mtg, (2)
12 #	154556701	A - -	Latch assy, white
12 #	154556703	- B C	Latch assy, black
20	154829001	A - -	Door, outer, white, w/barrier
20	154829007	- B -	Door, outer, stainless, w/barrier
20	154829003	- - C	Door, outer, black, w/barrier
20*	154754701	A B C	Screw, truss hd, 8-18 type AB
22	154388801	A B C	Cap, Rinse aid
49	154576501	A B C	Gasket, door, bottom
51	154320301	A B C	Clamp, drip loop, wire
*	154409401	A B C	Screw, ground, #8-18 x .375

TUB

CAUTION: Use the Kenmore part number to order part, not the illustration number.

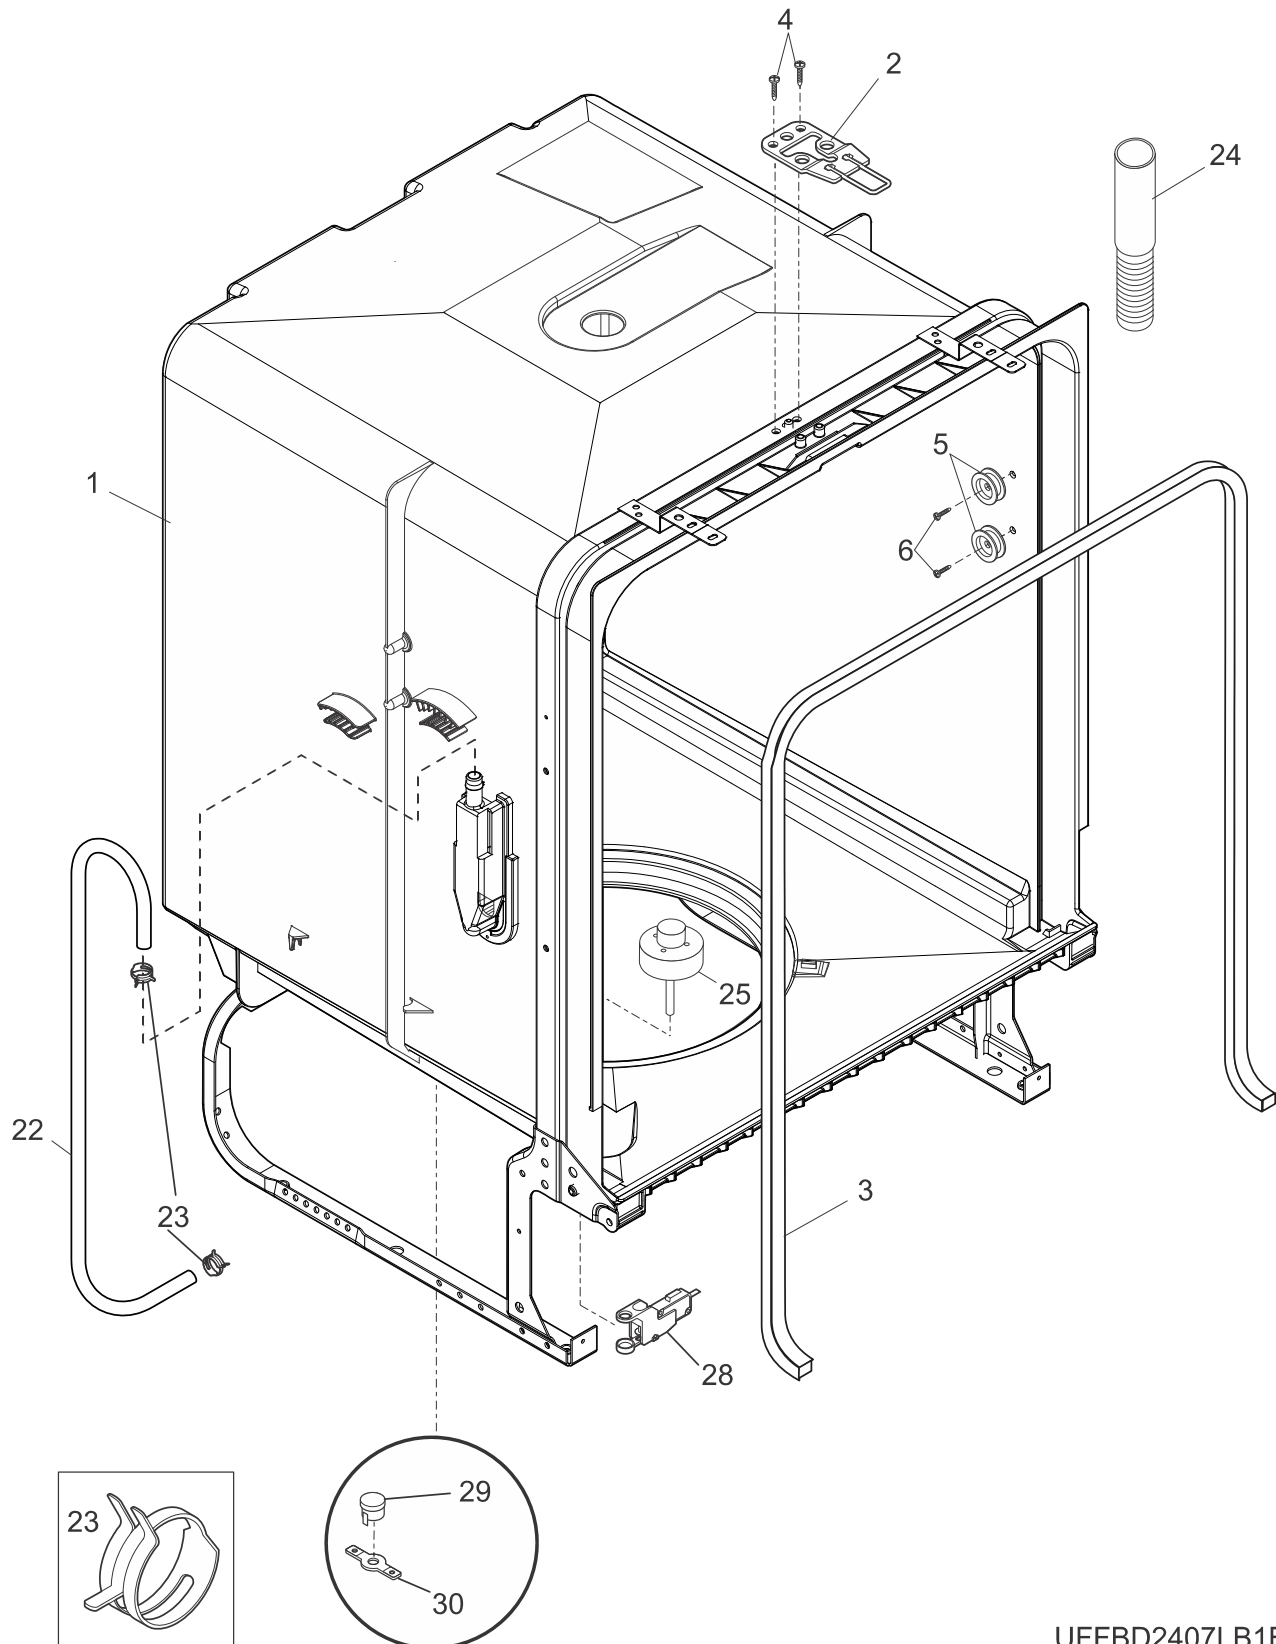

UFFBD2407LB1B

TUB


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1536 (587.15362101C)
 B 587.1536 (587.15363101C)
 C 587.1536 (587.15369101C)

POS. NO	PART NO.		DESCRIPTION
1 #	154885501	A B C	Tub assy, w/frame parts, white, PW
*	154685101	A B C	Gasket, tub, corner, (2)
2	154662601	A B C	Strike, door
3	154782401	A B C	Gasket, tub
4	154825401	A B C	Screw, hex hd, 8-18 x .4, w/washer
5	154333902	A B C	Roller, tub
6	5303943103	A B C	Screw, w/washer, (8)
22	154577401	A B C	Tubing, water inlet
23	5303318539	A B C	Clamp, tubing, (2)
24 #	154753201	A B C	Hose, drain
*	154380601	A B C	Clamp, hose, 1.5" open, worm gear, (5)
25 #	154767801	A B C	Float
28 #	154773201	A B C	Switch Assy, float
29 #	154642901	A B C	Thermostat, hi limit
30	154241101	A B C	Retainer, thermostat
30*	154297701	A B C	Screw, retainer-thermo
*	154641601	A B C	Insulation, blanket
*	154041001	A B C	Screw, plask #1, 10-10 x 9/16
*	5300807270	A B C	Screw, (2), countertop mtg.

MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

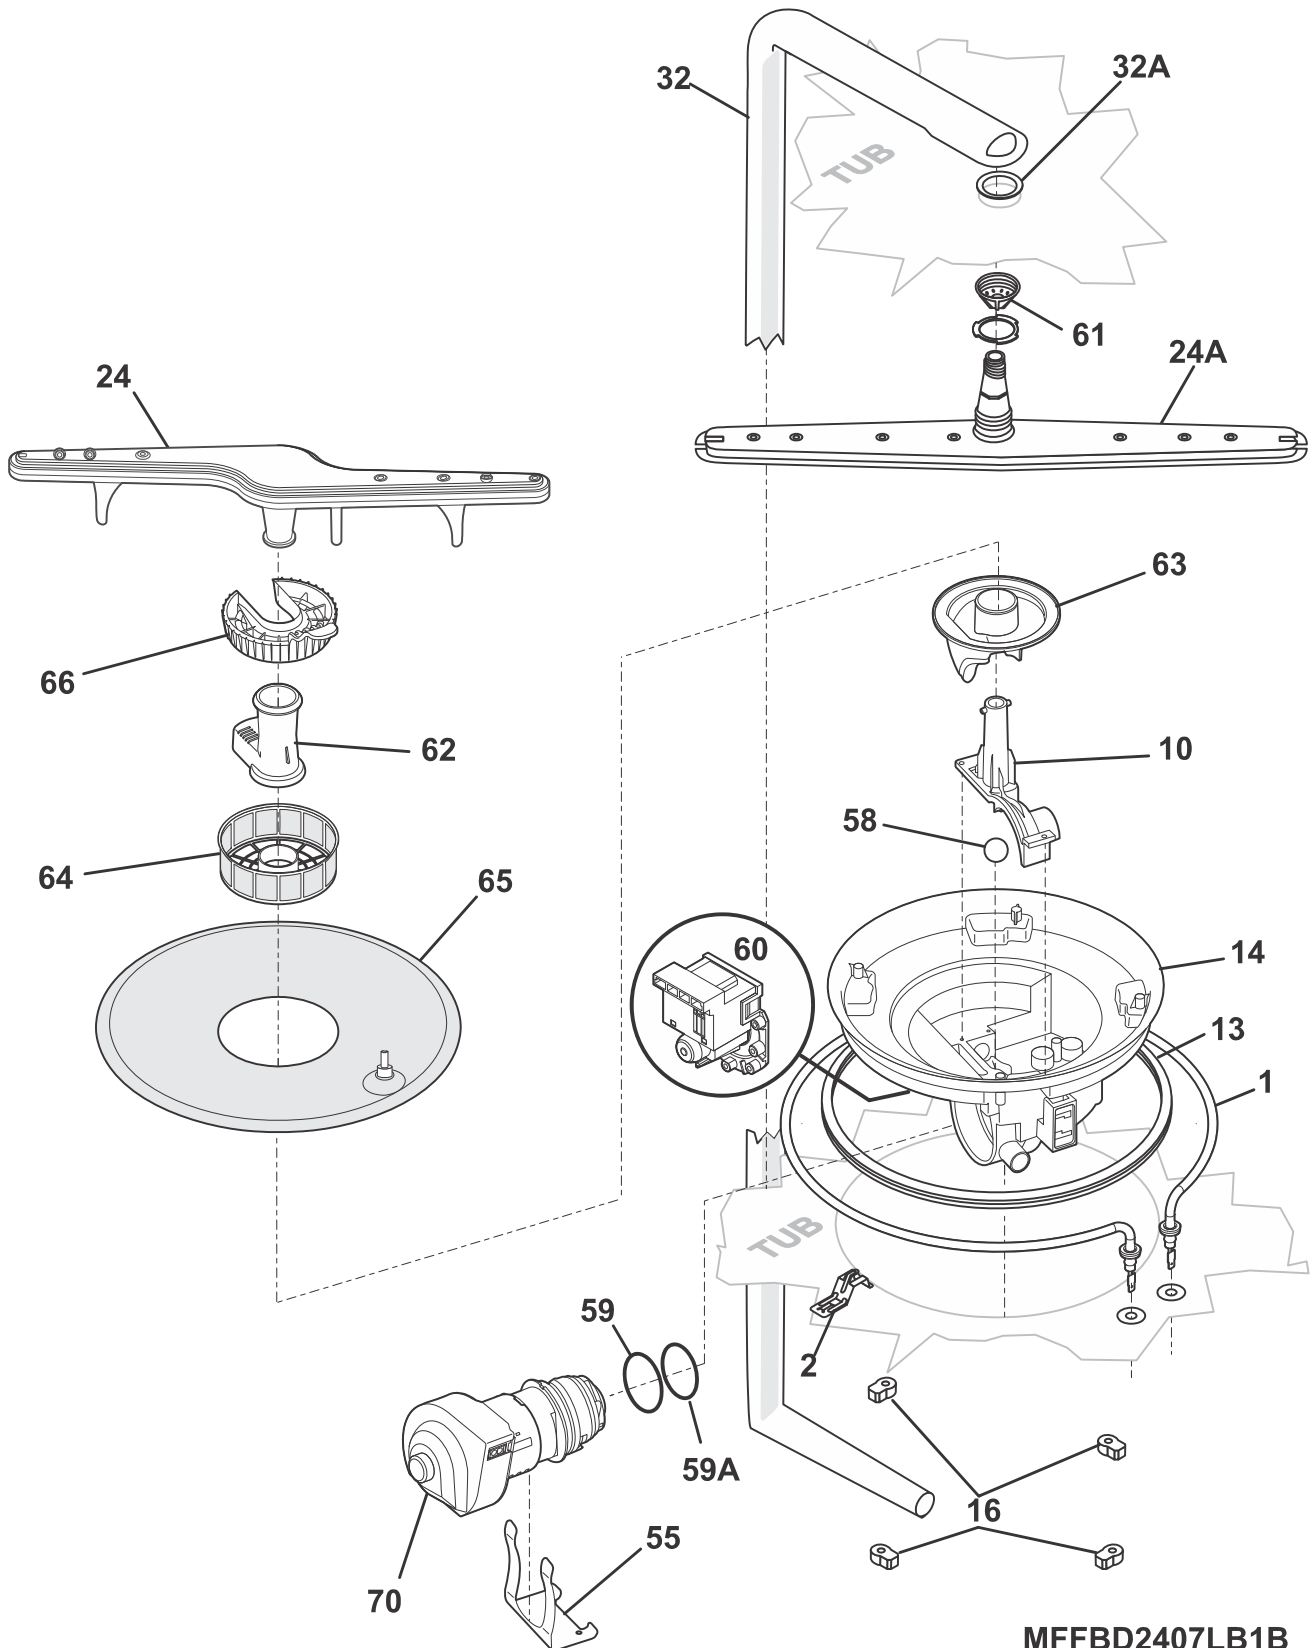**MFFBD2407LB1B**

MOTOR & PUMP


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1536 (587.15362101C)
 B 587.1536 (587.15363101C)
 C 587.1536 (587.15369101C)

POS. NO	PART NO.		DESCRIPTION
1 #	154663801	A B C	Heater, round
1*	154106202	A B C	Nut, heater, (2)
1*	154289801	A B C	Shield, heater terminal
2	154465101	A B C	Bracket, heater, (2)
10	154724001	A B C	Cover, volute
*	154783101	A B C	Screw, PLT, 8-10
13	154246801	A B C	Gasket, sump
14	154728201	A B C	Sump Assembly
16	154246502	A B C	Retainer, sump
16*	154754901	A B C	Screw, sump mtg, 8-16, (4)
24	154568001	A B C	Spray arm, white, lower, w/heat shield
24A	154313601	A B C	Spray arm, center
24A*	154252001	A B C	Nut, spray arm, center
32	154406601	A B C	Tube, delivery
32*	154106801	A B C	Clamp, hose, 1.29" open, worm gear, (2)
32A	154406401	A B C	Gasket, delivery tube
55	154595901	A B C	Bracket, motor
*	154779601	A B C	Screw, PH, 8-10, (2)
58	154246402	A B C	Check ball
59	154246901	A B C	O-ring, rear
59A	154247001	A B C	O-ring, front
60 #	154736201	A B C	Pump Assembly, drain, w/seal-impeller
60*	154617301	A B C	Flapper, valve, drain pump
60*	154741501	A B C	Screw, drain motor mtg, (3)
61	154606801	A B C	Nozzle, 3rd level, spray
62	154294101	A B C	Support, spray arm, lower
63	154776101	A B C	Base, soil director
64	154252301	A B C	Filter, soil director, white
65	154252401	A B C	Filter, polypro
66	154252701	A B C	Trap, glass
70 #	154844301	A B C	Motor & Pump Assy, w/o-rings
*	154297701	A B C	Screw, retainer-thermo
*	154825401	A B C	Screw, hex hd, 8-18 x .4, w/washer

FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

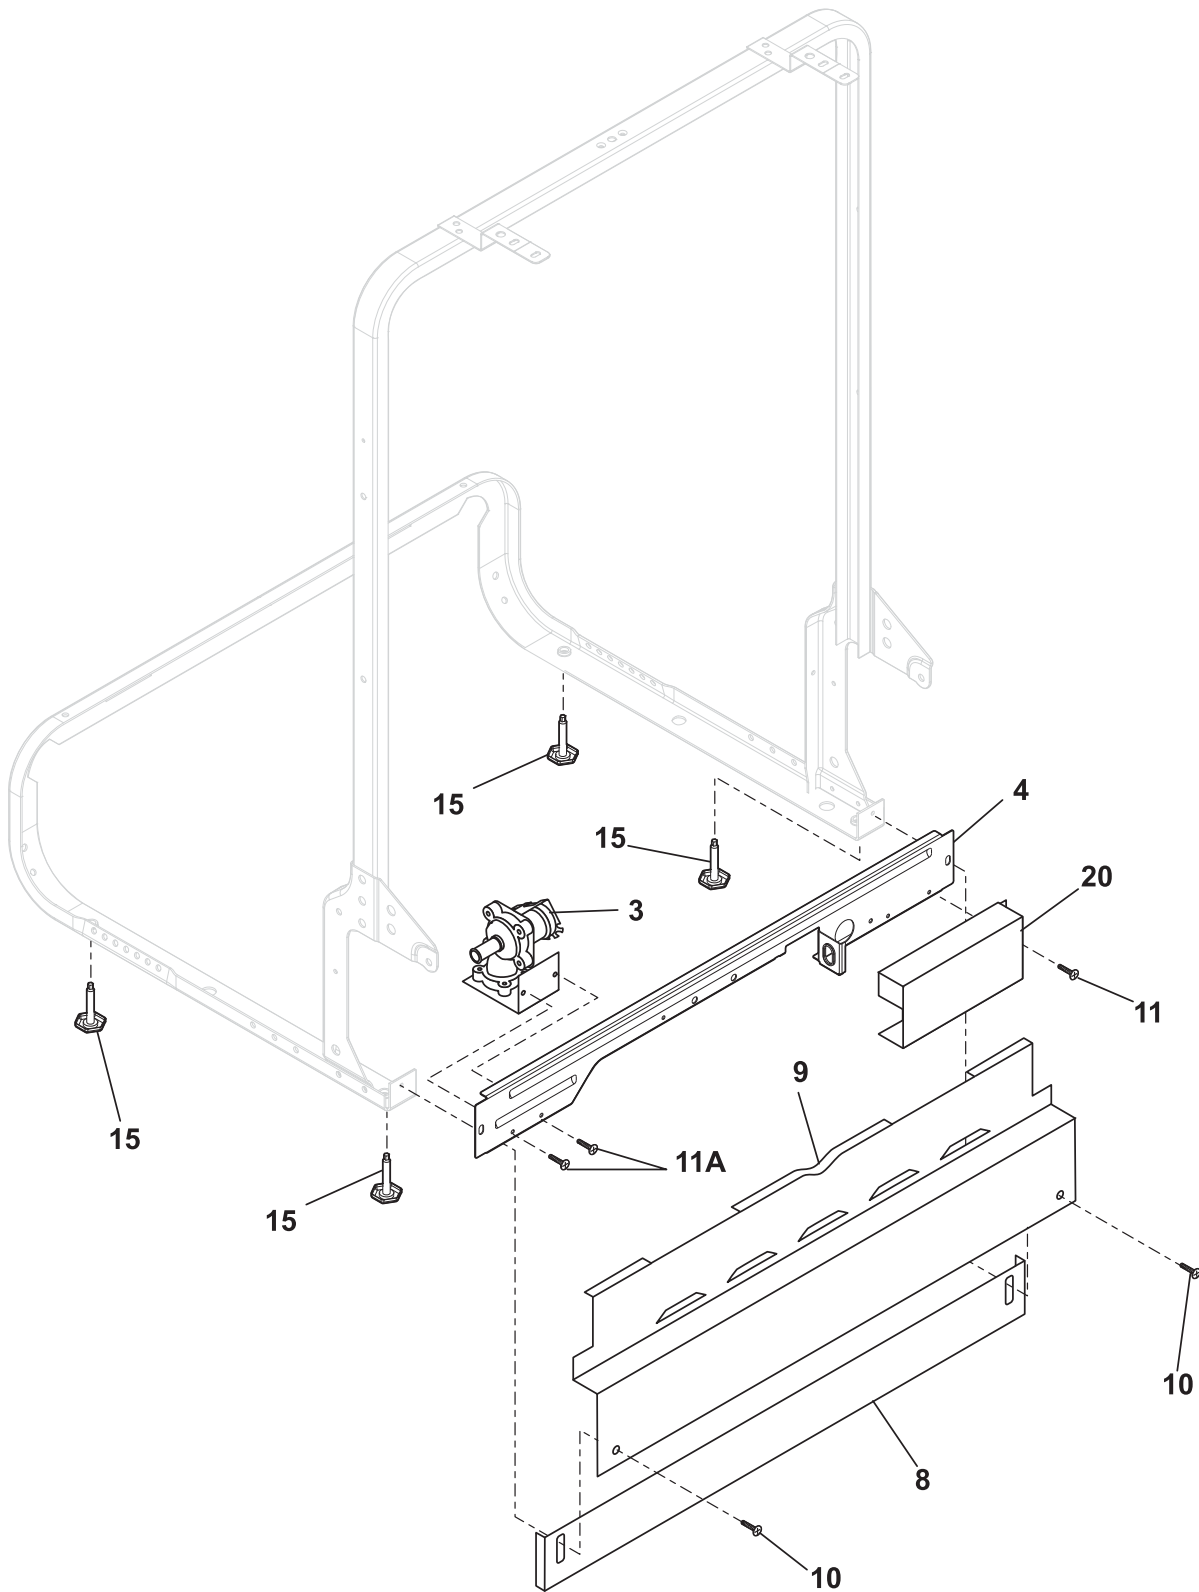**P30F0022**

FRAME


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1536 (587.15362101C)
 B 587.1536 (587.15363101C)
 C 587.1536 (587.15369101C)

POS. NO	PART NO.		DESCRIPTION
3 #	154637401	A B C	Valve, water
4	154823701	A B C	Brace, front frame
8	154589401	A - -	Toeplate, adjustable, white
8	154745503	- B C	Toeplate, adjustable, black
9	154854901	A - -	Kickplate Assy, white
9	154854903	- B C	Kickplate Assy, black
10	154371301	A - -	Screw, Phillips head, white
10	154754801	- B C	Screw, toeplate mtg, 8-18 AB hex hd, black, (2)
11	154200701	A B C	Screw, #10-32 x 3/8
11A	154825401	A B C	Screw, hex hd, 8-18 x .4, w/washer
15	154571101	A B C	Leg, leveling, (4)
20	154758501	A B C	Cover, junction box, w/label
*	154041001	A B C	Screw, plask #1, 10-10 x 9/16
*	154409401	A B C	Screw, ground, #8-18 x .375

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

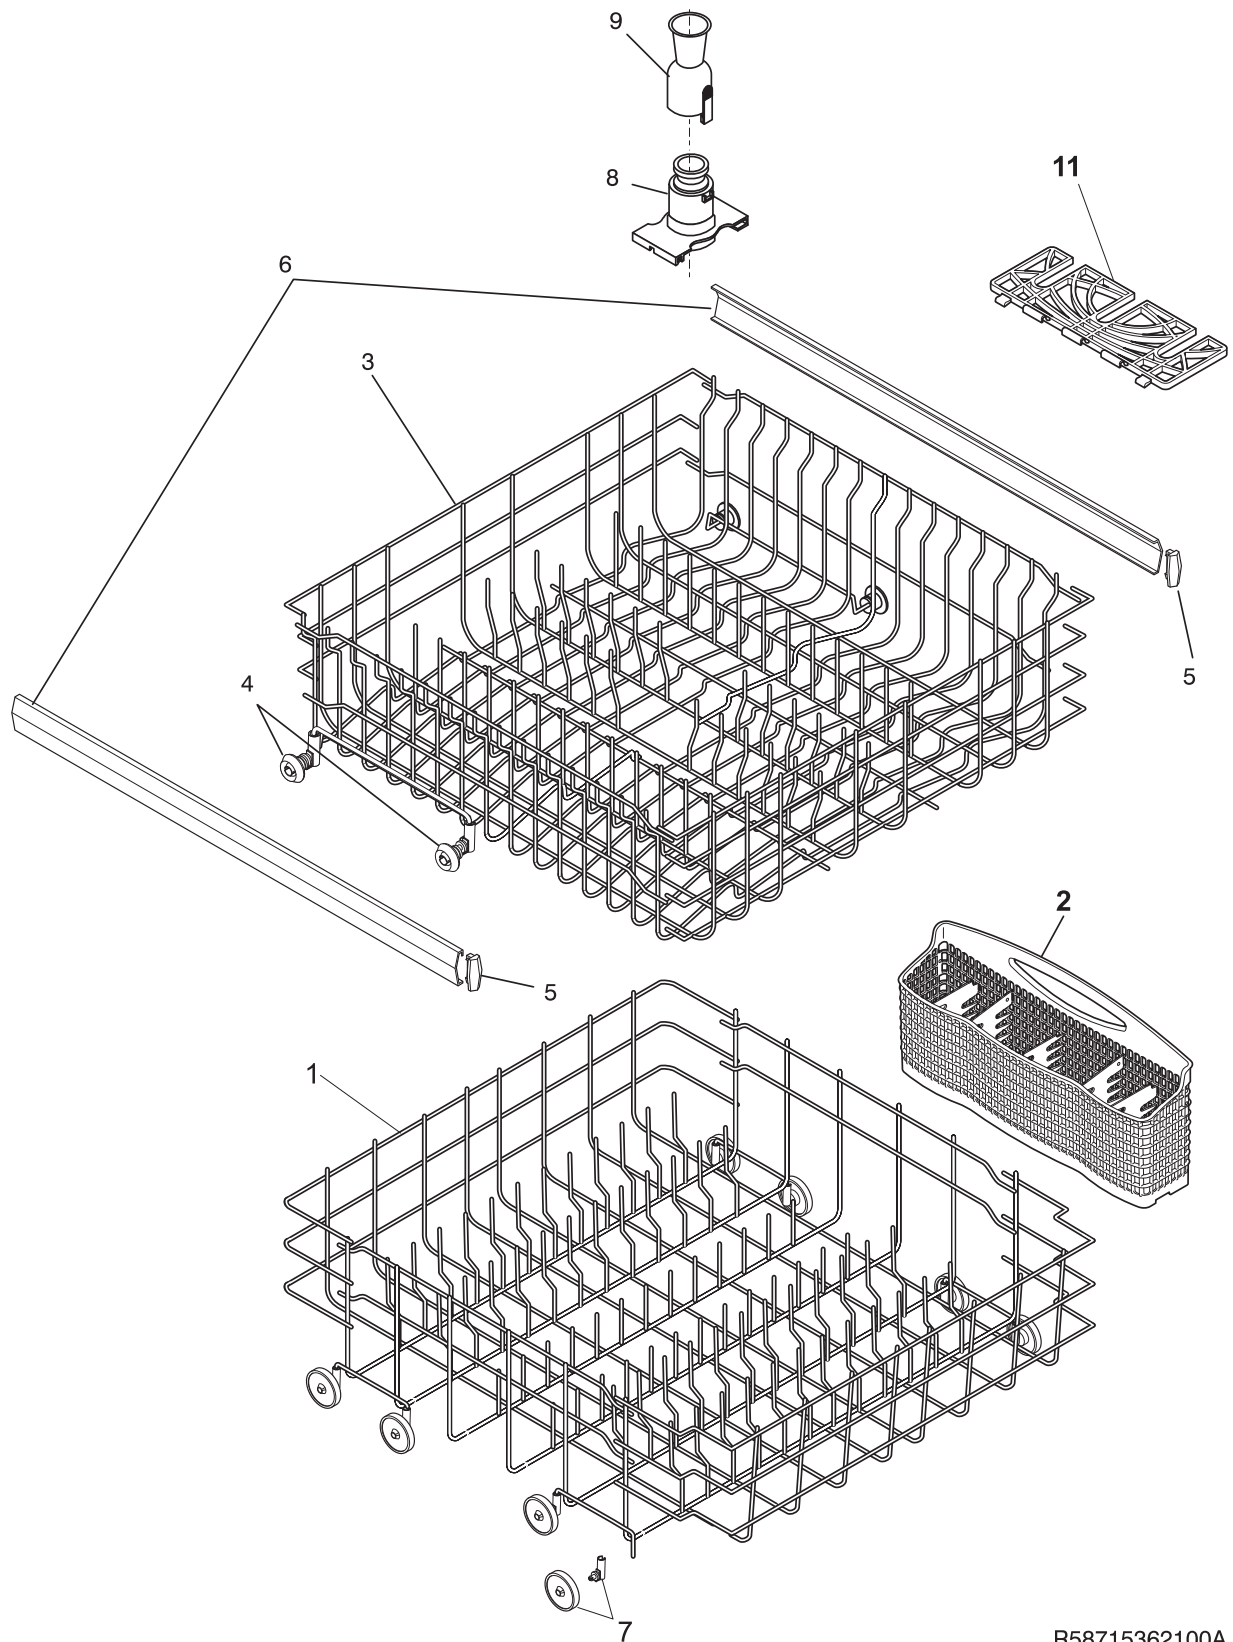

R58715362100A


RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1536 (587.15362101C)
 B 587.1536 (587.15363101C)
 C 587.1536 (587.15369101C)

POS. NO	PART NO.		DESCRIPTION
1	154319706	A B C	Rack assy, lower
2	154556101	A B C	Basket, silverware, white
3	154319524	A B C	Rack assy, upper
4	154522901	A B C	Wheel & bushing assy, upper rack, (8)
5	5300809927	A B C	Cap, slide, (4)
6	154597801	A B C	Slide, rack, upper, (2)
7	154174502	A B C	Wheel & bracket assy, lower rack
8	154728001	A B C	Base, funnel
9	154251801	A B C	Funnel
11	154793901	A B C	Shelf, cup, half width, white

WIRING DIAGRAM

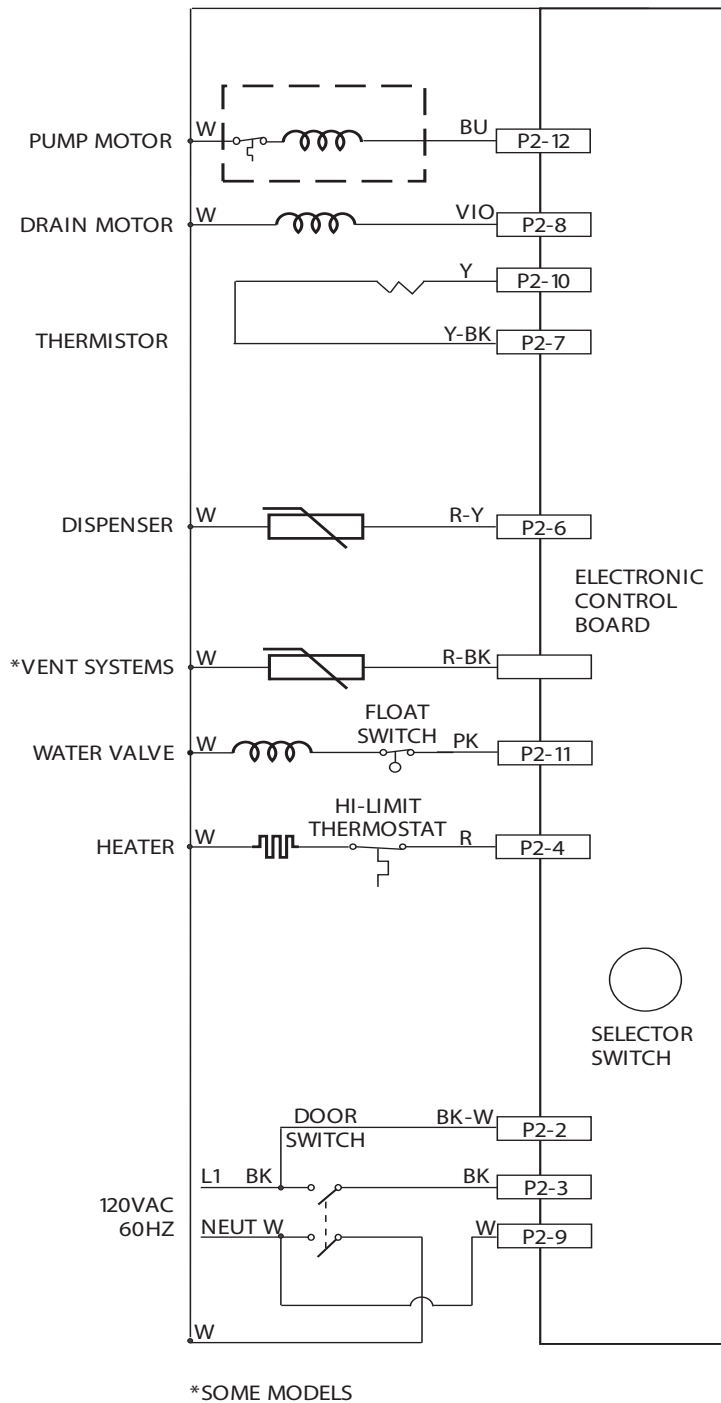

Get it fixed, at your home or ours!

Your Home

For troubleshooting, product manuals and home solutions advice:



www.managemyhome.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

www.sears.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

The Sears logo is written in a large, bold, stylized script font.

® Registered Trademark / TM Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries
® Marca Registrada / TM Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países
^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC