




## Outdoor Light Sensor Countdown Timer with Lighting Program

SKU: HODT13F  
[Instruction Manual]

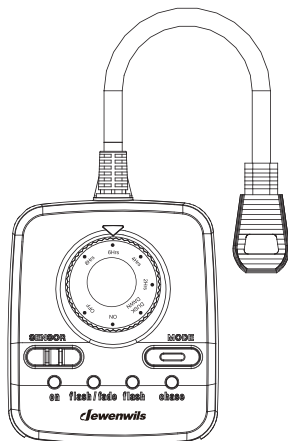

Thank you for your purchase.  
Please contact us if you have any questions.  
We will get back to you within 24 hours.  
Email: [support@dewenwils.com](mailto:support@dewenwils.com)  
Please attach your Order ID so that  
we can serve you better.

## WARNING


**To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**

1. The timer must be mounted in a vertical position with the outlets facing downward and at least 2ft above the ground level.

**Note:** The lighting program is suitable for those traditional tungsten lamps or LED light strings only, NOT for those light strings built-in lighting programs or power from motor devices.

2. Do not connect any devices which exceed the maximum ratings of the timer.
3. Do not immerse in water.
4. Children are not allowed to use the timer without supervision.
5. Do not disassemble or repair the product, but only by authorized service personnel.
6. Always unplug and store indoors when not in use.

## Product Layout

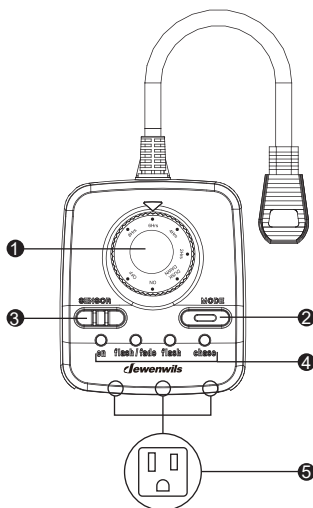

1. Timer dial: 2 to 8 hours or dusk to dawn and daily repeat function.
2. MODE: To select one of the following light set programs.  
on→flash/fade→flash→chase
3. Sensor: Sensor will turn timer on at dusk and off at dawn.
4. LED indicator:
  - on- always on steady.
  - flash/fade-flashing and fading.
  - flash-flashing randomly.
  - chase-3 outlets flashing in turn (mode activated when 2 or 3 outlets are used) .
5. Outlets: Plug the LED lamps or Tungsten lamps to be controlled by the timer into outlet.

## Operation

Rotate the dial on the timer to select one of the following settings:

OFF: No power

ON: Constant power

DUSK-DAWN: On at dusk, off at dawn automatically\*

2 Hrs: On at dusk, stays on for 2 hours\*

4 Hrs: On at dusk, stays on for 4 hours\*

6 Hrs: On at dusk, stays on for 6 hours\*

8 Hrs: On at dusk, stays on for 8 hours\*

\*Cycle repeats every 24 hours.

\*The function will start instantly when you cover the lighting sensor by moving the sensor switch.

## Notes

- 1)The timer is daily repeat after setting, in case of power failure, it will stop operating. Once power is restored, reset the desired operating mode as the operating instructions.
- 2)Once programming activates at dusk in the 2H, 4H, 6H, or 8H Mode, the program cycle will repeat until the timer is reset. Headlights, porch lights, street lamps and other external lighting sources will not interfere with the active timer program.
- 3)In the Dusk- Dawn Mode, temporary light sources like headlights, porch

lights and other external light sources will not interfere with the photocell function unless the external light source is on for more than 15 minutes. In that case, the timer will shut off until darkness is restored.

4) When set to "ON", the timer will provide continual power to attached devices until the timer is switched to "OFF", or to any of other operating modes.

**WARNING:** The timer has 10 heat emission holes on the back, please do not hang it upside down in rainy day in case of water pouring.

## **Specifications**

Input Voltage:

- 125VAC, 60Hz.

Max Power Rating For Each Receptacle:

- 125V, 60Hz, 337.5W, 2.7A.

Cord:

- SJTW 18/3 AWG.

## **Safety Information**

### **Federal Communications Commission Interference Statement**

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept

any interference, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## One Year Limited Warranty

DEWENWILS warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase.

Warranty is void if damage is caused by misuse or improper installation.

Email: [support@dewenwils.com](mailto:support@dewenwils.com).

Our dedicated customer service team will get back to you within 24 hours.



Made in China