







Dive into your next dimension


OMEGA

Instructions manual

A Package details


 Motherboard screw	 The power screw	 HDD screw
 Copper pillar		

B Schematic diagram of wire interface

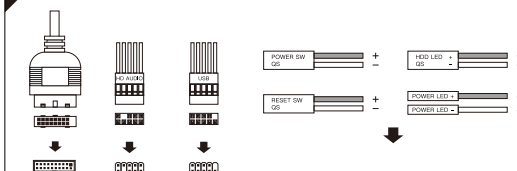


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

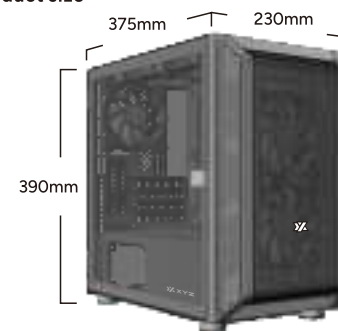


D IO panel introduction

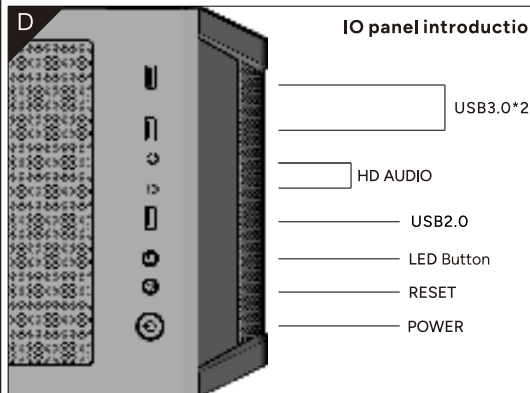


E Machine overview

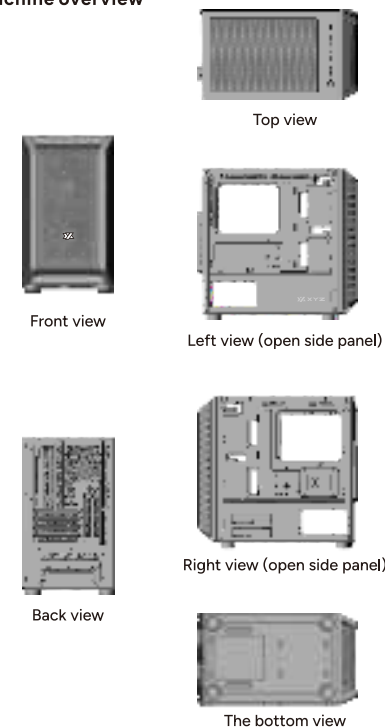

F Chassis disassembly diagram

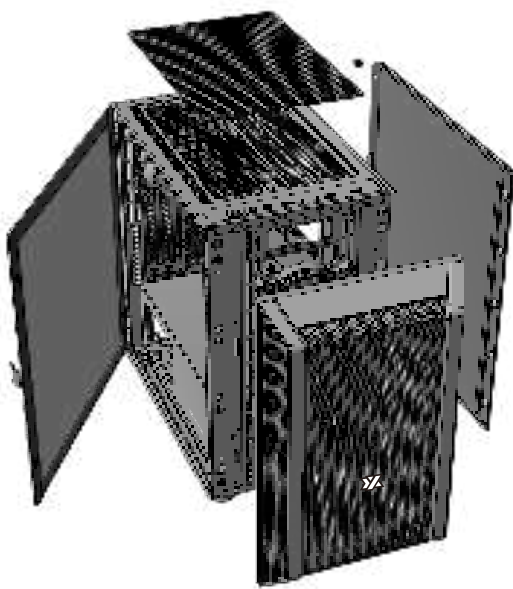


G Remove and install side panels

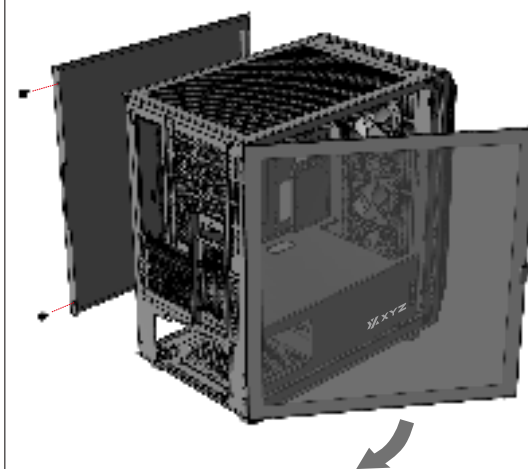


Glass side panel open: Pull the tab and pull it out
Metal side plate installation: buckle the side plate and fix it with two screws

H The power supply installation

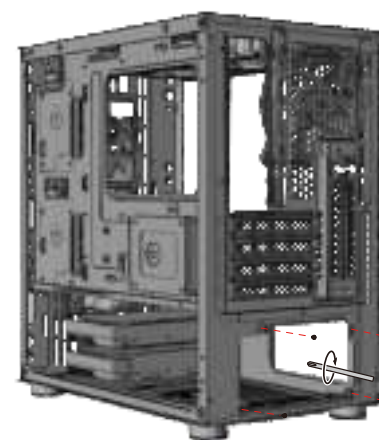

The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

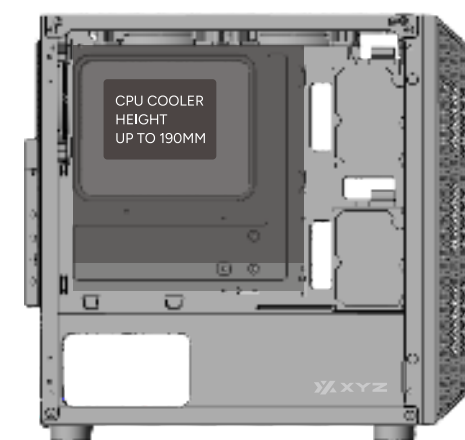

According to the motherboard type (M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 190mm

