



Model No:
DL-7211

Quick Installation Guide

5G mobile Wi-Fi



Version 1.00



English | Indonesian)

Scan me:




1 Package Contents



Notes:

1. Illustrations may differ slightly from actual product.
2. If there are any missing items in your package contents, kindly contact your seller immediately.


2 Overview

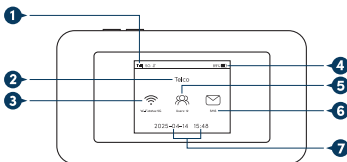

Front view



 Top view



Bottom view

Interface and Buttons

- | | | |
|--------------------|----------------------------|-----------------------------|
| 1. Signal status | 5. Total user status | 9. Home button |
| 2. Operator status | 6. SMS | 10. Nano SIM slot |
| 3. Wi-Fi status | 7. Time & date information | 11. USB Type-C port (Input) |
| 4. Battery status | 8. Power button | 12. Reset button |

Home button

- Click to toggle between time information, SSID information, speed information and Wi-Fi fast connection, or QR code information.


Toggle between Wi-Fi 2.4GHz / 5GHz

- Press and hold for 5 seconds to switch between Wi-Fi 2.4GHz mode and 5GHz mode.


3 Hardware Installation

1. Insert SIM card and battery


Please follow the following to install the battery and SIM card.

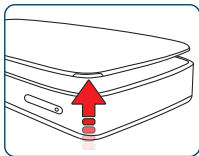


1. Open the battery cover upwards.

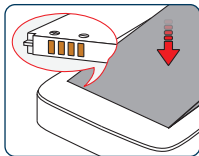

2. Insert the battery into the battery compartment gently.

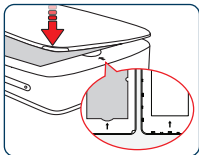

3. Put the battery cover back to its original position.

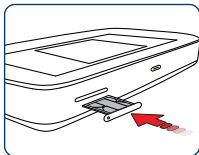

4. Use a SIM ejector pin (or a small pointed object) to eject the tray. Insert the nano SIM card into the tray, then gently push the tray back into the device.

Note: The SIM ejector pin is not provided - please use your own pin or a similar tool.

2. Charge the battery

If the unit has not been used for a long time or the battery is completely depleted, the unit may not power up immediately after the charger is plugged in. Please charge the battery for a period of time before trying to turn it on.

Note:

1. **Recharge the battery:** connect the provided USB cable to DL-7211's USB Type-C port.
2. **Power on:** Press and hold the power button for 5-10 seconds until power is turned on.

4 Web-based Configuration

1. Connecting to the device.


A. With Wi-Fi connection.

- Use your normal Wi-Fi application on the client to search for the available wireless network
- Select the SSID of your device (default SSID **Prolink_xxxx** from the device screen) to connect
- Default password is **prolink12345**

B. With USB connection.

- Connect the device with USB cable into Computer USB port
- NDIS driver will be installed automatically

2. Open the browser and enter <http://192.168.1.1> (<http://192.168.2.1> with USB connection). Enter default Username: **admin** and Password: **password** to login.

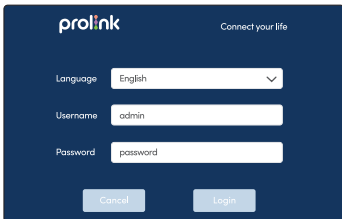

The screenshot shows the Prolink web-based configuration interface. At the top left is the 'prolink' logo, and at the top right is the text 'Connect your life'. Below this, there are three input fields: 'Language' with a dropdown menu showing 'English', 'Username' with the text 'admin', and 'Password' with the text 'password'. At the bottom, there are two buttons: 'Cancel' and 'Login'.

You can change WiFi SSID Name, WiFi Password and Web UI Login Password for the first time login, also can Skip it and remain the default settings.

Set Wi-Fi name and Password

For better security purpose, please set a new Wi-Fi and Login password.
The password must be at least 8 characters long and must contain uppercase letters, lowercase letters, numbers, and special characters (~!@#\$%^&*~) 3 Three of them

☒ Enable Wi-Fi password to display on screen

Language:

English

Wi-Fi Name:

ProLink_8888

Wi-Fi Password:

Confirm Password:

Login Password:

☐ Same as Wi-Fi password

Save

Skip

3. Click Wireless >> Wi-Fi Settings to change default SSID and password.

prolink

Logout

Device status ▾	Wi-Fi Settings
Internet ▾	
Wireless ▲	
Wi-Fi Settings	
Power-line	
Wi-Fi Advanced Settings	
Router ▾	
Management ▾	
SMS ▾	
Security ▾	

Main SSID

Network Name (SSID)	ProLink_8888
Security Mode	WPA2_PSK ▾
Default Wi-Fi Frequency	5G ▾
Wi-Fi Password	ProLink12345
Max Station Number	16


Apply

4. APN settings (If SIM card's APN cannot be found by Auto Mode).

- 1) Click Internet >> APN to enter APN name and the APN (provided by your operator). Then, click on the Apply button.




- 2) Click on APN selection to choose the APN name that you have just created. Then, click on the Apply button.

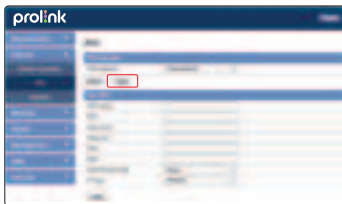

5. Enable Roaming for overseas travel.

Click Internet >> Mobile Connection >> Select "On" under Data Roaming. Then, click Apply.

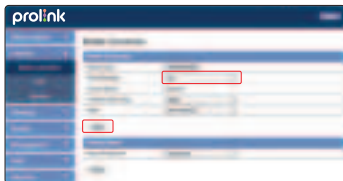


1 Isi Kemasan




Catatan:

1. Ilustrasi mungkin sedikit berbeda dari produk sebenarnya.
2. Jika ada barang yang hilang dalam isi paket Anda, harap segera menghubungi penjual Anda.


2 Keterangan Gambar

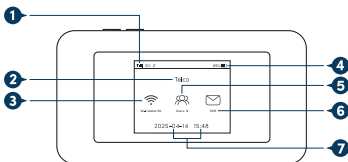

Tampak hadapan

 

Tampak atas

 

Tampak bawah

Antaramuka dan Tombol

- | | | |
|--------------------|------------------------------|-------------------------------|
| 1. Status sinyal | 5. Total status pengguna | 9. Tombol Beranda |
| 2. Status operator | 6. SMS | 10. Slot SIM nano |
| 3. Status Wi-Fi | 7. Informasi waktu & tanggal | 11. Port USB Tipe-C (Masukan) |
| 4. Status baterai | 8. Tombol daya | 12. Tombol atur ulang |

Tombol Beranda

- Klik untuk beralih antara informasi waktu, informasi SSID, kecepatan informasi dan koneksi cepat Wi-Fi, atau informasi kode QR.


Beralih antara Wi-Fi 2.4GHz / 5GHz

- Tekan dan tahan selama 5 detik untuk beralih antara mode Wi-Fi 2.4GHz dan mode 5GHz.


3 Instalasi Perangkat Keras

1. Masukkan kartu SIM dan baterai


Silakan ikuti langkah berikut untuk memasang baterai dan kartu SIM.

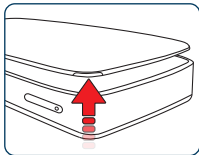


1. Buka baterainya menutupi ke atas.

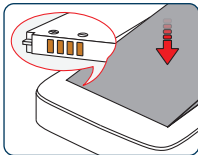

2. Masukkan baterai ke dalamnya baterai kompartemen dengan lembut.

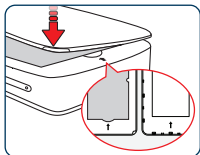

3. Pasang kembali penutup baterai ke posisi semula.

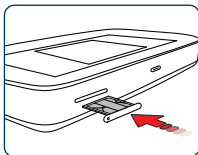

4. Gunakan pin pelepas SIM (atau benda runcing kecil) untuk mengeluarkan baki. Masukkan kartu SIM nano ke dalam baki, lalu dorong perlahan baki kembali ke dalam perangkat.

Catatan: Pin pelepas SIM tidak disediakan - harap gunakan pin Anda sendiri atau alat serupa.

2. Isi daya baterai dan hidupkan

Jika unit sudah lama tidak digunakan atau baterai benar-benar habis, unit mungkin tidak langsung menyala setelah pengisi daya dicolokkan. Harap isi daya baterai selama beberapa waktu sebelum menyalakannya kembali.

Catatan:

1. Isi ulang baterai: sambungkan kabel USB yang disediakan ke USB DL-7211 Pelabuhan Tipe-C.
2. Nyalakan: Tekan dan tahan tombol daya selama 5-10 detik hingga daya mati dihidupkan.

4 Konfigurasi Berbasis Web

1. Menghubungkan ke perangkat.


A. Dengan koneksi Wi-Fi.

- Gunakan aplikasi Wi-Fi normal Anda di klien untuk mencari jaringan nirkabel yang tersedia
- Pilih SSID perangkat Anda (SSID default **Prolink_xxxx** dari layar perangkat) untuk dihubungkan
- Default password is **prolink12345**

B. Dengan koneksi USB.

- Hubungkan perangkat dengan kabel USB ke port USB Komputer
- Driver NDIS akan terinstal secara otomatis

2. Buka browser dan masuk ke <http://192.168.1.1> (<http://192.168.2.1> dengan koneksi USB). Masukkan Nama Pengguna: **admin** dan Password: **password** untuk login.

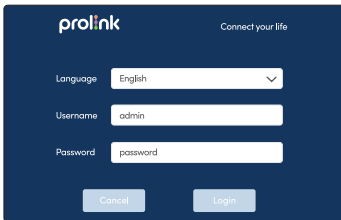

Anda dapat mengubah Nama SSID WiFi, Kata Sandi WiFi, dan Kata Sandi Login UI Web untuk login pertama kali, juga dapat Melewatinnya dan tetap menggunakan pengaturan bawaan.

Set Wi-Fi name and Password

For better security purpose, please set a new Wi-Fi and Login password.
The password must be at least 8 characters long and must contain uppercase letters, lowercase letters, numbers, and special characters (~!@#\$%^&*~) 3 Three of them

☒ Enable Wi-Fi password to display on screen

Language:

English

Wi-Fi Name:

ProLink_8888

Wi-Fi Password:

Confirm Password:

☐ Same as Wi-Fi password

Login Password:

Save

Skip

3. Klik Nirkabel >> Pengaturan Wi-Fi untuk mengubah SSID dan kata sandi default.

prolink

Logout

Device status ▾

Internet ▾

Wireless ▴

Wi-Fi Settings

Powerline

Wi-Fi Advanced Settings

Router ▾

Management ▾

SMS ▾

Security ▾

Wi-Fi Settings

Main SSID

Network Name (SSID)

ProLink_8888

Security Mode

WPA2_PSK ▾

Default Wi-Fi Frequency

60 ▾

Wi-Fi Password

ProLink12345

Max Station Number

16


Apply

4. Pengaturan APN (Jika APN kartu SIM tidak dapat ditemukan dengan Mode Otomatis).

- 1) Klik Internet >> APN untuk memasukkan nama APN dan APN (disediakan oleh operator Anda). Kemudian, klik tombol Terapkan.




- 2) Klik pada pilihan APN untuk memilih nama APN yang baru saja Anda buat. Kemudian, klik tombol Terapkan.

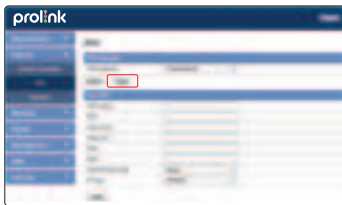

5. Aktifkan Roaming untuk perjalanan ke luar negeri.

Klik Internet >> Koneksi Seluler >> Pilih "Aktif" di bawah Roaming Data. Lalu, klik Terapkan.

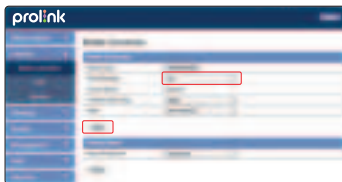

Worldwide Customer Care Centers

INDONESIA Office

Diimport oleh:

PT PROLINK INT|DATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.

Telephone : +62 21 3483 1777

Sale Enquiries : sales.id@prolink2u.com

Technical Support : support.id@prolink2u.com

MALAYSIA Office

Diimport dan Diedar oleh:

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Telephone : +60 3 8024 9151

Sale Enquiries : sales.my@prolink2u.com

Technical Support : support.my@prolink2u.com

SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.

Telephone : +65 6357 0668

Sale Enquiries : sales@prolink2u.com

Technical Support : support@prolink2u.com

Technical Support Hotline

INDONESIA : +62 21 3483 1717

MALAYSIA : +60 3 8023 9151

SINGAPORE : +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays.

Register online for your Product Warranty at www.prolink2u.com

Prolink is a registered trademark of Fida International (S) Pte Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Product images are purely for illustrative purposes and may differ from the actual product. Specifications are subjected to changes without prior notice. Copyright © 2025 Fida International (S) Pte Ltd.