



WIRELESS HEADPHONES

WIRELESS HEADPHONES



BAUHN®

English02

Español09

AFTER SALES SUPPORT
SERVICIO POSVENTA

854528



US

1-800-372-5715



northamerica@balkobrand.com

MODEL / MODELO: CE220818 12/2025
SELLABLE ID / ID DE VENTA: 683690

1

YEAR WARRANTY
AÑO DE GARANTÍA

CONTENTS

| | |
|----------------------------------|---|
| 1 Safety Warnings | 3 |
| 2 FCC Information | 4 |
| 3 Product Overview | 5 |
| 4 Button Controls | 6 |
| 5 Charging The Battery | 6 |
| 6 Battery Care | 6 |
| 7 Power On/Off | 7 |
| 8 Pairing | 7 |
| 9 Listening To Your Device | 7 |
| 10 Using The AUX Port | 7 |
| 11 Specifications | 7 |
| 12 Warranty | 8 |
| 12.1 Warranty conditions | 8 |

1 SAFETY WARNINGS

Headphones can deliver sounds at loud volumes and high-pitched tones. Exposure to such sounds can result in permanent hearing loss or damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings and the environment. Please read the safety guidelines below prior to using these headphones.

- Prior to using this product follow these steps:
 - a) Before putting on the headphones, turn the volume control to its lowest level.
 - b) Put the headphones on.
 - c) Slowly adjust the volume control to a comfortable level.
- During the use of this product:
 - a) Keep the volume at the lowest level possible and avoid using the headphones in noisy environments where you may be inclined to turn up the volume.
 - b) If increased volume is necessary, adjust the volume control slowly.
 - c) If you experience discomfort or ringing in your ears, immediately discontinue using the headphones and consult a physician.
- With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

CAUTION

- Using the headphones while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions. Check your local laws. Use caution while using your headphones when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the headphones from your ear area or turning off your headphones will keep you from being distracted, to avoid accident or injury.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.
- Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centres may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.
- Avoid exposing your product to rain, moisture, or other liquids.
- If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
- Dispose of the product according to local standards and regulations.
- When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.
- The batteries of the earphones and the charging unit cannot be replaced by the user.
- **Warning:** Do not touch the leaking battery fluid, as it may be corrosive or toxic.
- **Handling Recommendation:** If battery leakage is detected, users are advised to wear protective gloves to avoid direct contact and dispose of the battery safely in accordance with local regulations.
- **Emergency Measures:** In case of contact with skin or eyes, rinse immediately with clean water and seek medical assistance.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

- Do not dispose of a battery into fire or a hot oven, or mechanically crush or cut a battery, that can result in an explosion;
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas



- High sound pressure
- Hearing damage risk
- Do not listen at high volume levels for long periods

2 FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

- » Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE:

- » This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

3 PRODUCT OVERVIEW

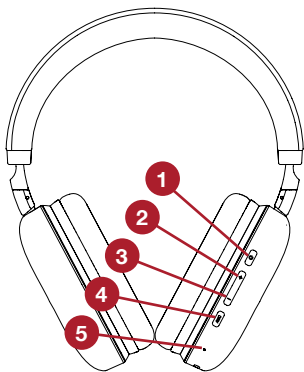



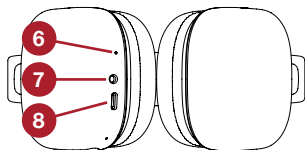










- 1. Power Button
- 2. Volume + / Next
- 3. Volume - / Previous
- 4. ANC / Bass Boost Button



- 5. LED Indicator Light
- 6. Microphone
- 7. 3.5mm AUX Audio Port
- 8. Charging Port

4 BUTTON CONTROLS

| FUNCTION | ACTION |
|------------------------------|--|
| Power On | Hold  button for 3 seconds |
| Power Off | Hold  button for 3 seconds |
| Play/Pause Music | Tap  button to play or pause music during playback |
| Answer/End Call | Tap  button to answer or end incoming phone calls |
| Reject Call | Long press  button for 3 seconds to reject incoming calls |
| Redial the Last Call | Double tap  button to redial the last phone number |
| Voice Assistant | Triple tap  button to activate voice assistant (Google Assistant or Apple Siri) |
| Disconnect/Connect Bluetooth | Press  button four times to disconnect Bluetooth, press it four times again to reconnect. |
| Reset the Unit | When Bluetooth is disconnected, press  button five times to reset the unit |
| Volume Up | Long press the  button to increase the volume |
| Next Track | Tap the  button once to skip to the next song |
| Volume Down | Long press the  button to decrease the volume |
| Previous Track | Tap the  button once to skip to the previous song |
| ANC On/Off | Hold ANC button for 2 seconds to turn on or off Active Noise Cancellation |
| Bass Boost Mode | Double tap ANC button to turn on or off Bass Boost Mode |

5 CHARGING THE BATTERY

Before first use, it is recommended you charge your headphones for a minimum of 2 hours

1. Insert the small end of the included USB-C cable into the USB-C connector on the headphone's right ear cup.
2. Connect the other end of the charging cable to a USB-A port on your PC, laptop, wall outlet adapter or other charging devices.
3. The LED light will show a solid red colour to indicate charging is active.
4. The light will turn off when fully charged.

NOTE:

- » Charge only with 5V DC Max 1A input
- » Use only the original USB-C charging cable to avoid any damage
- » When the LED flashes red, this indicates the headphones battery is low and requires charging

6 BATTERY CARE

- Make sure that your headphones are switched OFF after use
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime
- Before storing the headphones for long periods of time, be sure to fully charge the battery
- When the battery is low and flashing red you must charge the headphones
- If the battery is completely discharged, the headphones cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the headphones
- Always try to keep the battery between 32°F and 113°F. A product with a hot or cold battery may not work temporarily, even when the battery is fully charged

7 POWER ON/OFF

1. Press and hold the power button for three seconds
2. When powered on successfully the headphones a tone will be heard and the LED indicator lights will illuminate
3. To power off the headphones press and hold the power button for three seconds, a tone will be heard and the LED indicator light will turn off

NOTE:

- » If there is no operation within 5 minutes after powering on, the unit will turn off automatically.

8 PAIRING

1. With your headphones powered on, the indicator light will flash red and blue to indicate your headphones are in pairing mode.
2. Enable Bluetooth on your device, search for and select CE220818 from the list to connect.
3. Once the headphones are successfully paired with your device, you will hear a tone, and the LED light will turn off, indicating a successful connection.

NOTE:

- » On first use the headphones should automatically enter pairing mode

9 LISTENING TO YOUR DEVICE

Once you have successfully paired to a device, you can play, pause, skip tracks and adjust the volume using the headphone controls/device controls.

10 USING THE AUX PORT

The AUX port can be used to connect to a non-wireless device or for listening to music when the headphone batteries have been drained.

1. Connect a 3.5mm audio cable to the aux-in jack located on the right earcup
2. Connect the other end of the audio cable to the audio jack

NOTE:

- » When connected via audio cable, the Bluetooth function and controls are disabled. You cannot control playback using the headphone controls when connected via aux-in. The headphones will not be discoverable on Bluetooth.

11 SPECIFICATIONS

- Bluetooth Version: 5.4
- Bluetooth Distance: 10m
- Battery Capacity: 500mAh
- Play Time:
 - ANC On: 30 hours with 50% volume
 - ANC Off: 60 hours with 50% volume
- Standby Time: 300 hours
- Charging Time: 2.5 hours
- Power Input: DC 5V, 500mA
- Driver Size: Ø40mm
- Operation frequency band: 2402MHz – 2480MHz
- Maximum radio-frequency power transmitted: less than 20dBm

12 WARRANTY

Please contact the store where you purchased the item for any warranty issues.

12.1 WARRANTY CONDITIONS

Dear Customer,

The **ALDI warranty** is a full warranty offering you the following benefits:

WARRANTY PERIOD

3 years from date of purchase.

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Failure to follow the safety and maintenance instructions.
- Other improper treatment or modification of the product.

After the expiration of the warranty period, you may wish to have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state but this warranty is not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law.

Neither the service company nor ALDI will assume any liability for data or settings stored on any returned product.

