



Motorola Atrix 4G Battery Replacement

This guide will show you how to remove the...

Written By: Derek Walker



INTRODUCTION

This guide will show you how to remove the battery from the Motorola Atrix 4G.

TOOLS:

[Spudger](#) (1)

Step 1 — Battery



- Pry the back cover off the back of the phone.

Step 2



- Insert a [spudger](#) into the small notch at the base of the battery.
 - Lift the battery out of the phone.
-

To reassemble your device, follow these instructions in reverse order.