

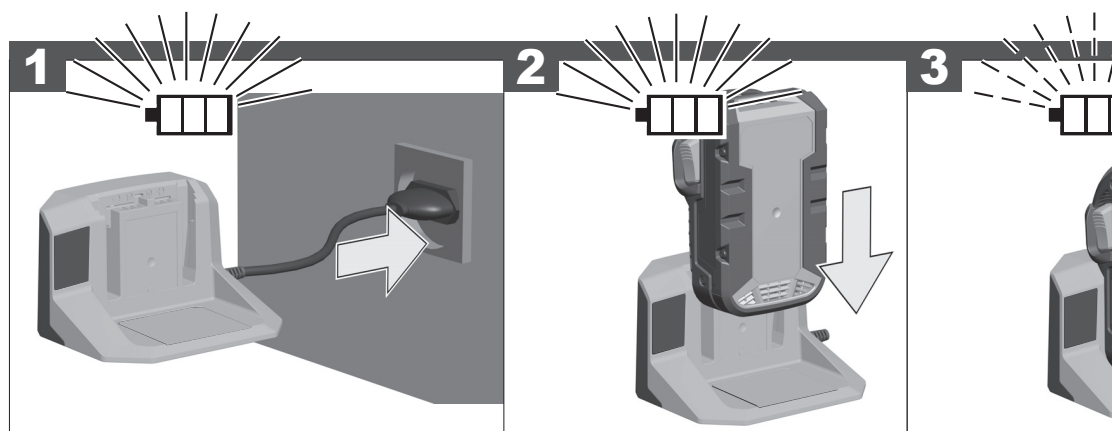
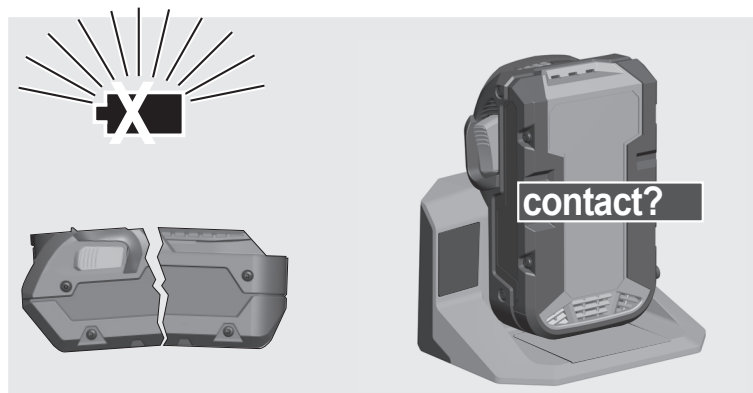
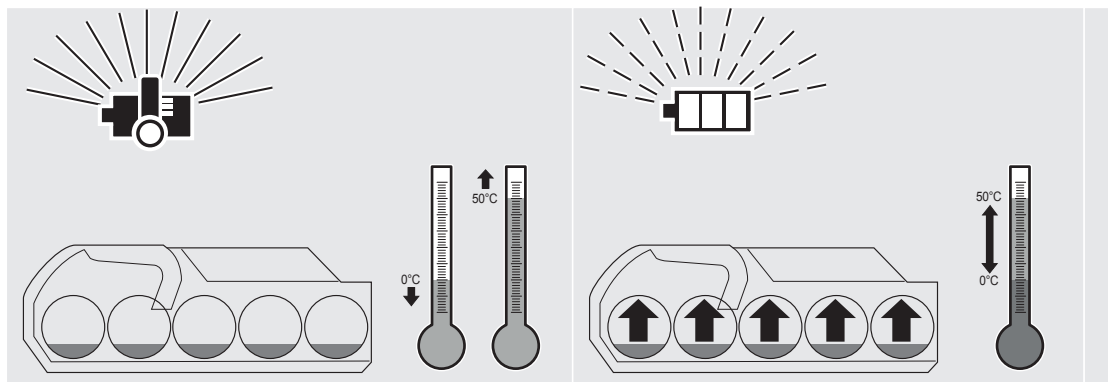
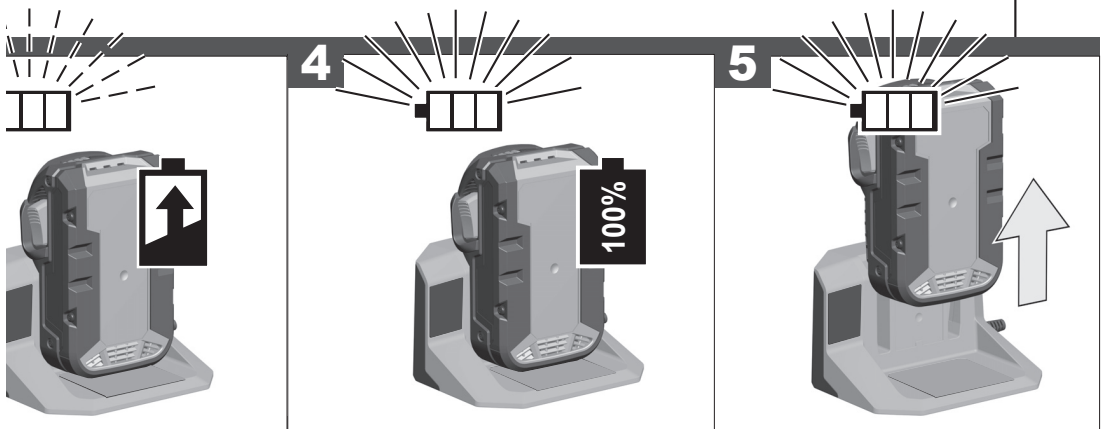


AEG

BL18S

Original instructions

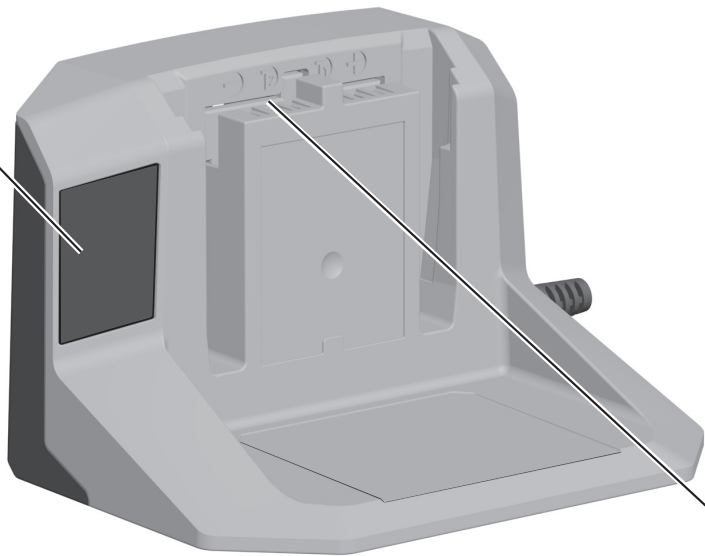

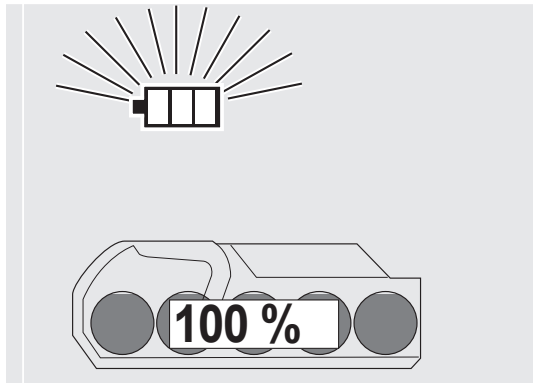

Important!

This appliance is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the appliance by a person legally responsible for their safety. They should be supervised whilst using the appliance.


Children shall not use, clean or play with this appliance, which when not in use should be secured out of their reach.

**TECHNICAL DATA****BATTERY CHARGER****BL18S**

Rated voltage 18 V $\overline{\text{---}}$
Quick charge current Li-Ion 2.0 A
Recommended ambient charging temperature +5 to +40 °C
Weight - not including battery pack 0.35 kg

COMPATIBLE BATTERY PACKS

Battery pack	Voltage	Battery capacity	Number of cell for battery	Cell type	Approximate charge time
L1820R TYPE II	18 V $\overline{\text{---}}$	≤ 2.0 Ah	5	Lithium-Ion	90 minutes
L1820S		≤ 2.0 Ah	5		90 minutes
L1825R TYPE II		≤ 2.5 Ah	5		110 minutes
L1830R-X5		≤ 3.0 Ah	5		125 minutes
L1840R TYPE II		≤ 4.0 Ah	5 x 2		170 minutes
L1850R TYPE II		≤ 5.0 Ah	5 x 2		190 minutes
L1860R TYPE II		≤ 6.0 Ah	5 x 2		210 minutes
L1860R-X5		≤ 6.0 Ah	5 x 2		210 minutes
L1890R		≤ 9.0 Ah	5 x 3		375 minutes

 **WARNING!** Read all safety warnings instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.**

CHARGER SAFETY WARNINGS

Do not dispose of used battery packs in the household refuse or by burning them. AEG Distributors offer to retrieve old batteries to protect our environment.

Do not store the battery pack together with metal objects (short circuit risk).

Use only System AEG GBS chargers for charging System AEG GBS battery packs. Do not use battery packs from other systems.

Do not try to charge non-rechargeable batteries with this charger.

No metal parts must be allowed to enter the battery section of the charger (short circuit risk).


Never break open battery packs and chargers and store only in dry rooms. Keep dry at all times.

Do not touch the tool with conducting objects.

Never charge a damaged battery pack. Replace by a new one.

Before use, check machine, cable, and plug for any damages or material fatigue. Repairs should only be carried out by authorised service agents.

ADDITIONAL BATTERY SAFETY WARNINGS

 **WARNING!** To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.

SPECIFIED CONDITIONS OF USE

The quick charger is intended to charge AEG system slide 18V batteries.

Do not use the product in any way other than those stated for intended use.

MAINS CONNECTION

Connect only to single-phase A.C. current and only to the system voltage indicated on the rating plate.

BATTERIES

Battery packs which have not been used for some time should be recharged before use.

Temperatures in excess of 50°C (122°F) reduce the performance of the battery pack. Avoid extended exposure to heat or sunshine (risk of overheating).

The contacts of chargers and battery packs must be kept clean.

For an optimum life-time, the battery packs have to be fully charged, after used.

To obtain the longest possible battery life remove the battery pack from the charger once it is fully charged.

For battery pack storage longer than 30 days:

Store the battery pack where the temperature is below 27°C and away from moisture.

Store the battery packs in a 30% - 50% charged condition.

Every six months of storage, charge the pack as normal.

CHARACTERISTICS

After inserting the battery into the reception of the charger the battery will automatically be charged (green lamp is flashing).

When a hot or cold battery pack is inserted into the charger (orange lamp is illuminated continuously), charging will begin automatically once the battery reaches the correct charging temperature (0°C - 50°C).

Charging time varies depending on the battery temperature, charge needed and the type of battery pack being charged.

As soon as charging is completed, the charger switches over to trickle charge to maintain the full capacity (green control lamp is illuminated continuously, red lamp off).

If red lamp is illuminated continuously, either the battery has not been completely



mounted or there is a fault in the battery or the charger. For safety reasons you must stop using the charger and battery immediately and have them inspected by an AEG Customer Service Centre.

TRANSPORTING LITHIUM BATTERIES

Lithium-ion batteries are subject to the Dangerous Goods Legislation requirements.

Transportation of those batteries has to be done in accordance with local, national and international provisions and regulations.

- The user can transport the batteries by road without further requirements.
- Commercial transport of Lithium-ion batteries by third parties is subject to Dangerous Goods regulations. Transport preparation and transport are exclusively to be carried out by appropriately trained persons and the process has to be accompanied by corresponding experts.

When transporting batteries:

- Ensure that battery contact terminals are protected and insulated to prevent short circuit.
- Ensure that battery pack is secured against movement within packaging.
- Do not transport batteries that are cracked or leaking.

Check with forwarding company for further advice.

BATTERY PACK PROTECTION

The battery pack has overload protection that protects it from being overloaded and helps to ensure long life. Under extreme stress the battery electronics switch off the machine automatically. To restart, switch the machine off and then on again. If the machine does not start up again, the battery pack may have discharged completely. In this case it must be recharged in the battery charger.

MAINTENANCE

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

The ventilation slots of the machine must be kept clear at all times.

Use only AEG accessories and AEG spare parts. Should components need to be replaced which have not been described, please contact one of our AEG service agents (see our list of guarantee/service addresses).

If needed, an exploded view of the tool can be ordered. Please state the Article No. as well as the machine type printed on the label and order the drawing at your local service agents or directly at:

Techtronic Industries Australia Pty Ltd

PO Box 1065
Mount Waverley VIC 3149
Tel. no. 1300 234 797
Australia

Techtronic Industries N.Z. Limited

PO Box 12-806
Penrose AUCKLAND 1642
Tel. no. 0800 234 797(0800 AEGPWR)
New Zealand

SYMBOLS



Safety alert

V

Volts



Direct current



Regulatory Compliance Mark (RCM). Product meets applicable regulatory requirements.



Please read the instructions carefully before starting the machine.



Class II equipment

T2.0A



Time-lag fuse 2.0A



For indoor use only.



Do not dispose of electric tools together with household waste material. Electric tools and electronic equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.



AEG

www.aegpowertools.com.au
www.aegpowertools.co.nz

Techtronic Industries Australia Pty Ltd

31 Gilby Road, Mount Waverley,
VIC, 3149, Australia

Techtronic Industries N.Z. Limited

Unit C, 70 Business Parade South,
Highbrook, Auckland 2013, New Zealand

961096683-01A

*AEG is a registered trade mark used under
license from AB Electrolux (publ).
© 2020 Techtronic Cordless GP.*