

# Gigaset

## GL395

The most up-to-date user guide  
can be found at  
[www.gigaset.com/manuals](http://www.gigaset.com/manuals)

 


# Contents

|                                               |           |
|-----------------------------------------------|-----------|
| <b>Overview</b>                               | <b>4</b>  |
| <b>Safety instructions</b>                    | <b>7</b>  |
| <b>First steps</b>                            | <b>11</b> |
| Package contents                              | 11        |
| Getting started                               | 11        |
| <b>Operating the mobile phone</b>             | <b>14</b> |
| Switching the mobile phone on/off             | 14        |
| Activating the display                        | 14        |
| Switching the keypad lock on/off              | 15        |
| Switching the torch on/off                    | 15        |
| Using the Control key (Navigation keys)       | 16        |
| Display keys                                  | 16        |
| Icons in the status bar                       | 17        |
| Menu guidance                                 | 18        |
| Entering text                                 | 19        |
| <b>Making/Taking calls</b>                    | <b>20</b> |
| Making calls using the keypad                 | 20        |
| Taking calls                                  | 22        |
| Protection against unwanted calls (blocklist) | 23        |
| During a phone call                           | 25        |
| Call divert                                   | 27        |
| Call lists                                    | 28        |
| Phone book                                    | 30        |
| Mailbox                                       | 33        |
| <b>Emergency calls (SOS)</b>                  | <b>34</b> |
| SOS calls                                     | 34        |
| SOS text message (SMS)                        | 35        |
| Activating the SOS alarm                      | 36        |

|                                                               |           |
|---------------------------------------------------------------|-----------|
| <b>SMS (text messages)</b>                                    | <b>37</b> |
| Writing and sending a text message                            | 37        |
| Storing a text (SMS) temporarily (list of drafts)             | 39        |
| Sent messages                                                 | 41        |
| Outbox                                                        | 42        |
| Text (SMS) templates                                          | 43        |
| Receiving texts (SMS)                                         | 44        |
| Text (SMS) settings                                           | 46        |
| <b>Further applications</b>                                   | <b>48</b> |
| Alarm clock                                                   | 48        |
| Calendar                                                      | 50        |
| File manager                                                  | 54        |
| Camera and image viewer                                       | 57        |
| <b>Settings</b>                                               | <b>61</b> |
| Date and time                                                 | 61        |
| Allowlist and blocklist                                       | 62        |
| Language                                                      | 65        |
| Tones and signals                                             | 66        |
| Display                                                       | 71        |
| SIM cards and network operator                                | 73        |
| Resetting to the factory settings                             | 74        |
| <b>Menu overview</b>                                          | <b>75</b> |
| Customer service                                              | 83        |
| Guarantee Certificate                                         | 83        |
| Approval                                                      | 85        |
| Notice on the Disposal of Electrical and Electronic Equipment | 85        |
| About radiation                                               | 86        |
| Technical data                                                | 86        |
| Accessories                                                   | 87        |

# Overview

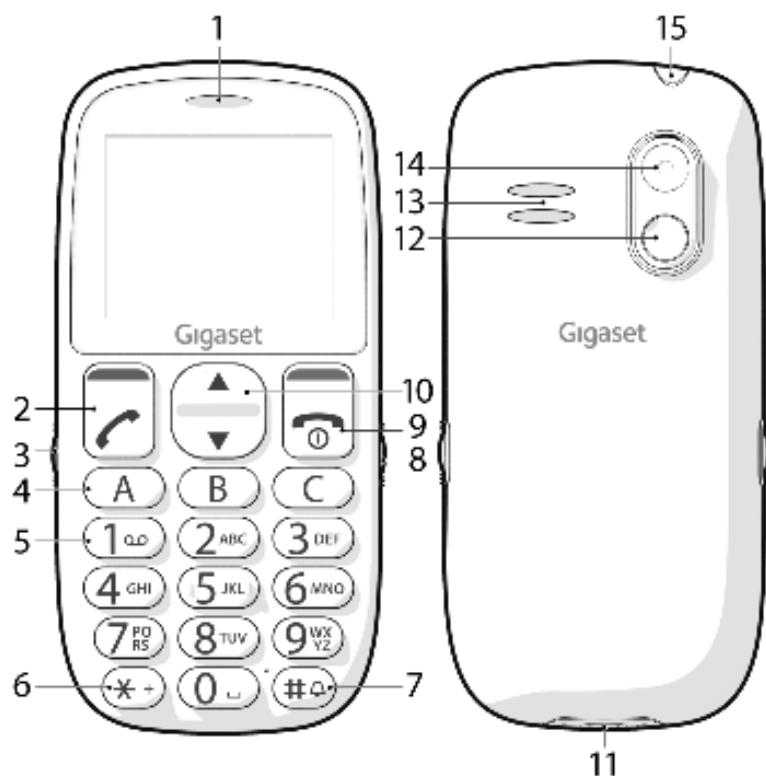

- 1 Receiver
- 2 Left display key: Select function, depends on the screen display  
Take call; dial number; open call list
- 3 Torch key
- 4 Direct dialling keys: Speed dialling numbers
- 5 Key 1: Start network answering machine playback (press **longer**)
- 6 Star key: Enter \* or + (for international calls)
- 7 Hash key: Switch between vibration, silent and standard modes (press **longer**)
- 8 Key lock key: Activate the key lock (press for 2 sec.)  
Deactivate the key lock (press for 2 sec.)
- 9 Right display key: End the call; cancel the function; return to the menu; switch mobile phone on/off
- 10 Navigation key:  Open the menu  
 Navigate through menus and lists
- 11 USB connection port: Connect a USB cable
- 12 SOS key: Initiate an emergency call
- 13 Loudspeaker
- 14 Camera
- 15 Torch

## Notation in the user guide

This chapter describes the various forms of notation used in the user guide and the respective significance.

---

### Icons

|                                                                                  |                                                                                                          |
|----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|  | Warnings, which, if not observed, can result in personal injury or damage to equipment.                  |
|  | Important information regarding the function and proper handling or functions that could generate costs. |
|  | Condition which must be fulfilled in order to carry out the following action.                            |
|  | Additional helpful information.                                                                          |

---

### Working steps

- 1 First working step.
  - 2 Further working step.
- Result of the series of working steps.

---

### Display texts

Display texts are texts which appear on the display of the mobile phone. Display texts are displayed in **bold print** in this guide.

Example:

Press the **Menu** display key.

---

### Control key

Display of the Control key in the User Guide:

-  Press the Navigate Down key
-  Press the Navigate Up key
-  Press the Navigate Up or Down key

## Safety instructions

Please read the following information and instructions carefully. Failure to comply with these instructions may result in personal injury and damage to the device, as well as violations of applicable laws.

Please explain the content of this document as well as the potential risks involved when using the device to your children.

### General information

- For your own safety, only use original Gigaset accessories or those approved by Gigaset for the mobile phone. The use of accessories which are not compatible could damage the mobile phone and be the cause of hazardous situations. Original accessories can be obtained from Gigaset customer service (refer to Customer Service).
- The mobile phone is splashproof according to the IP44 standard. If your mobile phone has been exposed to water, dry it and the device openings (microphone/loudspeaker/USB Type-C port) with a lint-free cloth to remove any water droplets.
- Permissible temperature range for charging and operation: 0-40° C.  
High temperatures could reduce the service life of electronic devices, damage the battery or deform and melt plastic parts. If the mobile phone is to be used or stored in freezing areas, condensation could develop inside the phone and damage the electronic circuitry.
- The mobile phone must not be used or stored in dusty or dirty locations. Dust can be the cause of malfunction of the mobile phone.
- Switch off your mobile phone in potentially explosive atmospheres and observe all warnings. Potentially explosive atmospheres also include those locations for which it is normally recommended that vehicle engines be switched off. In such places, flying sparks can cause explosions or fires resulting in personal injury and possibly death.  
These areas include: Petrol stations, chemical plants, transport or storage areas for hazardous chemicals, areas below deck on ships, areas in which the air contains chemical substances or fine particles (e.g. particles of dust or metal powder).
- Short-circuiting or modifying the mobile phone is prohibited – there is a risk of personal injury, electric shock, fire or damage to the charger.

### Battery and charging process

- To avoid battery fluid leakage, overheating, explosion or fire, never incinerate or heat batteries and never dispose of them in a fire or explosion-prone environment. Do not disassemble, weld or modify the battery. Do not store the battery in an environment subject to strong mechanical influences.

## Safety instructions

- Do not use sharp objects, such as screwdrivers, to touch or puncture the battery. There is a risk of battery fluid leaking, the battery overheating, exploding or catching fire and burning. Crushing, heating or incinerating batteries is strictly prohibited.
- Eye contact with the battery electrolyte can cause blindness. If electrolyte enters the eyes, do not rub the eye with your hand. Immediately flush the affected eye completely with clean water and seek medical attention. There is a risk of skin burns if the electrolyte comes into contact with the skin (or clothing). Immediately rinse the skin or clothing completely with soap and clean water and seek medical attention if necessary.
- Never use the batteries for any purpose other than that specified. Never use a damaged battery. If the battery becomes hot, discoloured, deformed or leaks during use, charging or storage, you must replace the battery with a new one immediately for safety reasons.
- The temperature of the battery rises during charging. Do not store the battery in the same compartment as flammable products – there is a risk of fire.
- Do not charge the battery longer than 12 hours.
- Only charge the device indoors. During the charging process, do not hold any telephone conversations and do not dial any phone numbers.
- The electrical socket must be easily accessible during charging.
- There is a risk of electric shock during a thunderstorm.
- Do not use the charger if the power cable is damaged or there is no battery in the mobile phone – there is a risk of electric shock or a risk of fire in such cases.

## Headphones



High volumes can damage hearing.

Listening to music or conversations through headphones at high volumes can be uncomfortable and cause permanent hearing damage.

To prevent a loss of hearing, avoid listening at high volume levels for long periods of time.

- If you use the headphones while walking or running, please ensure that the headphone cable does not wrap around your body or other objects.
- Only use headphones in a dry environment. The static electricity which charges in the headphones could discharge on your ears causing an electric shock. Touching the headphone with your hand or contact with bare metal prior to connection to the mobile phone could cause static electricity to discharge.



## Use in hospitals / Medical devices

- The function of medical devices could be impaired if used in the vicinity of your product. Observe the technical conditions in your environment , e.g. in medical practices.
- If you use a medical product (e.g. heart pacemaker), consult with the product manufacturer prior to use. They can provide information on the sensitivity of the device with regard to external, high-frequency power sources.
- Pacemakers, implanted cardioverter defibrillators:  
When switching on the mobile phone, please pay attention that the distance between the mobile phone and implant is at least 152 mm. To reduce potential interference, use the mobile phone on the opposite side to the implant. In the event of possible interference, please switch the mobile phone off immediately. Do not carry the mobile phone in a shirt pocket.
- Hearing aids, cochlea implants:  
Some digital, wireless devices can cause interference in hearing aids and cochlea implants. If interference occurs, please contact the manufacturer of such products.
- Other medical devices:  
If you and the people in your environment use other medical devices, please contact the relevant manufacturer as to whether such devices are protected from radio frequency signals in the environment. You can also contact your doctor with regard to this.

## Emergency calls

- Ensure that the mobile phone is linked to the GSM network and switched on. If necessary, enter the emergency number and carry out your call.
- Inform the member of staff in the emergency call centre with regard to your location.
- Only end the call when the member of staff in the emergency call centre has permitted you to do so.

## Children and pets

- Keep the mobile phone, batteries, chargers and accessories out of reach of children and pets. Children and/or pets may swallow small parts and suffer choking and other hazards. Children may only use the mobile phone when supervised by an adult.

## Aircraft, vehicles and road safety

- Switch the mobile phone off in an aircraft.  
Please observe the applicable restrictions and regulations.  
Wireless devices can interfere with the functionality aeronautical equipment. It is essential to follow instructions from aircraft personnel regarding using the mobile phone on an aircraft .

## **Safety instructions**

- As the driver of a vehicle, the main priority is: Safety in road traffic and for road users  
Using the mobile phone while driving could distract your attention leading to dangerous situations. In addition, it contravenes current, applicable laws.

## **SIM cards, memory cards and data connection cables**

- Do not remove the cards from the mobile phone while sending or receiving data: Doing so increases the risk of loss of data and damage to the mobile phone or memory cards.

## **Defective devices**

- Installation or repair of the product may only be performed by qualified service personnel.
- Dispose of defective devices or have them repaired by our customer service department; such devices could interfere with other wireless services.
- If the mobile phone is treated roughly, e.g. allowed to fall, the display could break and the electronic circuitry and sensitive interior parts could be damaged.
- Do not use the device if the display is cracked or broken. Glass or plastic splinters can injure the hands and face.
- If the mobile phone, battery or accessories malfunction, please contact your Gigaset Service Centre regarding an inspection.

## **Further important information**

- Never point the flash light directly in the eyes of people or animals. If a flash light is aimed at the human eye when too near, there is a risk of temporary loss of sight or impairment of vision.
- If the device becomes hot, please put it to one side for a while and cancel any programmes which are being executed at the time. If you come into contact with a device which is hot, there is a risk of slight skin irritation, e.g. redness of the skin.
- Do not paint or varnish the mobile phone. Varnish/Paint could damage parts of the mobile phone and cause operational breakdowns.

## First steps

This chapter describes the contents of the package and how to start operating the mobile phone for the first time.

### Package contents

- Mobile phone Gigaset GL395 including battery
- Charger
- Charging cable to recharge the battery and data transfer

Check the package contents are complete prior to starting up the mobile phone. In case of doubt, contact our customer service.

 
## Getting started

### Inserting the SIM and memory cards

You can insert a micro-SIM card and a memory card in the mobile phone.




- 1 Insert your fingernail or a suitable aid into the recess in the left-hand corner of the rear side.
- 2 Prise the battery compartment cover upwards to open it.

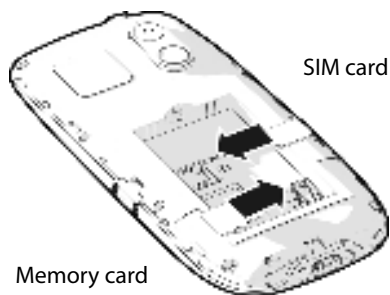


- 3 Insert the SIM card in the left-hand slot. Pay attention that the SIM card is inserted properly aligned.
  - 4 You can also insert a memory card, as an option, in the right-hand slot.
- You have inserted a SIM card and memory card in the mobile phone.

## Inserting the battery and closing the cover

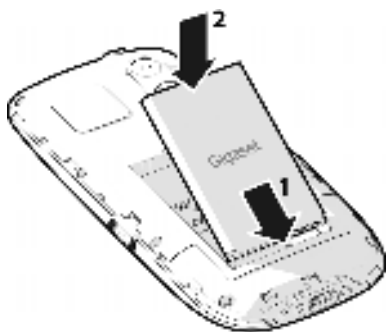 

 - 1 Insert the battery as illustrated. Pay attention that the battery is inserted properly aligned.

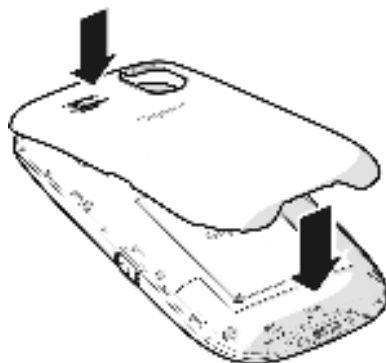

- 2 Replace the battery compartment cover as illustrated.
  - 3 Press the cover down carefully to close it. The battery compartment locks in place with an audible click.
- You have inserted the battery in the mobile phone.

## Charging the battery



- 1 Insert the USB plug on the charging cable in the charger
- 2 Place the mobile phone in the charger.

or



- 1 Insert the USB plug on the charging cable in the USB port on the bottom of the mobile phone.
  - 2 Connect the free USB plug on the charging cable to a suitable plug-in power supply unit (not contained in the package supplied).
  - 3 Connect the plug-in power supply unit to a properly installed power socket.
- You have connected the mobile phone to a power source. The battery is being charged.

Ensure the battery is charged fully before starting to use the mobile phone for the first time.

The battery is fully charged when the charge icon  in the icon bar is completely filled.



If you have set that the battery should only be charged to 80%, the charge indicator remains with 4 bars and the battery only charges to 80%.

## Operating the mobile phone

This chapter describes the basic steps for operating the mobile phone.

---

### Switching the mobile phone on/off

Switch the mobile phone on:

- 1 Press the End Call key  longer.
- 2 Enter the PIN related to the SIM card inserted using the keypad  on the mobile phone.



The PIN was supplied together with the SIM card by your mobile phone provider. In case of doubt, contact your mobile phone provider.

- 3 Confirm the selection by pressing the **OK** key in the display (→ p. 16).
  - ▶ You have switched on the mobile phone.

Switch the mobile phone off:

- 1 Press the End Call key  longer.
  - ▶ You have switched off the mobile phone.

---

### Activating the display

The lighting in the display switches off automatically after 30 seconds (idle status). This function reduces the battery usage of the mobile phone.

Switch the display on:

- 1 Press any key on the mobile phone.
  - ▶ You have switched on the display of the mobile phone.

---

## Switching the keypad lock on/off

The keypad lock inhibits all input via the keys and prevents inadvertent operation of the mobile phone.

Switching on the keypad lock:

- 1 Press the **Keypad Lock key** for 2 seconds.
- ▶ You have switched the keypad lock on:  
The  icon appears in the display.

Switching the keypad lock off:

- 1 Press the **Keypad Lock key** for 2 seconds.
- ▶ You have switched the keypad lock off:  
The  icon appears in the display.



The keypad lock is deactivated when a call is received. You can accept the call. It then locks again when the call ends.

Please note that when the keypad lock function is activated, no call numbers, including no emergency call numbers, can be entered.

---

## Switching the torch on/off

The torch can be switched on and off using the torch key. The torch lamp is on the top side of the mobile phone (→ p. 4).



The torch can only be switched on when the mobile phone is already activated (→ p. 14).

Switch the torch on:

- 1 Press the **Torch key** for 2 seconds.
- ▶ You have switched the torch on.

Switch the torch off:

- 1 Press the **Torch key** for 2 seconds.
- ▶ You have switched the torch off.



The torch uses up a lot of energy. Therefore, switch it off when it is not needed.

## Using the Control key (Navigation keys)



 
The Control key, also referred to as the Navigation key, serves to navigate through menus and input fields. The Control key is located between the Take Call key and End Call key.

### Functions of the Control key

|                    |                                                                                   |                                                         |
|--------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------|
| In idle status:    |  | Open the menu                                           |
|                    |  | Open the menu                                           |
| During a call      |  | Raise caller volume for the receiver/handsfree function |
|                    |  | Lower caller volume for the receiver/handsfree function |
| In the menus:      |  | Move upwards in the list of menu entries                |
|                    |  | Move downwards in the list of menu entries              |
| During text input: |  | Move one text field upwards                             |
|                    |  | Move one text field downwards                           |

## Display keys

The display keys are used to execute the functions indicated in the display. The display functions are indicated at the bottom left and bottom right of the mobile phone display and are dependent on the menu currently displayed.

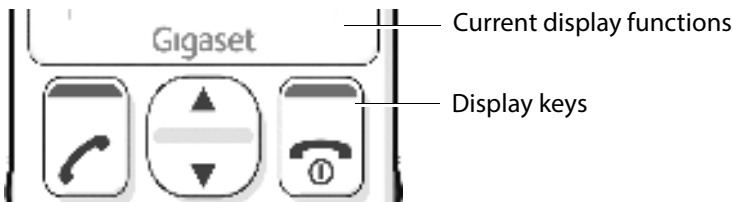

Some examples of the functions of the display keys are illustrated below:

|         |          |                                           |
|---------|----------|-------------------------------------------|
| Menu    | Contacts | Open main menu/submenu                    |
| OK      | Back     | Confirm menu function / Save entry        |
| Options | Back     | To open a submenu:                        |
| Options | Clear    | Delete character by character to the left |

- 1 Press the left-hand or right-hand display key.
  - You have executed the display functions indicated in the display.



## Icons in the status bar

The icons in the status bar at the top edge of the display indicate current settings and the operating status of the mobile phone:



Vibration is activated, ringing tone is deactivated



Silent function is activated



Missed call in call list



Alarm clock is activated



Voice message missed



Device connected via USB

### Wireless communication for SIM card 1



The number of bars in the icon indicates the quality of the current connection.

### Battery charge status



Empty



Ca. 50%



Full

The bars in the indicator light up in succession during the charging process.

### Menu guidance

The mobile phone menu is comprised of a main menu and several submenus.

To provide a better orientation, the complete menu overview is depicted in this User Guide: → p. 75

---

### Main menu

The functions in the main menu are indicated by an icon and a name.

Navigation in the main menu:

- 1 Press the **Menu** display key or one of the Navigation keys.
- 2 Use the control keys to select  a submenu (e.g. Settings). The menu currently selected has a coloured background.
- 3 Confirm the selection by pressing the **OK** key in the display.
  - ▶ You have opened the submenu.

---

### Submenus

The functions in the submenus are displayed in list form.

The menu entry currently selected has a coloured background. If the name of the entry does not fit in one line, the text runs through.

If there are further entries, a scroll bar appears which indicates the position of the entry in the submenu.

Access a function:

- 1 Select a submenu (e.g. Settings).
- 2 Confirm the selection by pressing the **OK** key in the display.
  - ▶ You have opened the submenu selected.

Switch to previous menu level:

- 1 Press the End Call key  or the **Prev.** display key.
  - ▶ The previous menu level appears.

## Entering text

Each key between 2 and 9 and the 0 key are assigned several letters and digits. When a key is pressed, the possible characters are shown at the bottom of the display. The selected character is highlighted.



In order to write a text (SMS) there are several options available (→ p. 38).

Select the letters/numbers:

- 1 Press the key selected several times **briefly** in succession.
  - ▶ You run through the letters and digits assigned in sequence.

Deleting characters to the left beside the cursor:

- 1 Press the **Delete** display key.
- 2 Press the **Delete** display key again to delete further characters.
  - ▶ You have deleted characters to the left of the cursor.

Switching between lower case and upper case letters (abc, Abc, ABC, 123) or entering digits (abc, Abc, ABC, 123):

- 1 Press the  Hash key.
  - ▶ You can switch between lower and upper case or entering digits only.

When entering text, you can enter special characters:

- 1 Press the Star key.
- 2 Select the special character required.
  - ▶ You have selected the special character required.

## Making/Taking calls

This chapter describes the options available with which to telephone using the mobile phone. This includes the various ways to make and take calls. It also includes the description of functions which can be used during a call.

---

### Making calls using the keypad

You can make national and international calls directly using the dialling keys on the mobile phone keypad.

Dial a national phone number:

- 1 Enter the relevant phone number of the contact required, including access code, using the keypad .
- 2 Press the **Options** display key.
- 3 Select **Call**.
- 4 Confirm the selection by pressing the **Select** key in the display.
  - ▶ You have dialled a phone number using the dialling keypad.

Dial an international phone number:

- 1 Press the Star key  twice, until the + sign is inserted.
- 2 Enter the relevant phone number of the contact required, including access International dialling code (e.g. +43), using the keypad .
- ▶ You have dialled an international phone number.

You can delete digits or cancel dialling a phone number:

- |                 |                                                                      |
|-----------------|----------------------------------------------------------------------|
| Delete digits:  | 1 Press the <b>Delete</b> display key.                               |
| Cancel dialling | 1 Press the <b>Delete</b> display key, until all digits are deleted. |
|                 | 2 Press the <b>Back</b> display key.                                 |

---

### Making calls from the phone book

- 1 Press the **Contacts** key in the display.
- 2 Select the entry required.
- 3 Press the **Options** display key.
- 4 Select **Call**.
- 5 Confirm the selection by pressing the **Select** key in the display.
  - ▶ You have dialled a phone number from the phone book.

Detailed information on the phone book: → p. 30

## Making calls from a call list

The call lists contain the last calls taken, rejected and missed.

- 1 Press the Call key .
- 2 Select the entry required.
- 3 Press the Call key .
- ▶ You have dialled a phone number from the call list.

 
or

- 1 Press the **Menu** key in the display.
- 2 Select **Call Logs**.
- 3 Select the required call list (e.g. missed calls).
- 4 Press the Call key .
- ▶ You have dialled a phone number from the call list.

Detailed information on the call lists: → p. 28

## Making calls with the direct dialling keys

You can assign important phone numbers to the direct dialling keys A, B and C.



Select a direct dialling key:

- 1 Press the required direct dialling key (A, B or C) **longer**.

or

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Speed dial**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Set numbers**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select the required key A, B or C.
- 9 Select **Options**.
- 10 Select **Enter number**.
- 11 Enter the  call number.
- 12 Select **Save**.

## Making/Taking calls

or

- 1 Select the required key A, B or C.
- 2 Select **Options**.
- 3 Select **Phonebook**.
- 4 Select **Select**.
- 5 Select the entry required.
- 6 Confirm the selection by pressing the **OK** key in the display.
  - ▶ You have assigned a phone number to a direct dialling key.

### Dialling a phone number using a direct dialling key

- 1 Press the required direct dialling key A, B or C **longer**.
    - ▶ You have dialled the phone number assigned to the direct dialling key.
- 

## Taking calls

An incoming call is indicated by a ringtone from the mobile phone. The display of the mobile phone shows the phone number of the caller (if transmitted). If the caller is in the phone book, the name assigned appears.

Take a call:

- 1 Press the Call key .

or

- 1 Press the **Answer** display key.
  - ▶ You have taken an incoming call.

Rejecting a call:

- 1 Press the End Call key .

or

- 1 Press the **Reject** display key.
  - ▶ You have rejected an incoming call.

Ending a call in progress:

- 1 Press the End Call key .
- ▶ You have ended a phone call which was in progress.

If you do not take an incoming call, it is recorded in the **Missed call** call list (→ p. 28).

## Settings for incoming calls

Activating/Deactivating ringtone and/or vibration: → p. 66

Take call with any key: → p. 66

---

## Protection against unwanted calls (blocklist)

You can enter up to 20 numbers in a blocklist.

Calls from these numbers are forwarded directly to the mailbox and not indicated by the mobile phone.

Entries in the blocklist can be made manually or you assume phone numbers from the phone book or a call list.

---

### Activating the blocklist

Activate the blocklist in order to add entries.

- 1 Press the **Menu** key in the display.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Security settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Blocklist**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Reject numbers in Blocklist**.
  - 9 Confirm the selection by pressing the **OK** key in the display.
  - 10 Select **On/Off**.
  - 11 Confirm the selection by pressing **OK** (● = selected).
- You have switched the blocklist on.

---

### Adding phone numbers to the blacklist

You can enter up to 20 numbers the blocklist.

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Blocklist**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Blocklist numbers**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select an empty memory location (<empty>).
- 11 Select **Options**.
- 12 Select **Edit**.
- 13 Select **Select**.

## Making/Taking calls

Add phone numbers manually:

10 Enter the phone number using the keypad 

11 Select **Options**.

12 Select **Done**.

or add a number from the phone book:

10 Select **Options**.

11 Select **Add from Phonebook**.

12 Confirm the selection by pressing the **OK** key in the display.

13 Select the entry required.

14 Confirm the selection by pressing the **OK** key in the display.

or add a number from the call list:

10 Select **Menu**.

11 Select **Call Logs**.

12 Confirm the selection by pressing the **OK** key in the display.

13 Select the required call list (e.g. missed calls).

14 Confirm the selection by pressing the **OK** key in the display.

15 Select the entry required.

16 Select **Options**.

17 Select **Add to Blocklist**.

18 Confirm the selection by pressing the **OK** key in the display.

► You have assigned a phone number to the blocklist.



---

## During a phone call

The functions described here are available while a phone call is in progress.

---

### Handsfree mode

You can use the loudspeaker of the mobile phone for a phone call (hands-free). This means that you have both hands free during the conversation.

Activate Handsfree mode:

- 1 Press the **Options** key in the display.
- 2 Select **H-Free**.
- 3 Confirm the selection by pressing the **OK** key in the display.
  - ▶ You have switched Handsfree mode on.  
The caller can be heard via the loudspeaker.

Deactivate Handsfree mode:

- 1 Press the **Options** key in the display.
- 2 Select **H-Held**.
- 3 Confirm the selection by pressing the **OK** key in the display.
  - ▶ You have switched Handsfree mode off.  
The caller can be heard via the receiver.

You can also activate or deactivate Handsfree mode during connection to another phone number.

Switch Handsfree mode on when a connection is being made:

- 1 Press the **H-Free** display key.
  - ▶ You have switched Handsfree mode on.  
As soon as the connection is made, the caller can be heard via the loudspeaker.

Switch Handsfree mode on when a connection is being made:

- 1 Press the **H-Held** display key.
  - ▶ You have switched Handsfree mode off.  
As soon as the connection is made, the caller can be heard via the receiver.

---

### Adjusting the loudspeaker during a phone call

The volume of the caller can be adjusted to different levels. The setting adjustment applies for the receiver and loudspeaker for Handsfree mode.

Adjust the volume during a phone call:

- 1 Press the Control key  to raise the volume.
- 2 Press the Control key  to lower the volume.

or

- 1 Press the **Options** key in the display.
- 2 Select **Volume**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Press the Control key  to raise the volume.
- 5 Press the Control key  to lower the volume.
- 6 Select **Back**.



The setting is automatically saved after about 3 seconds if you do not select **Back**.

- You have set the volume for the phone call.

---

### Muting the microphone

If the microphone is muted, the caller can no longer hear you.

Mute the microphone:

- 1 Press the **Options** key in the display.
  - 2 Select **Mute**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
- You have muted the microphone.  
The caller can no longer hear you.

Switch the microphone back on:

- 1 Press the **Options** key in the display.
  - 2 Select **Unmute**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
- You have switched the microphone on.  
The caller can hear you again.

## Call divert

In the case of call divert, calls are forwarded to another phone number or to the mailbox.



Not all network providers support the call divert function.

## Setting up call divert

Before the call divert function can be set up, the call divert function must be switched on.

Switch on the call divert function:

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Call settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Call divert**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select one of the following options:  
**Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy**
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select **Activate**.
- 11 Select the destination (phone number or mailbox) for the diverted calls.

Divert to a phone number:

- 1 Select **To new number**.
- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Enter the phone number using the keypad .
- 4 Select **Options**.
- 5 Select **Done**.

or

- 1 Select **Options**.
- 2 Select **Add from Phonebook**.
- 3 Select the contact required.
- 4 Confirm the selection by pressing the **OK** key in the display.

## Making/Taking calls

Divert to a mailbox:



The number of the mailbox is assigned to Key 1 (→ p. 33).

1 Select **To voicemail**.

► You have set up the call divert to another phone number or the mailbox.

---

## Revoking call divert

Switch off the call divert function:

1 Press the **Menu** key in the display.

2 Select **Settings**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **Call settings**.

5 Confirm the selection by pressing the **OK** key in the display.

6 Select **Call divert**.

7 Confirm the selection by pressing the **OK** key in the display.

8 Select **Cancel all divers**.

9 Confirm the selection by pressing the **OK** key in the display.

► You have switched the call divert function off.

---

## Call lists

The mobile phone saves different types of calls (missed, accepted and outgoing calls) in call lists

---

### Opening a call list

1 Press the **Menu** key in the display.

 
2 Select **Call Logs**.

3 Confirm the selection by pressing the **OK** key in the display.

► You have opened an overview of the call lists.

The overview of the call lists indicates submenus for every type of call:

- **All calls**
- **Missed call**
- **Received calls**
- **Dialled calls**
- **Rejected calls**

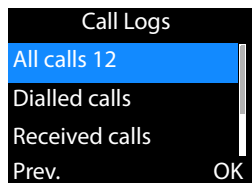

The **All calls** menu contains a summary of the calls of all types of call.

Beside the name of the list is the number of respective entries contained in the list.

- 1 Select the required call list (e.g. missed calls).
- 2 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have opened the required call list.

### Information on a call

- Phone number or name if the contact is contained in the phone book
- Date and time



If there is at least one missed call, the  icon appears in the status bar.

---

## Managing the entries in the call lists

- 1 Press the **Menu** key in the display.
- 2 Select **Call Logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the call list required.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the entry required.
- 7 Select **Options**.

Show information regarding the call: ▶ Select **View**.

Dial a number ▶ Select **Call**.

Write a text message (SMS): ▶ Select **Send SMS**.

Copy number in phone book: ▶ Select **Save to contacts**.

Copy number in whitelist: ▶ Select **Add to Allowlist**.

Copy number in blacklist: ▶ Select **Add to Blocklist**.

Delete an entry: ▶ Select **Delete**.

---

## Deleting a call list

- 1 Press the **Menu** key in the display.
- 2 Select **Call Logs**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Delete call logs**.
- 5 Select the call list required.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Confirm deleting the prompt by selecting **Yes**.

### Phone book

The phone book can contain up to 500 entries. Entries can be stored in the internal phone memory or on the SIM card.

You can create phone book entries manually, transfer them from a call list or transfer a phone number to the phone book when dialling it.

---

### Opening the phone book

1 Press the **Contacts** key in the display.

or

1 Press the **Menu** key in the display.

2 Select **Contacts**.

3 Confirm the selection by pressing the **OK** key in the display.

The **Contacts** display key is always used in the following description.

---

### Phone book entries

The phone book contains all the phone book entries. They are sorted alphabetically.

An entry contains the following information:

- Phone number
- Name

### Information on contacts

 
An icon indicates where the phone book entry is stored:



On the mobile phone



On a SIM card

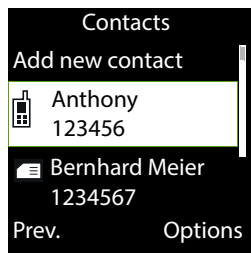

---

## Creating a phone book entry

- 1 Press the **Menu** key in the display.
- 2 Select **Contacts**.
- 3 Select **Add new contact**.
- 4 Select **Options**.
- 5 Select **Select**.
- 6 Select where the new phone book entry should be stored (SIM card or phone memory).
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Name**.
- 9 Select **Options**.
- 10 Select **Edit**.
- 11 Enter the name using the keypad .
- 12 Select **Options**.
- 13 Select **Done**.
- 14 Select **Number**.
- 15 Select **Options**.
- 16 Select **Edit**.
- 17 Enter the phone number using the keypad .
- 18 Select **Options**.
- 19 Select **Done**.
- 20 Select **Options**.
- 21 Select **Save**.
  - ▶ You have created a phone book entry.

Further information on entering text: → p. 19

---

## Searching for a phone book entry

- 1 Enter the initial letters of a name using the keypad 
    - ▶ Entries which correspond to the input are displayed.
- or
- 1 Scroll through the list using the Control key .

### Making calls from the phone book

- 1 Press the **Menu** key in the display.
- 2 Select **Contacts**.
- 3 Select the entry required.
- 4 Press the Call key .
- ▶ The contact selected is called.

---

### Editing/Managing phone book entries

- 1 Select **Contacts**.
- 2 Select the entry required.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Options**.
- 5 Select one of the following options:

Display contact:

- ▶ Select **View**.

Write a text message (SMS):

- ▶ Select **Send SMS**.

Edit entry:

- ▶ Select **Edit**.

Delete a contact

- ▶ Select **Delete**.

Copy contact:

- ▶ Select **Copy**.

Add to whitelist:

- ▶ Select **Add to Allowlist**.

Add to blacklist:

- ▶ Select **Add to Blocklist**.

Mark several:

- ▶ Select **Mark several**.

Contacts settings:

- ▶ Select **Contacts settings**.



## Mailbox

If your phone provider provides you with a mailbox (answering machine), a caller can leave a message for you if you do not take the call.

In order to play and listen to voice messages in your mailbox, you need the phone number of the mailbox. If necessary, ask your mobile service provider with regard to the call number.

You can listen to the messages on the mailbox:

- 1 Enter the phone number of the mailbox using the keypad .
- 2 Press the Call key .
- 3 Follow the mailbox voice guidance.
  - You have listened to the messages on your mailbox.

When you use the  key for the first time, you must enter the phone number of the mailbox.

# Emergency calls (SOS)

The mobile phone offers the following SOS functions:

- SOS calls
- SOS SMS (text message)
- SOS alarm



Do not use local, national or international emergency numbers.

## SOS calls

The SOS key provides a private emergency call function. By pressing the SOS key, you can call up to five numbers and/or send an SMS (text message).

## Activating/Deactivating the SOS emergency call function

- 1 Press the **Menu** key in the display.
  - 2 Select **SOS**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Status**.
  - 5 Confirm the selection by pressing the **OK** button in the display.
  - 6 Select **On/Off**.
  - 7 Confirm the selection by pressing **OK** (● = selected).
- You have activated the SOS calls function.



When the function is switched off, the SOS key can only be used for the SOS alarm, not for emergency calls.

## Entering emergency numbers

Enter the phone numbers to be dialled when the SOS key is pressed. You can enter up to five call numbers.

- 1 Press the **Menu** key in the display.
- 2 Select **SOS**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SOS Numbers**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select an empty memory location (<empty>).
- 7 Select **Options**.
- 8 Select **Enter Number**.

9 Confirm the selection by pressing the **OK** key in the display.

10 Enter the phone number using the keypad .

11 Select **Save**.

or

1 Complete working steps 1 to 8.

2 Select **Options**.

3 Select **Phonebook**.

4 Select the entry required.

5 Confirm the selection by pressing the **OK** key in the display.

► You have entered an emergency call number.

## SOS text message (SMS)

In addition to the SOS calls, you can also send SOS text messages (SMS).

There is a standard text already provided. You can change this text. When the function is activated, text messages are sent to the emergency call numbers set up.

## Activating/Deactivating SMS emergency notifications

1 Press the **Menu** key in the display.

2 Select **SOS**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **SOS SMS ON/OFF**.

5 Confirm the selection by pressing the **OK** key in the display.

6 Select **On/Off**.

7 Confirm the selection by pressing **OK** (● = selected).

► You have activate the SOS text message (SMS) function.

---

### Changing the content of the SOS text message

You can change the pre-installed, standard SOS text message and enter your own individual text.

- 1 Press the **Menu** key in the display.
  - 2 Select **SOS**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **SOS SMS**.
  - 5 Confirm the selection by pressing the **OK** key in the display. The standard text appears in the display.
  - 6 Delete the existing text by pressing the **Clear** key in the display.
  - 7 Enter the text required using the keypad .
  - 8 Select **Options**.
  - 9 Select **Save**.
- You have changed the content of the SOS text message.

Information on entering text for SMS text messages: → p. 38

---

### Activating the SOS alarm

When the SOS alarm is activated, the mobile phone issues a loud acoustic alarm signal after the SOS key has been pressed.

- 1 Press the **Menu** key in the display.
  - 2 Select **SOS**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Warning Tone**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **On/Off**.
  - 7 Confirm the selection by pressing **OK** (● = selected).
- You have activated the SOS alarm function.

## SMS (text messages)

You can send and receive text messages (SMS).

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.

The Control key  is used in the following description.

## Writing and sending a text message



A text message can contain up to 612 characters. In the case of more than 160 characters, the text () is sent as a **chained** SMS (up to four individual texts).

- 1 Press the **Menu** key in the display.
  - 2 Select **Messages**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Write message**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Enter the text required using the keypad .
  - 7 Select **Options**.
  - 8 Select **Send to**.
    - Enter number:
      - 1 Select **Enter number**.
      - 2 Confirm the selection by pressing the **OK** key in the display.
      - 3 Enter the phone number of the contact using the keypad .
      - 4 Confirm the selection by pressing the **OK** key in the display.
    - or
    - Using Contacts:
      - 1 Select **Add from Phonebook**.
      - 2 Confirm the selection by pressing the **OK** key in the display.
      - 3 Select the entry required.
      - 4 Confirm the selection by pressing the **Add** key in the display.
  - 9 Select **Options**.
  - 10 Select **Send**.
  - 11 Confirm the selection by pressing the **OK** key in the display.
- You have sent a text message.

### Discarding a text written

If you want to discard a text which you have entered:

- 1 Select **Options**.
  - 2 Select **Cancel**.
- You have discarded the text entered.



If a text message cannot be sent, it is filed in the outbox (→ p. 42).

---

## Input methods

Each key between 2 and 9 and the 0 key are assigned several letters and digits. When a key is pressed, the possible characters are shown at the bottom of the display. The selected character is highlighted.

### Selecting letters/digits:

- 1 Press the relevant key, **briefly**, several times in succession if necessary, until the required character is displayed (→ p. 19).

### Moving the cursor (left/right):

- 1 Press the Control key Up  or Down .

Change between lower case and upper case or number entry as necessary:

- 1 Press the Hash key .

or

- 1 Select **Options**.
- 2 Select **Input method**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **DE / de / De / Numeric**.
- 5 Confirm the selection by pressing the **OK** key in the display.

### Entering special characters:

- 1 Press the Star key.
  - 2 Select the special character required.
- You have selected the special character required.

---

## Changing the input language

The input language defines which characters are available for entering text.

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.

- 4 Select **Write message**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Options**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Writing language**.
  - 9 Select **Select**.
  - 10 Select the input language required.
  - 11 Confirm the selection by pressing **OK** (● = selected).
  - ▶ You have changed the input language.
- 

## Storing a text (SMS) temporarily (list of drafts)

You can store texts temporarily, to be changed and sent later.

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Write message**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Enter the text required using the keypad .
- 7 Select **Options**.
- 8 Select **Save**.
- 9 Select **Select**.
- ▶ You have stored the text as a draft in the list of drafts.

## Editing drafts

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Drafts**.
- 5 Confirm the selection by pressing the **OK** key in the display.  
The list of drafts appears in the display.
- 6 Select the draft required.
- 7 Select **Options**.
- 8 Select one of the following options:
  - Read SMS:
    - 1 Select **View**.
    - 2 Select **Select**.
  - Send SMS:
    - 1 Select **Send**.
    - 2 Select **Select**.
    - 3 Enter the phone number of the contact using the keypad  (→ p. 37)
    - 4 Select **Options**.
    - 5 Select **Send**.
  - Edit SMS:
    - 1 Select **Edit**.
    - 2 Select **Select**.
    - 3 Delete the existing text by pressing the **Clear** key in the display.
    - 4 Enter the text required using the keypad .
  - Delete draft:
    - 1 Select **Delete**.
    - 2 Select **Select**.
    - 3 Confirm the prompt by selecting **Yes**.
  - Delete all drafts:
    - 1 Select **Delete all**.
    - 2 Select **Select**.
    - 3 Confirm the prompt by selecting **Yes**.



## Sent messages

**Sent messages** lists all the texts you have sent.



The **Save sent message** function is activated (→ p. 47).

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Sent messages**.
- 5 Confirm the selection by pressing the **OK** key in the display.  
The list of sent message is displayed.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select one of the following options:
 

|                         |                                                                                                                                                                                                                   |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Read SMS:               | <ol style="list-style-type: none"> <li>1 Select <b>View</b>.</li> <li>2 Select <b>Select</b>.</li> </ol>                                                                                                          |
| Send to other contacts: | <ol style="list-style-type: none"> <li>1 Select <b>Forward</b>.</li> <li>2 Select <b>Select</b>.<br/>The text is displayed.</li> <li>3 Select <b>Options</b>.</li> <li>4 Select <b>Send</b> (→ p. 37).</li> </ol> |
| Delete SMS:             | <ol style="list-style-type: none"> <li>1 Select <b>Delete</b>.</li> <li>2 Select <b>Select</b>.</li> <li>3 Confirm the prompt by selecting <b>Yes</b>.</li> </ol>                                                 |
| Delete all texts:       | <ol style="list-style-type: none"> <li>1 Select <b>Delete all</b>.</li> <li>2 Select <b>Select</b>.</li> <li>3 Confirm the prompt by selecting <b>Yes</b>.</li> </ol>                                             |

## Outbox

All the texts which could not be sent, e.g. because no connection could be established or the call number was unknown, are stored on the outbox.

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Outbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.  
The list of messages not sent is displayed.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select one of the following options:
  - Read SMS:
    - 1 Select **View**.
    - 2 Select **Select**.
  - Send SMS:
    - 1 Select **Resend**.
    - 2 Select **Select**.
  - Edit SMS:
    - 1 Select **Change**.
    - 2 Select **Select**.
    - 3 Delete the existing text by pressing the **Clear** key in the display.
    - 4 Enter the text required using the keypad .
  - Delete SMS:
    - 1 Select **Delete**.
    - 2 Select **Select**.
    - 3 Confirm the prompt by selecting **Yes**.
  - Delete all texts:
    - 1 Select **Delete all**.
    - 2 Select **Select**.
    - 3 Confirm the prompt by selecting **Yes**.

## Text (SMS) templates

The SMS templates contains a selection of texts already written. These SMS templates can be edited or sent directly.

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **SMS templates**.
- 5 Confirm the selection by pressing the **OK** key in the display.

The list of SMS templates appears in the display.

- 6 Select the required SMS template.
- 7 Select **Options**.
- 8 Select one of the following options:

Use SMS templates:    1 Select **Use**.  
                                  2 Select **Select**.  
                                  3 Edit the text using the keypad  or send the text (→ p. 37).

Edit SMS templates:    1 Select **Edit**.  
                                  2 Select **Select**.  
                                  3 Enter the text required using the keypad 

Delete SMS templates: 1 Select **Remove**.  
                                  2 Select **Select**.  
                                  3 Confirm the prompt by selecting **Yes**.

## Receiving texts (SMS)

Incoming texts are stored in the inbox. The receipt of a new text is indicated by a notification tone (→ p. 68) and a message **Unread messages** in the display.

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Unread messages**.
- 5 Confirm the selection by pressing the **OK** key in the display.
  - ▶ The list of sent message is displayed.

If there are unread texts in the inbox, the  icon appears in the icon bar.

---

## Read text (SMS)

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select **View**.
- 9 Confirm the selection by pressing the **OK** key in the display.
  - ▶ You have read the text received.

## Editing the inbox

- 1 Press the **Menu** key in the display.
- 2 Select **Messages**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Inbox**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select the required text.
- 7 Select **Options**.
- 8 Select one of the following options:
 

|                                 |                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reply to SMS:                   | <ol style="list-style-type: none"> <li>1 Select <b>Reply</b>.</li> <li>2 Select <b>Select</b>.</li> <li>3 Enter the text required using the keypad </li> <li>4 Select <b>Options</b>.</li> <li>5 Select <b>Send</b> (→ p. 37).</li> </ol> |
| Call sender:                    | <ol style="list-style-type: none"> <li>1 Select <b>Call sender</b>.</li> <li>2 Select <b>Select</b>.</li> </ol> <p>The call number is dialled.</p>                                                                                                                                                                         |
| Forward call to other contacts: | <ol style="list-style-type: none"> <li>1 Select <b>Forward</b>.</li> <li>2 Select <b>Select</b>.</li> </ol> <p>The text is displayed.</p> <ol style="list-style-type: none"> <li>3 Select <b>Options</b>.</li> <li>▶ Select <b>Send</b>.</li> </ol>                                                                        |
| Delete SMS:                     | <ol style="list-style-type: none"> <li>1 Select <b>Delete</b>.</li> <li>2 Select <b>Select</b>.</li> <li>3 Confirm the prompt by selecting <b>Yes</b>.</li> </ol>                                                                                                                                                          |
| Delete all texts:               | <ol style="list-style-type: none"> <li>1 Select <b>Delete all</b>.</li> <li>2 Select <b>Select</b>.</li> <li>3 Confirm the prompt by selecting <b>Yes</b>.</li> </ol>                                                                                                                                                      |

## Text (SMS) settings

---

### Show Memory status

The SMS memory status indicates the actual and possible number of texts on the SIM card and in the internal mobile phone memory.

- 1 Press the **Menu** key in the display.
  - 2 Select **Messages**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **SMS settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Memory status**.
  - 7 Select **Select**.
- You have opened the memory status.

---

### SMS counter

The SMS counter indicates how many texts have been sent and received.

- 1 Press the **Menu** key in the display.
  - 2 Select **Messages**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **SMS settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **SMS counter**.
  - 7 Select **Select**.
- You have opened the SMS counter.  
The number of messages sent and received is displayed.

You can reset the counter:

- 1 Select **Reset**.
  - 2 Confirm the prompt by selecting **Yes**.
- You have reset the SMS counter.

---

## Saving the texts (SMS) sent

You can define whether the texts which you have sent should be stored in the list **Sent messages** (→ p. 41).

- 1 Press the **Menu** key in the display.
  - 2 Select **Messages**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **SMS settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Save sent message**.
  - 7 Select **Options**.
  - 8 Select **Select**.
  - 9 Select **On/Off**.
  - 10 Select **Select**.
- You have defined whether the sent texts should be saved.

---

## Preferred memory location

You can define whether texts should be stored on the mobile phone or on the SIM card.

- 1 Press the **Menu** key in the display.
  - 2 Select **Messages**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **SMS settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Preferred storage**.
  - 7 Select **Options**.
  - 8 Select **Select**.
  - 9 Select **Phone/SIM**.
  - 10 Select **Select**.
- You have defined the memory location where texts should be saved.

---

## Further applications

This chapter describes further functions provided by the mobile phone.

---

### Alarm clock



The date and time are correct.

---

### Setting the alarm clock

You can set three alarm times. A wake up alarm (→ p. 50) is issued at the times set:

- 1 Press the **Menu** key in the display.
- 2 Select **Applications**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Alarm**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select a waking time required (00:00).
- 7 Select **Edit**.
- 8 Use the Control key  to move between the input fields:

Switch on or off: 1 Select **Status**.

2 Select **Select**.

3 Select **Options**.

4 Select **On/Off**.

5 Select **Select**.

Alarm time: 1 Enter the time, to four-digits, using the keypad .

Snooze: 1 Select **Snooze (min)**.

2 Select **Select**.

3 Select the interval required (1 / 3 / 5 / 10 min.).

4 Select **Options**.

5 Select **Save**.

6 Confirm the selection by pressing the **OK** key in the display.



- Repeat:
- 1 Select **Repeat**.
  - 2 Select **Select**.
  - 3 Select **Options**.
  - 4 Use the Control key  to select how often the event should be repeated (**Once** / **Everyday** / **Custom**).
  - 5 Confirm the selection by pressing the **OK** key in the display.

**Custom:**

- 6 Use the Control key  select the day.
  - 7 Select **On/Off** (multiple selection is possible).
  - 8 Select **Done**.
- Alarm tone:
- 1 Select **Alarm tone**.
  - 2 Select **Select**.
  - 3 Select **Options**.
  - 4 Select the ringtone for the alarm clock.
  - 5 Confirm the selection by pressing the **OK** key in the display.
- Alarm type:
- 1 Select **Alert type**.
  - 2 Select **Select**.
  - 3 Select **Options**.
  - 4 Select the alarm type (**Vib. and ring** / **Ring only** / **Vib. only**).
  - 5 Confirm the selection by pressing the **OK** key in the display.

If an alarm clock is activated, the  icon appears in the icon bar in the mobile phone display.

### Waking call

An alarm is shown in the display and indicated by the selected ringtone melody. The wake-up call sounds for 60 second. If no key is pressed, it is repeated after the set snooze time (→ p. 48). After the second repetition, the alarm call is deactivated.



During a call, the alarm is only indicated by a short tone.

### Wake up call deactivating/repeating after a pause( snooze mode)

To switch off the alarm:

- 1 Select **Stop**.
- 2 You have deactivated the wake up call.

Repeat alarm (snooze mode):

- 1 Select **Snooze**.

or

- 1 Press any key.
- ▶ You have deferred the wake up call.  
It will be repeated after 5 minutes.

## Calendar

You can enter appointments (events) in the calendar and then be reminded of them.



The date and time are correct.

To open the calendar:

- 1 Press the **Menu** key in the display.
- 2 Select **Applications**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- ▶ You have opened the calendar.

The current date has a coloured background, the day currently selected day is framed. Days with events are half coloured. Different colours indicate the number of events configured for the day.

| Feb 2025 |    |    |    |      |    |    |
|----------|----|----|----|------|----|----|
| S        | M  | T  | W  | T    | F  | S  |
| 29       | 30 | 1  | 2  | 3    | 4  | 5  |
| 6        | 7  | 8  | 9  | 10   | 11 | 12 |
| 13       | 14 | 15 | 16 | 17   | 18 | 19 |
| 20       | 21 | 22 | 23 | 24   | 25 | 26 |
| 27       | 28 | 29 | 30 | 31   | 1  | 2  |
| 3        | 4  | 5  | 6  | 7    | 8  | 9  |
| Options  |    |    |    | Back |    |    |

## Navigating in the calendar

Choosing the required date:

1 Navigate up  and down  using the Control keys.

or

- 1 Select **Options**.
- 2 Select **Jump to date**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Enter the date required, to eight digits, using the keypad .
- 5 Confirm the selection by pressing the **OK** key in the display.

or

- 1 Select **Options**.
- 2 Select **Go to today**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have selected the required date.

---

## Displaying events

An event is indicated at a the specified time by an acoustic signal (when activated) and an indicator in the display.

Switch the acoustic signal off:

- 1 Confirm the selection by pressing the **OK** key in the display.

Let the alarm (snooze mode) be repeated:

- 1 Select **Snooze**.

or

- 1 Press any key.
- ▶ You have deactivated the alarm. It will be repeated after 5 minutes.

---

## Creating a new event

- 1 Press the **Menu** key in the display.
- 2 Select **Applications**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Select **Options**.
- 6 Select **Add event**.
- 7 Use the Control key  to move between the input fields:

## Further applications

Naming an event: 1 Select **Options**.

2 Select **Edit**.

3 Enter a name for the event using the keypad 

4 Select **Options**.

5 Select **Done**.

Enter the starting 1 Select **Start**.

time:

2 Enter the date required, to eight figures, using the keypad 

3 Enter the time, to four-digits, using the keypad 

Enter the ending 1 Select **End**.

time:

2 Enter the date required, to eight digits, using the keypad 

3 Enter the time, to four-digits, using the keypad 

Type of event: 1 Select **Options**.

2 Select **Select**.

3 Select the event type (**Reminder** / **Meeting** / **Course** / **Date** / **Call** / **Anniversary** / **Birthday**).

4 Confirm the selection by pressing the **OK** key in the display.

Activate the 1 Select **Options**.

alarm:

2 Select **Select**.

3 Select **On** / **Off** / **5 min before** / **10 min before** / **15 min before** / **30 min before**.

4 Confirm the selection by pressing **OK** (● = selected).

Repeat the event: 1 Select **Repeat**.

2 Confirm the selection by pressing the **OK** key in the display.

3 Select how often the event should be repeated (**Once** / **Everyday** / **Custom**).

4 Confirm the selection by pressing the **OK** key in the display.

Save: 1 Select **Save**.

Further information on entering text: → p. 19

## Displaying events

You can display events assigned to a specific day:

- 1 Press the **Menu** key in the display.
- 2 Select **Applications**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Use the Control key to scroll up  or down  to the required day.
- 7 Select **Options**.
- 8 Select **View**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select an event.
- ▶ You have opened the event selected. The details are displayed.

You can display all the events:

- 1 Press the **Menu** key in the display.
- 2 Select **Applications**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Options**.
- 7 Select **View all**.
- 8 Confirm the selection by pressing the **OK** key in the display.
- 9 Select an event.
- 10 Select **Options**.
- 11 Select **View**.
- 12 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have opened all the events. The details are displayed.

### Deleting events

You can delete a specific event, all events, outdated events or the events within a certain time period.

- 1 Press the **Menu** key in the display.
- 2 Select **Applications**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Calendar**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Options**.
- 7 Select **Delete event**.
- 8 Confirm the selection by pressing the **OK** key in the display.
- 9 Select **All / Overdue / Specific period**.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Confirm the deletion by pressing **Yes**.
- ▶ You have deleted the event selected.

In the case of **Specific period**: ▶  Enter the date and time for the start and end of the deletion period.

---

### File manager

Your personal data, e.g. photos, music files, ringtones, call recordings are saved in the internal memory of the phone or on an SD card which you have inserted in the device . The files can be accessed via the file manager.

---

### Managing the file memory

- 1 Press the **Menu** key in the display.
- 2 Select **Applications**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **My Files**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Phone / Memory card**.
- 7 Select **Options**.
- 8 Select **Open**.
- 9 Confirm the selection by pressing the **OK** key in the display The files or folders stored in the memory are displayed.
- 10 Select the folder or file you require.
- 11 Select **Open**.

12 Select one of the following options:

Create new folder: 1 Select **New**.

2 Confirm the selection by pressing the **OK** key in the display.

3 Enter a name for the folder using the keypad .

4 Select **Options**.

5 Select **Done**.

Rename the folder:

1 Select **Options**.

2 Select **Rename**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Delete the existing characters by using the **Clear** key.

5 Enter a new name for the folder using the keypad .

6 Select **Options**.

7 Select **Done**.

Delete the folder: 1 Select **Options**.

2 Select **Delete**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Confirm the deletion by pressing **Yes**.

---

## Displaying the memory assignment on the SD card

1 Press the **Menu** key in the display.

2 Select **Applications**.

3 Confirm the selection by pressing the **OK** key in the display.

4 Select **My Files**.

5 Confirm the selection by pressing the **OK** key in the display.

6 Select **Memory card**.

7 Confirm the selection by pressing the **OK** key in the display.

8 Select **Details**.

► You have opened a detailed view of the memory card.

The memory assignment and free capacity are displayed.

### Formatting the memory

If you want to delete all the personal data on the mobile phone, the simplest method is to format the memory. Individual files, e.g. photos or ringtone files are deleted using the respective application.



#### Attention!

As a result of formatting, all the data stored (e.g. photos) in the memory (phone / memory card) is deleted. This process cannot be reversed.

- 1 Press the **Menu** key in the display.
  - 2 Select **Applications**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **My Files**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Phone/Memory card**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Options**.
  - 9 Select **Format**.
  - 10 Confirm the selection by pressing the **OK** key in the display.
  - 11 Confirm the formatting process by selecting **Yes**.
- You have formatted the selected memory. All the personal data has been deleted.

### Loading data in the mobile phone memory

You can also manage your personal data on a PC.

- 1 Connect the mobile phone to a PC using the USB cable.
  - 2 Select **Mass storage**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
- The internal memory of the mobile phone is displayed as a drive on the PC.

You can manage the folders and files on the mobile phone using the standard functions of your PC operating system.

You can copy audio and video files into the memory of the mobile phone for use as ringtones or a display background as well as music files for an audio player.



As long as the mobile phone remains connected to the PC, the File Manager function is not available.



## Camera and image viewer

The mobile phone is equipped with a camera (→ p. 4). The **Camera** application provides access to your photos and you can also adjust the camera settings.

Quick access to your photos is possible using the **Gallery** application.

---

### Taking photos

- 1 Press the **Menu** key in the display.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Point the camera lens at the image required.
- 5 Press the key .
- ▶ You have taken a photo of the image in front of the camera.

You have approx. 10 seconds time to discard the photo using the **Delete** key in the display. It is then saved in JPG format in the **Photos** folder in the internal memory of the mobile phone or on the memory card.

---

### Viewing photos

You can view and manage photos taken via the camera or gallery.

Showing photos via the camera:

- 1 Press the **Menu** key in the display.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Options**.
- 5 Select **Photos**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select the file required.
- 8 Select **View**.
- ▶ You have displayed a photo via the camera.

## Further applications

Showing photos via the gallery:

- 1 Press the **Menu** key in the display.
  - 2 Select **Gallery**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select the file required.
  - 5 Select **Options**.
  - 6 Select **View**.
- You have displayed a photo via the gallery.

---

## Editing photos

Showing photos via the image viewer:

- 1 Press the **Menu** key in the display.
- 2 Select **Camera**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Options**.
- 5 Select **Photos**.
- 6 Confirm the selection by pressing the **OK** key in the display.
- 7 Select the file required.
- 8 Select **View**.
- 9 Select **Options**.

or

- 1 Press the **Menu** key in the display.
- 2 Select **Gallery**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select the file required.
- 5 Select **View**.
- 6 Select **Options**.
- 7 Select one of the following options:

Rotate image:

- 1 Select **Rotate view**.  
The photo is rotated 90° clockwise.

- Using as a background picture:
- 1 Select **Use as**.
  - 2 Confirm the selection by pressing the **OK** key in the display.
  - 3 Select **Wallpaper**.
  - 4 Confirm the selection by pressing the **OK** key in the display.  
The photo is used to test it as a background.
  - 5 Confirm the selection by pressing the **OK** key in the display The photo is used as a background.
- Rename image:
- 1 Select **Rename**.
  - 2 Confirm the selection by pressing the **OK** key in the display.
  - 3 Delete the existing characters by using the **Clear** key.
  - 4 Enter a new name for the folder using the keypad .
  - 5 Select **Options**.
  - 6 Select **Done**.
- Deleting:
- 1 Select **Delete**.
  - 2 Confirm the selection by pressing the **OK** key in the display.
  - 3 Confirm the deletion by pressing **Yes**.
- Show information on the photo
- 1 Select **Image information**.
  - 2 Confirm the selection by pressing the **OK** key in the display.  
The file name, resolution, file size and creation date of the photo are displayed.

---

## Camera and photo settings

- 1 Press the **Menu** key in the display.
  - 2 Select **Camera**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Options**.
  - 5 Select **Camera settings** or **Image settings**.
  - 6 Confirm the selection by pressing the **OK** key in the display.
  - 7 Select the settings required.
- You have adapted the camera settings.

### Setting the memory location

Photos are saved in the mobile phone internal memory or on the SD card.

Set the memory location:

- 1 Press the **Menu** key in the display.
  - 2 Select **Camera**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Options**.
  - 5 Select **Storage**.
  - 6 Confirm the selection by pressing the **OK** key in the display
  - 7 Change the required memory location (**Phone** / **Memory card**).
  - 8 Confirm the selection by pressing the **OK** key in the display.
- You have set the memory location.
- 

### Resetting the camera settings

You can reset all the camera settings which you have changed back to their factory settings:

- 1 Press the **Menu** key in the display.
  - 2 Select **Camera**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Options**.
  - 5 Select **Restore default**.
  - 6 Confirm the selection by pressing the **OK** key in the display.
  - 7 Confirm the resetting process by pressing **Yes**.
- You have reset the camera settings to their factory settings.

# Settings

This chapter describes the settings which can be set for operating the mobile phone.

## Date and time

The date and time can be set manually.

### Setting manually

- 1 Press the **Menu** key in the display.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Date and Time**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Set time/date**.
- 9 Use the Control key  to move between the input fields.
 

|       |                                                                                                                                           |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Time: | 1 Use the keypad  to enter the time (format: HH:MM).     |
| Date: | 1 Use the keypad  to enter the date (format: YYYY.MM.DD) |
| Save: | 1 Select <b>Save</b> .                                                                                                                    |

### Setting the time and date format

- 1 Press the **Menu** key in the display.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Phone settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Date and Time**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Set format**.
  - 9 Confirm the selection by pressing the **OK** key in the display.
  - 10 Select the date and time format required.
  - 11 Select **Options**.
  - 12 Select **Save**.
  - 13 Confirm the selection by pressing the **OK** key in the display.
- 

### Allowlist and blocklist

You can assign phone numbers to a allowlist or blocklist. When the allowlist is activated, calls from phone numbers not in the list are automatically rejected.

When the blocklist is activated, calls from phone numbers which are on the list are automatically rejected.

---

### Allowlist

The allowlist is used to enter number which are allowed to reach you.

Switch the allowlist on:

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Security settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Allowlist**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Mode**.
  - 9 Select **On/Off**.
  - 10 Confirm the selection by pressing the **OK** key in the display.
- You have switched the allowlist on.

Add phone numbers to the allowlist:

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Security settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Deselect **Allowlist**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Allowlist numbers**.
  - 9 Select an empty memory location (<empty>).
  - 10 Select **Edit**.
  - 11 Select **Enter Number**.
  - 12 Confirm the selection by pressing the **OK** key in the display.
  - 13 Enter the phone number using the keypad .
  - 14 Alternatively, select a phone number from the telephone book or the call list.
  - 15 Select **Save**.
- You have added a phone number to the allowlist.

### Blocklist

The blocklist is used to prevent calls from unwanted phone numbers.

Switch the blacklist on:

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Security settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Blocklist**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Reject numbers in Blocklist**.
  - 9 Select **On/Off**.
  - 10 Confirm the selection by pressing the **OK** key in the display.
- You have switched the blocklist on.

Add phone numbers to the blocklist:

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Security settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Blocklist**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Blocklist numbers**.
  - 9 Select an empty memory location (<empty>).
  - 10 Select **Edit**.
  - 11 Select **Enter Number**.
  - 12 Confirm the selection by pressing the **OK** key in the display.
  - 13 Enter the phone number using the keypad .
  - 14 Alternatively, select a phone number from the telephone book or the call list.
  - 15 Select **Save**.
- You have added a phone number to the blocklist.



---

## Language

You can define the languages for the display and for keypad input separately from each other.

---

### Display language

The display language defines the language for displays, menus and messages on the mobile phone.

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Phone settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Display language**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select the required language.
  - 9 Confirm the selection by pressing the **OK** key in the display.
- You have defined the display language.

---

### Writing language

The writing language defines the range of characters available for text input (e.g. When writing a text (SMS)).

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Phone settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Writing language**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select the required writing language.
  - 9 Confirm the selection by pressing **OK** (● = selected).
- You have selected the writing language.

## Tones and signals

### Selecting the acoustic profile

The mobile phone offers an acoustic profile with which you can adapt the phone's reaction to calls received according to the ambient conditions.

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Profiles**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select the required profile (**Standard**, **Vibration**, **Silent**).
  - 7 Select **Options**.
  - 8 Select **Activate**.
- You have selected the acoustic profile.

**Standard**      The mobile phone rings when a call is received.

**Vibration**      The mobile phone vibrates. The ringtone is deactivated. An icon appears in the display.

**Silent**      A incoming call is only shown visually on the display. The mobile phone neither rings or vibrates. An icon appears in the display.



---

## Defining the ringing tone

You can choose one of 11 different ringing melodies available for selection. Individual ringtones (mp3 format) can be loaded in the phone's internal memory or on the memory card in the **Ringtones** (→ p. 54) folder.

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Audio**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Ringtone**.
  - 7 Confirm the selection by pressing the **OK** key in the display.
  - 8 Select **Options**.
  - 9 Select **Change**.
  - 10 Select the ringtone required.  
The ringtone is played as a test.
  - 11 Confirm the selection by pressing the **OK** key in the display.
  - 12 Select **Options**.
  - 13 Select **Save**.
- You have changed the ringtone.

---

## Setting the ringtone volume

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Audio**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Ringtone volume**.
  - 7 Select **Options**.
  - 8 Select **Change**.  
The current ringtone is played as a test.
  - 9 Set the volume louder  or quieter  using the Control key.
  - 10 Confirm the selection by pressing the **OK** key in the display.
- You have set the volume of the ringtone.

### Message tone

The message tone indicates the receipt of a new text message (SMS). You can choose one of 4 different ringing melodies available for selection.

#### Selecting the message tone

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Audio**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Message**.
- 7 Select **Options**.
- 8 Select **Change**.
- 9 Select the message tone required.  
The current message tone is played as a test.
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Select **Options**.
- 12 Select **Save**.
- ▶ You have set the message tone.

#### Setting the volume of the message tone

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Audio**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Message**.
- 7 Select **Options**.
- 8 Select **Change**.  
The current message tone is played as a test.
- 9 Set the volume louder  or quieter  using the Control key.
- 10 Confirm the selection by pressing the **OK** key in the display.
- ▶ You have set the volume of the message tone.

## Key tone

A key tone is issued each time a key is pressed.

### Selecting the key tone

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Audio**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Keypad**.
  - 7 Select **Options**.
  - 8 Select **Change**.
  - 9 Select **Silent / Click / Tone**.
  - 10 Confirm the selection by pressing the **OK** key in the display.
- You have set the key tone.

### Setting the volume of the key tone

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Audio**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Keytone volume**.
  - 7 Select **Options**.
  - 8 Select **Change**.
  - 9 Set the volume louder  or quieter  using the Control key.
  - 10 Confirm the selection by pressing the **OK** key in the display.
- You have set the volume of the key tone.

---

### Activating/Deactivating the system notifications

System notifications (e.g. **Low battery, Please put me on charging!**) are indicated in the display as standard. You can suppress system notifications.

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Audio**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **System alert**.
  - 7 Select **Options**.
  - 8 Select **Change**.
  - 9 Select **Off/On**.
  - 10 Confirm the selection by pressing **OK** (● = selected).
- You have set the acoustic tone for the system warnings.

---

### Torch when receiving a call

When a call is received, the torch flashes. This function can be switched on or off.

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Audio**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Select **Torch for incoming call**.
  - 7 Select **Options**.
  - 8 Select **Change**.
  - 9 Select **Off/On**.
  - 10 Confirm the selection by pressing **OK** (● = selected).
- You have defined the torch reaction when a call is received.

## Display

### Display backlight

You can set the brightness and duration of the display backlight.

When the duration set has expired, the display backlight is switched off completely and the display turns black.

Press any key to switch the display on again.

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Display**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Display backlight**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select one of the following options:

- |             |                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Brightness: | <ol style="list-style-type: none"> <li>1 Select <b>Brightness</b>.</li> <li>2 Confirm the selection by pressing the <b>OK</b> key in the display.</li> <li>3 Set the brightness to one of 5 levels using the Control key .</li> <li>4 Confirm the selection by pressing the <b>OK</b> key in the display.</li> </ol> |
| Duration:   | <ol style="list-style-type: none"> <li>1 Select <b>Time (sec)</b>.</li> <li>2 Confirm the selection by pressing the <b>OK</b> key in the display.</li> <li>3 Select the duration (1 - 60 sec.) using the Control key .</li> <li>4 Confirm the selection by pressing the <b>OK</b> key in the display.</li> </ol>   |

### Background image

You can select a background image for the display. You can use images which are available in the system or your own photos which you have saved on the internal memory of the mobile phone or on the memory card( → p. 54).

Format: JPG, size: 220x176, 160x120, 320x240, 640x480

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Phone settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **Display**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Wallpaper**.
- 9 Confirm the selection by pressing the **OK** key in the display.
- 10 Select between the following options:

System images: 1 Select **System**.

- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select the picture required.
- 4 Confirm the selection by pressing the **OK** key in the display.

Own photos 1 Select **User defined**.

- 2 Confirm the selection by pressing the **OK** key in the display.
- 3 Select **Phone/Memory card**.
- 4 Confirm the selection by pressing the **OK** key in the display.
- 5 Navigate through the memory selected and select the photo required.
- 6 Confirm the selection by pressing the **OK** key in the display.



## SIM cards and network operator

### Activating/Deactivating the SIM card lock

When the mobile phone is switched on, you are requested to enter the SIM card PIN. You can deactivate this SIM card lock.

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **SIM security**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **PIN lock**.
- 9 Enter the current PIN using the keypad .
- 10 Select **Off/On**.
- ▶ You have deactivated the SIM card lock.  
You can use the mobile phone without entering the PIN.

### Changing the SIM card PIN

You can change PIN 1 and PIN 2 of the SIM card.



The PIN lock is active.

- 1 Press the **Menu** display key.
- 2 Select **Settings**.
- 3 Confirm the selection by pressing the **OK** key in the display.
- 4 Select **Security settings**.
- 5 Confirm the selection by pressing the **OK** key in the display.
- 6 Select **SIM security**.
- 7 Confirm the selection by pressing the **OK** key in the display.
- 8 Select **Change PIN/Change PIN2**.
- 9 Enter the current PIN using the keypad .
- 10 Confirm the selection by pressing the **OK** key in the display.
- 11 Enter the new PIN using the keypad .
- 12 Confirm the selection by pressing the **OK** key in the display.
- 13 Enter the new PIN again as confirmation.

## Settings

14 Confirm the selection by pressing the **OK** key in the display.

► You have changed the PIN of the SIM card.



If the current PIN is entered incorrectly three times in succession, the SIM card is locked. You can unlock the SIM card with the PIN 2. If you enter PIN 2 incorrectly three times in succession you no longer have any access to the SIM card.

In such a case, please contact your mobile service provider.

---

## Resetting to the factory settings

If you want to hand the mobile phone over to a third party, you can reset it to the factory settings. All the individual settings are reset, the call lists and phone book entries in the phone's internal memory are deleted.



### Attention!

On resetting the factory settings, all the data stored (e.g. photos) are deleted from the mobile phone. This process cannot be reversed.

- 1 Press the **Menu** display key.
  - 2 Select **Settings**.
  - 3 Confirm the selection by pressing the **OK** key in the display.
  - 4 Select **Restore factory settings**.
  - 5 Confirm the selection by pressing the **OK** key in the display.
  - 6 Confirm the resetting process by pressing **Yes**.
- You have reset the mobile phone to its factory settings.

# Menu overview



Not all functions described in this user guide are available in all countries or with all network providers.

Open main menu:  When the mobile phone is in an idle state, press the **Menu** display key

## Contacts

|                 |                   |         |
|-----------------|-------------------|---------|
| Add new contact | .....             | → p. 31 |
| <Entry>         | View              | → p. 29 |
|                 | Send SMS          | → p. 29 |
|                 | Call              | → p. 29 |
|                 | Edit              | → p. 29 |
|                 | Delete            | → p. 29 |
|                 | Copying           | → p. 29 |
|                 | Add to Allowlist  | → p. 29 |
|                 | Add to Blocklist  | → p. 29 |
|                 | Mark several      | → p. 29 |
|                 | Contacts settings | → p. 29 |

## Messages

|               |                       |         |
|---------------|-----------------------|---------|
| Write message | Send to               | → p. 37 |
|               | Input method          | → p. 38 |
|               | Writing language      | → p. 38 |
|               | Insert templates      | → p. 43 |
|               | Insert contact number | → p. 37 |
|               | Save                  | → p. 38 |
| Inbox         | View                  | → p. 44 |
|               | Reply                 | → p. 44 |
|               | Call sender           | → p. 44 |
|               | Forward               | → p. 44 |
|               | Delete                | → p. 44 |
|               | Delete all            | → p. 44 |
|               | Mark several          | → p. 44 |
|               | Details               | → p. 44 |

## Menu overview

|               |                   |                  |         |
|---------------|-------------------|------------------|---------|
| Drafts        | View              | → p. 39          |         |
|               | Send              | → p. 40          |         |
|               | Edit              | → p. 40          |         |
|               | Delete            | → p. 40          |         |
|               | Delete all        | → p. 40          |         |
|               | Mark several      | → p. 40          |         |
|               | Details           | → p. 40          |         |
| Outbox        | View              | → p. 42          |         |
|               | Send              | → p. 42          |         |
|               | Change            | → p. 42          |         |
|               | Delete            | → p. 42          |         |
|               | Delete all        | → p. 42          |         |
|               | Mark several      | → p. 42          |         |
|               | Details           | → p. 42          |         |
| Sent messages | View              | → p. 41          |         |
|               | Forward           | → p. 41          |         |
|               | Delete            | → p. 41          |         |
|               | Delete all        | → p. 41          |         |
|               | Mark several      | → p. 41          |         |
|               | Details           | → p. 41          |         |
| SMS templates | .....             | → p. 43          |         |
| SMS settings  | SIM               | Profile settings | → p. 46 |
|               |                   | Validity period  |         |
|               |                   | Message type     |         |
|               |                   | Delivery report  |         |
|               |                   | Reply path       |         |
|               | Memory status     |                  | → p. 46 |
|               | SMS counter       |                  | → p. 46 |
|               | Save sent message |                  | → p. 47 |
|               | Preferred storage |                  | → p. 47 |

## Call Logs

|                  |                             |         |
|------------------|-----------------------------|---------|
| All calls        | Options for all call lists: | → p. 28 |
|                  | View                        | → p. 28 |
|                  | Call                        | → p. 28 |
|                  | Send SMS                    | → p. 28 |
|                  | Save to contacts            | → p. 28 |
|                  | Add to Allowlist            | → p. 28 |
|                  | Add to Blocklist            | → p. 28 |
|                  | Delete                      | → p. 28 |
| Missed calls     | .....                       | → p. 28 |
| Received calls   | .....                       | → p. 28 |
| Dialled calls    | .....                       | → p. 28 |
| Rejected calls   | .....                       | → p. 28 |
| Delete call logs | .....                       | → p. 28 |

## Settings

|                |                  |                             |         |
|----------------|------------------|-----------------------------|---------|
| Phone settings | Date and Time    | Set time/date               | → p. 62 |
|                |                  | Set format                  | → p. 62 |
|                | Allowlist        | Mode                        | → p. 62 |
|                |                  | Allowlist numbers           | → p. 62 |
|                | Blocklist        | Reject numbers in Blocklist | → p. 64 |
|                |                  | Blocklist numbers           | → p. 64 |
|                | Display language |                             | → p. 65 |
|                | Writing language |                             | → p. 65 |
|                | Display          | Wallpaper                   | → p. 72 |
|                |                  | Display backlight           | → p. 71 |
|                |                  | Idle Display settings       |         |
|                | Audio            | Alert type                  | → p. 66 |
|                |                  | Ring type                   | → p. 66 |
|                |                  | Ringtone                    | → p. 67 |
|                |                  | Ringtone volume             | → p. 67 |
|                |                  | Message                     | → p. 68 |
|                |                  | Message volume              | → p. 68 |
|                |                  | Keypad                      | → p. 69 |
|                |                  | Keytone volume              | → p. 69 |
|                |                  | System alert                | → p. 70 |
|                |                  | Torch for incoming call     | → p. 70 |

|                   |                    |                             |         |
|-------------------|--------------------|-----------------------------|---------|
| Call settings     | Call waiting       | Activate                    |         |
|                   |                    | Deactivate                  |         |
|                   |                    | Query status                |         |
|                   | Forward calls      |                             |         |
|                   | Call barring       | Outgoing calls              |         |
|                   |                    | Incoming calls              |         |
|                   |                    | Cancel all                  |         |
|                   |                    | Change barring password     |         |
|                   | Advanced settings  | Auto redial                 |         |
|                   | Voicemail settings | Answer mode                 |         |
|                   |                    |                             |         |
| Main menu         |                    |                             |         |
| Profiles          | ..... → p. 66      |                             |         |
| Battery           |                    |                             |         |
| Speed dial        | ..... → p. 21      |                             |         |
| Security settings | SIM security       | PIN lock                    | → p. 73 |
|                   |                    | Change PIN                  | → p. 73 |
|                   |                    | Change PIN2                 | → p. 73 |
|                   | Phone lock         | Phone lock                  |         |
|                   |                    | Change password             |         |
|                   | Blocklist          | Reject numbers in Blocklist | → p. 62 |
|                   | Allowlist          | Blocklist numbers           | → p. 62 |
|                   |                    | Mode                        | → p. 64 |
|                   | Auto keypad lock   | Allowlist numbers           | → p. 64 |
|                   |                    |                             | → p. 15 |

**Menu overview**

|           |
|-----------|
| Bluetooth |
|-----------|

|                     |
|---------------------|
| Power               |
| Visibility          |
| My device           |
| Search audio device |
| My name             |
| Advanced            |

|                          |
|--------------------------|
| Restore factory settings |
|--------------------------|

→ p. 74

|                |
|----------------|
| <b>Gallery</b> |
|----------------|

|          |
|----------|
| Pictures |
| Video    |

|                   |
|-------------------|
| View              |
| Send              |
| Use as            |
| Rename            |
| Delete            |
| Mark several      |
| Image information |
| Storage           |

→ p. 57

→ p. 58

→ p. 58

→ p. 58

→ p. 58



|               |                 |                   |
|---------------|-----------------|-------------------|
| <b>Camera</b> | Photos          | View              |
|               |                 | Send              |
|               |                 | Use as            |
|               |                 | Rename            |
|               |                 | Delete            |
|               |                 | Mark several      |
|               |                 | Image information |
|               | Camera settings | Shutter sound     |
|               |                 | Anti-flicker      |
|               |                 | Scene mode        |
|               |                 | White balance     |
|               |                 | Delay timer       |
|               |                 | Cont. shot        |
|               | Image settings  | Image size        |
|               |                 | Image quality     |
|               | Storage         |                   |
|               | Restore default |                   |

## SOS

|                |       |         |
|----------------|-------|---------|
| Status         | ..... | → p. 34 |
| SOS Numbers    | ..... | → p. 34 |
| SOS SMS ON/OFF | ..... | → p. 35 |
| SOS SMS        | ..... | → p. 35 |
| Warning Tone   | ..... | → p. 36 |

Menu overview

Applications

|             |                   |         |         |
|-------------|-------------------|---------|---------|
| Alarm       | <Alarm time>      | Change  | → p. 50 |
| Torch       | <Alarm time>      | Change  | → p. 15 |
| Calendar    | View              |         | → p. 50 |
|             | View all          |         | → p. 50 |
|             | Add event         |         | → p. 51 |
|             | Delete event      |         | → p. 54 |
|             | Jump to date      |         | → p. 53 |
|             | Go to today       |         | → p. 53 |
|             | Go to weekly view |         | → p. 53 |
|             | Start of week     |         | → p. 53 |
| My Files    | Phone             | Open    | → p. 54 |
|             |                   | Format  |         |
|             |                   | Details |         |
|             | Memory card       | Open    | → p. 54 |
|             |                   | Format  |         |
|             |                   | Details |         |
| SIM Toolkit | Special           |         |         |

# Appendix

---

## Customer service

If you have any problems with your mobile phone, please contact a Gigaset dealer or the Gigaset Service Center.

You can also purchase original accessories (e.g. batteries, charger) there.

Help is available at [www.gigaset.com/service](http://www.gigaset.com/service)

---

## Guarantee Certificate

Unless otherwise specified, the guarantor (hereinafter referred to as "Gigaset Technologies") grants the consumer (customer) a durability warranty under the following conditions (warranty conditions), without prejudice to the consumer's statutory rights relating to defects. The customer's warranty rights are not limited by this warranty. Warranty rights can be asserted free of charge. This warranty represents an obligation on the part of the guarantor in addition to the statutory warranty rights that can be asserted free of charge for defect claims.

### Warranty conditions:

- New devices (telephones, smartphones) and their components in which a defect is detected within 24 months from the date of purchase resulting from a manufacturing and/or materials fault will, at the customer's discretion, be exchanged free of charge for a technologically current device or repaired by Gigaset Technologies. This durability warranty applies for 12 months from the date of purchase for parts subject to wear (all moving parts that can be replaced by the customer itself, e.g. spare parts, batteries, keyboards, housing).
- This warranty does not apply in the event a defect to devices is attributable to improper treatment and/or a failure to follow the operating guides.
- This warranty does not cover any services provided by the appointed dealer or by the customer himself (e.g. installation, configuration, software downloads). Manuals and, where applicable, accompanying software on a separate data carrier are also excluded from the warranty.
- Proof of purchase plus date of purchase are required as evidence of a valid warranty. Warranty claims must be asserted within two (2) months of the awareness of a warranty event.
- Replaced devices or their components returned to Gigaset Technologies during the course of an exchange are transferred to the ownership of Gigaset Technologies.
- This warranty applies to new devices acquired within the European Union. These will be exchanged free of charge for a technologically current device or repaired by Gigaset Technologies. The warrantor is Gigaset Technologies GmbH, Frankenstraße 2, D-46395 Bocholt.

- No further or different claims arising from this manufacturer's warranty will be accepted. Gigaset Technologies accepts no liability for operational interruptions, loss of profit and loss of data, software additionally installed by the customer or other information. The customer is responsible for safeguarding these. The liability disclaimer does not apply if liability is mandatory, for example under the Product Liability Act, in cases of wilful intent, gross negligence, injury to life, limb and health or breach of material contractual obligations. Claims for damages in respect of breach of material contractual obligations are however limited to foreseeable losses typical for the contract, unless liability is as a result of wilful intent, gross negligence, injury to life, limb and health or under the Product Liability Act.
- Successful assertion of a warranty claim does not extend the term of the warranty.
- Unless there is a warranty event, Gigaset Technologies reserves the right to charge the customer for an exchange or repair. Gigaset Technologies will inform the customer of this in advance.
- Any change to the rules governing burden of proof to the detriment of the customer is not connected with the above rules.
- Federal German law applies to this warranty, to the exclusion of the United Nations Convention on Contracts for the International Sale of Goods (CISG). This choice of law does not deprive the consumer of the protection he/she would have been granted under provisions that cannot be derogated from by agreement, according to the law of the country in which he/she has her habitual residence ('favourability principle').

Please contact the warrantor's customer services to redeem and assert this warranty. You can find the relevant telephone number in our Service Portal at [www.gigaset.com/service](http://www.gigaset.com/service).

### **Exclusion of liability**

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

| Description                                  | Maximum number of permitted pixel errors |
|----------------------------------------------|------------------------------------------|
| Colour illuminated sub-pixels                | 1                                        |
| Dark sub-pixels                              | 1                                        |
| Total number of coloured and dark sub-pixels | 1                                        |



Signs of wear on the display and casing are excluded from the warranty.

Certain content and services which can be accessed using this device are the property of third parties and are protected by copyrights, patents, trademarks and/or other laws for the purpose of safeguarding intellectual property. Such content and services are provided solely for non-commercial, private usage.

You may not use content or services which has/have not been authorised by the owner of particular content or a service provider.

Without limiting the generality of the foregoing, except as expressly specified by the owner of the content or the service provider, the modification, reproduction, dissemination, uploading, publication, transmission, translation, sale, creation of derived works, distribution of content or services shown on this device are not permitted in any form and on any medium.

---

## Approval

This appliance is intended for use within the European Economic Community.

Country-specific features are taken into account.

Gigaset Technologies GmbH hereby declares that the radio equipment type Gigaset GL395 complies with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following web address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

In some cases, this declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Please therefore check all of these files.

---

## Notice on the Disposal of Electrical and Electronic Equipment

For more information on environmentally friendly products and procedures, please visit [www.gigaset.com](http://www.gigaset.com).

---

### Environmentally Responsible Disposal

*(in accordance with the WEEE Directive and the EU Battery Directive)*



The crossed-out wheeled bin symbol on the product, accessories (e.g. charger, headset, USB cable), battery, or accompanying documentation indicates that these components must not be disposed of with household waste.



Waste electrical and electronic equipment and batteries must be collected separately and returned to municipal collection points or retailers.

---

## About radiation

### Information on SAR (Specific Absorption Rate) certification

THIS DEVICE FULFILS THE INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device has been developed to ensure that it does not exceed the internationally recommended exposure limits for radio waves.

These guidelines were defined by an independent scientific organisation (ICNIRP) and contain a large safety margin to ensure the safety of all persons, regardless of their age and state of health. The guidelines on exposure to radio waves use a unit of measurement, known as the specific absorption rate or SAR. The SAR limit for mobile devices is 2.0 W/kg. The highest SAR values within the ICNIRP guidelines for this device model are:

Highest SAR value for this phone model and coverage conditions:

SAR head 0.459 W/kg (10 g)

SAR carried on the body 1.305 W/kg (10 g)

SAR values for carrying on the body were determined at a distance of 5 mm. To comply with the RF exposure guidelines for carrying on the body, the device should be positioned at least this distance away from the body.

---

## Technical data

### General technical data

| Frequency | Band     | Maximum power |
|-----------|----------|---------------|
| 2G        | 1900 MHz | 30.1 dBm      |
|           | 900 MHz  | 33.0 dBm      |

---

## Operating times

Calling duration: approx. 10 hours

Multimedia operation: approx. 6 hours

Multimedia operation: approx. 8 hours

In idle status: approx. 168 hours (7 days)

 
In idle status: approx. 550 hours

## Accessories

Use only chargers, batteries and cables approved by Gigaset. Unauthorised accessories can cause damage to the device.

## Battery

Technology: Li-Ion  
Capacity: 800 mAh  
Part number: V30145-K1310-X484

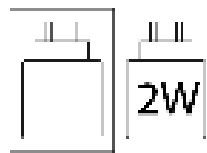

## Power adapter

|                                     |                                                                                                                                                                                              |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Manufacturer                        | SHENZHEN HONGGUANGDE TECHNOLOGY CO., LTD.<br>Commercial register: 91440300083893018B<br>NO 150 TianWan Road, Gongming Tianliao Cummunity, Guangming New District, shenZhen, Guangdong, China |
| Model ID                            | C39280-Z4- <b>C780</b>                                                                                                                                                                       |
| Input voltage                       | 100-240V                                                                                                                                                                                     |
| Input alternating current frequency | 50/ 60 Hz                                                                                                                                                                                    |
| Output voltage                      | 5.0 V                                                                                                                                                                                        |
| Output current                      | 0.5 A                                                                                                                                                                                        |
| Output power                        | 2.5 W                                                                                                                                                                                        |
| Average efficiency during use       | > 73.16 %                                                                                                                                                                                    |
| Efficiency at low load (10%)        | > 60 %                                                                                                                                                                                       |
| Power consumption at zero load      | < 0.1W                                                                                                                                                                                       |





# Index

|                                                 |        |  |
|-------------------------------------------------|--------|--|
| <b>A</b>                                        |        |  |
| Acoustic profile .....                          | 66     |  |
| Activate/Deactivate SOS calls .....             | 35     |  |
| Activating/Deactivating the SIM card lock ..... | 73     |  |
| Activating/Deactivating the SOS alarm ..        | 36     |  |
| Alarm clock .....                               | 48     |  |
| Icon .....                                      | 17     |  |
| Snooze .....                                    | 48     |  |
| Allowlist .....                                 | 62     |  |
| Appointment, see Events                         |        |  |
| <b>B</b>                                        |        |  |
| Background image .....                          | 72     |  |
| Background picture .....                        |        |  |
| Using your own photo .....                      | 59     |  |
| Battery .....                                   |        |  |
| Charge status .....                             | 17     |  |
| Blocklist .....                                 | 23, 64 |  |
| Brightness, display .....                       | 71     |  |
| <b>C</b>                                        |        |  |
| Calendar .....                                  | 50     |  |
| Navigation .....                                | 51     |  |
| Call .....                                      |        |  |
| Information .....                               | 29     |  |
| International .....                             | 20     |  |
| Reject .....                                    | 22     |  |
| Taking .....                                    | 22     |  |
| Call divert .....                               | 27     |  |
| Revoking .....                                  | 28     |  |
| Setting up .....                                | 27     |  |
| Call list .....                                 | 28     |  |
| delete .....                                    | 29     |  |
| Open .....                                      | 28     |  |
| Call number .....                               |        |  |
| Assign to direct dialling key .....             | 21     |  |
| Dialling .....                                  | 20     |  |
| Incoming call .....                             | 22     |  |
| Call volume .....                               | 26     |  |
| Calls .....                                     |        |  |
| From a call list .....                          | 21     |  |
| Camera .....                                    | 57     |  |
| Resetting the settings .....                    | 60     |  |
| Settings .....                                  | 59     |  |
| Taking pictures .....                           | 57     |  |
| Viewing photos .....                            | 57, 58 |  |
| Chained .....                                   |        |  |
| SMS .....                                       | 37     |  |
| Changing the PIN .....                          | 73     |  |
| Charging .....                                  |        |  |
| the battery .....                               | 13     |  |
| Control key .....                               |        |  |
| Functions .....                                 | 16     |  |
| Creating .....                                  |        |  |
| events .....                                    | 51     |  |
| <b>D</b>                                        |        |  |
| Date .....                                      |        |  |
| Set manually .....                              | 61     |  |
| Date format .....                               | 62     |  |
| Delete .....                                    |        |  |
| Events .....                                    | 54     |  |
| Direct dialling keys .....                      | 21     |  |
| Display .....                                   |        |  |
| Background .....                                | 72     |  |
| Backlight .....                                 | 71     |  |
| Idle status .....                               | 14     |  |
| Switch off .....                                | 71     |  |
| Display keys .....                              | 16     |  |
| Display language .....                          | 65     |  |
| Displaying events .....                         | 51     |  |
| <b>E</b>                                        |        |  |
| Emergency call .....                            | 34     |  |
| Emergency numbers .....                         | 34     |  |
| Entering SOS numbers .....                      | 34     |  |
| Entering special characters (SMS) ....          | 38     |  |

## Index

|                                     |        |                          |    |
|-------------------------------------|--------|--------------------------|----|
| Entering text .....                 | 19     | Management on a PC ..... | 56 |
| SMS .....                           | 38     |                          |    |
| Exclusion of liability.....         | 84     |                          |    |
| <hr/>                               |        |                          |    |
| <b>F</b>                            |        |                          |    |
| File manager .....                  | 54     |                          |    |
| <hr/>                               |        |                          |    |
| <b>G</b>                            |        |                          |    |
| Gallery.....                        | 58     |                          |    |
| Getting started.....                | 11     |                          |    |
| Guarantee Certificate.....          | 83     |                          |    |
| <hr/>                               |        |                          |    |
| <b>H</b>                            |        |                          |    |
| Handsfree mode .....                | 25     |                          |    |
| Handsfree mode volume .....         | 26     |                          |    |
| <hr/>                               |        |                          |    |
| <b>I</b>                            |        |                          |    |
| Icon                                |        |                          |    |
| Alarm clock.....                    | 17     |                          |    |
| Battery charge status.....          | 17     |                          |    |
| Missed call.....                    | 17     |                          |    |
| Silent.....                         | 17     |                          |    |
| USB.....                            | 17     |                          |    |
| Vibration.....                      | 17     |                          |    |
| Voice message (SMS).....            | 17     |                          |    |
| Wireless communication.....         | 17     |                          |    |
| Icons                               |        |                          |    |
| Status bar .....                    | 17     |                          |    |
| User Guide.....                     | 6      |                          |    |
| Image viewer.....                   | 58     |                          |    |
| Inbox (SMS) .....                   | 44     |                          |    |
| Input language .....                | 65     |                          |    |
| SMS .....                           | 38     |                          |    |
| Input methods (SMS) .....           | 38     |                          |    |
| Inserting a memory card             |        |                          |    |
| .....                               | 11     |                          |    |
| Inserting a SIM card                |        |                          |    |
| .....                               | 11     |                          |    |
| Inserting the                       |        |                          |    |
| battery.....                        | 12, 13 |                          |    |
| Internal memory                     |        |                          |    |
| Formatting.....                     | 56     |                          |    |
| Manage through file manager.....    | 54     |                          |    |
| Management.....                     | 54     |                          |    |
| <hr/>                               |        |                          |    |
| <b>K</b>                            |        |                          |    |
| Keypad lock                         |        |                          |    |
| Switching on/off.....               | 15     |                          |    |
| <hr/>                               |        |                          |    |
| <b>L</b>                            |        |                          |    |
| Language                            |        |                          |    |
| Input .....                         | 65     |                          |    |
| Phone settings.....                 | 65     |                          |    |
| List of drafts (SMS) .....          | 39     |                          |    |
| Listen to a voice message           |        |                          |    |
| .....                               | 33     |                          |    |
| Lower/Upper case.....               | 19     |                          |    |
| Lower/upper case.....               | 38     |                          |    |
| <hr/>                               |        |                          |    |
| <b>M</b>                            |        |                          |    |
| Mailbox .....                       | 33     |                          |    |
| Inquiry .....                       | 33     |                          |    |
| Main menu .....                     | 18     |                          |    |
| Making a call                       |        |                          |    |
| Using the direct dialling key ..... | 21     |                          |    |
| Making calls .....                  | 20     |                          |    |
| Memory location for photos.....     | 60     |                          |    |
| Memory status, SMS .....            | 46     |                          |    |
| Menu guidance .....                 | 18     |                          |    |
| Menu overview.....                  | 75     |                          |    |
| Missed call, icon .....             | 17     |                          |    |
| Mute the microphone .....           | 26     |                          |    |
| <hr/>                               |        |                          |    |
| <b>O</b>                            |        |                          |    |
| Outbox (SMS).....                   | 42     |                          |    |
| <hr/>                               |        |                          |    |
| <b>P</b>                            |        |                          |    |
| Package contents .....              | 11     |                          |    |
| Phone book .....                    | 30     |                          |    |
| Entries.....                        | 30     |                          |    |
| opening.....                        | 30     |                          |    |
| Phone book entries .....            | 30     |                          |    |
| Managing .....                      | 32     |                          |    |
| Phone book entry                    |        |                          |    |
| Create .....                        | 31     |                          |    |
| Delete .....                        | 32     |                          |    |

|                                      |        |                                     |    |
|--------------------------------------|--------|-------------------------------------|----|
| Search.....                          | 31     | input methods.....                  | 38 |
| Photo                                |        | Memory location .....               | 47 |
| Delete.....                          | 59     | Memory status.....                  | 46 |
| Format.....                          | 57     | read .....                          | 44 |
| Memory location .....                | 60     | Save .....                          | 47 |
| Taking.....                          | 57     | Sending not possible.....           | 42 |
| Use as background.....               | 59     | Sent messages.....                  | 41 |
| Photographing.....                   | 57     | Settings .....                      | 46 |
| Photos                               |        | Special characters .....            | 38 |
| Editing .....                        | 58     | SMS templates .....                 | 43 |
| Viewing .....                        | 57, 58 | SOS emergency calls                 |    |
| Preferred memory location (SMS)..... | 47     | Entering text .....                 | 36 |
| Profile, acoustic .....              | 66     | SOS key .....                       | 34 |
| <b>R</b>                             |        | Status bar.....                     | 17 |
| Receiver volume .....                | 26     | Submenus .....                      | 18 |
| Receiving a                          |        | Switch microphone on/off.....       | 26 |
| text.....                            | 44     | Switch off the alarm call           |    |
| Reset .....                          | 74     | .....                               | 50 |
| Camera settings .....                | 60     | Switch the microphone to mute ..... | 26 |
| Factory settings .....               | 74     | Switching on/off .....              | 14 |
| Ringtone                             |        | System notifications .....          | 70 |
| Deactivate .....                     | 66     | <b>T</b>                            |    |
| Melody.....                          | 67     | Telephoning                         |    |
| <b>S</b>                             |        | Enter call number.....              | 20 |
| Safety instructions.....             | 7      | Text                                |    |
| SD card                              |        | Buffering .....                     | 39 |
| Capacity .....                       | 55     | Text messages (SMS).....            | 37 |
| Formatting.....                      | 56     | Texts                               |    |
| Sending a                            |        | Drafts.....                         | 40 |
| text (SMS).....                      | 37     | Time                                |    |
| Setting the key tone .....           | 69     | Set manually .....                  | 61 |
| Setting the message tone .....       | 68     | Time format .....                   | 62 |
| Settings                             |        | Tones                               |    |
| Allowlist .....                      | 62     | Keys .....                          | 69 |
| Blocklist.....                       | 64     | Messages.....                       | 68 |
| Silent .....                         | 66     | Ringing.....                        | 67 |
| Icon .....                           | 17     | Torch                               |    |
| SIM card                             |        | Switching on/off.....               | 15 |
| Changing the PIN .....               | 73     | <b>U</b>                            |    |
| SMS.....                             | 37     | Upper/lower case .....              | 38 |
| Counter.....                         | 46     | USB connection                      |    |
| icon .....                           | 17     | Icon.....                           | 17 |

**Index**

Use the loudspeaker when making a call  
25

---

**V**

Vibration  
    Activate/Deactivate via profile .....66  
    Icon .....17

---

**W**

Wireless communication, quality .....17  
Writing a  
    text (SMS).....37

Issued by

Gigaset Technologies GmbH  
Frankenstr. 2, D-46395 Bocholt

© Gigaset Technologies GmbH 2025

Subject to availability.

All rights reserved. Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)