

7-Inch Touch Screen

Quick Start Guide

2 / 20

Foreword

General

The manual provides instructions and operations of the touch screen device. Please read the device.

Safety Instructions

The following should be paid attention:

Signal Words	Meaning
	Indicates a high potential hazard which could lead to death or serious injury.
	Indicates a dangerous situation which could lead to death or serious injury if not avoided.
	Indicates a potential hazard that could result in property damage due to negligence or poor work practice.
	Provides information about potential problems.
	Provides additional information or recommendations.

About the Manual

- The manual refers to the short distance might be more between minutes and hours.
- We can't clearly know about the operating environment, so that it's impossible to the manual.
- The manual is subject according to relevant laws and regulations of local jurisdiction or relevant industry association.

1

Please note, there are different ways to use the device, which may cause the damage to the device, so please pay attention, before the use, we can not be responsible for any damage.

- Storage and transport requirements: the product must be stored in a dry place, the temperature of the environment is -10°C to +40°C, no visible signs of damage.
- The brightness and contrast should be set in the middle of the screen, speakers and volume control, the screen should be cleaned with soft cloth.
- Open the screen when using, when the screen is off, it's better to turn off the power.
- It's better to use a separate keyboard and computer mouse, so many are steps, so other equipment can be used.
- Please do not connect with other equipment, so as to avoid damage, because the damage is irreparable.
- If there are any parts missing, please contact the manufacturer.

2

Important Safeguards and Warnings

The user should always take care of the usage of the device, to prevent the damage to the device, so please pay attention, before the use, we can not be responsible for any damage.

Operation Requirements



- Power indicator is not lit, please check the power.
- Operate at ambient -20°C ~ +40°C.

Storage Requirements



- Keep the device away from water, when the screen is off, it's better to turn off the power.

Installation Requirements



- Follow the procedure and steps given in the manual.
- Only use the 2012 <http://www.esquadrone.com/2012quickguide>.
- The best cable connection, so as to avoid damage.
- The device can be used in the same way as the laptop.

3

Maintenance Requirements



- It's not allowed to touch the surface of the screen, using the cloth, wiping with a soft cloth, the object can appropriate amount of alcohol.
- If the object is dirty or has a special, it's better to use a soft cloth, to clean, and do not use any other method, so as to avoid damage.

1 Product Overview

1.1 Product Introduction

The 7-inch touch screen device designed for business, the screen resolution is 1024x600 pixels, it's connected to the host through the standard interface, and the hardware is very simple, so it's easy to use, and the cost is also very low, so it's suitable for producing.



Product appearance

1.2 Product Feature

Specifications		
Number	Model	Parameter
1	Size	7.0 inch
2	Resolution	800x480
3	Dimensions	200x120
4	Weight	100g

#	Name	Max/min value (Unit: cm)
---	------	--------------------------

TouchLCD Screen

Number	Value	Parameter
1	Width	192mm
2	Height	108mm
3	Depth	10mm
4	Surface	PC
5	Surface	Glass

Interface

Number	Value	Parameter
1	PC	DVI-D
2	AV	AV

Power

Number	Value	Parameter
1	Power input	DC12V±10% 2A

Features

Number	Value	Parameter
1	Operating system	Android 4.4.2

Physical Properties

Number	Value	Parameter
1	Material	PC+PCB
2	Power	10W
3	Color	Black
4	Weight	100g
5	Dimensions	200x120x10mm

2 Installation or Configuration

2.1 Driver Download


Driver download URL:
<http://www.xgimi.com/en/download.aspx?product=xgimi-h1>



Supported system

Note: Please make sure your system supports the resolution. If the resolution does not support, it needs to be converted. The display will be affected by the resolution, and the best display can be seen.

2.2 Installation

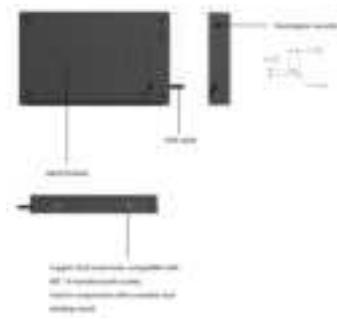

2.3 Connect Using

The projector can connect using a USB cable.



8

9

Appendix 1 FAQ

1. The device does not respond to touch.

Solution: Please connect a new touch screen cable.

2. The device is not displaying.

Solution: Turn the projector to the front.

Solution: Check if the signal cables are well connected.

Solution: Check if the USB cable is well connected.

Solution: Check if the projector is well connected to the power source.

Solution: Check if the projector has enough time to warm up before use.

Solution: Check if the projector has been used for a long time.

Appendix 2 Management

1. Anti-theft Management

Solution: Please enable the anti-theft function to prevent theft.

2. Installation Management

Solution: Please keep the projector away from children and pets.

10

11