



## Step 1 - Charge the robot

**1**

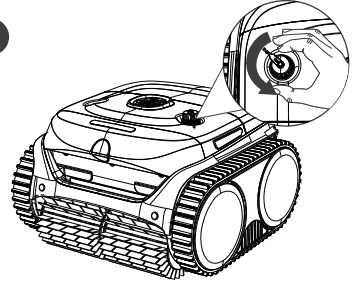

- Unscrew protective cap, and ensure charging port dry.


**3**

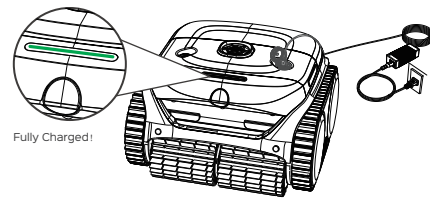

Fully Charged!

- Fully charge your device before first use.

**2**

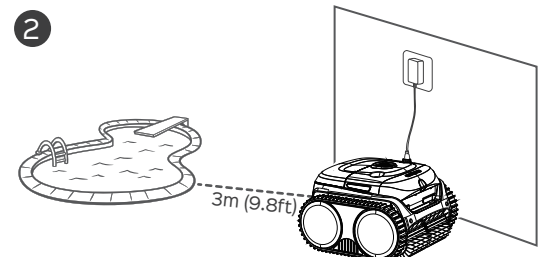


3m (9.8ft)

- Insert charger cable into the device, and keep your cleaner at least 3m away from the pool.


## Step 2 - Start the robot

**4**

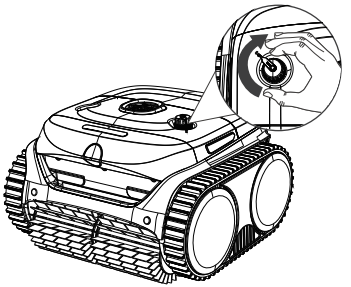

- Screw protective cap back.

**5**

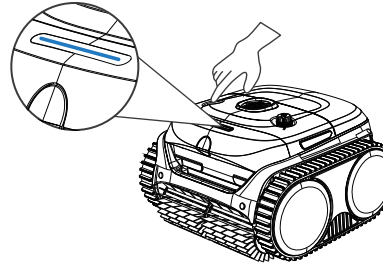


- Press on/off button, and the LED turns solid green to indicate current battery level and then blue to show it is on.
- Put the device into the pool within 3 min., otherwise, it will power off.
- The default cleaning mode is wall then floor.

## Step 3 - Set up cleaning mode

**6**

①



②


Get it on Google Play

Download on the App Store

WYBOT

- Please download WYBOT and set your cleaning mode in advance.
- Register your account as per the App direction.
- Bind your device as per App direction.


**7**

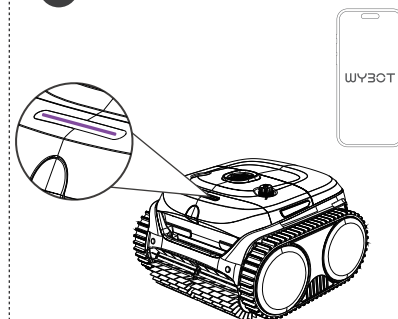

- Enable your mobile phone Bluetooth.
- Keep your device out of water and within the range of Bluetooth.
- Customize your cleaning mode via the App.


## Step 4 - Run the robot

8

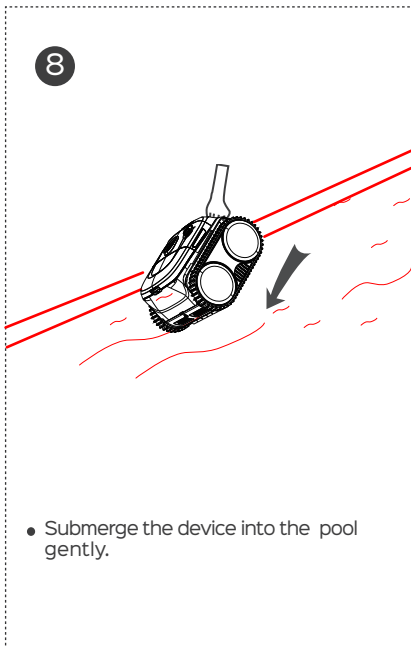

- Submerge the device into the pool gently.


9

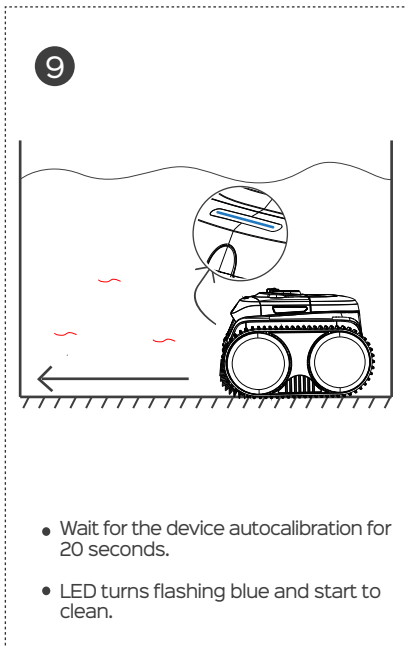

- Wait for the device autocalibration for 20 seconds.
- LED turns flashing blue and start to clean.


## Step 5 - Removal from the pool

10

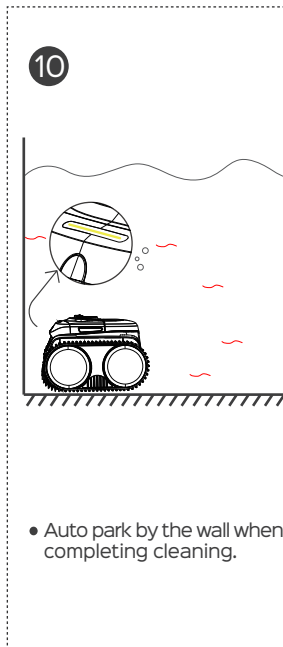


- Auto park by the wall when completing cleaning.

11

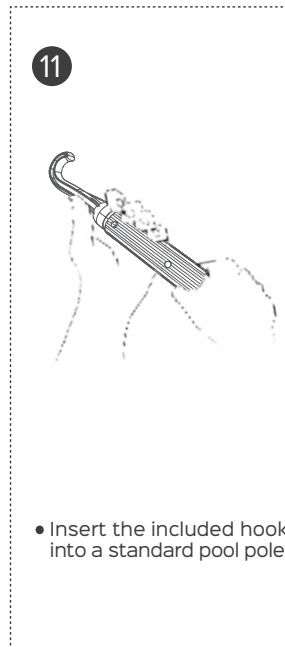

- Insert the included hook into a standard pool pole.


12

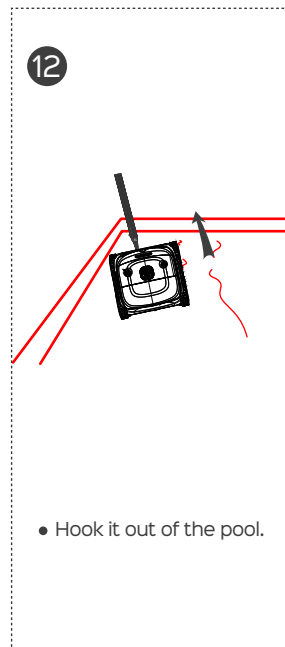

- Hook it out of the pool.


## Step 6 - Clean and store

13

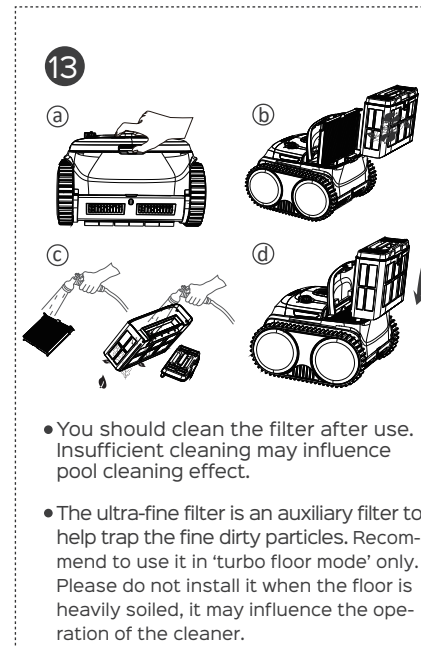

- You should clean the filter after use. Insufficient cleaning may influence pool cleaning effect.
- The ultra-fine filter is an auxiliary filter to help trap the fine dirty particles. Recommend to use it in 'turbo floor mode' only. Please do not install it when the floor is heavily soiled, it may influence the operation of the cleaner.

14

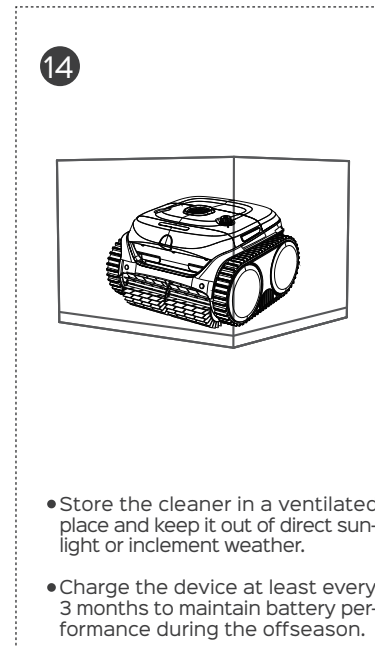

- Store the cleaner in a ventilated place and keep it out of direct sunlight or inclement weather.
- Charge the device at least every 3 months to maintain battery performance during the offseason.