




The Service Side of Sears™

REPAIR PARTS LIST

587.15162400
587.15163400
587.15164400
587.15169400
587.16163400

**To Call Toll Free
For Parts:
1-800-366-PART
(1-800-366-7278)**

**For Service:
1-800-4-MY-HOMESM
(1-800-469-4663)**

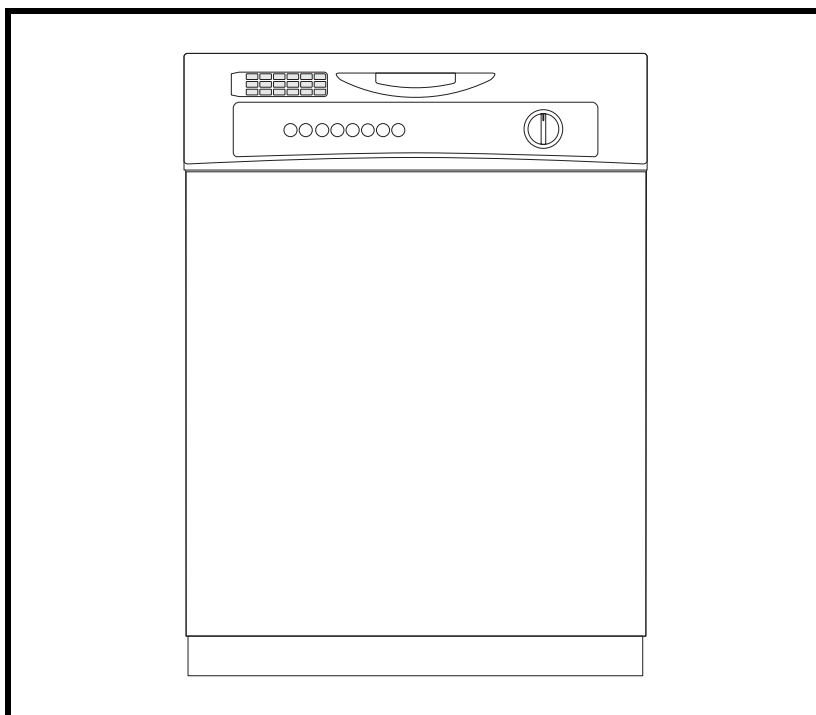

SEARS

24-INCH BUILT-IN DISHWASHER

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the right hand side of the front tub flange, directly behind the door of the dishwasher.

All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Service Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free parts number listed to the left.


When requesting service or ordering parts, always provide the following information:

- Product Type
- Part Number
- Model Number
- Part Description

**Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A
P/N 154498101 Publication number 5995410346**

CONTROL PANEL

CAUTION: Use the Kenmore part number to order part, not the illustration number.

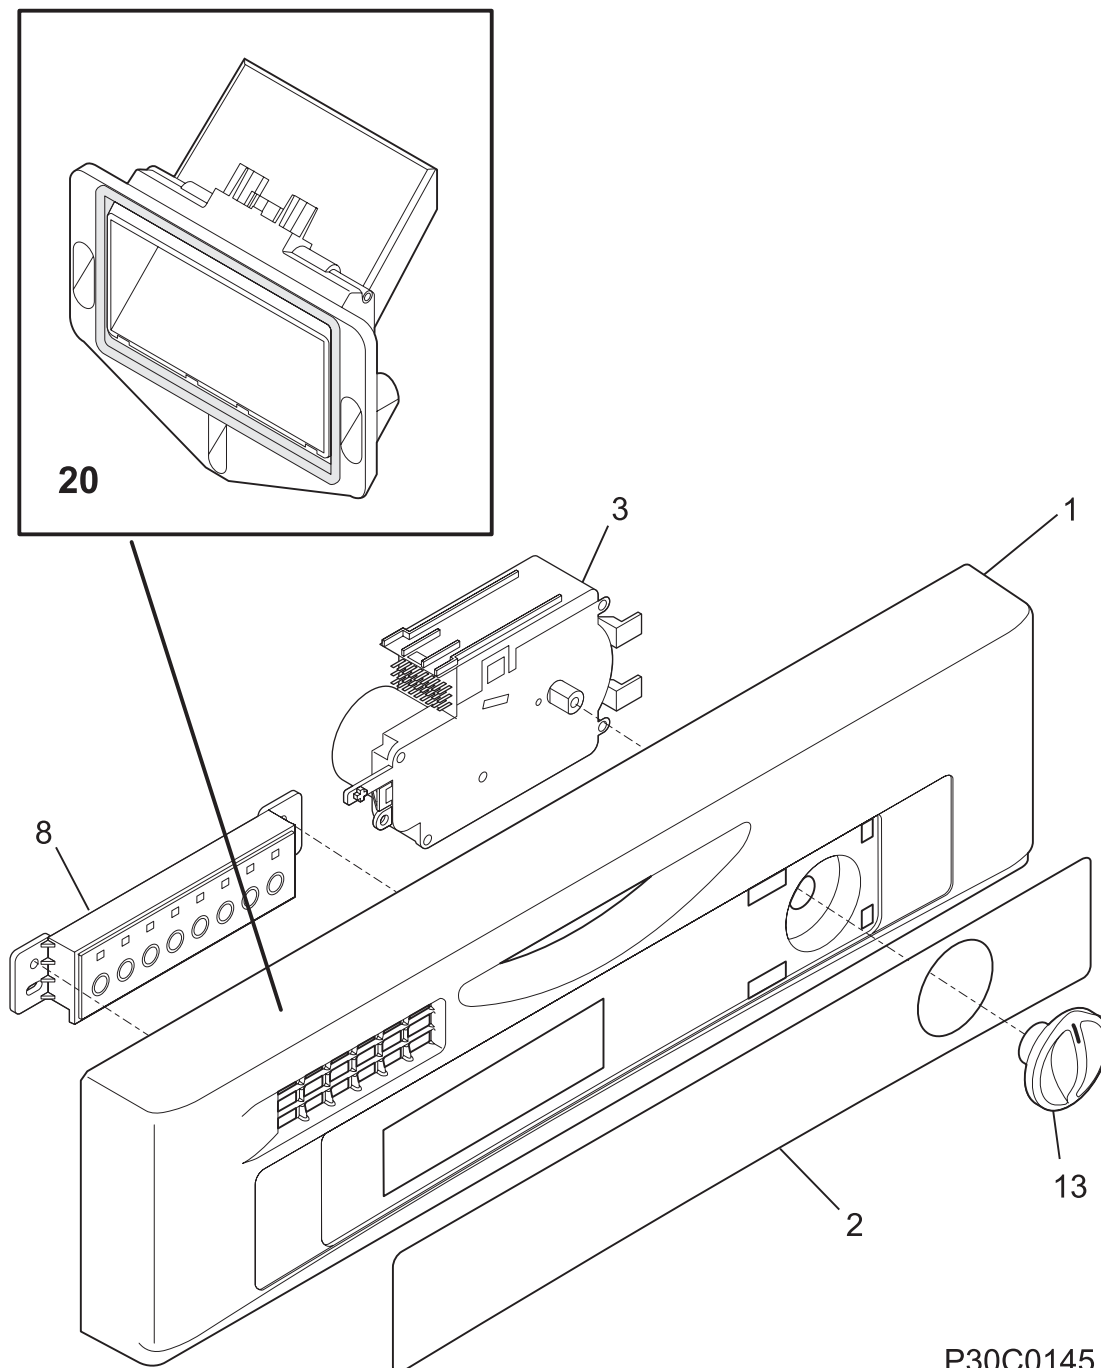

P30C0145

CONTROL PANEL


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1516 (587.15162400)
 B 587.1516 (587.15164400)
 C 587.1516 (587.15169400)
 D 587.1516 (587.15163400)
 E 587.1616 (587.16163400)

POS. NO	PART NO.		DESCRIPTION
1	154456001	A - - - -	Panel, control, white
1	154456004	- B - - -	Panel, control, bisque
1	154456003	- - C D E	Panel, control, black
2	154491001	A - - - -	Insert, control panel, white
2	154491004	- B - - -	Insert, control panel, bisque
2	154491003	- - C D E	Insert, control panel, black
3 #	154409001	A B C D E	Timer
3*	154131203	A B C D E	Shield, timer
3*	154095701	A B C D E	Screw, thread rolling, (2), timer
8	154492201	A B C D E	Switch, 8 button
8*	154390001	A B C D E	Shield, switch
8*	5303318719	A B C D E	Screw, mtg.
13	154477801	A - - - -	Knob, timer, white
13	154477804	- B - - -	Knob, timer, bisque
13	154477803	- - C D E	Knob, timer, black
20	154433001	A B C D E	Vent assy, static dry
20*	154436201	A B C D E	Screw, dry duct, (3)
*	154492001	A B C D E	Harness, wiring
*	5995410346	A B C D E	Parts List
*	154497601	A B C D E	Service Data Sheet
*	154497901	A B C D E	Owners Manual
*	154425201	A B C D E	Instructions, installation
*	154485223	A B C D E	Energy Guide

DOOR

CAUTION: Use the Kenmore part number to order part, not the illustration number.

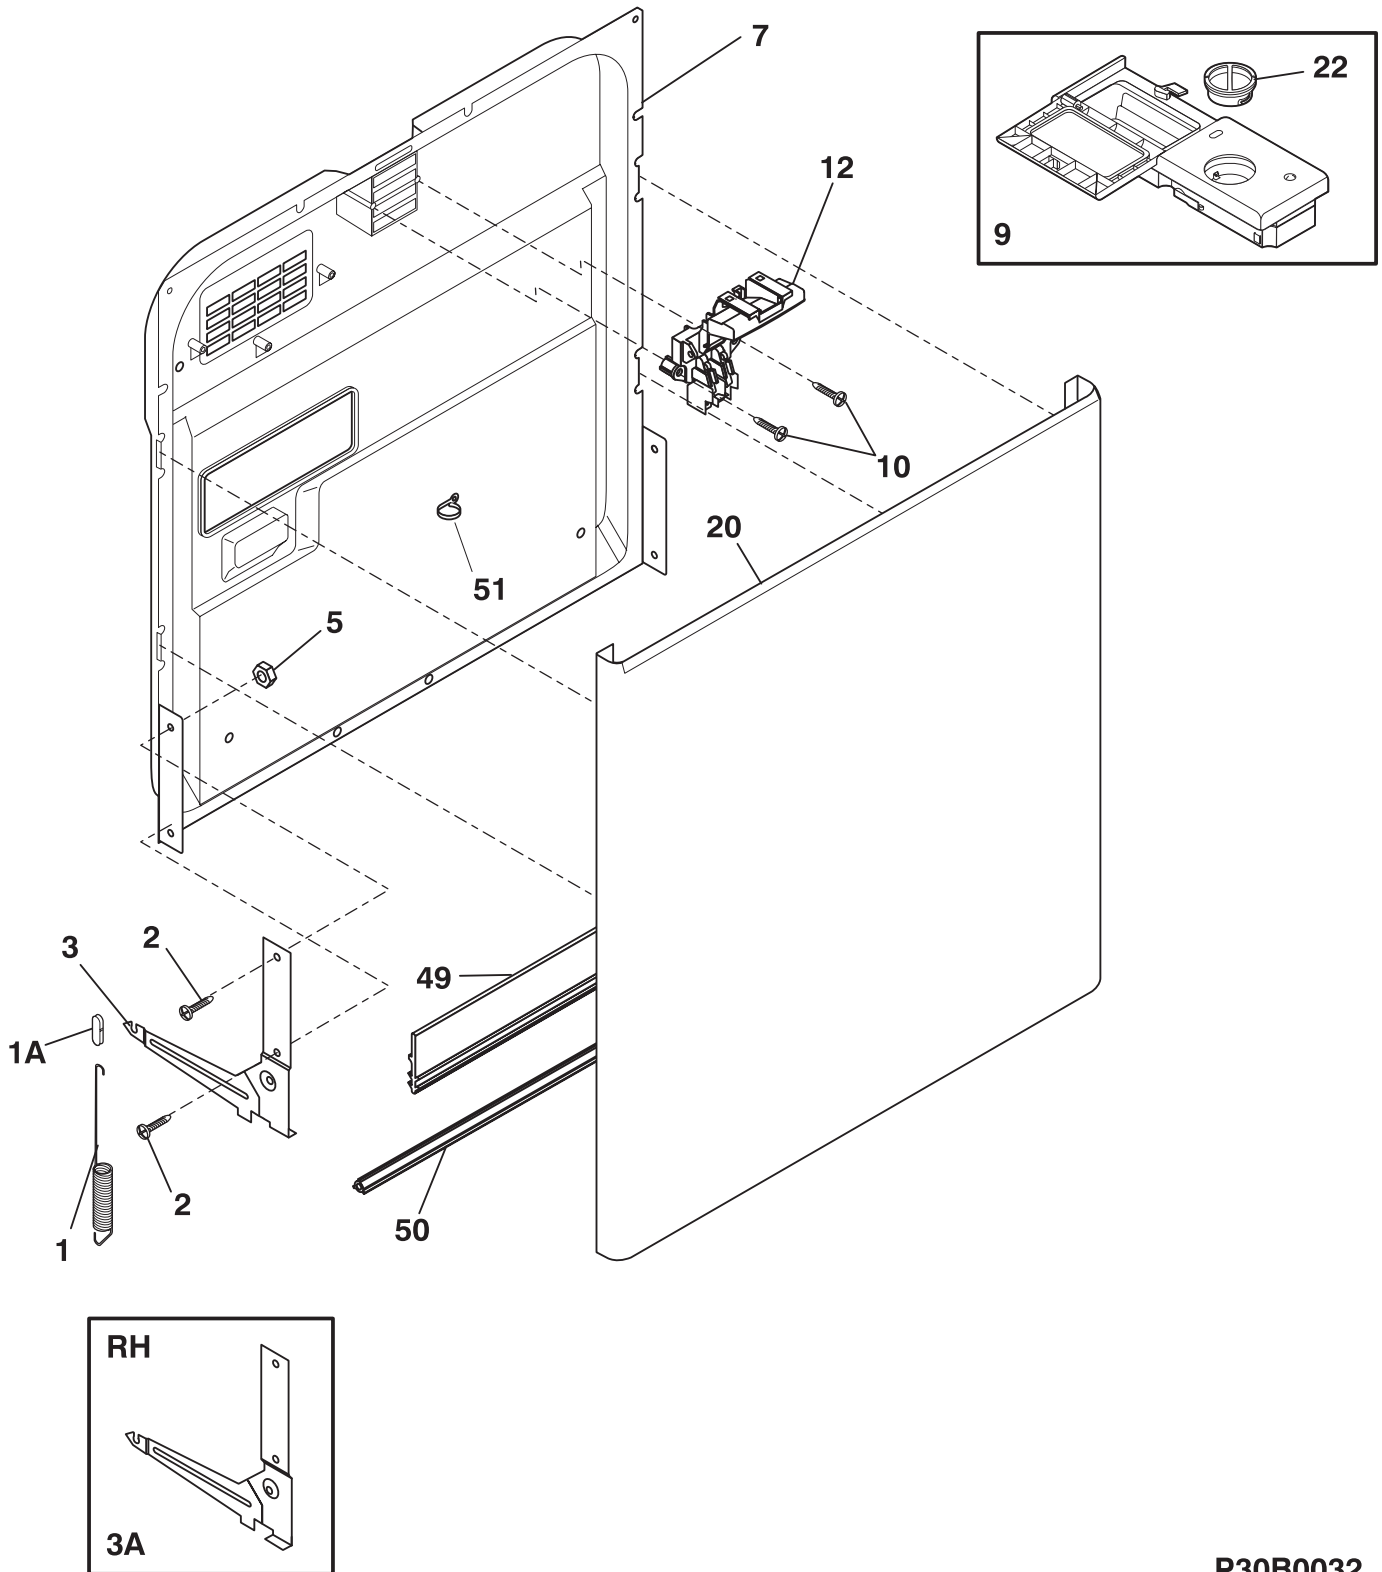**P30B0032**


DOORCAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1516 (587.15162400)
 B 587.1516 (587.15164400)
 C 587.1516 (587.15169400)
 D 587.1516 (587.15163400)
 E 587.1616 (587.16163400)

POS. NO	PART NO.						DESCRIPTION
1	154430501	A	B	C	D	E	Spring, door, (2)
1A	154325201	A	B	C	D	E	Linkage, door spring, (2)
2	154093301	A	B	C	D	E	Screw, arm assy, (4)
3	154325304	A	B	C	D	E	Arm Assy, LH
3A	154325303	A	B	C	D	E	Arm Assy, RH
*	154400601	A	B	C	D	E	Pin, arm assy
5	154079601	A	B	C	D	E	Nut, arm assy, and handle mtg.
7	154299004	A	B	C	D	E	Door, inner assy
9	154230103	A	B	C	D	E	Dispenser, det/rinse aid, includes #22
9*	154294701	A	B	C	D	E	Screw, #7 plas .375, (6), disp. assy.
10	154103702	A	B	C	D	E	Screw, latch mtg, (2)
12 #	154475201	A	-	-	-	-	Latch assy, white
12 #	154475204	-	B	-	-	-	Latch assy, bisque
12 #	154475203	-	-	C	D	E	Latch assy, black
20	154359105	A	-	-	-	-	Door, white
20	154359110	-	B	-	-	-	Door, bisque
20	154359107	-	-	C	-	-	Door, black
20	154359116	-	-	-	D	E	Door, stainless
20*	5304428306	A	B	C	D	E	Screw, door mtg., (2)
22	154388801	A	B	C	D	E	Cap, Rinse aid
49	154297603	A	B	C	D	E	Gasket, door, bottom
50	154211401	A	B	C	D	E	Support, door hinge
51	154320301	A	B	C	D	E	Clamp, drip loop, wire
* #	154227808	A	B	C	D	E	Thermostat, temp boost, hi temp wash
* #	154227809	A	B	C	D	E	Thermostat, hi temp rinse
*	154200601	A	B	C	D	E	Screw, #10-16 x 3/8

TUB

CAUTION: Use the Kenmore part number to order part, not the illustration number.

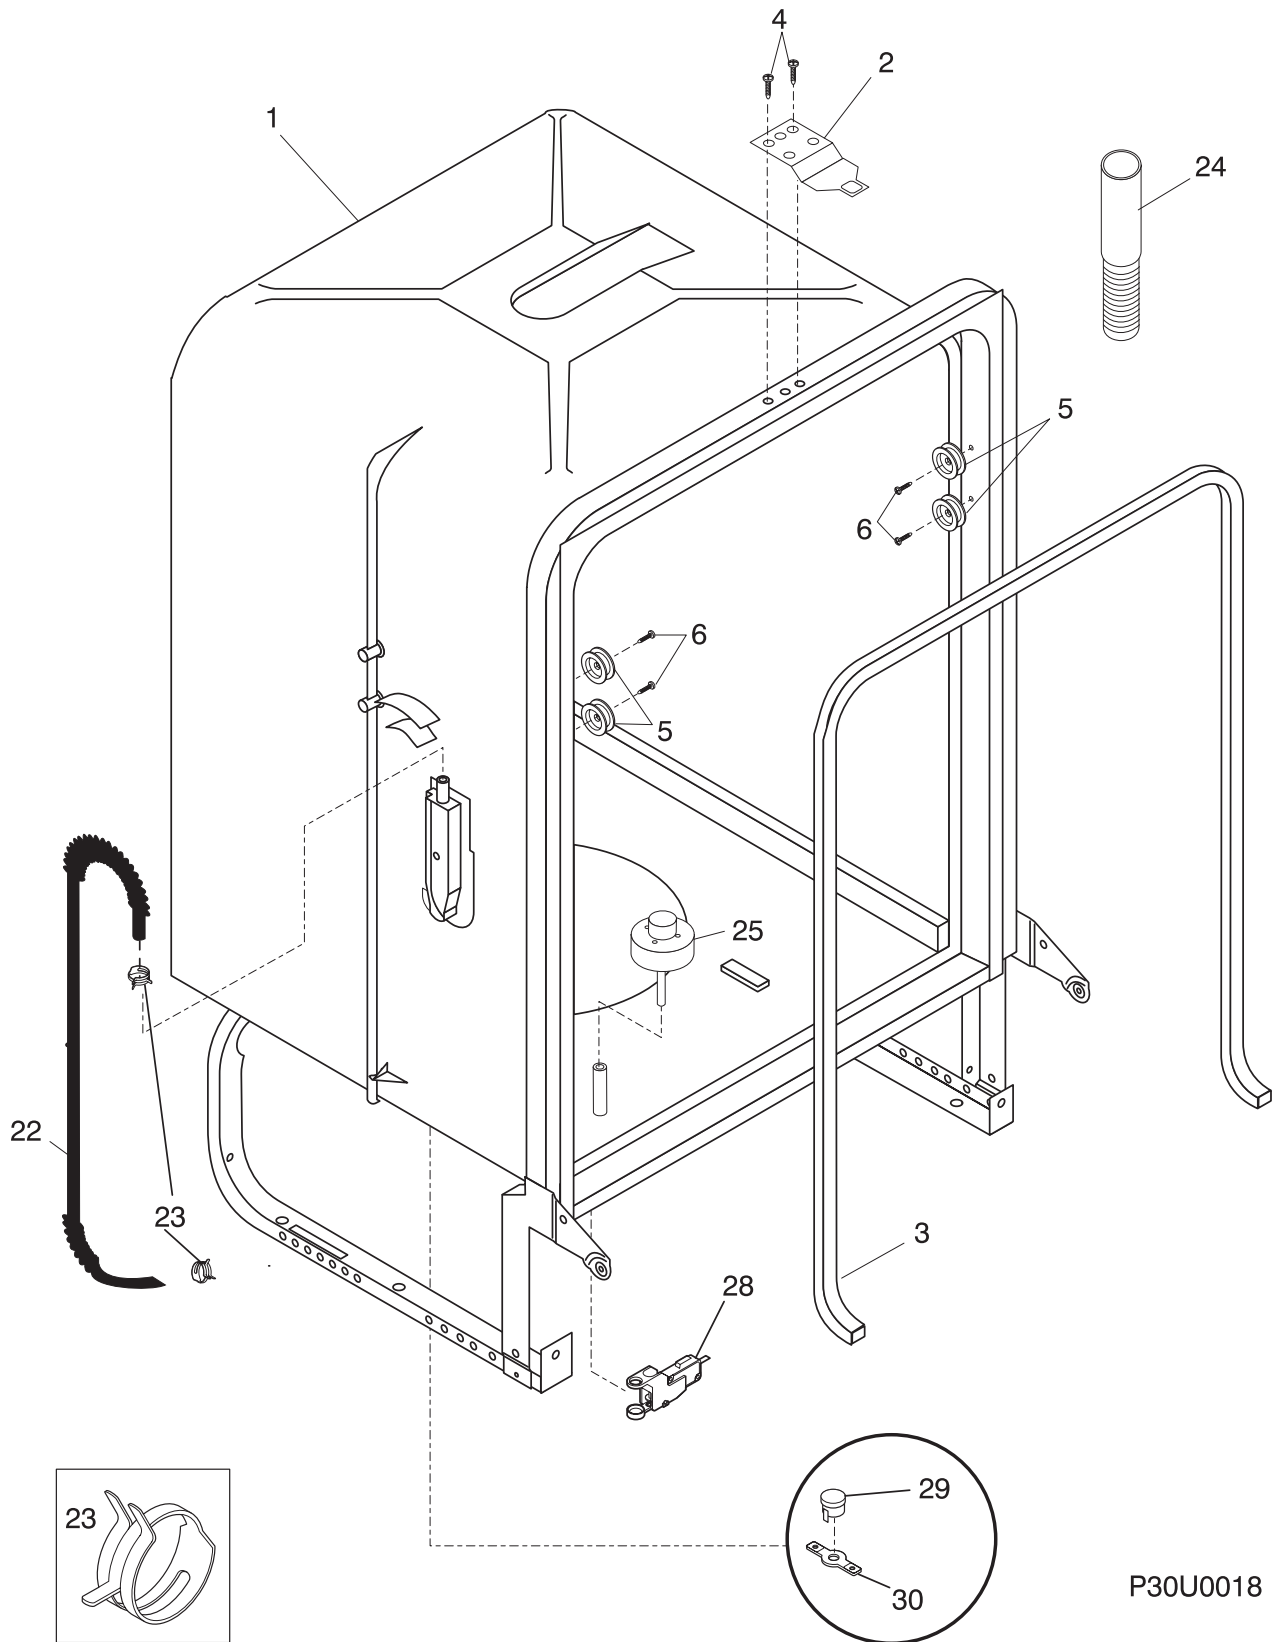

P30U0018

TUB


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1516 (587.15162400)
 B 587.1516 (587.15164400)
 C 587.1516 (587.15169400)
 D 587.1516 (587.15163400)
 E 587.1616 (587.16163400)

POS. NO	PART NO.						DESCRIPTION
1 #	154209301	A	B	C	D	E	Tub assy, w/frame parts
2	154429101	A	B	C	D	E	Strike, door
3 #	154211801	A	B	C	D	E	Gasket, tub
4	154200602	A	B	C	D	E	Screw, 10-16 x 3/8, hex
5	154333902	A	B	C	D	E	Roller, tub
6	5303943103	A	B	C	D	E	Screw, w/washer, (8)
22	154239801	A	B	C	D	E	Tubing, water inlet
23	5303318539	A	B	C	D	E	Clamp, tubing, (2)
24 #	154411003	A	B	C	D	E	Hose, drain
25 #	154209701	A	B	C	D	E	Float
28	154408701	A	B	C	D	E	Switch assy, float
29 #	154290204	A	B	C	D	E	Thermostat, re-settable
30	154241101	A	B	C	D	E	Retainer, thermostat
30*	154297701	A	B	C	D	E	Screw, retainer-thermo
*	154447102	A	B	C	D	E	Insulation, blanket
*	154041001	A	B	C	D	E	Screw, plask #1, 10-10 x 9/16
*	5300807270	A	B	C	D	E	Screw, (2), countertop mtg.

MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

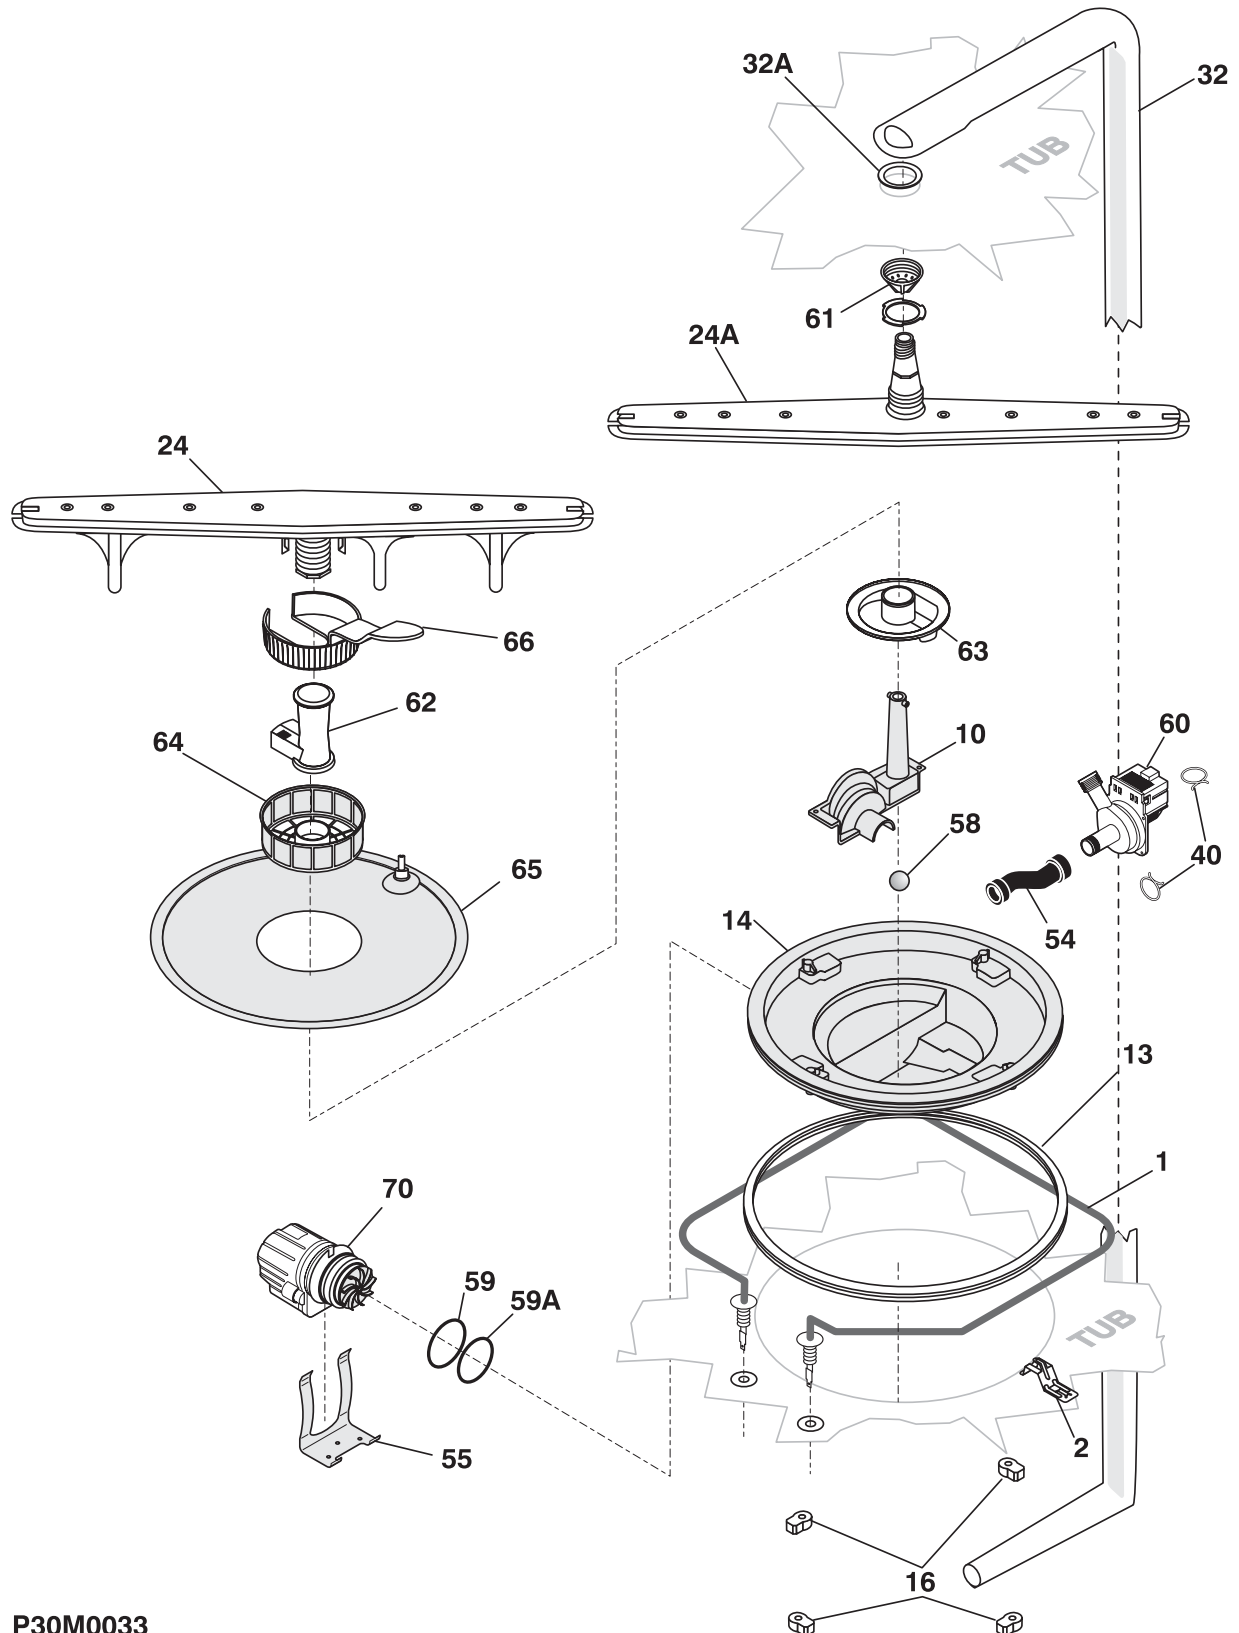**P30M0033**

MOTOR & PUMP


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1516 (587.15162400)
 B 587.1516 (587.15164400)
 C 587.1516 (587.15169400)
 D 587.1516 (587.15163400)
 E 587.1616 (587.16163400)

POS. NO	PART NO.						DESCRIPTION
1 #	154247601	A	B	C	D	E	Heater
1*	154106201	A	B	C	D	E	Nut, heater, (2)
1*	154289801	A	B	C	D	E	Shield, heater terminal
2	154479601	A	B	C	D	E	Bracket, heater, (2)
10	154245501	A	B	C	D	E	Cover, volute
13	154246801	A	B	C	D	E	Gasket, sump
14	154365902	A	B	C	D	E	Housing, sump
16	154246502	A	B	C	D	E	Retainer, sump
24	154414101	A	B	C	D	E	Spray arm, lower, w/heat shield
24A	154313601	A	B	C	D	E	Spray arm, center
24A*	154252001	A	B	C	D	E	Nut, spray arm, center
30	154241101	A	B	C	D	E	Retainer, thermostat
32	154406601	A	B	C	D	E	Tube, delivery
32A	154406401	A	B	C	D	E	Gasket, delivery tube
40	154348401	A	B	C	D	E	Clamp, red, pump
40	154348502	A	B	C	D	E	Clamp, red, pump
40*	154106801	A	B	C	D	E	Clamp, hose, (2)
40*	154380601	A	B	C	D	E	Clamp, hose, (1)
54	154234401	A	B	C	D	E	Hose, connector
55	154362301	A	B	C	D	E	Bracket, motor, askoll
55*	5303316032	A	B	C	D	E	Screw, truss ss, 8 .625
58	154246402	A	B	C	D	E	Check ball
59	154246901	A	B	C	D	E	O-ring, rear
59A	154247001	A	B	C	D	E	O-ring, front
60	154474101	A	B	C	D	E	Drain Pump Assy
60*	154426201	A	B	C	D	E	Bracket, motor, drain
61	154406501	A	B	C	D	E	Nozzle, 3rd level, spray arm
62	154294101	A	B	C	D	E	Support, spray arm, lower
63	154252201	A	B	C	D	E	Base, soil director
64	154252301	A	B	C	D	E	Filter, soil director
65	154252401	A	B	C	D	E	Filter, polypro
66	154252701	A	B	C	D	E	Trap, glass
70 #	154395403	A	B	C	D	E	Motor assembly, circulation, w/o o'rings
*	154200601	A	B	C	D	E	Screw, #10-16 x 3/8

FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

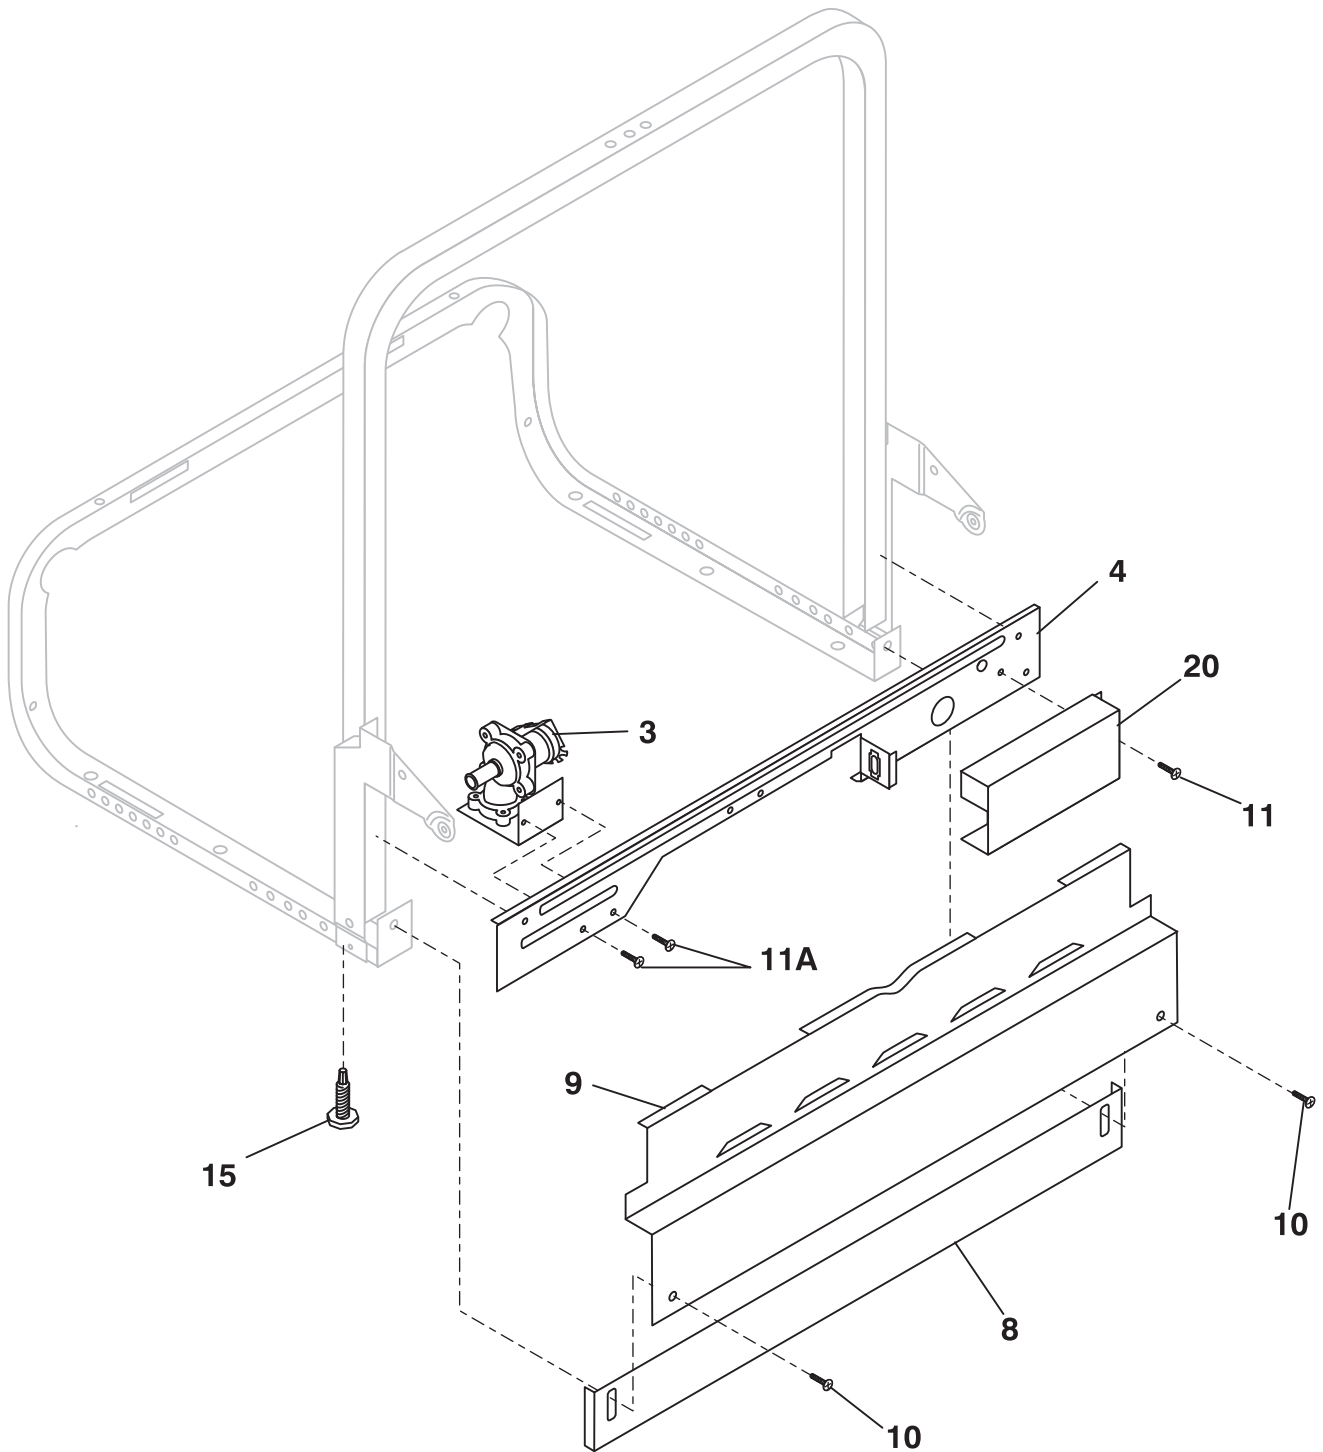

P30F0022


FRAMECAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1516 (587.15162400)
 B 587.1516 (587.15164400)
 C 587.1516 (587.15169400)
 D 587.1516 (587.15163400)
 E 587.1616 (587.16163400)

POS. NO	PART NO.						DESCRIPTION
3 #	154445901	A	B	C	D	E	Valve, water
4	154208701	A	B	C	D	E	Brace, front frame
8	154322901	A	-	-	-	-	Toeplate, adjustable, white
8	154322905	-	B	-	-	-	Toeplate, adjustable, bisque
8	154322903	-	-	C	D	E	Toeplate, adjustable, black
9	154397201	A	-	-	-	-	Kickplate Assy, white, w/foam
9	154397204	-	B	-	-	-	Kickplate Assy, bisque, w/foam
9	154397203	-	-	C	D	E	Kickplate Assy, black, w/foam
10	154371301	A	-	-	-	-	Screw, phillips head, white
10	154371303	-	B	-	-	-	Screw, phillips head, bisque
10	5300808658	-	-	C	D	E	Screw, #8A x .375", black
11	154409401	A	B	C	D	E	Screw, #8-18 x .375
11A	154200601	A	B	C	D	E	Screw, #10-16 x 3/8
15	154419301	A	B	C	D	E	Screw, leveling
20	154209601	A	B	C	D	E	Cover, junction box
*	154041001	A	B	C	D	E	Screw, plask #1, 10-10 x 9/16
*	154200602	A	B	C	D	E	Screw, 10-16 x 3/8, hex

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

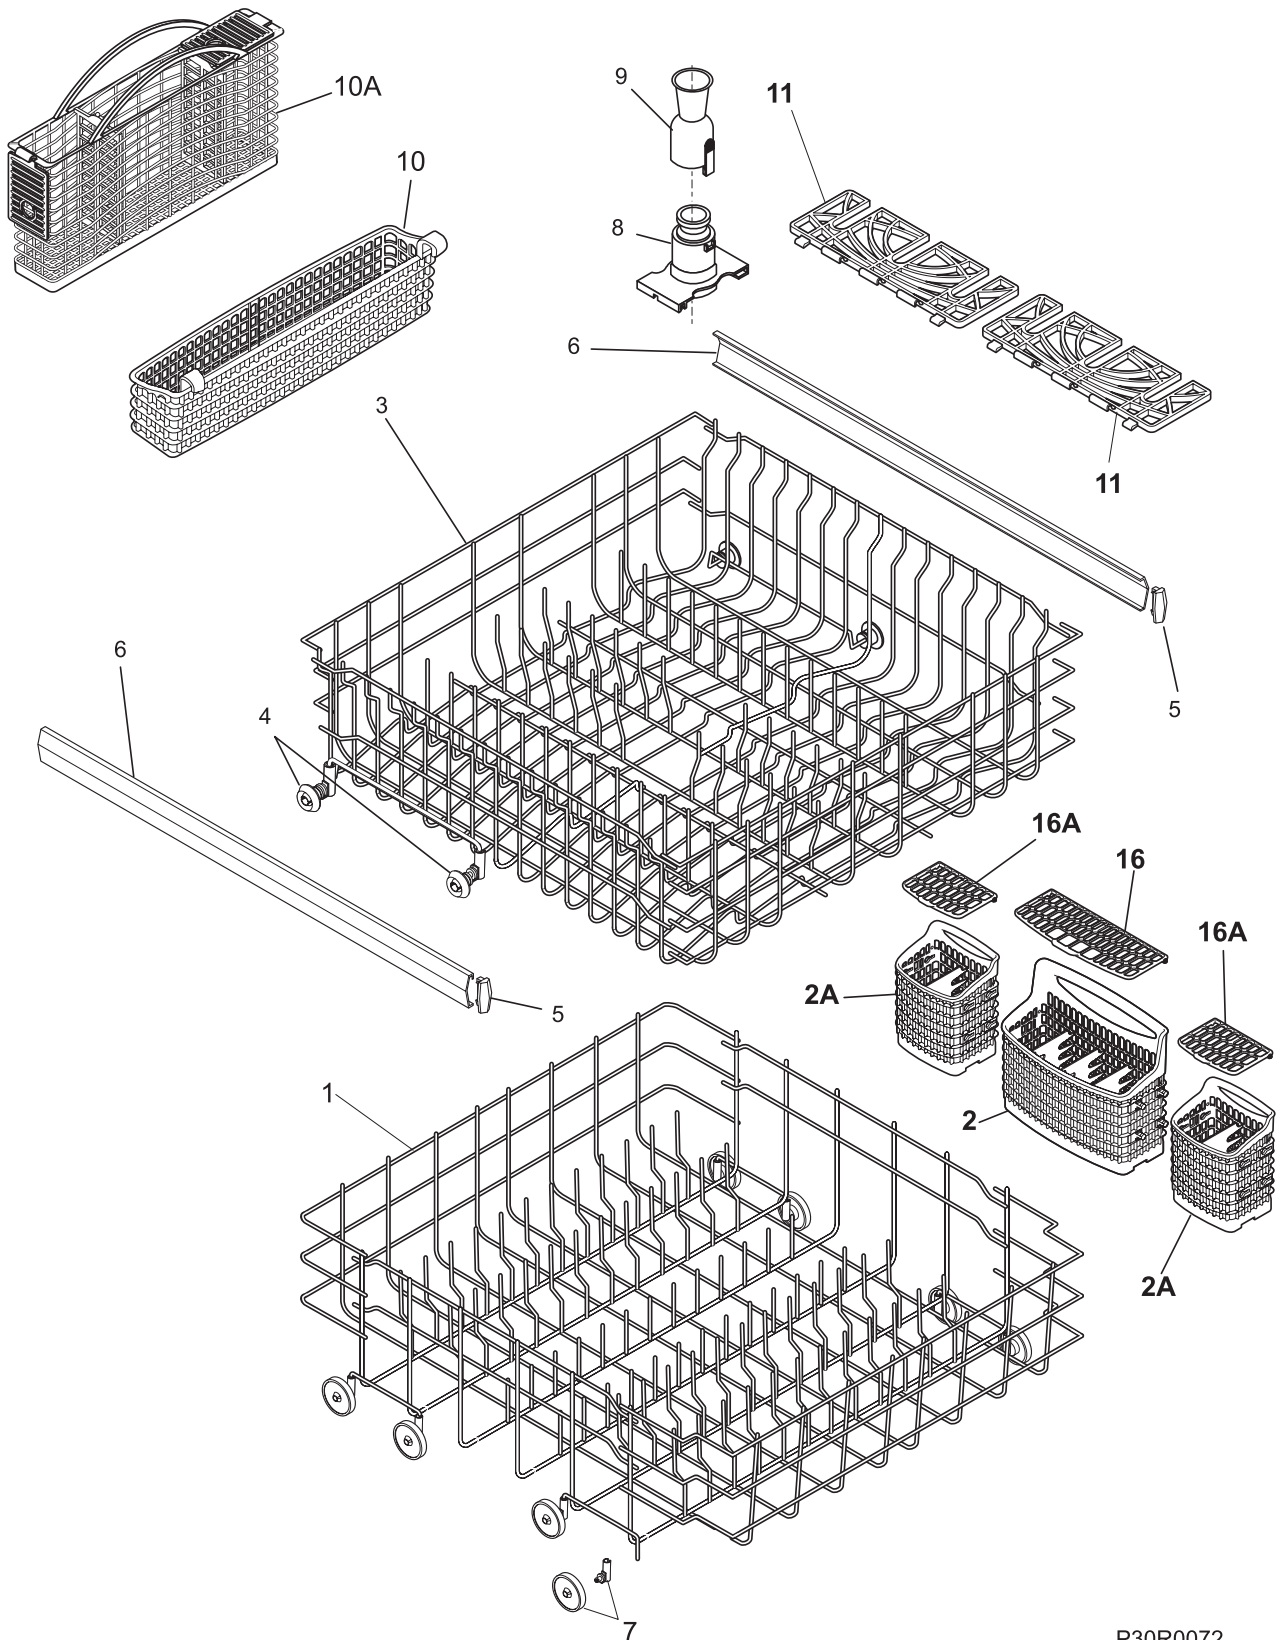

P30R0072

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: A 587.1516 (587.15162400)
 B 587.1516 (587.15164400)
 C 587.1516 (587.15169400)
 D 587.1516 (587.15163400)
 E 587.1616 (587.16163400)

POS. NO	PART NO.						DESCRIPTION
1	154319706	A	B	C	D	E	Rack assy, lower
2	154424001	A	B	C	D	E	Basket, silverware, main
2A	154424101	A	B	C	D	E	Basket, silverware, (2), side
3	154319524	A	B	C	D	E	Rack assy, upper
4	5304407064	A	B	C	D	E	Wheel & bushing assy, upper rack
5	5300809927	A	B	C	D	E	Cap, slide, (4)
6	154232701	A	B	C	D	E	Slide, rack, (2)
7	154174502	A	B	C	D	E	Wheel & bracket assy, lower rack
8	154304001	A	B	C	D	E	Base, funnel
9	154251801	A	B	C	D	E	Funnel
10	154466901	A	B	C	D	-	Basket, utility, white
10A	154238801	-	-	-	-	E	Basket, utility, white
11	154436101	A	B	C	D	E	Shelf, cup, half width, white
16	154424201	A	B	C	D	E	Cover, main basket, silverware
16A	154424301	A	B	C	D	E	Cover, side basket, (2), silverware

Get it fixed, at your home or ours!

Your Home

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call or go on-line for the location of your nearest **Sears Parts & Repair Center.**

1-800-488-1222

Call anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.)
or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación
a domicilio, y para ordenar piezas:

1-888-SU-HOGARSM
(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}
(1-800-533-6937)
www.sears.ca

SEARS

® Registered Trademark / TM Trademark / SM Service Mark of Sears, Roebuck and Co.

® Marca Registrada / TM Marca de Fábrica / SM Marca de Servicio de Sears, Roebuck and Co.

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears, Roebuck and Co.

© Sears, Roebuck and Co.