

尺寸：70\*95mm

材质：80g书写纸

双面印刷

红线为分割线（不打印显示）

# MINISO

## PRODUCT MANUAL

### Wireless Earbud M98


PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE  
PRODUCT AND KEEP IT IN A SAFE PLACE.

# CATALOGUE

|                                     |    |
|-------------------------------------|----|
| 01 How to wear headphones correctly | 5  |
| 02 Product Introduction             | 9  |
| 03 Touch Operation                  | 12 |
| 04 Charging compartment operation   | 21 |
| 05 Item list                        | 33 |
| 06 Warranty Statement               | 36 |

# Welcome to MINISO


## Clip on wireless earphones

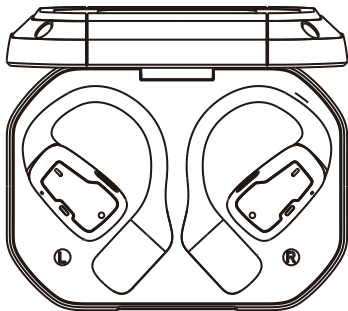


### Take out and pair it

When using for the first time, take out the left and right earphones at the same time. When the white light and blue light of the earphones flash alternately, the earphones will enter the automatic pairing mode.

## How to wear headphones correctly

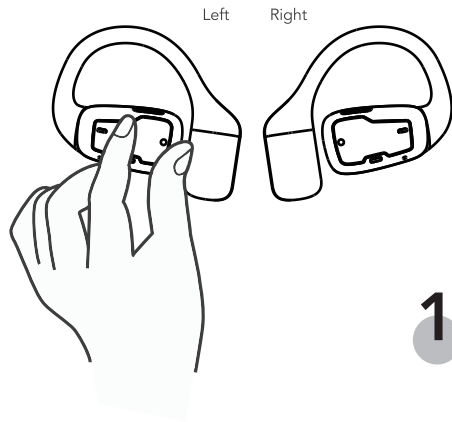


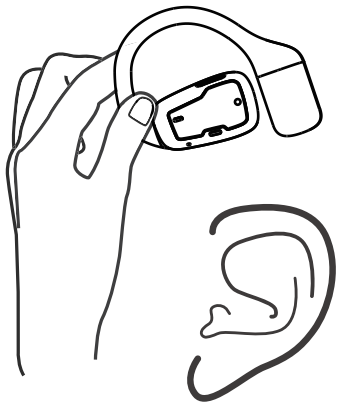

2



3

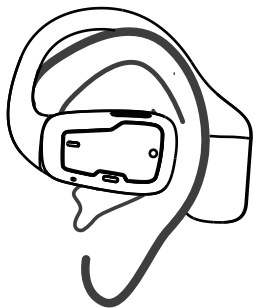



4




## Product Description

 Multi function key  
touch position

Bluetooth LED  
Display light

Charging Contacts

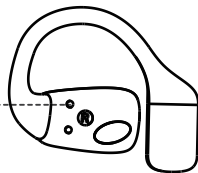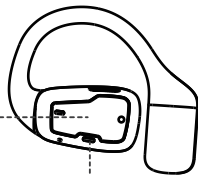

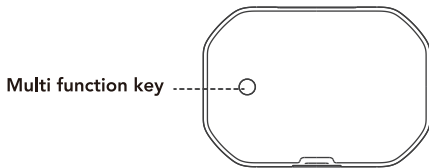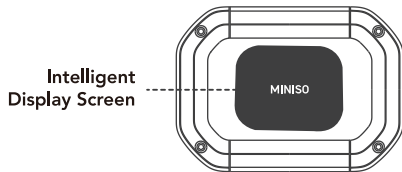

## Specification of Product

**Model of Product:** M98

**Version:** V5.4

**Effective Distance:** Approx. 10m

**Speaker Diameter:**  $\phi 13\text{mm}$

**Impedance:**  $16\Omega$

**Frequency Respinse:** 20Hz-20KHz

**Microphone Sensitivity:**  $-42\text{dB}\pm 3\text{dB}$

**Earphone Input:**  $5\text{V}\cdots 40\text{mA}$

**Charging Case Input:**  $5\text{V}\cdots 600\text{mA}$

**Charging Case Output:**  $5\text{V}\cdots 80\text{mA}$

**Earphone Battery Capacity:** 40mAh

**Charging Case Battery Capacity:** 600mAh

**Duration:** Approx. 4.5 H (Earphone)


**Earphone Charging Time:** Approx. 1.5 H

**Charging Time of the Charging Case:** Approx. 2 H

### Connect with Bluetooth device



Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-M98". Click the pairing name to pair.

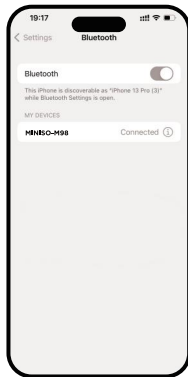

### Indicator Light Description



- When the headset is turned on: the white light and the ice blue light flash alternately
- When the headset is turned off: After the white light is on, it goes out
- Pairing status: white light and ice blue light flash alternately
- Connection successful: no light



- Headphone Charging: The white light on the earphones is always on. After being fully charged, the white light on the earphones goes off.
- Charging of the Charging case: The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%  
\*Note: After the charging status is displayed on the display screen of the Charging Case, it will automatically turn off after about 30 seconds of inactivity. Sliding can enter the display screen.





### Power On

**Automatic power on:** The earphones are in the charging case, open the charging case cover, the Earphone will be powered on, with the prompt sound of "Du".

**Manual power-on:** Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

### Power Off

**Auto power off:** Put the Earphone in the charging case, close the charging case cover, the Earphone will be powered off, with the prompt sound of "Du".

**Manual power off:** Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; If it is not connected to a Bluetooth device after 3 minutes, it will automatically power off after 3 minutes, with the prompt sound of "Du". "

## Once Press



### Music mode



Play/Pause

### Phone mode



Call Answer/End

# Double Press



## Music mode



Double press the right ear:  
Volume up



Double press the left ear:  
Volume decreases

# Long Press



## Wake up voice assistant



When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

## Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

# Triple Press



## Music mode




Triple press on the left ear:  
Previous song



Triple press on the right ear:  
next song

# Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear **all** connected devices and click the left and right earphones 5 times at the same time.

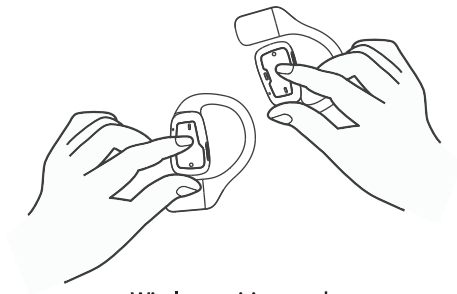

## Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

# Switch between game mode and music mode

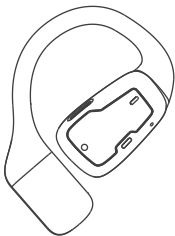

## Game mode



Press and hold the multi-function button on the right ear for 2 seconds

## Music mode




Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

# Charging compartment operation

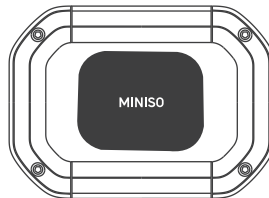

## Lighting up the display screen

Method 1: Open the charging compartment cover and the display screen will automatically light up.

Method 2: When the screen is off, click on the display screen to turn it on.

Method 3: Press the multifunctional button of the Charging Case once to light up the screen.

## Turn off display screen.

Automatic shutdown: After turning on the screen for 30 seconds without operation, the display screen will automatically turn off.

Manual closing: Press the Charging Case multifunctional button once to turn off the display screen.

Note 1: First time use, please activate power on

Method 1. Charge and activate the charging case through the TYPE-C interface.

Method 2. Long press the multifunctional button on the charging case for 8 seconds to turn on the device

Tip: This product defaults to shutdown mode when it leaves the factory, First use requires activation and startup.

# Icon Introduction



## Bluetooth status

Red status: The charging compartment is not connected to the headphones

White status: The charging compartment is connected to the earphones, but the earphones are not connected to the phone

Blue status: The charging compartment is connected to the headphones, and the headphones are connected to the phone.

# Battery status



Charging status indicator icon for the charging compartment

Blue: Charging in progress

White: Normal battery level, not charging



Headphone charging status indicator icon

Flicker: The earphones are charging in the Charging Case

Chang Liang: Normal battery level, not charging

# Lock screen interface



Unlock: Slide to the right to unlock the screen

# Music interface



Previous Song



Play/Pause



Next Song

## Volume adjustment interface



Reduce volume,  
minimum music is 0



Increase volume,  
maximum volume is 16

## Space sound interface



Music mode



Movie Mode



Game Mode

## Equalizer interface



Switch between different EQ sound effects:  
Normal, Rock, Pop, Classic, Jazz



## Alarm clock interface



Switching requires setting the alarm time:  
5 minutes, 10 minutes, 30 minutes, 60 minutes



## Light Level interface



Click the left button to decrease the screen brightness;  
Click the button on the right to increase screen brightness;

## Screen lock interface



Click to switch between different lock screen wallpapers,  
the current screen is the selected lock screen wallpaper

## Language switch interface



Click to switch languages from different countries

## Time setting interface



 
Automatic update: When the charging case, headphones,  
and phone are connected, the time on the phone will be automatically  
updated to the charging case  
Manual update: Click the button to enter manual settings

## Find My Earphone interface



Click the L/R button, and the number ① screen will appear

①



Click to cancel and exit this function,  
Click to start, the number ② screen will appear,  
and the headphone speaker will start emitting sound

②




Click the stop button to stop speaking

## Tiktok Page flipping and like function

Needs to be connected to a Bluetooth device such as a cell phone

- 1.This function is only available for use with TIKTOK software, and other software may not be able to use it.
- 2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
- 3.If there are situations where it cannot be used, please ignore this feature.

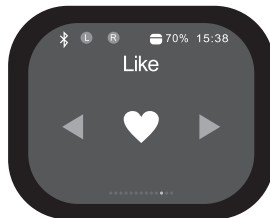

Click this icon, the current short video will be liked



Clicking on this icon will  
switch to the previous short video



Clicking on this icon will  
switch to the next short video



## Photography function

Needs to be connected to a Bluetooth device such as a cell phone

- 1.This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it.
- 2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
- 3.If there are situations where it cannot be used, please ignore this feature.



Open the phone camera, click the button, and the phone will start taking photos

Note: When not in shooting mode, clicking this photo button will increase the volume


## Flash Light interface



OPEN

Click the button to turn on the flashlight, the entire screen turns white and the brightness of the screen increases

## Definition of multifunctional button functions

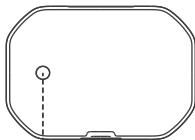

Multi function key



Click once: On/Off screen.

Long press for 3 seconds: In power on mode, long press for 3 seconds, and the screen will pop up shutdown and restart icons.


Clicking on the icon can achieve shutdown or restart.

Long press for 8 seconds: In shutdown mode, long press for 8 seconds to turn on the device.

Long press for 10 seconds: Restart the system (display the startup screen).

This operation can be performed when the system crashes and cannot be operated.


## Item list

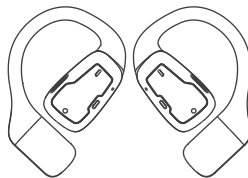


Headphones \*1



Charging case \*1

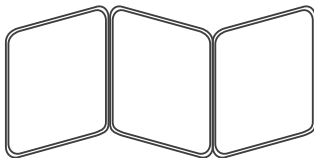

**Instruction \*1**

 

**Charging cable \*1**

## FCC ID: 2BHJR-M98

### FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference **will** not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### \*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## US REP

Company name: REP America LLC  
 Address: 1942 Broadway St. STE 314C, Boulder,  
 CO 80302, United States  
 Contact Person: Ben Xu  
 Email: d.zeng@rep-europe.de  
 ContactPhone: (719) 201-3314

## Warranty statement

### MINISO product warranty card

|                        |                |         |               |  |
|------------------------|----------------|---------|---------------|--|
| Product number         |                |         | SN number     |  |
| User info              | name           |         | Purchase date |  |
|                        | telephone      |         |               |  |
|                        | address        |         |               |  |
|                        | Invoice number |         |               |  |
| Sales unit information | name           | (stamp) |               |  |
|                        | address        |         |               |  |
|                        | telephone      |         |               |  |

## The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

## MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: [7@hifi-earphone.com](mailto:7@hifi-earphone.com)



## Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document:

If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

## Guidelines for safe and effective use

**Note:** Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

### ① Electromagnetic interference:

**Electronic devices:** To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

**Civil Aviation:** After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

### ② Safety matters:

**Placement:** It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

**Children:** Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

## Important safety tips

● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.


● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, Puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.

● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause The battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

# Enjoy the company of MINISO

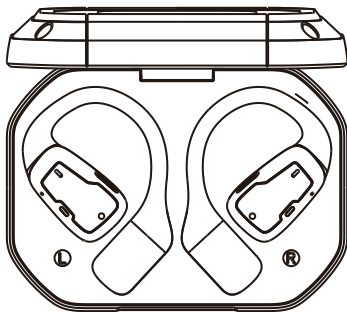

Copyright©2024 MINISO Group affiliated  
companies and its licensors. All rights reserved

Creating sound  
to live with