



OPERATING INSTRUCTIONS

Carefully remove items from package.

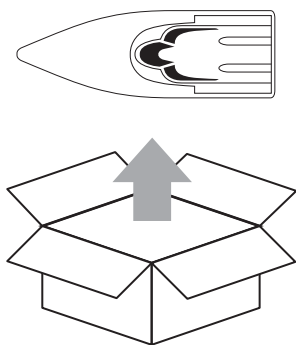


The boat requires six "AA" 1.5V batteries (not included). The controller requires two "AA" battery (not included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance. Locate the battery compartment by unscrewing the top portion of the boat from the base. Remove the top portion. Unscrew the battery compartment door to install batteries. Insert "AA" batteries following the correct polarities. Replace the battery compartment door. Replace the top section of the boat.

Slide open the battery compartment door of the controller. Insert "AA" batteries following the correct polarities. Replace the battery compartment door.


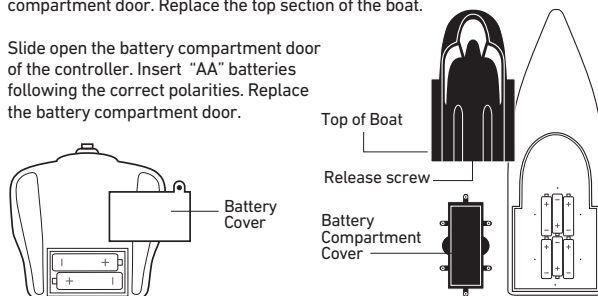


Turn on the Boat and Remote Controller, they will pair automatically.


NOTE: Boat must be placed in water in order to function. Motor will not operate when removed from water.

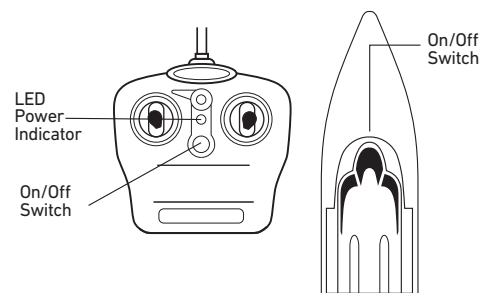



Reverse

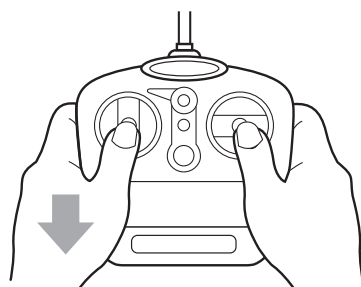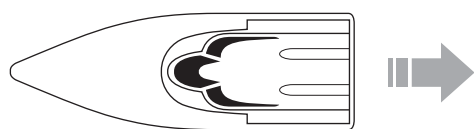


Front

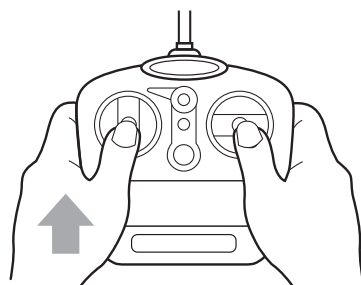

Left Turn

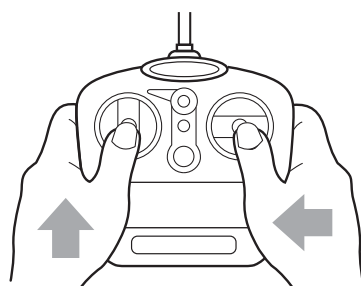 

Right Turn

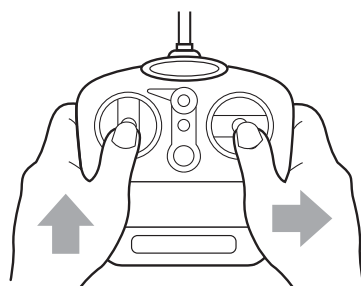

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Operate only in swimming pool or fresh water.
- Avoid salty ocean water, as this will corrode boat parts.
- Never submerge remote control in water.
- Never operate boat without proper adult supervision.
- Disconnect battery when not in use to avoid accidental operation.
- Do not use people or animals as obstacles inside pool.
- Do not run boat into pool walls, objects or other hard surfaces, as this will cause damage to the boat.
- Keep fingers, hair and loose clothing away from the spinning propellers while the boat is operational.
- Do not leave boat or remote control near sources of heat or under direct sunlight for extended periods.
- Do not leave boat or remote control outside overnight.
- Always remove boat from water when not in use.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Only use manufacture specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Keep these instructions for future reference.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

© 2018 Sharper Image. Sharper Image® name and logo are registered trademarks. All rights reserved.

© 2018 MerchSource, LLC. Irvine, CA 92618. All rights reserved. Distributed by MerchSource, LLC, Irvine, CA 92618.

**FOR TECHNICAL SUPPORT,
PLEASE CALL**

1-800-374-2744