



## DETERMINE LOCK HEAD

## ASSEMBLING THE LOCK

## INSTALLING THE LOCK

## UNLOCKING THE LOCK



Determine which of the three interchangeable lock heads fits the lock slot on your computer.

### UNIVERSAL SOLUTIONS

Three interchangeable lock heads



3.2 - 4.5mm  
WEDGE  
SLOT



2.5 - 6mm  
NANO  
SLOT



3 - 7mm  
STANDARD  
SLOT

Insert the lock head that fits the lock slot on your computer into the lock body.

If you purchased a specific sized kit, the lock head is already pre-assembled.



Anchor the cable to an immovable object. This could be a desk leg or data hole. If no natural anchor point is available, you can use an external fastener.



Insert the lock into the security slot of your computer and press the lock button.



To unlock, turn the key to the right to remove the lock from your computer.

Have questions? Need a different lock style? Need any of the lock styles in bulk? Give us a call at (800) 466-7636 or send us an email to: [help@computersecurity.com](mailto:help@computersecurity.com)

COMPUTER AND LAPTOP LOCKS



# TROUBLESHOOTING, QUESTIONS & ANSWERS

When changing lock heads, the new lock head won't go all the way into the lock body.	Ensure the lock is unlocked and the lock button is not depressed before inserting the lock head into the lock body. If the lock button is depressed (even partially) on the lock body, you will not be able to fully insert the lock head.
When pressing the lock button, the lock head gets pushed out of the lock body.	The lock head has not been inserted completely. The lock head should sit flush with the end of the lock body when it is seated correctly.
When inserting the lock into your device, it is hard to press the lock button.	You may be using the wrong lock head. Check your device settings for security slot information.
	Make sure the lock is pressed all the way into the security slot before depressing the lock button.
How do I remove the lock head?	With the lock unlocked, pull the lock head straight out of the lock body.
What if there isn't a natural anchoring point?	A glue on external fastener can be attached to a desk to use as an anchor. (This is a semi-permanent option and should only be used with permission)
How many keys are included?	2 keys are included.
How long is the cable?	6.5 ft.

## FIND THE KIT THAT'S RIGHT FOR YOU:

CSP-UL-3K - Universal kit, includes all 3 lockheads

CSP-UL-870k - T-Lock kit, includes only the T-lock lockhead

CSP-UL-871K - Wedge lock kit, includes only the wedge lockhead

CSP-UL-872K - Nano lock kit, includes only the nano lockhead

All the above kits can be keyed under the same master key series

Visit our website at: [www.ComputerSecurity.com](http://www.ComputerSecurity.com) or call us at (800) 466-7636

## DO YOU HAVE OTHER COMPUTER SECURITY NEEDS?

Privacy Monitors



Glue-on External Fasteners



CPU Enclosures



File Cabinet Locks



-BY-



100 Factory Street Nashua, NH 03060  
Phone: (800) 466-7636 or (603) 889-9899  
FAX: (800) 615-1954 or (603) 889-9822  
[help@computersecurity.com](mailto:help@computersecurity.com)

[www.computersecurity.com](http://www.computersecurity.com)