 


Fanttik

NEX L2 Pro Cordless Screwdriver Kit

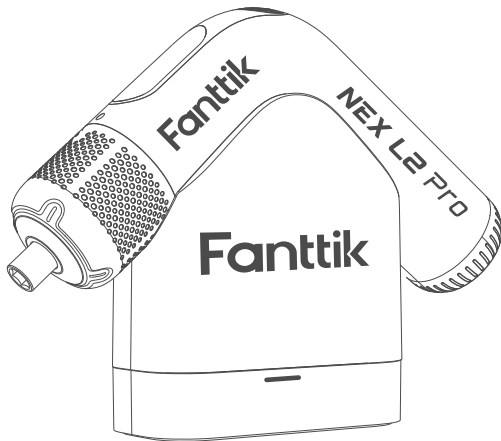

Please read this instruction manual carefully before use and retain it for future reference.

Contents

1.Safety Warnings	02
2.Package Contents	03
3.Product Overview	04
4.Operation and Functions	05
5.Specifications	08
Warranty Info	10

1.Safety Warnings

- Avoid moisture, dust, and drop.
- Do not store the product in extreme temperature environment.
- Stay alert, watch what you are doing and use common sense when operating. Do not operate while you are tired or under the influence of drugs, alcohol or medication.
- This product is not a toy and should not be used by kids under 12 years old.
- This product has built-in battery, do not throw it into fire and should be recycled by local laws and regulations.
- Do not dismantle the machine by yourself. Have your power tool serviced by a qualified repair person or contact us for advice.

 
2.Package Contents



NEX L2 Pro screwdriver x 1




Integrated storage stand x 1



Storage bag x 1



 1-inch bit x 14



2-inch bit x 6



Extension bit holder x 1



 
USB-C charging cable x 1

User Manual

User manual x 1

3.Product Overview


- 1.Bit Chuck
- 2.LED Work Light
- 3.Torque Setting Knob
- 4.Power Indicator
- 5.Display Screen
- 6.Forward/Reverse Button
- 7.Variable Speed Trigger
- 8.USB Type-C Charging Port
- 9.Screwdriver Stand
- 10.Bit Storage Compartment

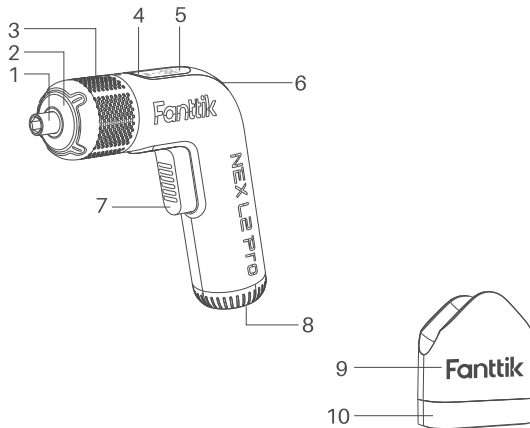

4.Operation and Functions


Open the Bit Storage Compartment

 The Screwdriver Stand is attached to the top of the Bit Storage Compartment by magnets as a lid. Remove the Screwdriver Stand to reveal all the bits.

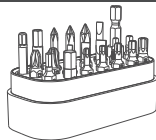


Install Screwdriver Bits

 Take a bit from the Bit Storage Compartment and insert it into the screwdriver chuck. You can also use third-party 1/4" bits.

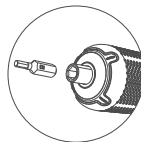

Torque Settings

 Rotate the Torque Setting Knob to select one of seven torque levels: 0.5, 1.0, 2.0, 3.0, 4.0, 5.0, or 6.0 N·m. The selected torque value is displayed on screen.

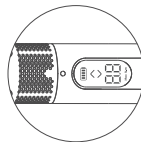

Choose Forward/Reverse Direction

Press the Forward/Reverse Button to toggle between forward or reverse directions. A corresponding direction arrow will appear on screen.



Tighten or Loosen Screws

After selecting the forward or reverse direction, press the Variable Speed Trigger to tighten or loosen screws.



 
Display Screen

The Display Screen shows information such as torque setting, rotation direction, and battery level.




Turn on/off the LED Work Light

The LED work light automatically turns on when the Variable Speed Trigger is pressed. The LED work light remains on for 10 seconds after the button is released.

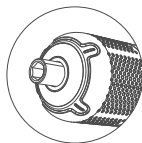

Power Indicator

 The circular Power Indicator glows green when battery power is sufficient and flashes red when the battery level is critically low.

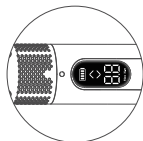

Battery Charging

This screwdriver is equipped with a universal Type-C charging port and includes a USB charging cable. A charger is not included; please use a 5V charger for charging. The screwdriver supports a maximum charging input of 10W(5V/2A).

5.Specifications

Product Name	Cordless screwdriver
Product Model	NEX L2 Pro
Product Dimension	8.27x8.27x2.0inches(210x210x51mm)
Screwdriver Dimension	5.83x4.96x1.5inches(148x127x38mm)
Net Weight(with storage case)	1.31 lb(592 g)
Torque Control	0.5/1.0/2.0/3.0/4.0/5.0/6.0N·m
Max. hard torque	6.0 N·m
Max. manual torque	8.0 N·m
Rotation Speed (unloaded)	250 RPM
Battery Capacity	2000 mAh / 7.4 Wh
Rated Voltage	3.7 V
Charging Input	5 V / 2 A
Charging Time	60-90 minutes

Bit specifications

Bit Shank: 1/4-inch (6.3mm) hex shank

Bit Material: Coated S2 Steel

Included Bit Types

Phillips: PH0, PH1, PH2, PH3

Slotted: SL3, SL4, SL5, SL6

Pozidriv: PZ2

Square: S1, S2

Hex: H3, H4, H5, H6

Tamper-Resistant Torx: TR10, TR15, TR20, TR25, TR30

*Note: PH0, PH1, PH2, SL4, H4, and H5 are 2-inch (50mm) bits; all others are 1-inch (25mm) bits.

WARRANTY CARD

🔗 Warranty Policy

Your product is covered for 12 months against manufacturing defects.

🔗 How to Return Your Fanttik Product

- Email us at support@fanttik.com with your order number.
- We'll email you a prepaid return shipping label.
- Tear off the 'Return Details' page, fill it out, and include it inside your return package.
- Use the provided label to ship your package back to us.
- Once shipped, please email us. We'll expedite your replacement or solution.



support@fanttik.com

🔗 Return Details

Complete this section and include it in your package for faster processing

Purchase Name:	
Order Number:	
Date of Purchase:	
Place of Purchase:	

929-693-6066 MON-FRI 9AM-5PM (ET)

www.fanttik.com

support@fanttik.com

METASEE LLC

12 GREENWAY PLZ STE 1161A HOUSTON,

TX 77046-1203

Made in China

