

# QFX<sup>®</sup>

WHERE THE PARTY BEGINS<sup>™</sup>



## INSTRUCTION MANUAL

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.

Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

**WARNING!**

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.

Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

**TMS-1560 BATTERY**

The TMS-1560 is a Lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize battery's lifespan. Once the power adapter is connected to a power source, it will automatically begin charging (4~5 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is charging, the battery indicator light is red. When the battery is fully charge, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

**TMS-1560 BATERIA**

 
El TMS-1560 es un altavoz PA alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (4 a 5 horas para cargar completamente la batería de litio). Incluso si la batería está baja, se encenderá cuando esté conectada a una fuente de alimentación. Cuando la energía de la batería se está cargando, la luz indicadora de la batería es roja. Cuando la batería esté completamente cargada, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días.

**BATTERIE TMS-1560**

Le TMS-1560 est un haut-parleur de sonorisation alimenté par batterie au lithium. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (4 à 5 heures pour charger complètement la batterie au lithium). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être réglé sur OFF pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perdra progressivement de sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

## FUNCTIONS:

1. Power Switch: ON/OFF
2. Master Volume Knob: Adjust from Min to Max
3. Echo Knob: Adjust from Min to Max
4. Microphone Volume Knob: Adjust from Min to Max
5. Bass Knob: Adjust from Min to Max
6. Treble Knob: Adjust from Min to Max
7. Mode Button: Toggle between AUX, USB, TF, FM, BT by short press, press and hold to turn light on or off
- ◀◀ Previous Track Button: Select previous track
- ▶▶ Play/Pause Button (TWS connection)
- ▶▶ Next Track Button: Select next track by short press, press and hold to select/exit Mic Priority
8. TF Card Slot
9. USB Slot
10. AUX Input
11. Microphone Input
12. Battery Indicator Light
13. Power Supply: DC 13.5V

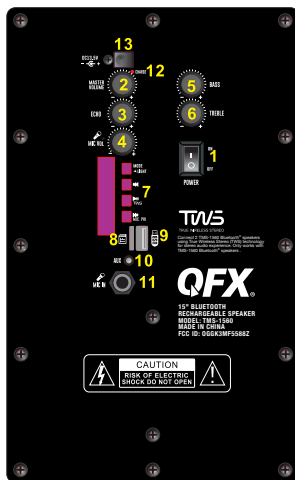

## FUNCIONES:

1. Interruptor de encendido: encendido/apagado
2. Perilla de volumen maestro: Ajuste de mínimo a máximo
3. Echo Knob: Ajuste de Min a Max
4. Perilla de volumen del micrófono: Ajuste de Min a Max
5. Perilla de graves: Ajuste de Min a Max
6. Perilla de agudos: Ajuste de Min a Max
7. Botón de modo: alternar entre AUX, USB, TF, FM, BT presionando brevemente, presione y mantenga presionado para encender o apagar la luz
- ◀◀ Botón de pista anterior: selecciona la pista anterior
- ▶▶ Botón de reproducción/pausa (conexión TWS)
- ▶▶ Botón Pista siguiente: Pulse para seleccionar la siguiente pista; Pulse y mantenga pulsado para seleccionar / salir de la prioridad del micrófono
8. Ranura para tarjeta TF
9. Ranura USB
10. Entrada auxiliar
11. Entrada de micrófono
12. Luz indicadora de batería
13. Fuente de alimentación: CC 13,5 V

## LES FONCTIONS:

1. Interrupteur d'alimentation : marche/arrêt
2. Bouton de volume principal : ajustez du minimum au maximum
3. Bouton Echo : Ajustez de Min à Max
4. Bouton de volume du microphone : réglez du minimum au maximum
5. Bouton de basse : Ajustez de Min à Max
6. Bouton Treble : Ajustez de Min à Max
7. Bouton Mode : basculer entre AUX, USB, TF, FM, BT en appuyant brièvement, appuyez et maintenez pour allumer ou éteindre la lumière
- ◀◀ Bouton Piste précédente : sélectionnez la piste précédente
- ▶▶ Bouton lecture/pause (connexion TWS)
- ▶▶ Bouton Piste suivante : Appuyez pour sélectionner la piste suivante
- indice; Maintenez enfoncé pour sélectionner/quitter la priorité du microphone
8. Fente pour carte TF
9. Port USB
10. Entrée AUX
11. Entrée micro
12. Voyant de batterie
13. Alimentation : CC 13,5 V

## TMS-1560 DISPLAY / PANTALLA TMS-1560 / AFFICHAGE TMS-1560

 
1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX / FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Short press "play/pause" button for auto scan all channels.

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB / TF/BT/AUX / FM. Cuando se inserta una unidad de tarjeta de memoria flash USB / TF en la entrada USB / TF, la unidad automáticamente cambiar al modo USB / TF y comenzar la reproducción de archivos de audio .mp3 del flash USB Card unidad / TF.
2. Track Número: El número que se está reproduciendo de la pista USB / TF se mostrará Modo
3. Modo FM: Aquí se muestran todos los canales FM. Presione brevemente el botón "reproducir/pausar" para escanear automáticamente todos los canales.

1. Mode d'entrée : l'écran LED affichera les informations du mode d'entrée pour USB/TF/BT/AUX/FM. Lorsqu'une unité est insérée de la carte mémoire flash USB/TF dans l'entrée USB/TF, l'appareil passe automatiquement en mode USB/TF et commence l'enregistrement. Lisez des fichiers audio .mp3 à partir d'une clé USB / carte TF.
2. Numéro de piste : le numéro de piste USB/TF en cours de lecture s'affiche.
3. Mode FM : Toutes les chaînes FM s'affichent ici. Appuyez brièvement sur le bouton "play/pause" pour balayer automatiquement tous les canaux.


## REMOTE CONTROL

1. : ON / Standby mode
2. **MODE**: Select USB,TF,FM,AUX, BT
3. : Mute Audio
4. : PLAY/PAUSE
5. : Select previous channel
6. : Select next channel.
7. **EQ**: Select EQ mode.
8. **VOL-**: Reduce the master volume
9. **VOL+**: Increase the master volume
10. **REP**: Repeat the playing track.
11. **SCAN**: Press to Scan Channel in FM Mode
12. **0-9**: for selecting the certain track for USB flash drive or TF card.

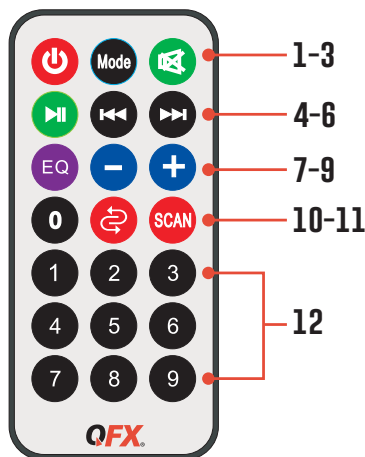


## CONTROL REMOTO

 1. : ENCENDIDO / Modo de espera
2. **MODE**: seleccione USB, TF, FM, AUX, BT
3. : Silenciar el audio
4. : REPRODUCCIÓN/PAUSA
5. : Seleccione el canal anterior
6. : Seleccione el siguiente canal.
7. **EQ**: selecciona el modo EQ.
8. **VOL-**: Reduce el volumen maestro
9. **VOL+**: aumenta el volumen maestro
10. **REP**: repite la pista de reproducción.
11. **SCAN**: presione para escanear canales en modo FM
12. **0-9**: para seleccionar ciertos pista para unidad flash USB o tarjeta TF.

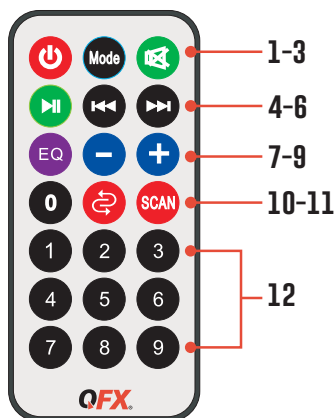

## TÉLÉCOMMANDE

 1. : Marche / Mode veille
2. **MODE**: sélectionnez USB, TF, FM, AUX, BT
3. : Couper le son
4. : LECTURE/PAUSE
5. : sélectionner la chaîne précédente
6. : Sélectionnez la chaîne suivante.
7. **EQ**: sélectionnez le mode EQ.
8. **VOL-**: Réduit le volume principal
9. **VOL+**: Augmente le volume principal
10. **REP**: Répète la piste en cours de lecture.
11. **SCAN**: Appuyez pour balayer la chaîne en mode FM
12. **0-9**: pour sélectionner le certain piste pour lecteur flash USB ou carte TF.

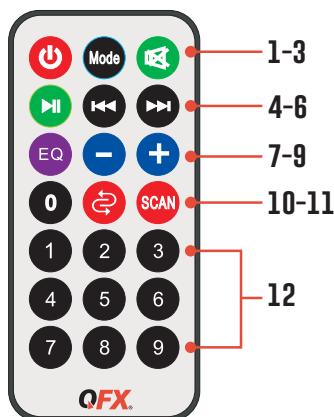



# TMS-1560 OPERATION/OPERACIÓN/OPÉRATION

**TWS**  
TRUE WIRELESS STEREO



## Sync 2 TMS-1560 speakers for True Wireless Stereo (TWS)

1. Turn on both TMS-1560 speakers and enable Bluetooth mode on both speakers. They should read BLUE.
2. Press the Play/Pause/TWS button for 3 seconds on one speaker only to sync both speakers.
3. On your mobile device under the Bluetooth menu, search for QFX TMS-1560 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the Play/Pause/TWS button.

**TWS**  
TRUE WIRELESS STEREO



## Sincroniza 2 altavoces TMS-1560 para True Wireless Stereo (TWS)

1. Encienda ambos altavoces TMS-1560 y habilite el modo Bluetooth en ambos altavoces. Deben leer AZUL.
2. Presione el botón Reproducir/Pausar/TWS durante 3 segundos en un solo altavoz para sincronizar ambos altavoces.
3. On your mobile device under the Bluetooth menu, search for QFX TMS-1560 and connect.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, mantenga presionado el botón Reproducir/Pausar/TWS.

**TWS**  
TRUE WIRELESS STEREO



## Synchronisez 2 haut-parleurs TMS-1560 pour une véritable stéréo sans fil (TWS)

1. Allumez les deux haut-parleurs TMS-1560 et activez le mode Bluetooth sur les deux haut-parleurs. Ils devraient lire BLEU.
2. Appuyez sur le bouton Lecture/Pause/TWS pendant 3 secondes sur un seul haut-parleur pour synchroniser les deux haut-parleurs.
3. Sur votre appareil mobile, dans le menu Bluetooth, recherchez QFX TMS-1560 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de la véritable stéréo sans fil.
5. Pour quitter TWS, maintenez enfoncé le bouton Lecture/Pause/TWS.

## BLUETOOTH

**BLUETOOTH MODE:** use the MODE button to enable Bluetooth on the TMS-1560. Open the Bluetooth settings on your mobile device and search for QFX TMS-1560. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

**MODO BLUETOOTH:** use el botón MODE para habilitar Bluetooth en el TMS-1560. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX TMS-1560. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

**MODE BLUETOOTH:** utilisez le bouton MODE pour activer Bluetooth sur le TMS-1560. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX TMS-1560. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

## FM RADIO / RADIO FM

Frequency-Modulated stations operate in a frequency band extending from 87.5 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press the Play/Pause button to scan available frequencies in the area.

Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87,5 MHz hasta 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir/Pausar para buscar las frecuencias disponibles en el área.

Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87,5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture/Pause pour balayer les fréquences disponibles dans la zone.



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA®, Inc.**  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

 [support@qfxusa.com](mailto:support@qfxusa.com)  
 (800) 864-CLUB (2582) or (323) 864-6900  
 [qfxusa.com](http://qfxusa.com)  
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

| PRODUCT CATEGORY                                                  | HANDLING | LABOR  | PARTS  |
|-------------------------------------------------------------------|----------|--------|--------|
| Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers | \$5.00   | 1 Year | 1 Year |
| Personal Stereos                                                  | \$10.00  | 1 Year | 1 Year |
| Portable Radio/Cassette                                           | \$15.00  | 1 Year | 1 Year |
| Large Portable Radio Cassette                                     | \$20.00  | 1 Year | 1 Year |
| Mobile Audio                                                      | \$10.00  | 1 Year | 1 Year |
| Pro Audio SBX Systems                                             | \$75.00  | 1 Year | 1 Year |
| Pro Audio PBX Systems                                             | \$75.00  | 1 Year | 1 Year |
| Televisions                                                       | \$25.00  | 1 Year | 1 Year |
| Telephones                                                        | \$10.00  | 1 Year | 1 Year |

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



1-800-864-2582  
Mon-Fri 9AM - 5PM (PST)



[support@qfxusa.com](mailto:support@qfxusa.com)  
Mon-Fri 9AM - 5PM (PST)



[www.qfxusa.com](http://www.qfxusa.com)

# THANK YOU.

**QFX** Where the Party Begins!

We would love to hear about your TMS-1560 journey!  
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

