

***Rohinson®***

Instructions Manual

**Hand blender set R-5749**



 
**Read these instructions for use carefully before you use the appliance and save them for future reference.**

## IMPORTANT SAFEGUARDS

- READ ALL INSTRUCTIONS
- Close supervision is necessary when the appliance is near children.
- Before connecting the hand blender to the power supply, check that the voltage indicated on the rating label of the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the hand blender.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not let cord hang over edge of table or hot surface.
- Do not immerse upper part of blender into water as this would give rise to electric shock.
- Avoid contacting moving parts.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- The appliance cannot be used for chopping ice or blending hard and dry substance, otherwise the blade could be blunted.
- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- Be sure chopper lid is securely locked in place before operating appliance.
- The use of accessory not recommended by the manufacturer may cause injuries to persons.
- Do not operate the appliance for other than its intended use.


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outdoors.
- Never let the appliance run unattended.
- Take care of potential injury from misuse.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Never touch the blades when the appliance is plugged in. The blades are very sharp.
- If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.
- Do not overload the appliance by putting in too much food and do not operate continuously for more than 30 seconds.
- This appliance is intended to be used in households only

## DESCRIPTION OF PARTS

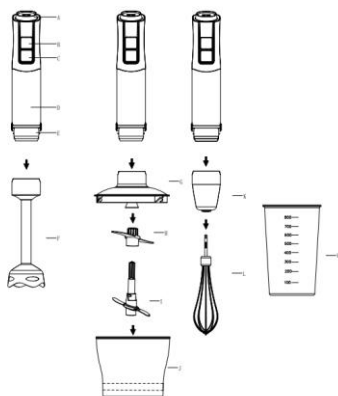

- A. Variable speed control
- B. Power button
- C. Turbo button (max speed)
- D. Motor unit
- E. Release button
- F. Blender stick
- G. Chopper lid
- H. Chopper blade
- I. Chopper blade
- J. Chopper bowl
- K. Whisk head
- L. Whisk
- M. Beaker

**Know your blender 800ml (It is suitable for blending vegetable, fruits, and sauces)**

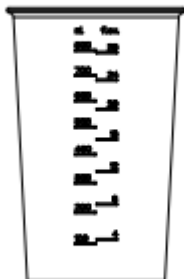 


Max operation duration per time cannot exceed 30 S, and 3-minute rest time must be maintained at two consecutive cycles.

The max capacity of the beaker is 800mL, is ideal for taking measurements and preparing small quantities of processed food.

1. To assemble the detachable shaft with the motor unit
2. Simply plug the hand-held blender into the power outlet.
3. Press the button to switch at the same time, you can dial the variable speed switch to select the desired speed setting, from low to high.
4. To stop the hand-held blender by releasing Push button switch.

**Know your accessory-chopper 600ml (Using for chopping)**

 Max operation duration per time cannot exceed 30 S, and 3-minute rest time

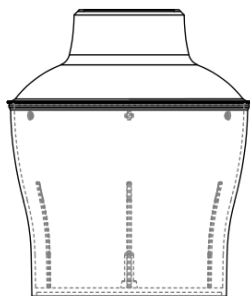

must be maintained at two consecutive cycles.

1. Place the chopper bowl on a clean, level surface.
2. Assemble the stainless chopping blade into the chopper bowl, as shown above.
3. Place food into the chopper bowl.

**Note:** remove the bone of the meat, cut into small pieces, then place the meat into bowl, the max quantity of meat can't exceed 200g in every blending.

4. Attach the lid onto the chopper bowl, make sure the tuber on the inside wall of bowl aligns with the groove of lid, then put down the lid and turn it in clockwise direction until it locks into position. To detach the lid, turn in adverse direction.

5. Insert the motor unit into the hole of the chopper lid and turn in clockwise direction to lock.

6. Press the button to switch at the same time, you can dial the variable speed switch to select the desired speed setting, from low to high.

7. To stop the hand-held blender by releasing Push button switch.

**Caution:**

- To reduce the risk of injury, never place the cutting blade on base without first putting bowl properly in place.
- Be sure chopper lid is securely locked in place before operating appliance.

**Know your accessory-beater (for mixing egg white)**

Max operation duration per time cannot exceed 30S, and 3-minute rest time must be maintained at two consecutive cycles,

1. To assemble the egg white beater with the motor unit, turn the whisk anti-clockwise direction until tightened. To disassemble, just turn in the adverse direction.
2. Simply plug the hand-held blender into the power outlet.
3. Place egg white into the cup, don't whisk more than 6 eggs.
4. Press the button to switch at the same time, you can dial the variable speed switch to select the desired speed setting, from low to high.
5. To stop the hand-held blender by releasing Push button switch.

**CLEANING AND MAINTENANCE**

1. Unplug the appliance and remove the detachable stem.

Note: Do not immerse the detachable stem of the blender in water because overtime the lubrication on the bearings may wash away.

2. Wash the detachable stem under running water, without the use of abrasive cleaner or detergents. After finishing cleaning the detachable stem, place it upright so that any water which may have got in can drain out. The stem is dishwashing safe component.

3. Wash the cup, bowl, beater and blade in warm soapy water. The bowl and the beater are not recommended to be placed in dishwashing machine as the plastic component deteriorates through prolonged use of dishwasher cleaning.
  4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.
  5. Dry thoroughly.
- Caution: Blades are very sharp, handle with care.
6. Reassemble the blender shaft to motor unit then place it upright in wall bracket or hang it up for saving space.

### **Quick cleaning**

Between processing tasks, hold the hand-held blender in the cup half filled with water and turn on for a few seconds.

### **TECHNICAL SPECIFICATIONS**

Rated voltage range	220-240 V
Rated frequency	50 Hz
Rated power	1500 W

### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a

crossed-out wheeled dustbin. 