

1

Determine if your floor covering will be compatible with the True Comfort floor heating system

FLOOR TILES	
✓	CERAMIC
✓	PORCELAIN
✓	STONE
SOFT FLOOR COVERINGS*	
✓	VINYL
✓	LINOLEUM
✓	CARPET
✗	CORK
WOOD FLOORS*	
✓	LAMINATE FLOORING
✓	ENGINEERED WOOD
✗	NATURAL HARDWOOD


\* These floor coverings require alternate spacing on an uncoupling membrane.

2

Calculate the surface area

- Measure the total surface area of the room.
- Measure the area(s) taken up by objects on the floor and subtract them from the total surface area.
- The difference is the surface area to be heated.

EXAMPLE

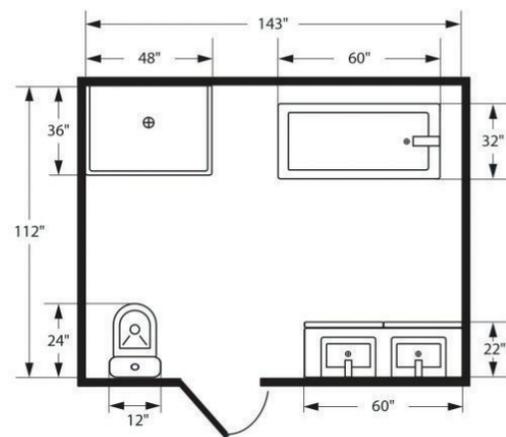

	DIMENSIONS (in.)	SURFACE AREA (in. <sup>2</sup> )	SURFACE AREA (ft. <sup>2</sup> )*
TOTAL ROOM SURFACE AREA	143 x 112	16,016	111.2
SURFACE AREA OF OBJECTS ON THE FLOOR	SHOWER 48 x 36	1728	12
	BATHTUB 60 x 32	1920	13.3
	VANITY 60 x 22	1320	9.2
	TOILET 12 x 24	288	2
SURFACE AREA TO BE HEATED		10,760	74.7

\* To convert square inches to square feet, simply divide by 144. Note that for the membrane, the surface area to be calculated is the same as the surface to be tiled.

3

Choose your installation type

WITH CABLE SPACERS (INCLUDED)



- Optimal heat dissipation
- Easy to install
- Cost effective
- Heating-cable safe
- Cable spacers included in the box

WITH UNCOUPLING MEMBRANE\*



- Quick and easy to install
- Protects tiles against cracking and loosening
- Can replace the second sheet of plywood required under tile
- Ideal over concrete

\* Sold separately. stelpro.com/true-comfort

4

Select your product

- Select the appropriate product code from the table based on the installation type and the room surface area to be heated. The cable should never be cut. The chosen cable should always be smaller than the total area to be heated.

CODE	COVERAGE (FT <sup>2</sup> )										POWER (WATTS)	AMPERAGE (A)	LENGTH (FT)			
	CABLE SPACERS				UNCOUPLING MEMBRANE											
	2-3-2 in 14.4 W/ft <sup>2</sup>	3 in 12 W/ft <sup>2</sup>	3-4-3 in 10.3 W/ft <sup>2</sup>	4 in 9 W/ft <sup>2</sup>	OTHER BRAND		TRUE COMFORT									
HEATING CABLES 120V – 3W																
CGS120K0035K01	8	10	11	12	2	2-3-2 studs (2-3/8 in)	3 studs (3-1/2 in)	2	2-3-2 studs (2-1/2 in)	3 studs (3-3/4 in)	8	10	12	104	0.9	35
CGS120K0061	14	17	20	21	13	17	19	14	18	20	183	1.6	61			
CGS120K0098	22	26	31	33	21	26	32	22	28	33	293	2.5	98			
CGS120K0122	27	33	38	41	26	33	38	27	34	40	367	3.1	122			
CGS120K0194	41	51	59	65	40	51	61	43	53	64	581	4.9	194			
CGS120K0230	49	60	70	77	48	60	72	50	63	75	689	5.8	230			
CGS120K0304	64	79	92	102	63	79	95	66	83	99	912	7.6	304			
HEATING CABLES 240V – 3W																
CGS240K0069	16	19	22	23	15	19	22	16	20	23	207	0.9	69			
CGS240K0147	32	39	46	50	31	39	47	33	41	49	441	1.9	147			
CGS240K0173	37	46	53	58	36	46	54	38	48	57	518	2.2	173			
CGS240K0220	47	58	67	74	46	58	69	48	60	72	660	2.8	220			
CGS240K0244	52	64	75	82	51	64	77	53	67	80	733	3.1	244			
CGS240K0283	60	74	86	95	59	74	89	62	77	93	850	3.6	283			
CGS240K0351	74	92	106	119	72	91	111	76	95	115	1054	4.4	352			
CGS240K0459	96	120	138	155	94	119	144	99	124	151	1378	5.8	459			
CGS240K0528	109	137	159	178	108	136	166	114	142	174	1583	6.6	528			
CGS240K0608	126	157	182	205	124	156	191	130	163	199	1823	7.6	608			
CGS240K0695	143	180	208	234	142	178	218	149	186	229	2084	8.7	695			
CGS240K0782	161	202	234	264	159	200	245	167	209	257	2346	9.8	782			

5

Before continuing, have you chosen your floor heating thermostat?



STF362WF – CONCERTO WI-FI\*

- Wi-Fi connected thermostat control from anywhere, at any time
- Installer configuration simple configuration via app using Bluetooth®
- Simple control on the thermostat adjust setpoint, change mode or switch on/off
- Ground fault circuit interrupter (GFCI class A) protects users and the installation



STF362NP – CONCERTO BASIC\*

- Quick and easy manual control
- precise, constant temperature for comfort at all times
- Energy monitoring for last seven days track your floor's energy consumption
- Ground fault circuit interrupter (GFCI class A) protects users and the installation

\* Sold separately

6

Install the cable



PLAN THE INSTALLATION

- Read the installation guide.
- Determine the location of the thermostat.
- Prepare the installation layout.
- Test the cable according to the instructions in the installation guide.



INSTALL THE CABLE

- Install the cable spacers (or the membrane) and the heating cable.




INSTALL THE SENSORS

- Install the floor temperature sensors.
- Fish the cold lead to the connection box.
- Test the cable according to the instructions in the Installation guide.



COVER THE CABLE

- Depending on the installation method cover the cable with a polymer-modified thin-set mortar or a self-leveling underlayment.

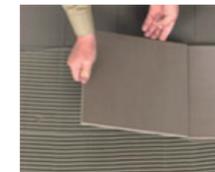

INSTALL THE FLOOR COVERING

- Respect the cement product manufacturer's recommended curing time before turning your system on.
- Consult the technical datasheet supplied by the manufacturer. Curing time may vary from 7 to 28 days.

ENCOUNTERING ISSUES?

Contact our Customer Service for advice and guidance.

°STELPRO

1-844-STELPRO (783-5776)  
customerservice@stelpro.com

True Comfort®  
PAR/BY °STELPRO

Floor heating systems



- Installation compatible with uncoupling membranes and cable spacers
- Unparalleled comfort
- No spreading of dust or germs
- Maintenance free
- Energy savings

25 25-year warranty

Made in Canada

