 
 


GREÅKER

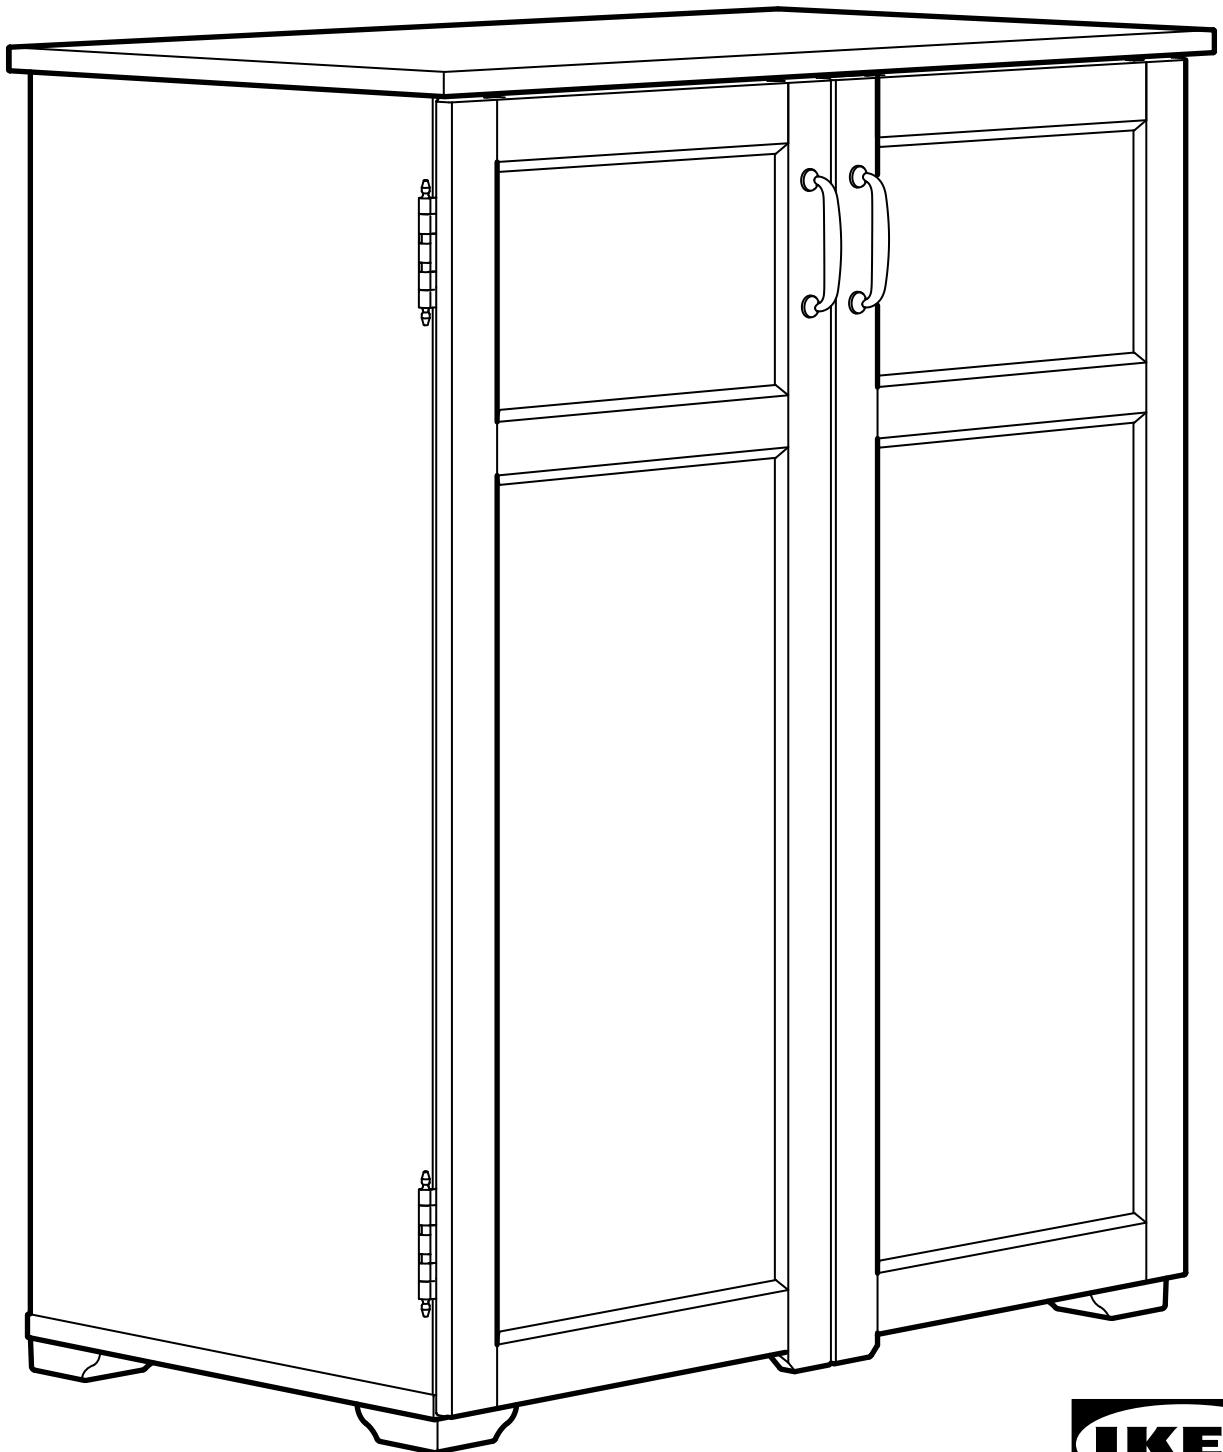

Design and Quality
IKEA of Sweden

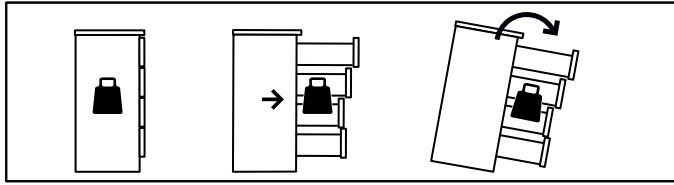

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

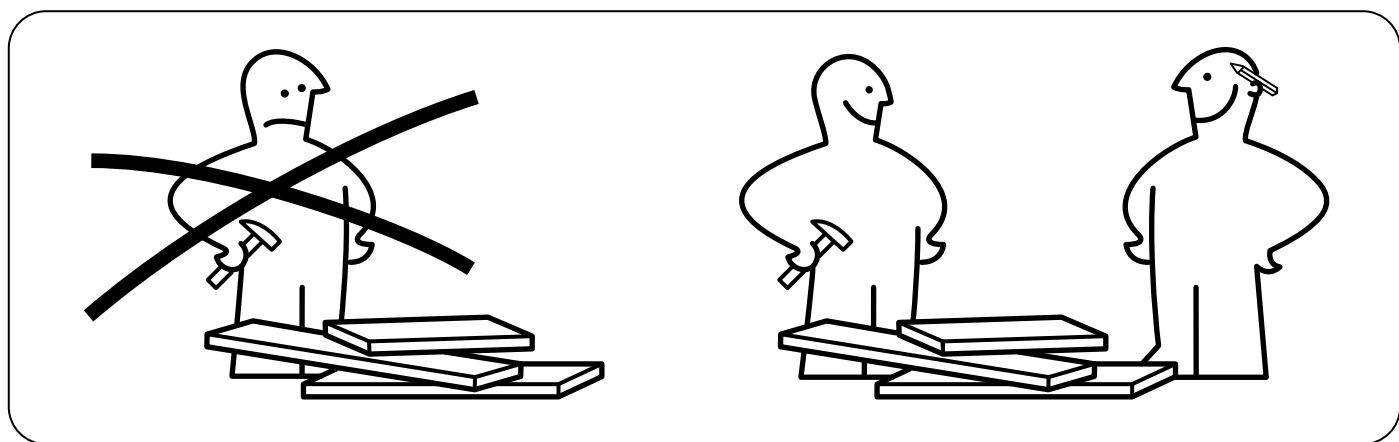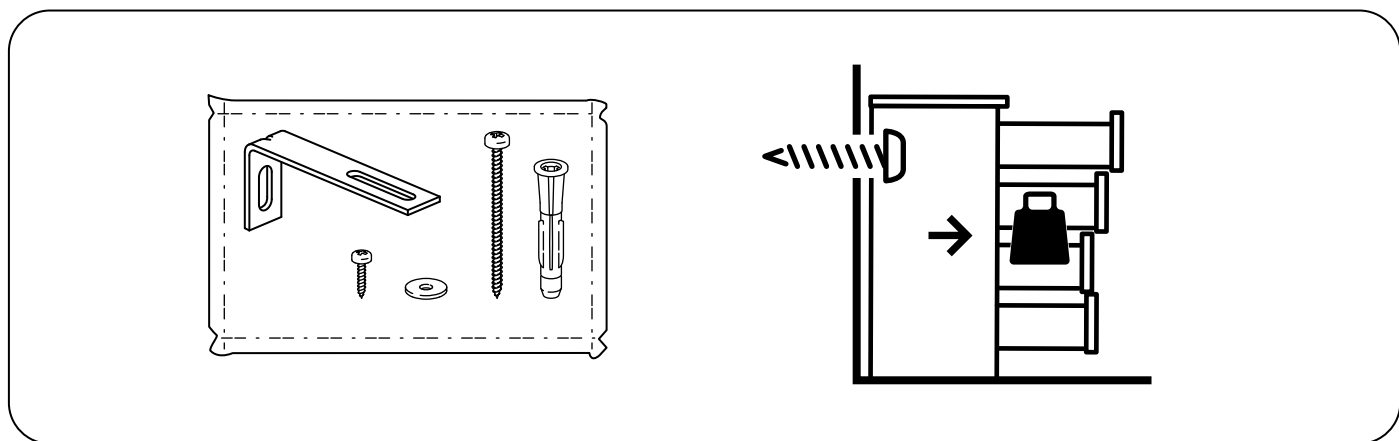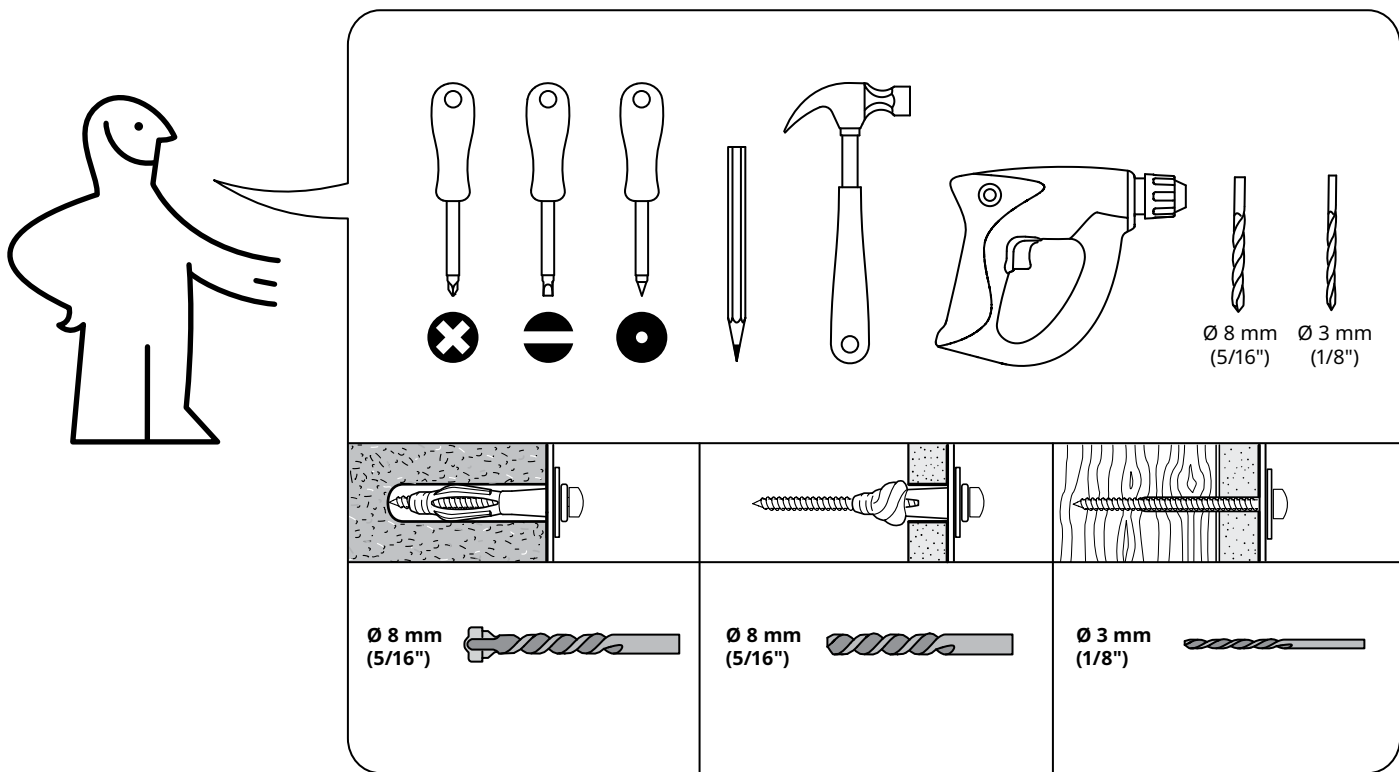

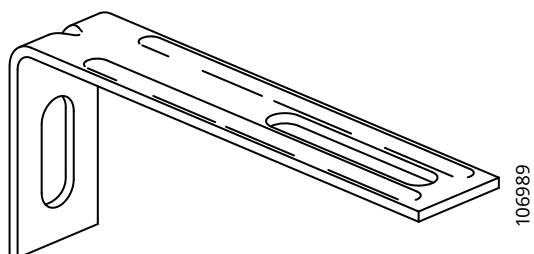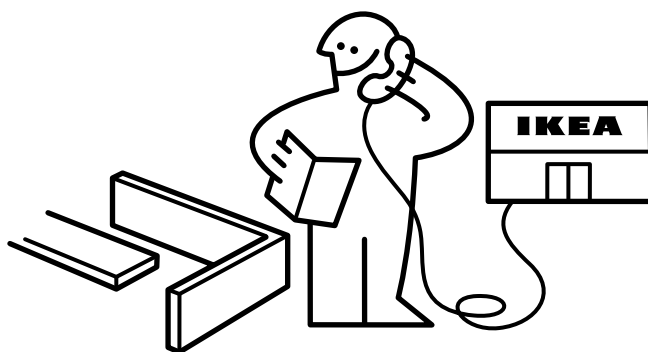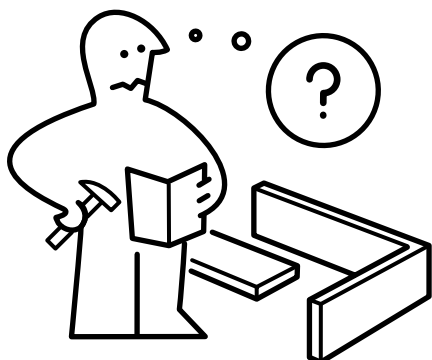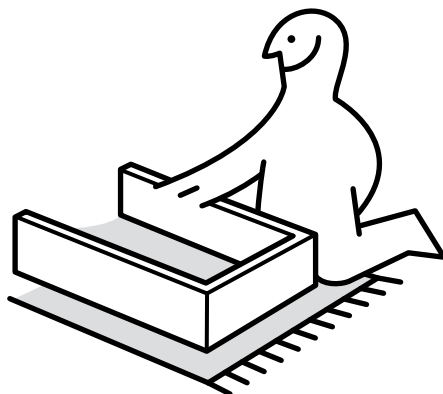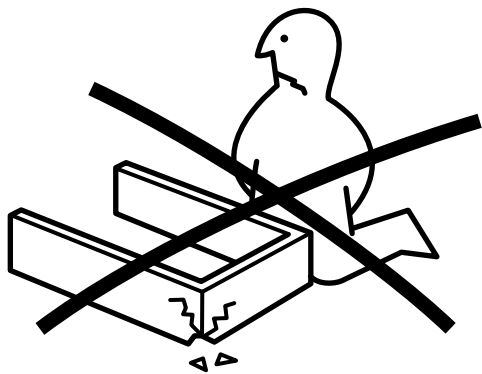

106989

 2x




109049

2x




100823

 4x



109048

 2x



121714

2x



 
19

326949


1




12x



4x

 

4x

 


4x




24x



 
18x




4x

 


2x

 


4x

 


12x

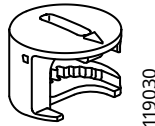 


12x

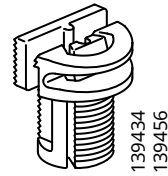 

14x

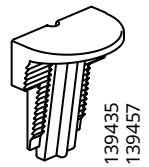 


14x

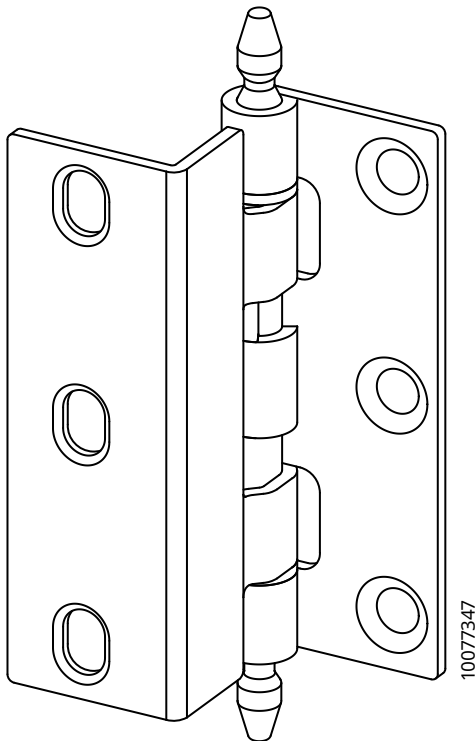 


4x



 
2x

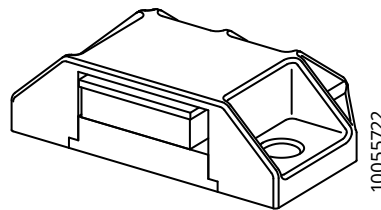

2x

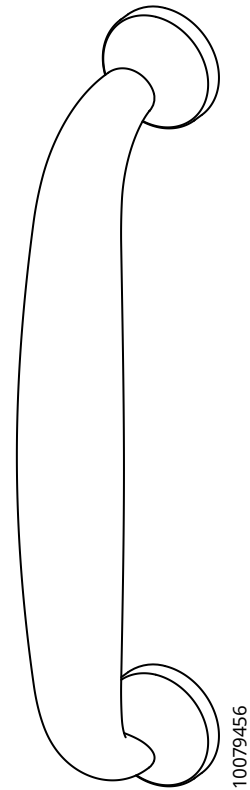 


2x

 


12x



 
18x

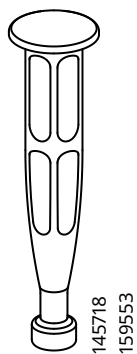


12x

 


12x

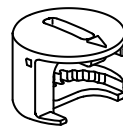 



24x

 


1x

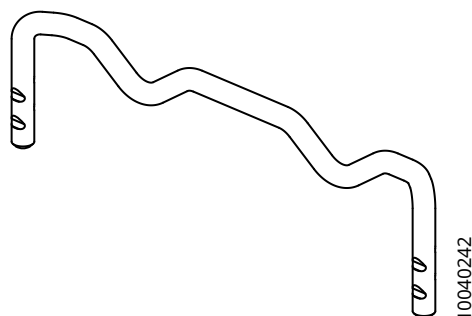 


3x

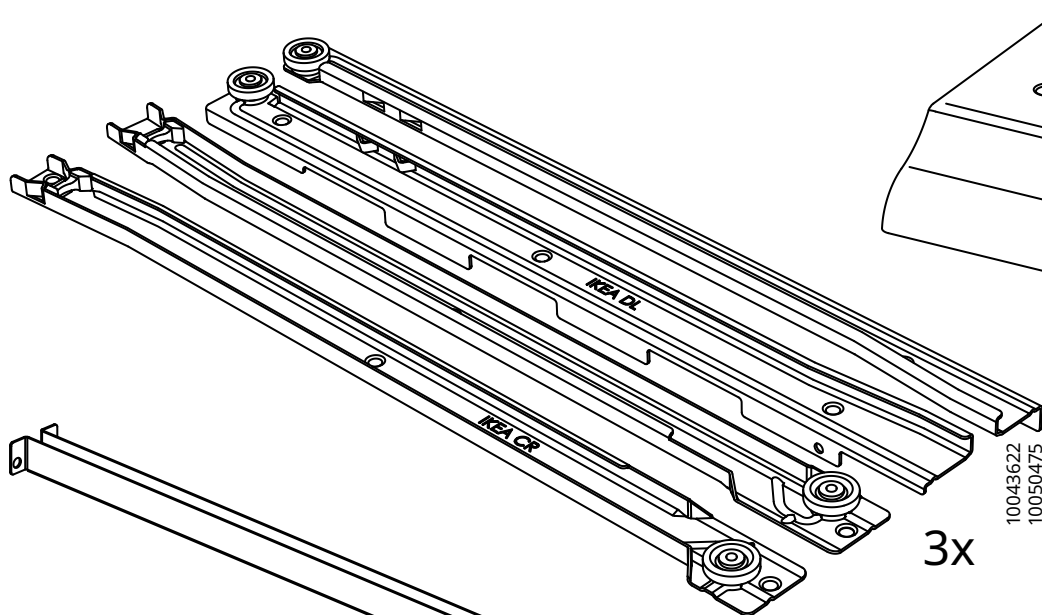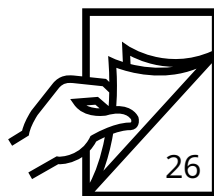  

3x

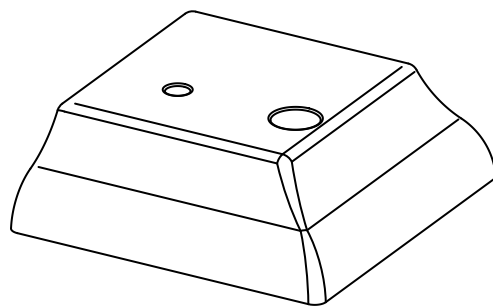 

4x

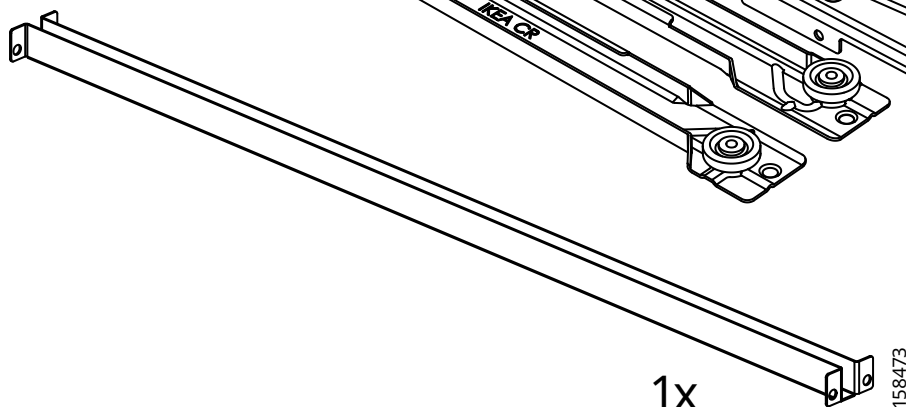 

1x


1

This image displays a variety of hardware components for a door lock assembly. The components are arranged in three rows. The top row contains eight screws of different sizes and types. The middle row contains three bolts, two washers, and a small metal bracket. The bottom row features a large door plate with a lock cylinder, a small metal bracket, and a long, curved handle.




IKEA CL

 
2

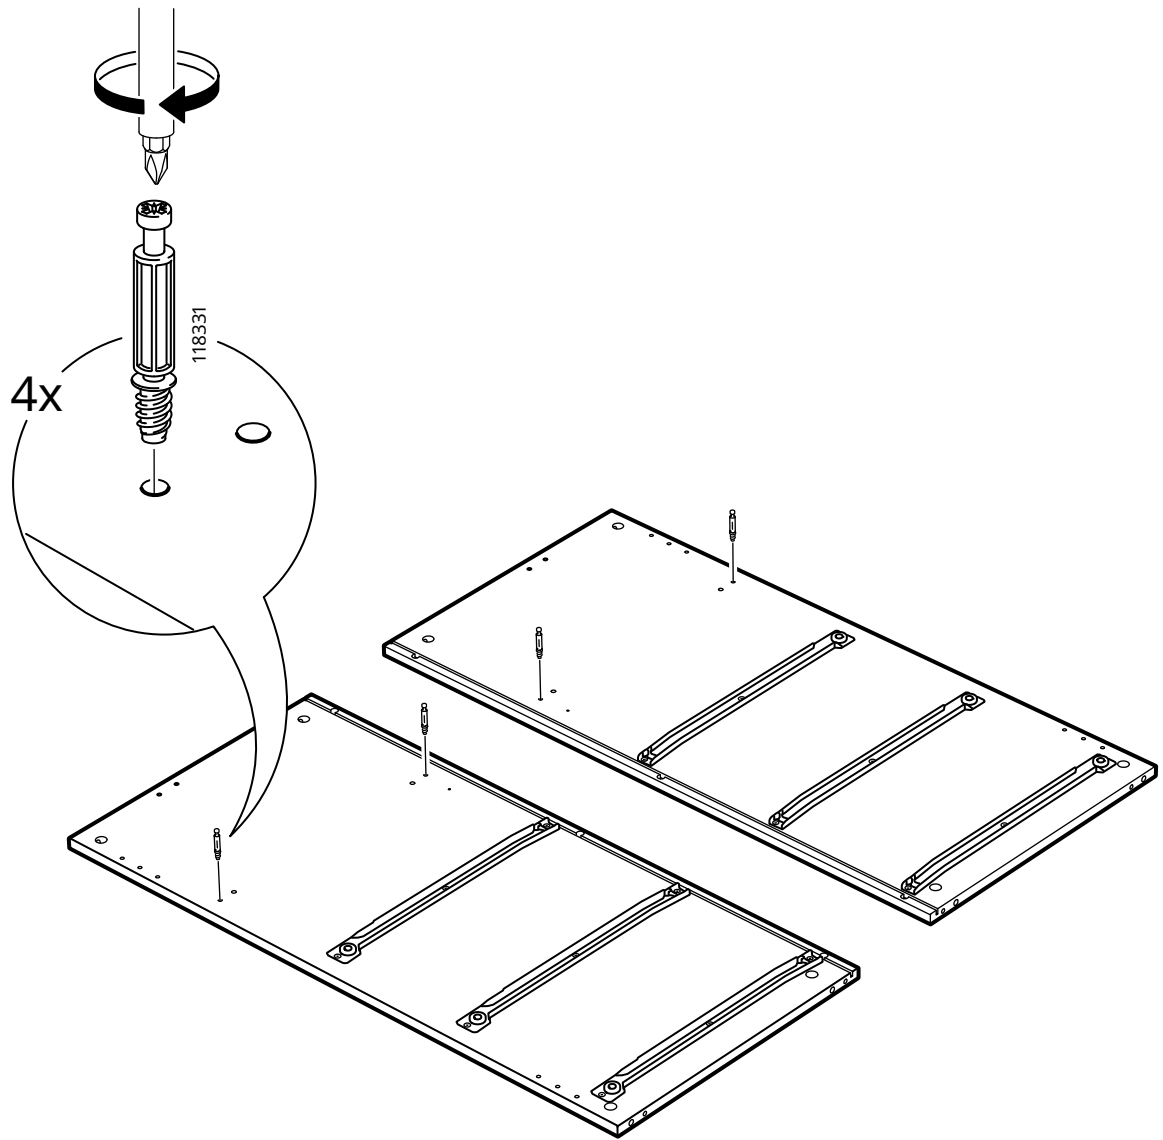


3

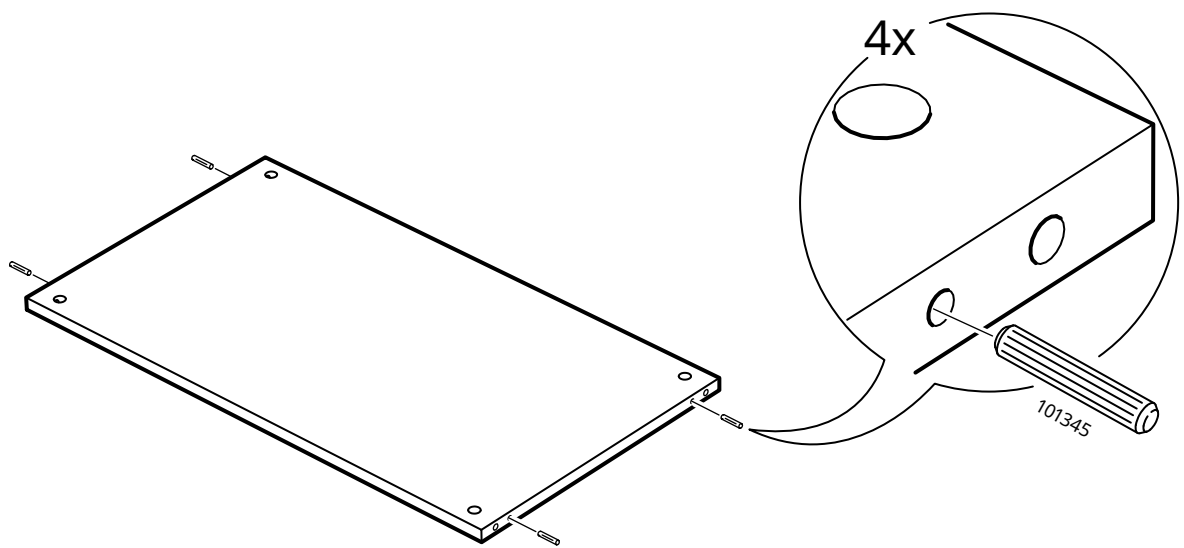 


4

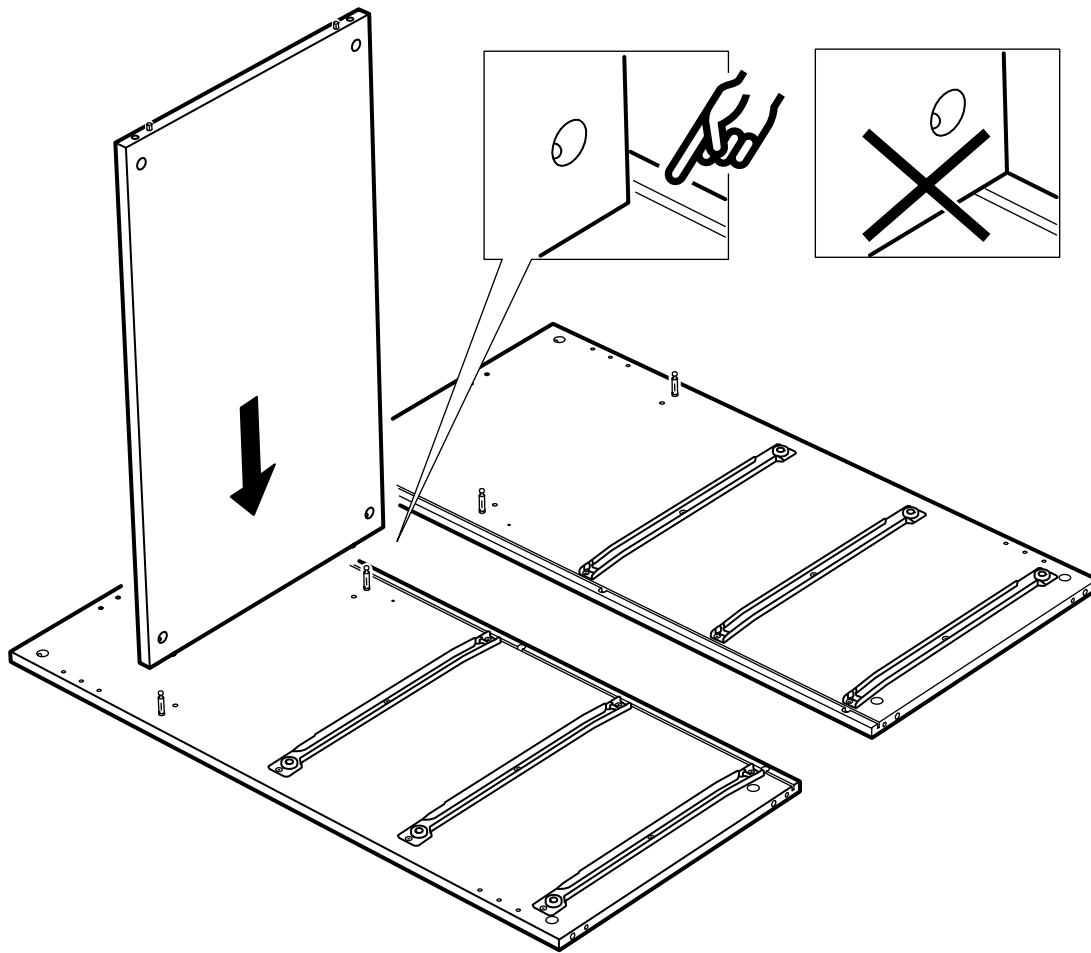 


5

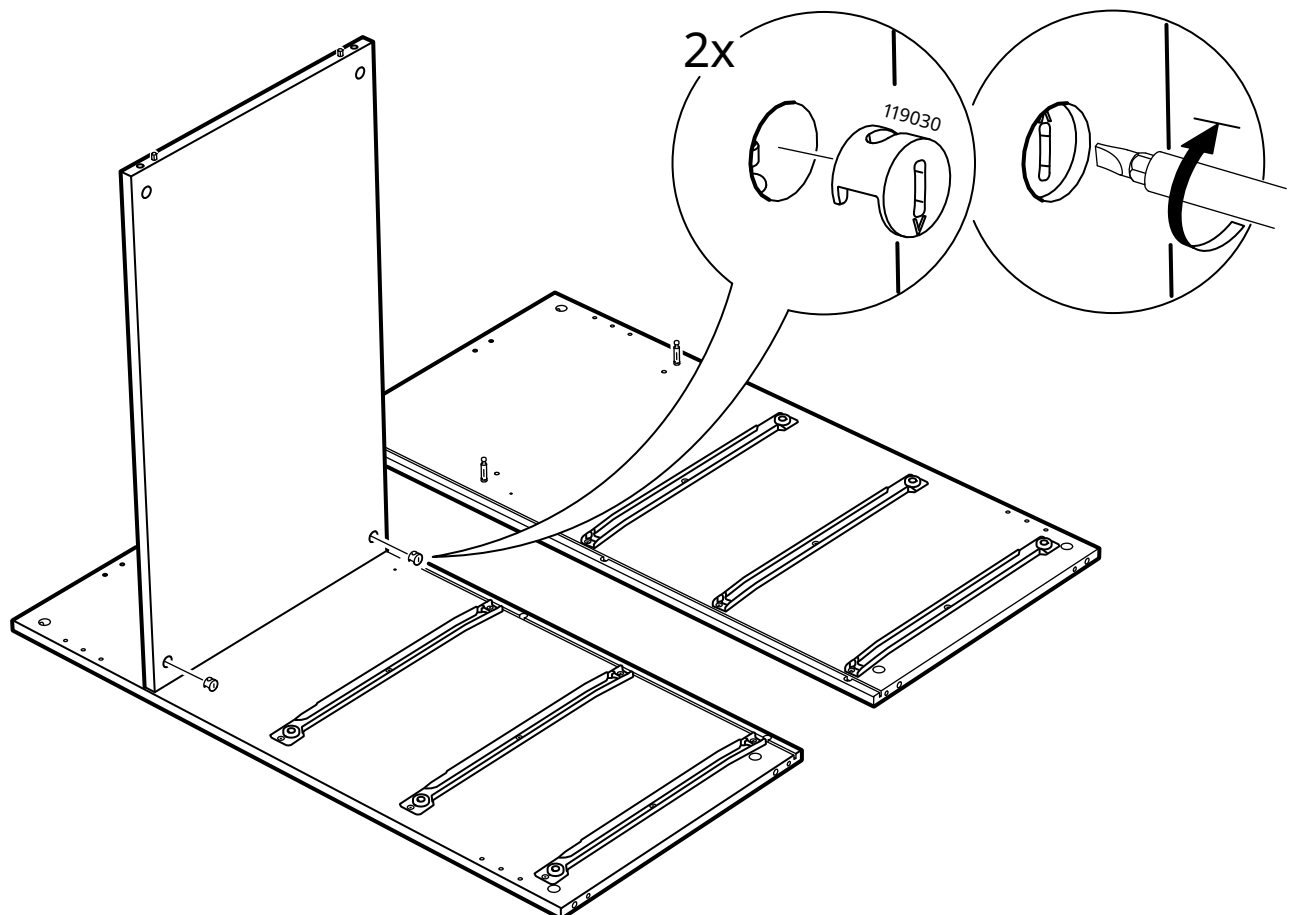 


6

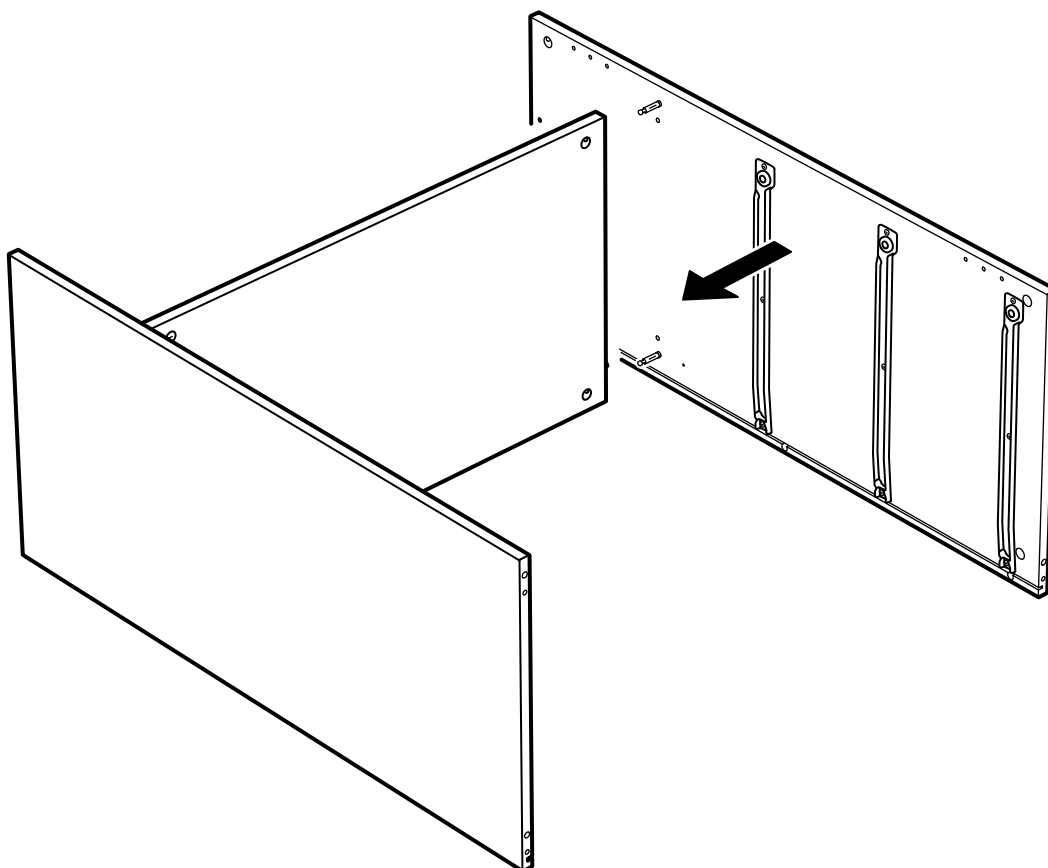 


7

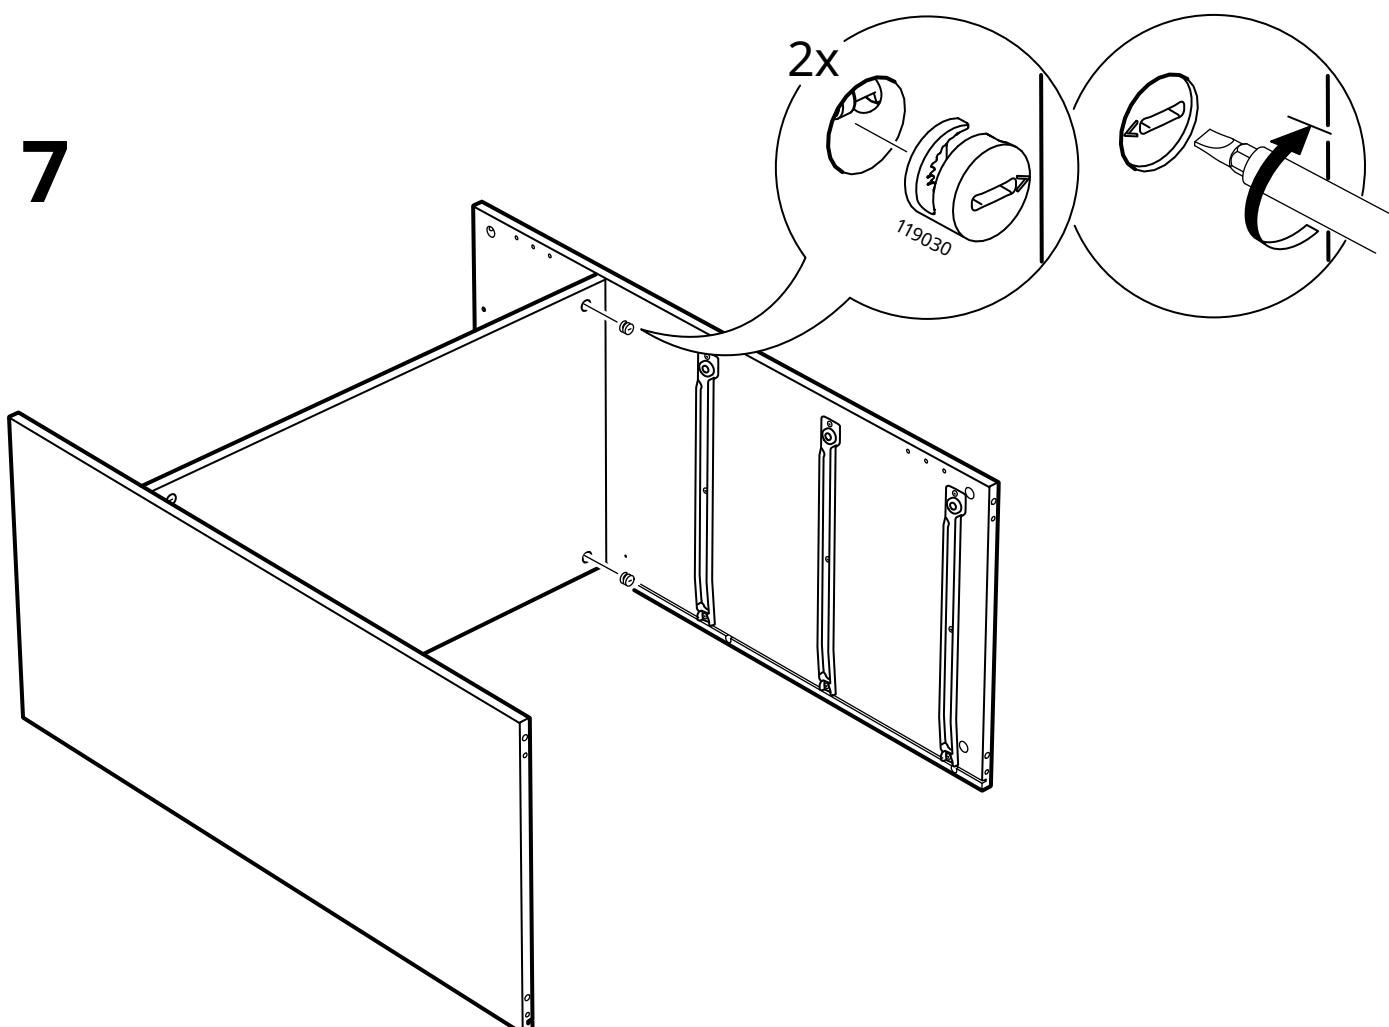 


8

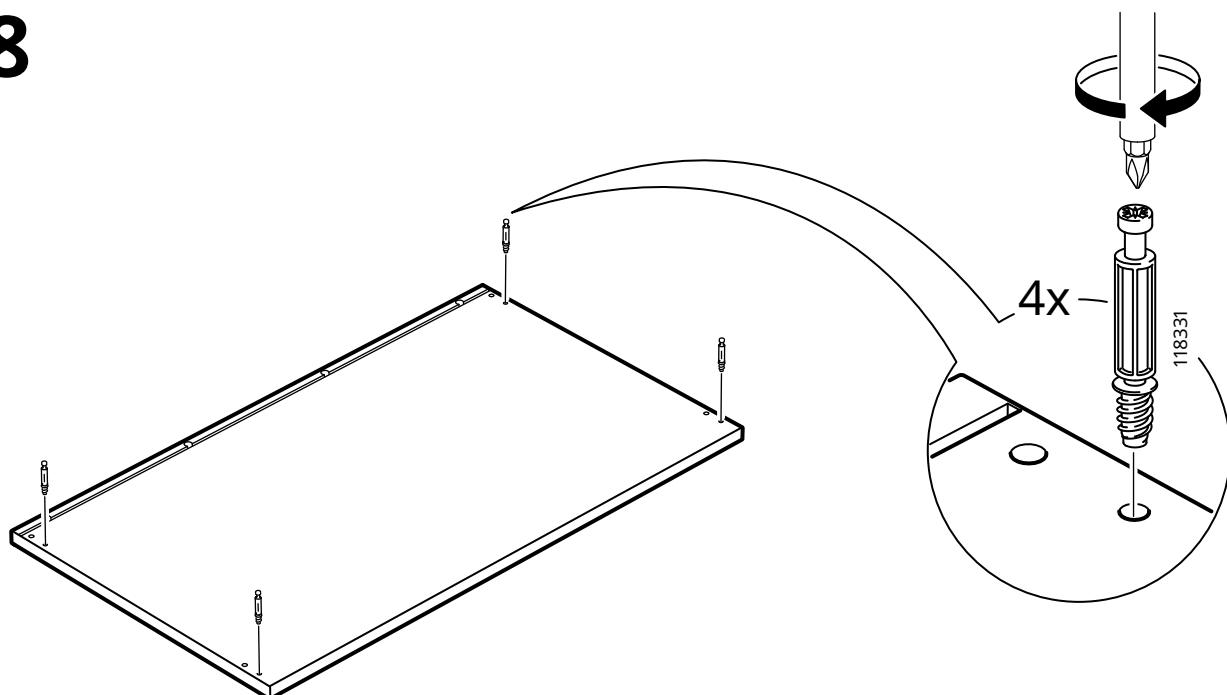 


9

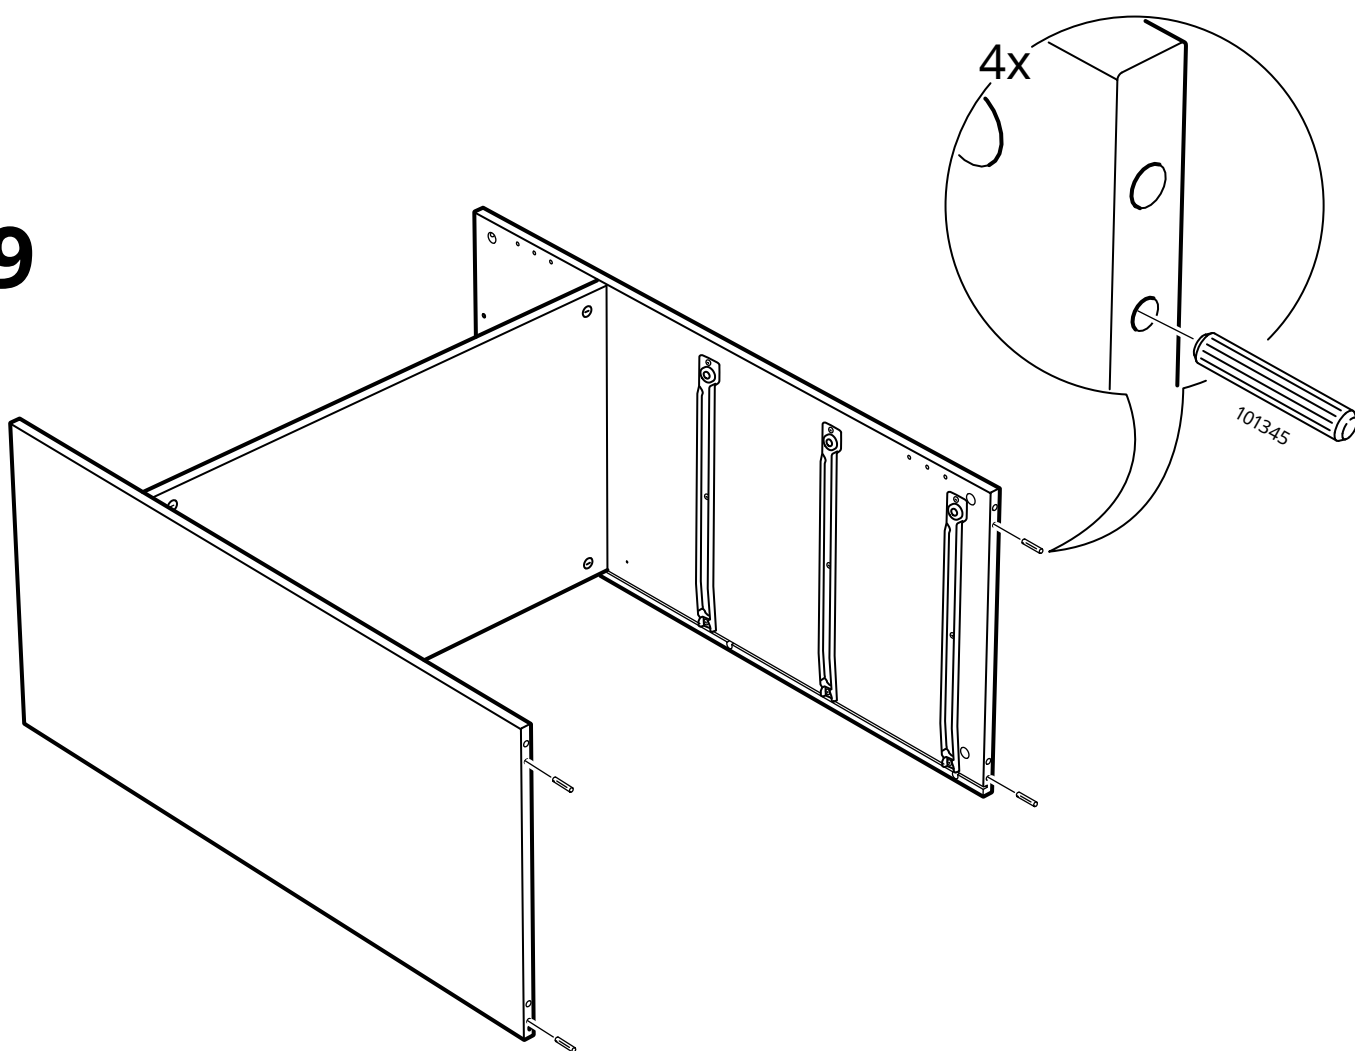 



10

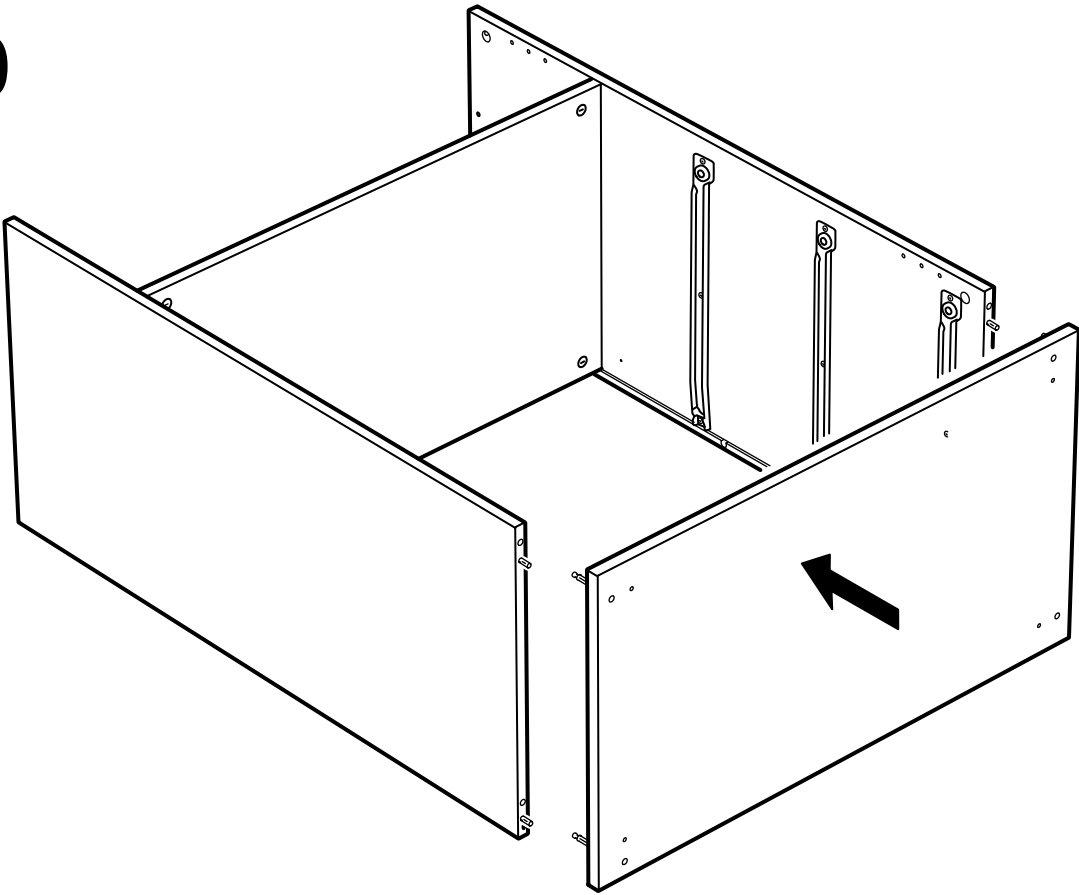 


11

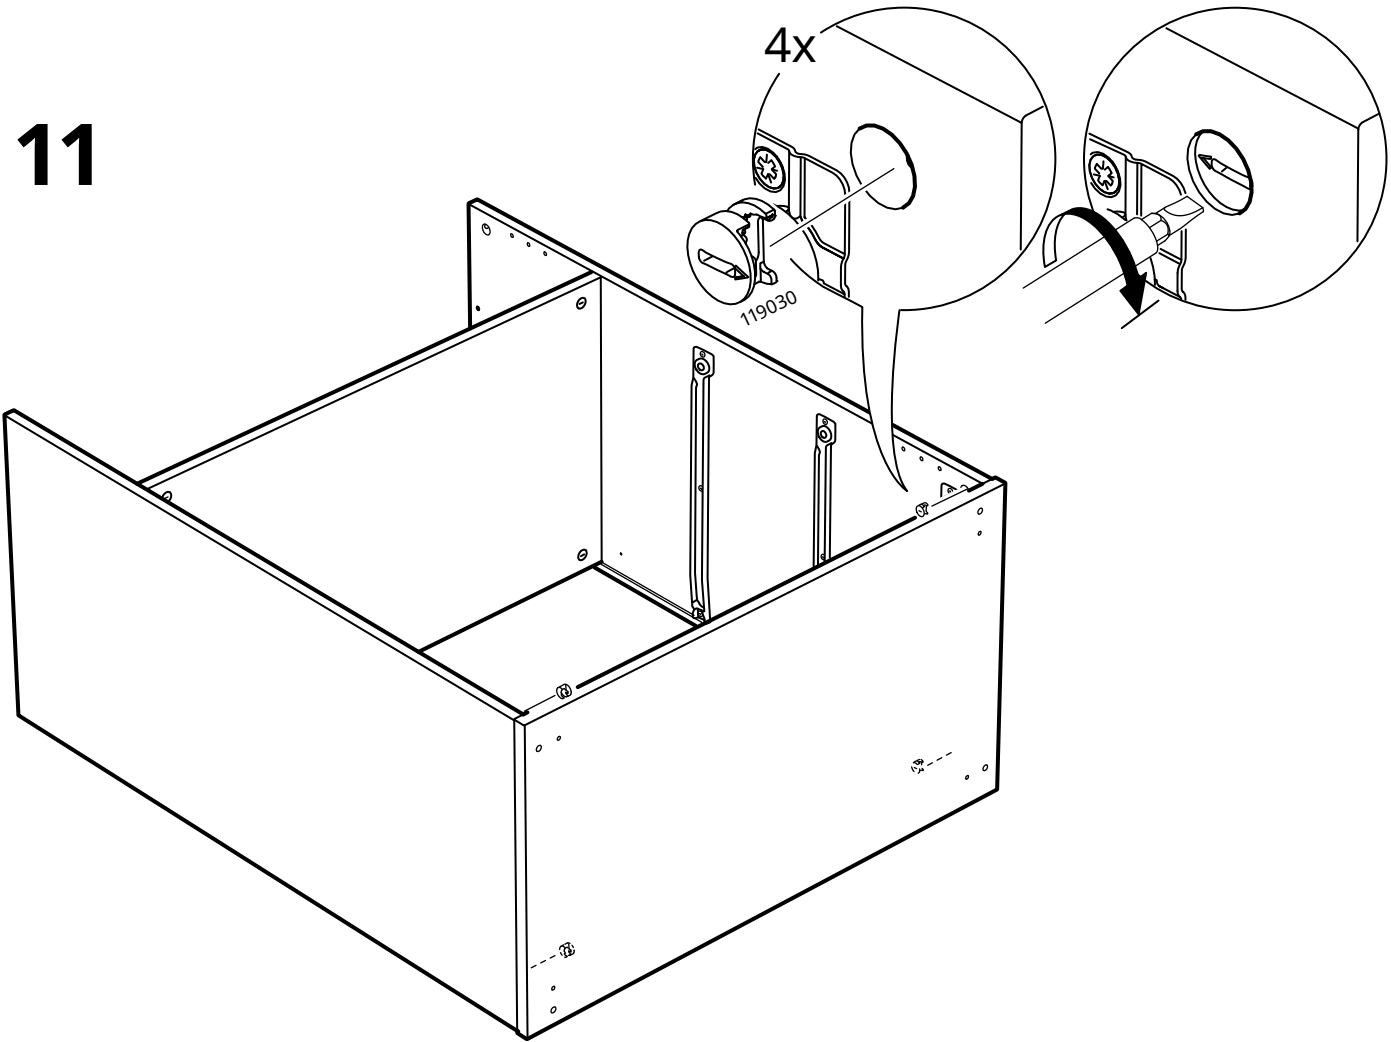 

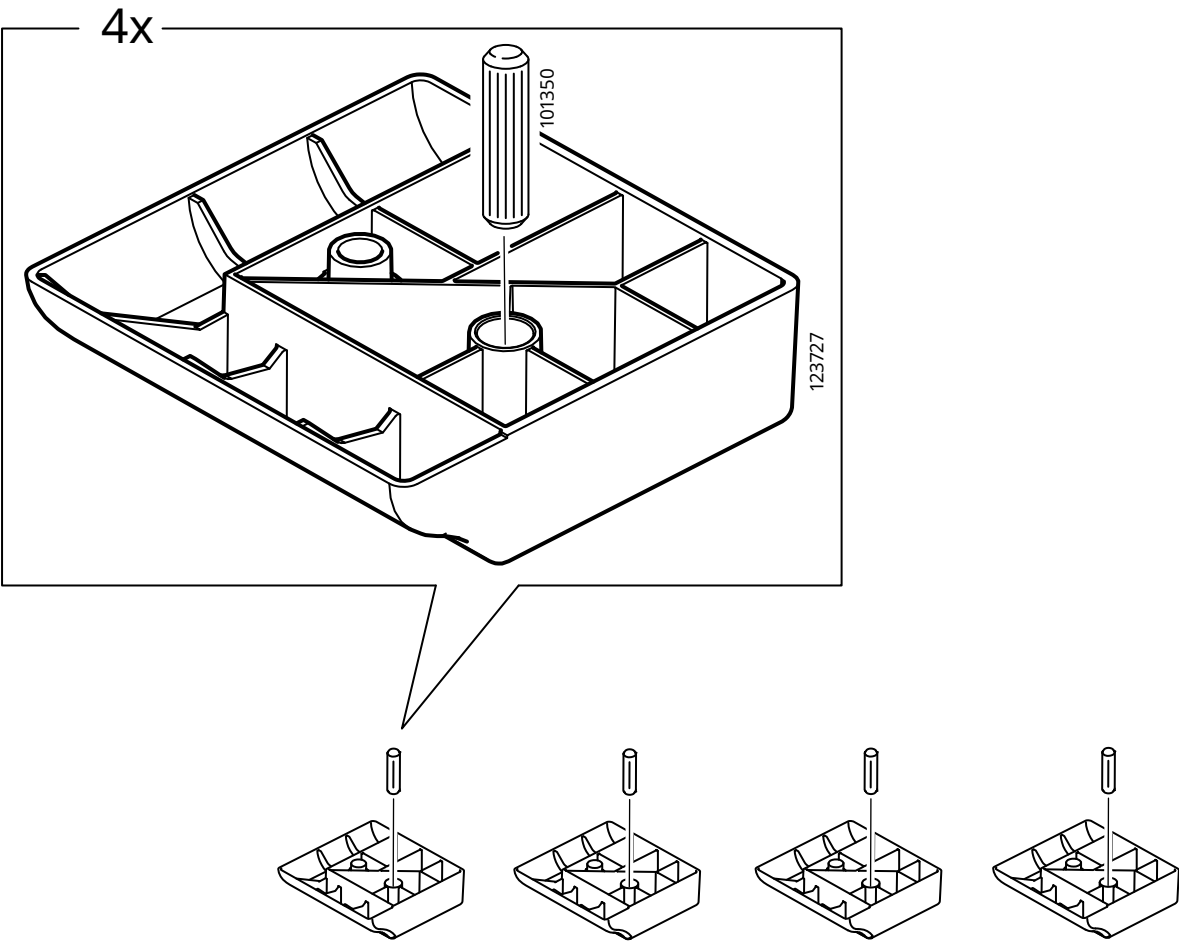 


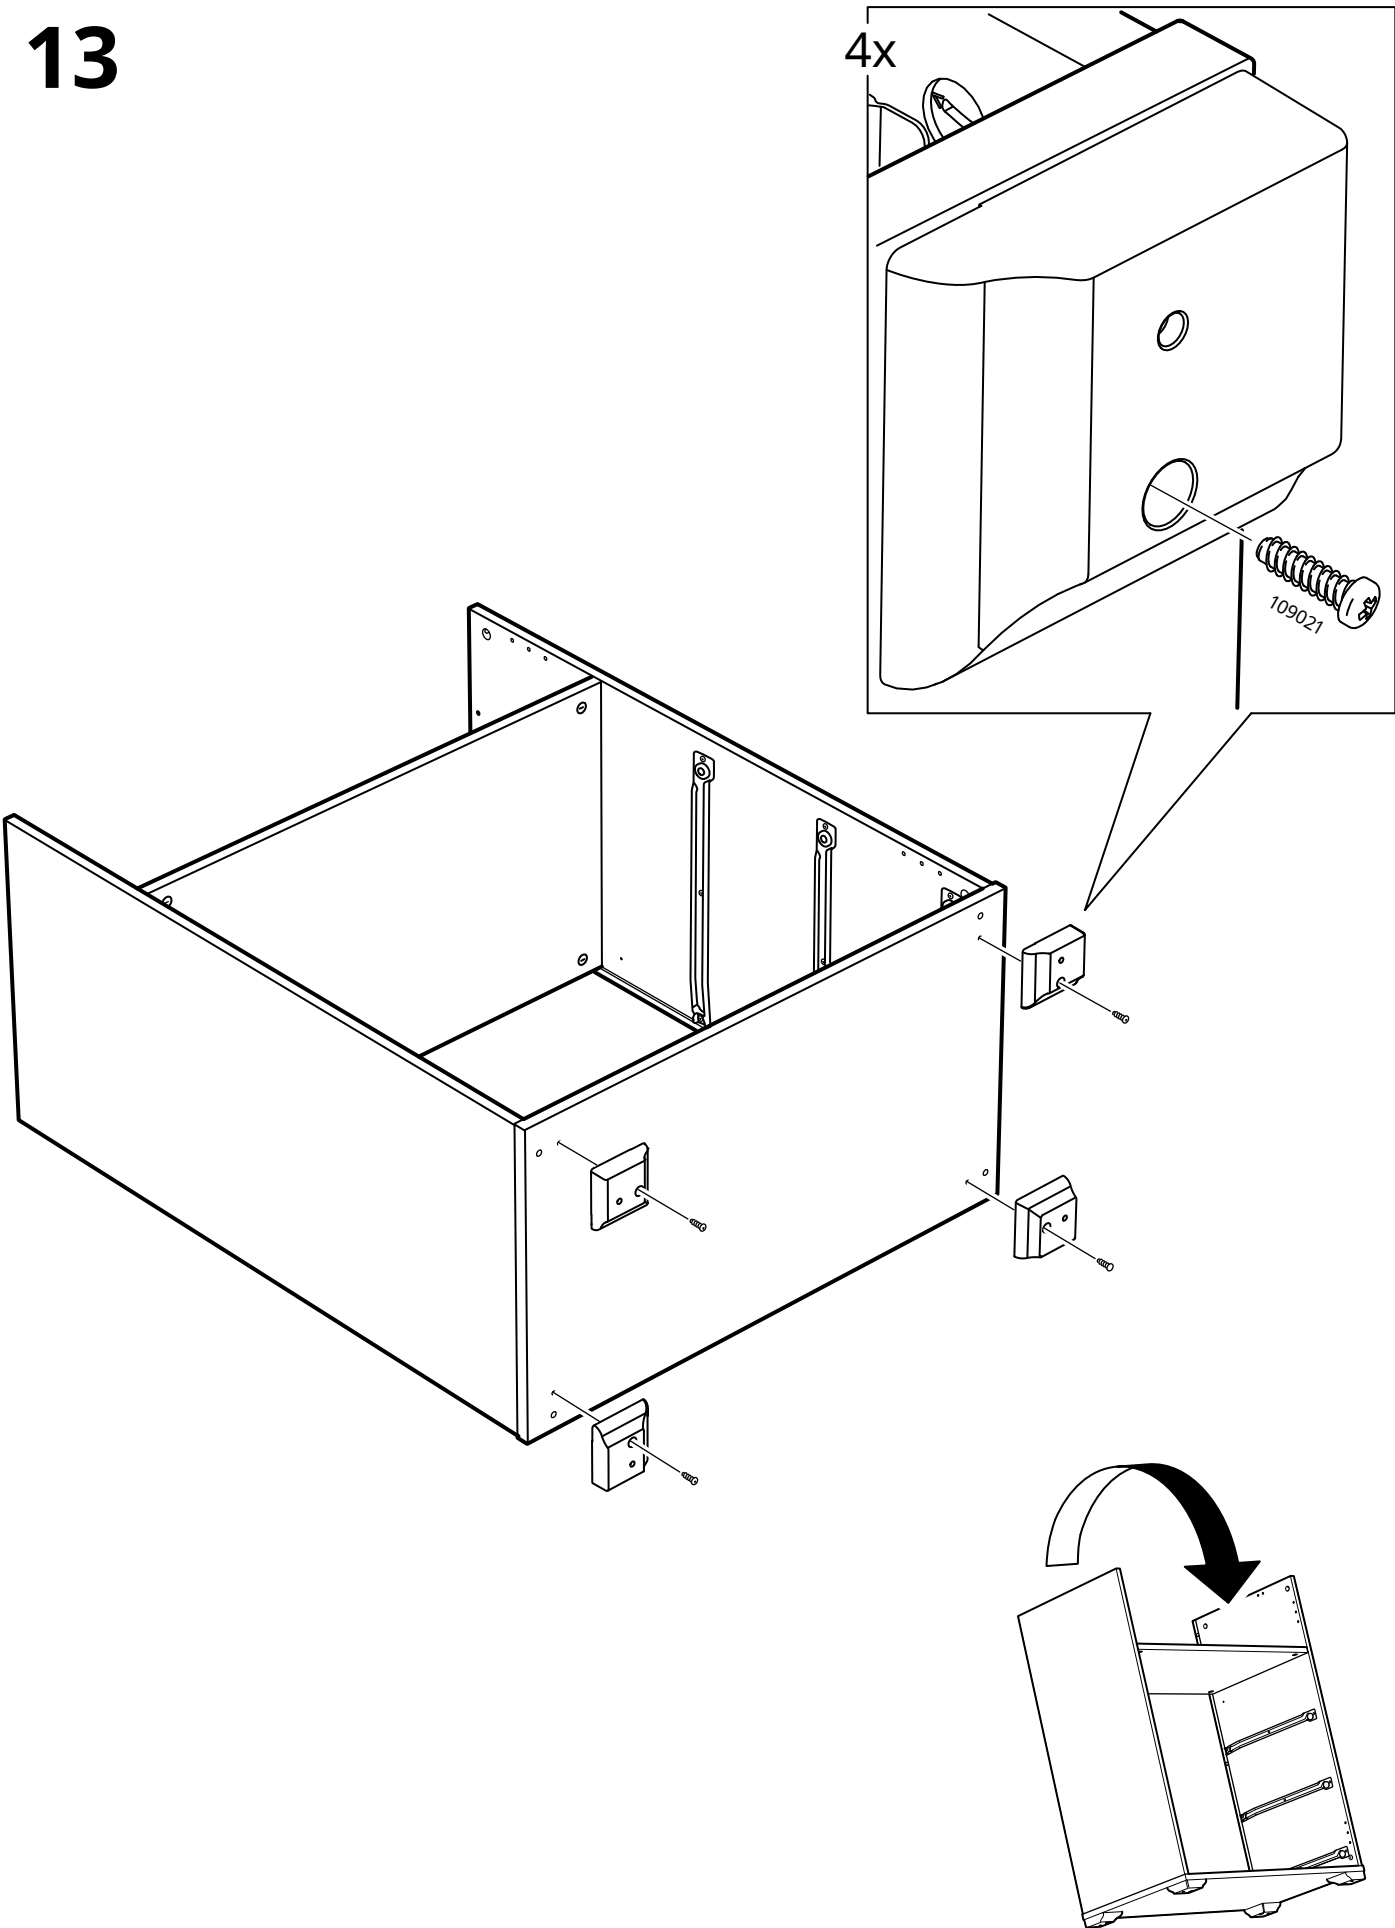 


14

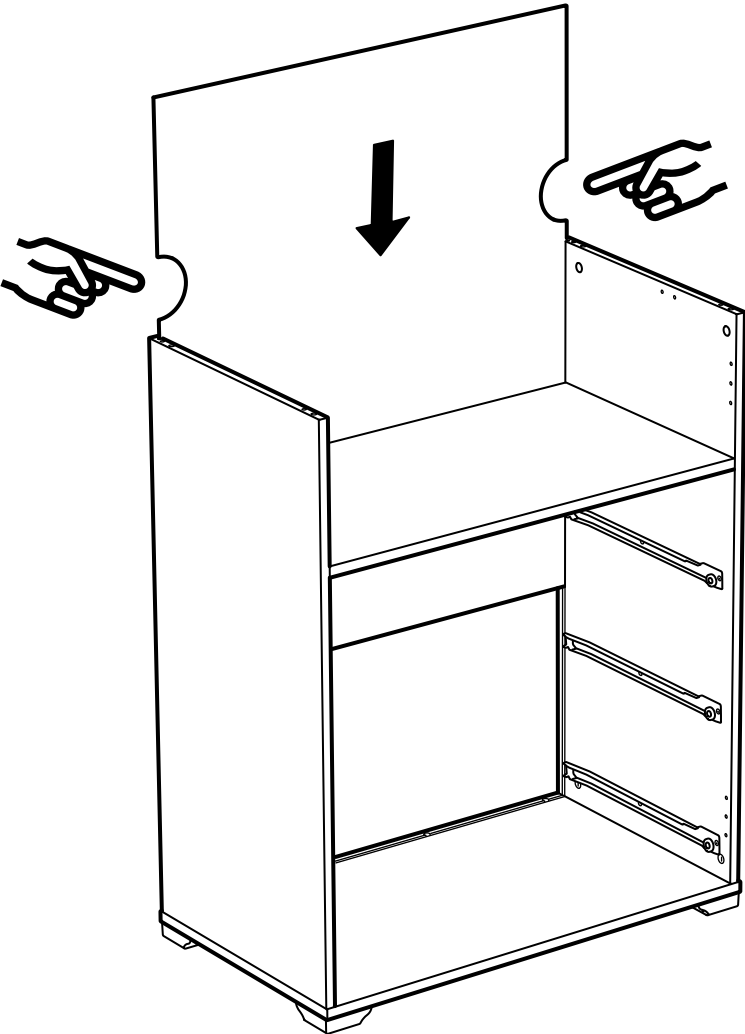 


15

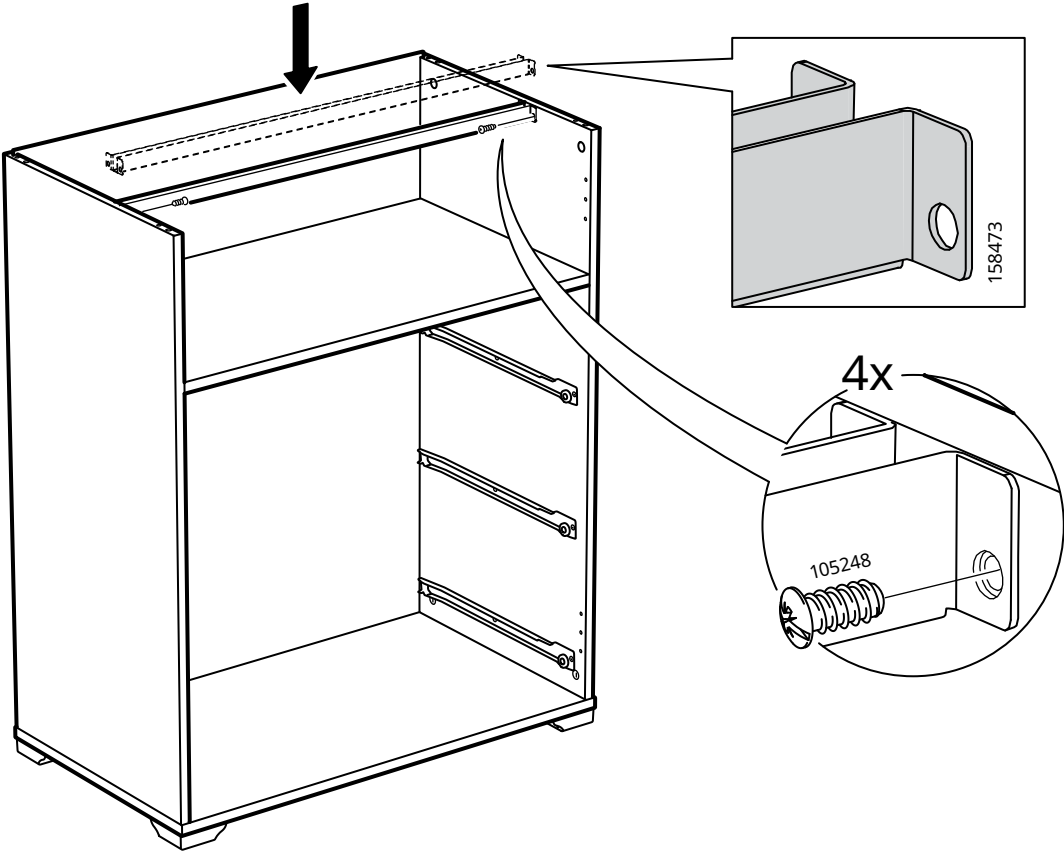 


16

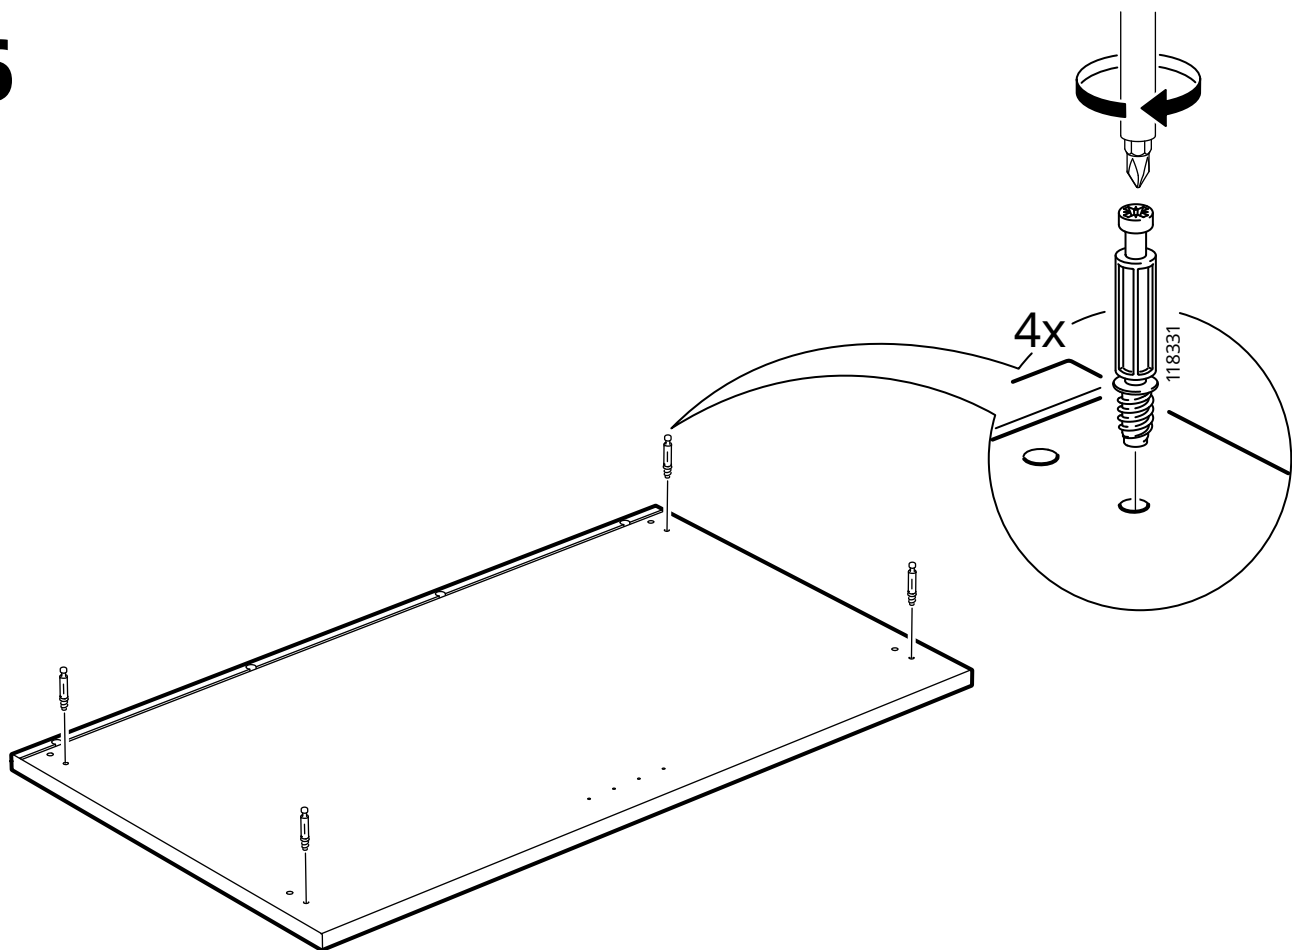 


17

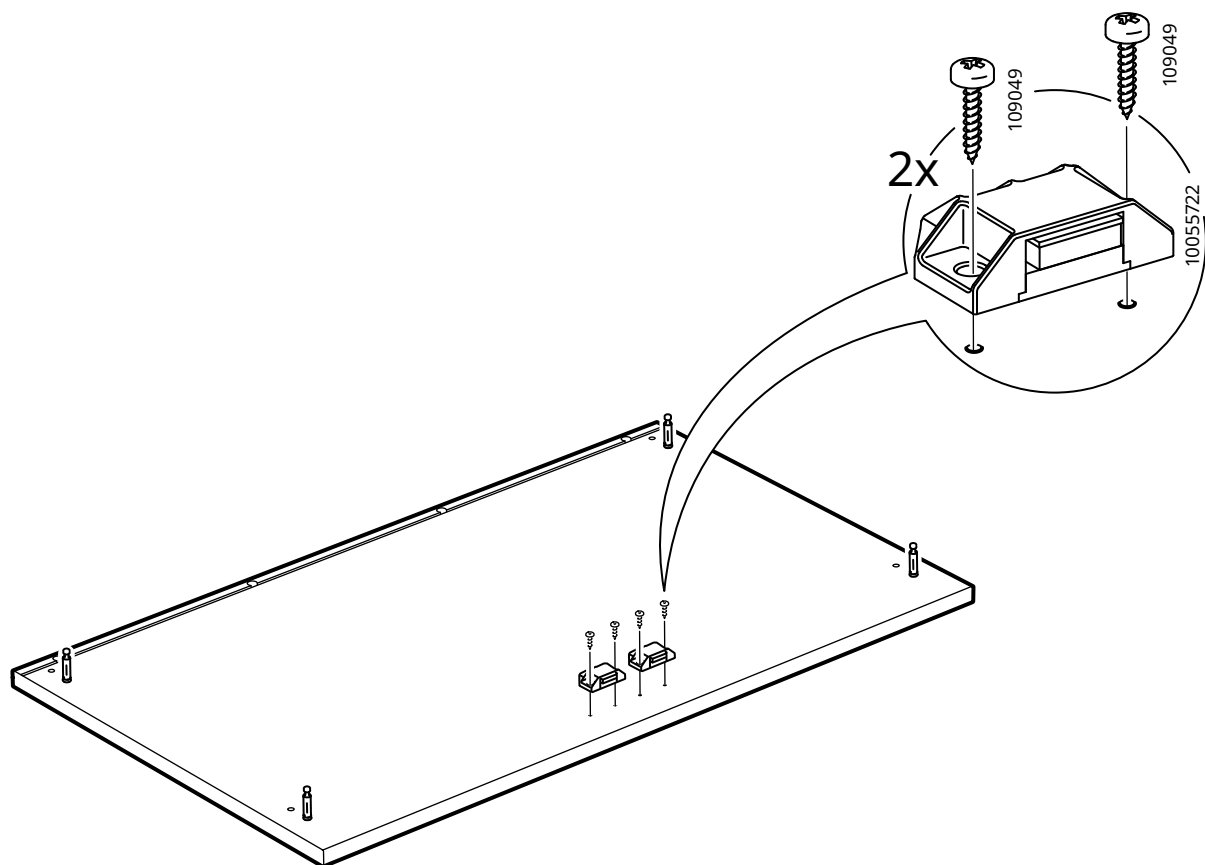 


18

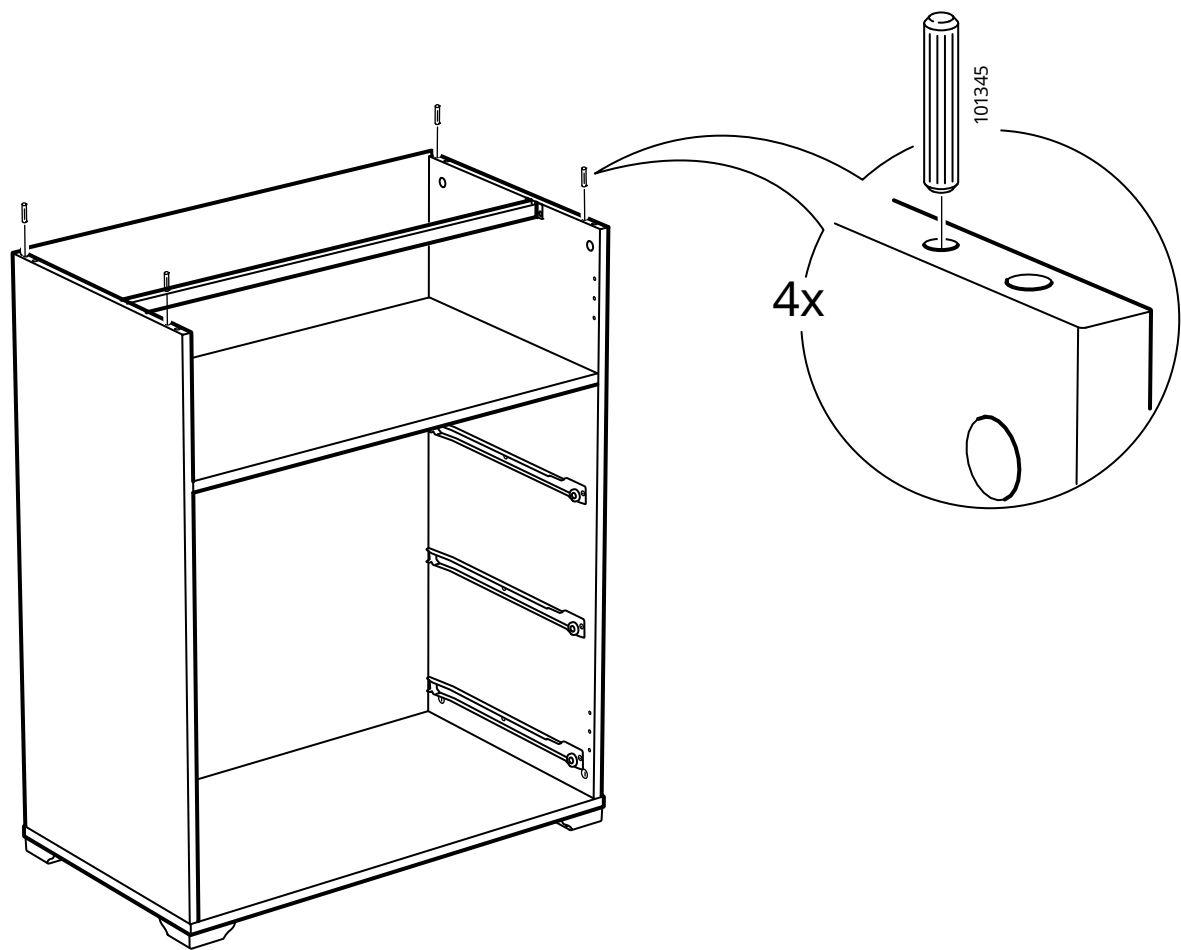 


19

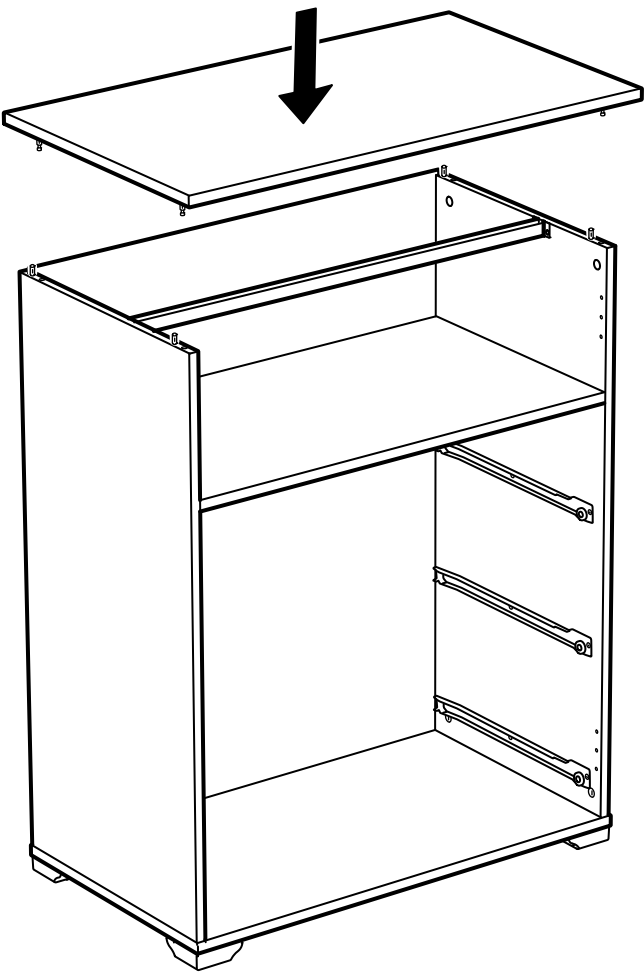 



20

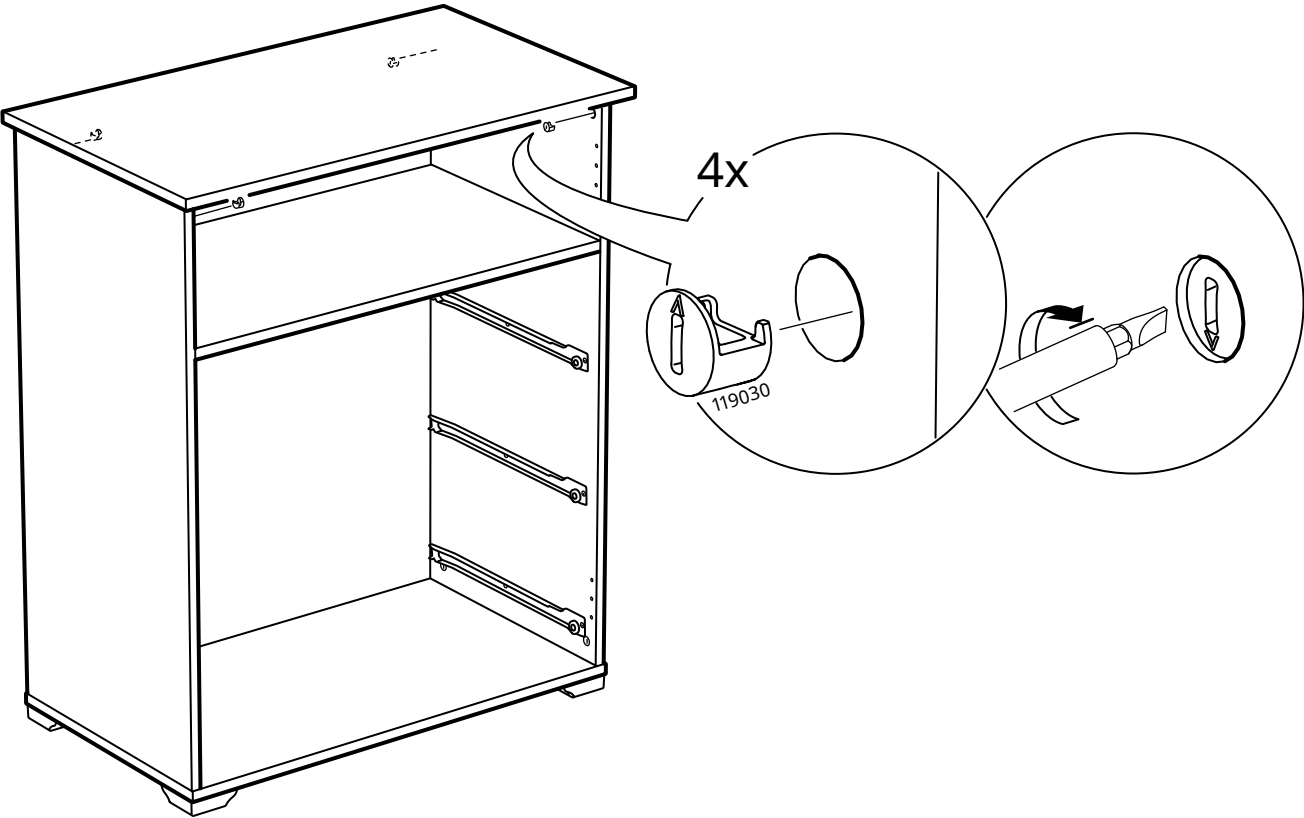 


21

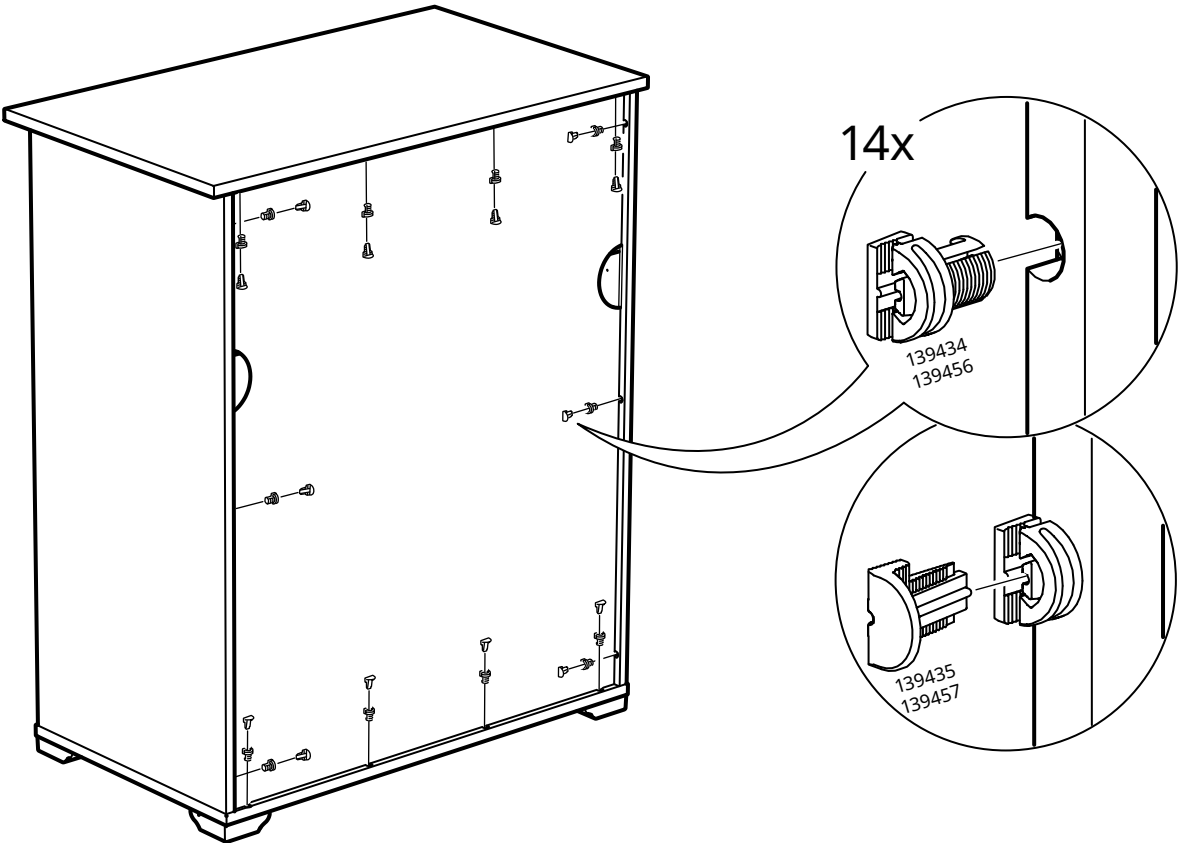 



22

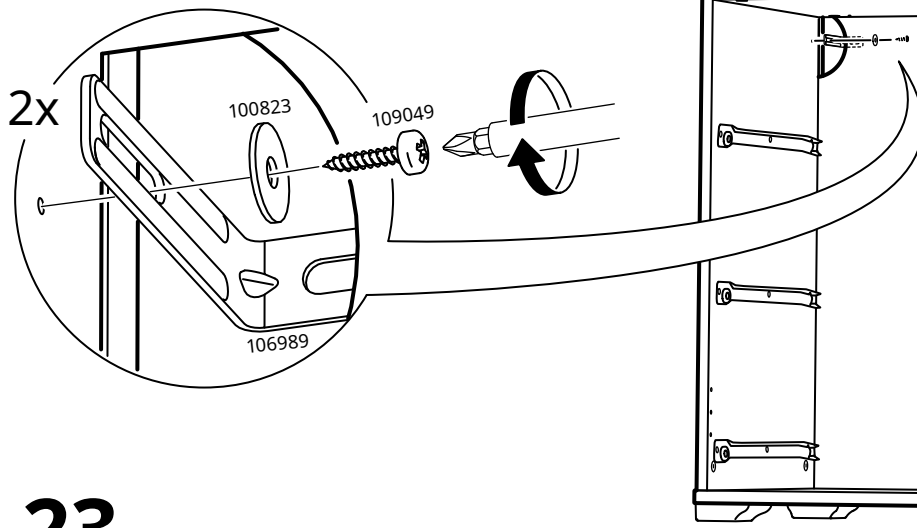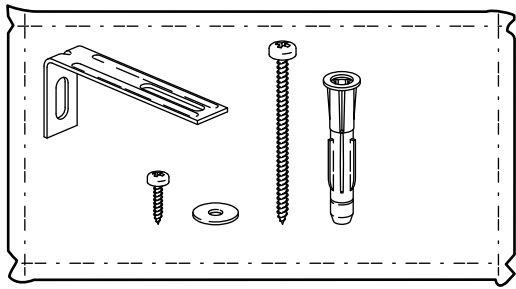  

23

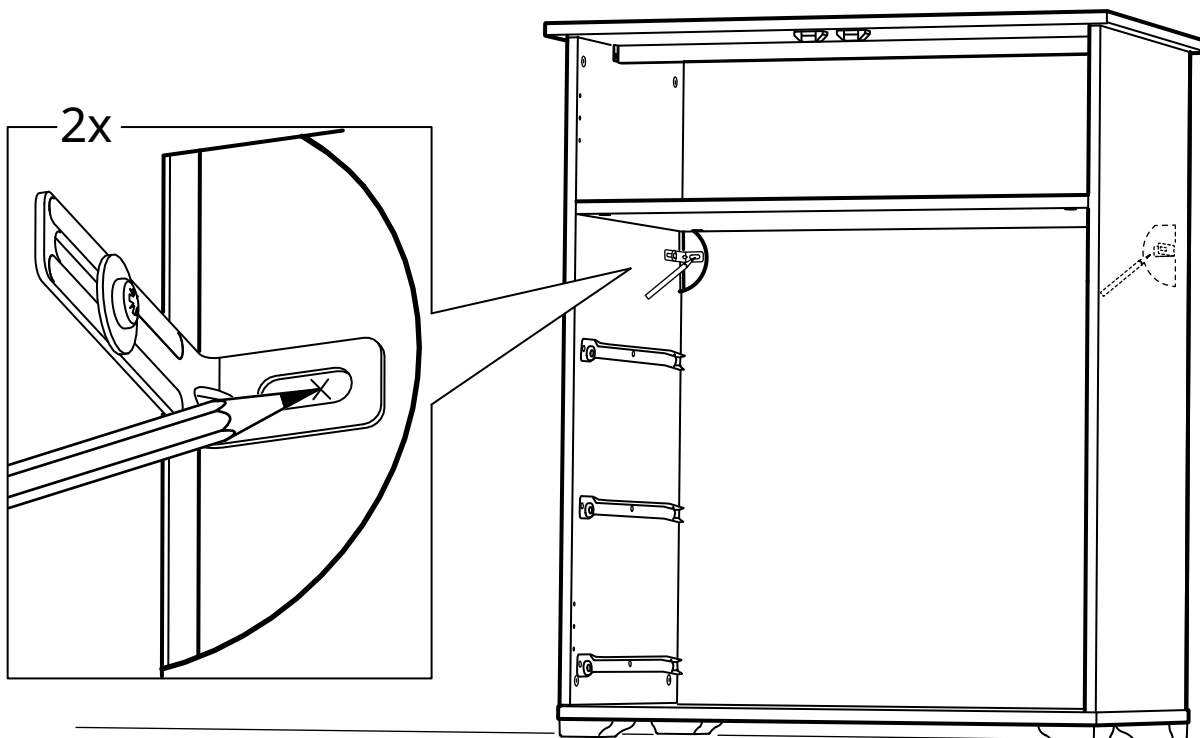 

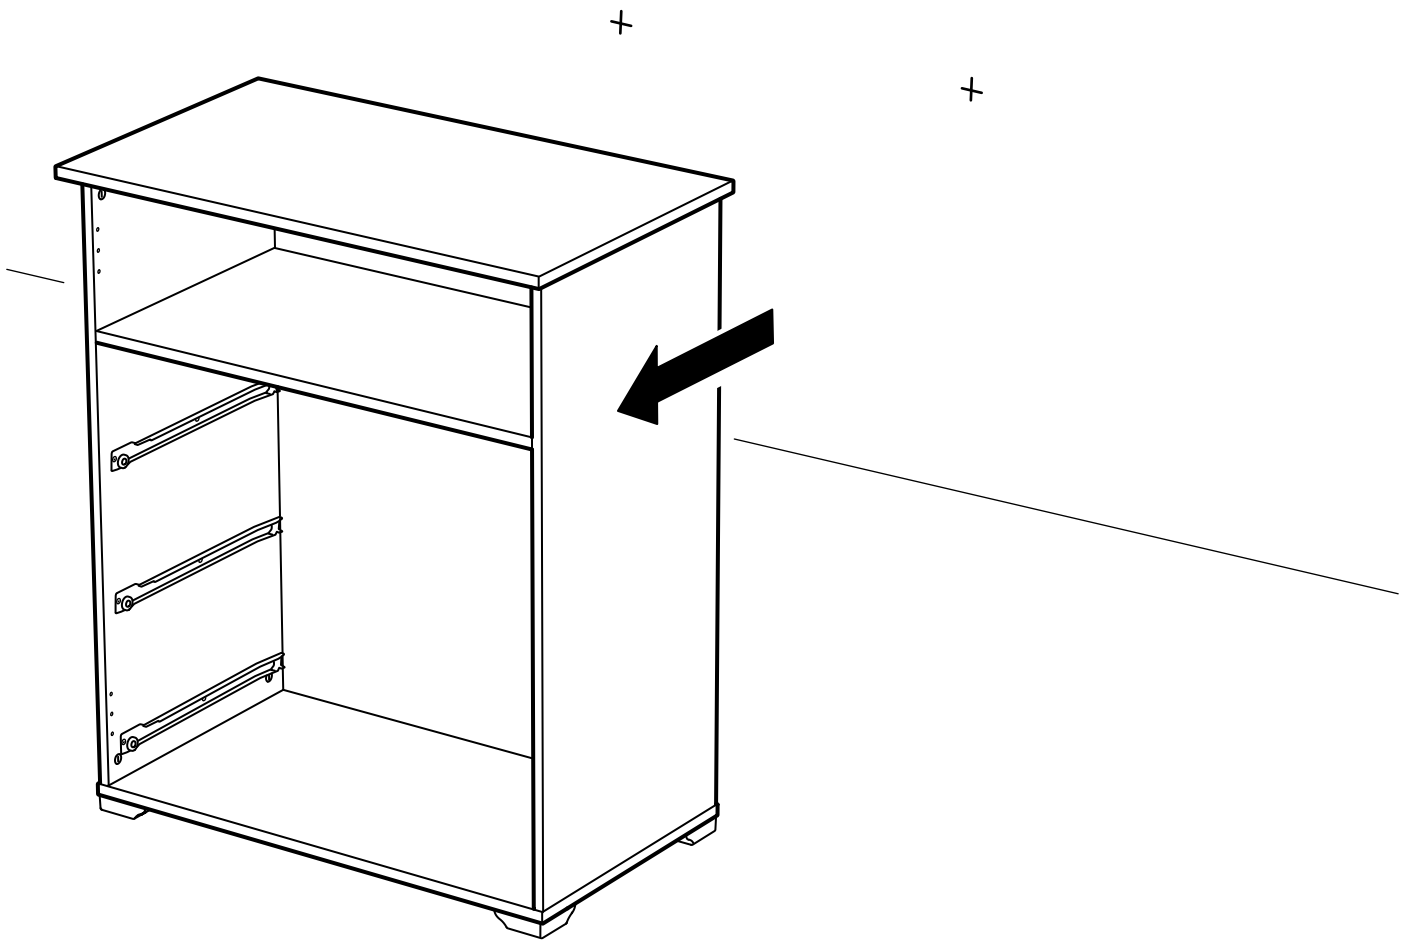 


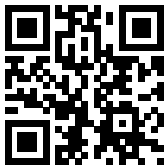 

www.IKEA.com/secure-it



 
www.IKEA.cn/secure-it

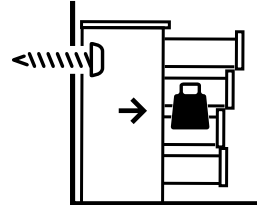

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

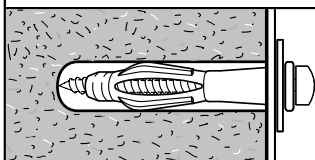


Ø 8 mm
(5/16")



 
1




2

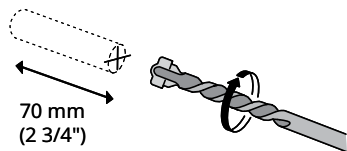 

3

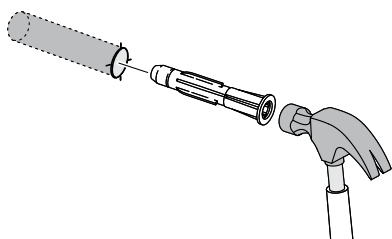 


B

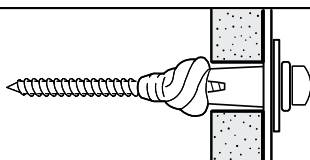 


Ø 8 mm
(5/16")



 
1




2

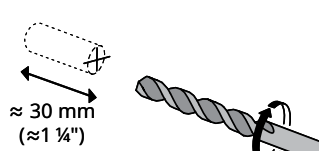 

3

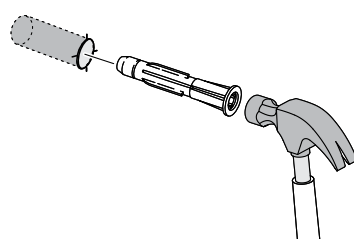 


C

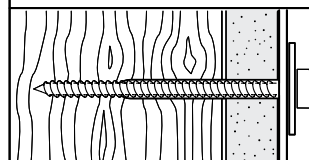 


Ø 3 mm
(1/8")





 1





2

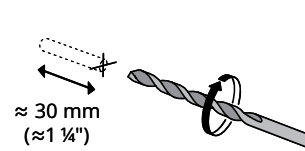 


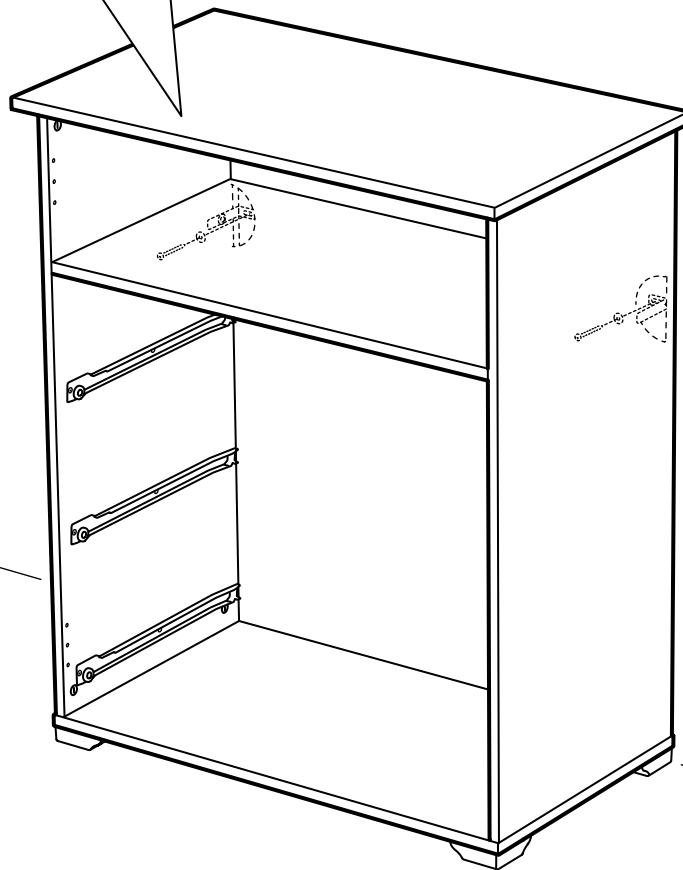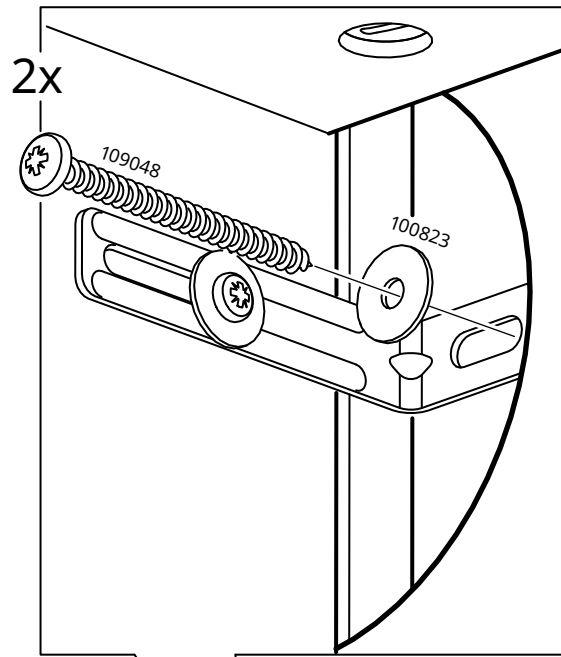  


26

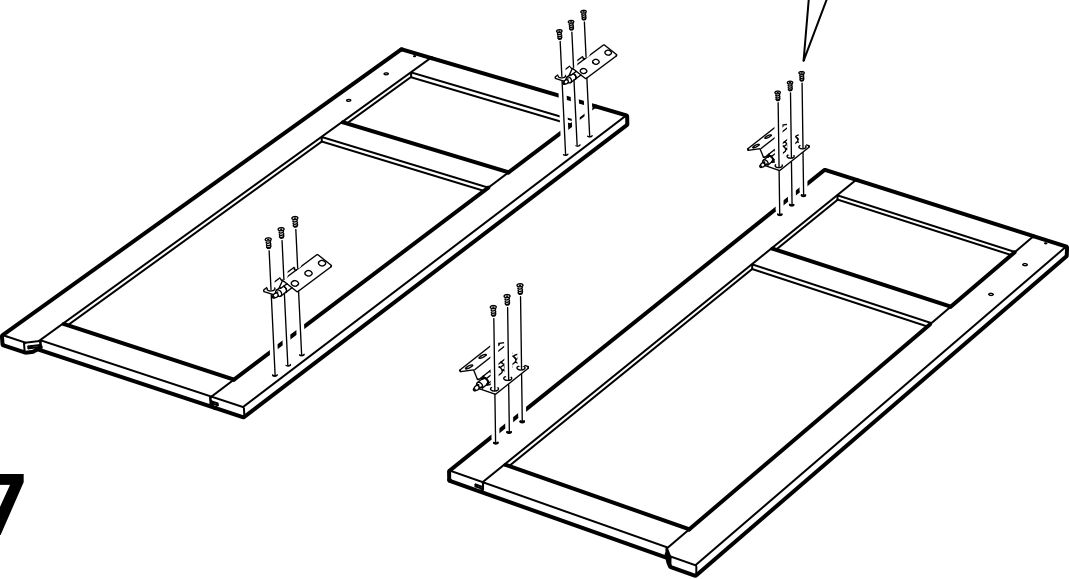 
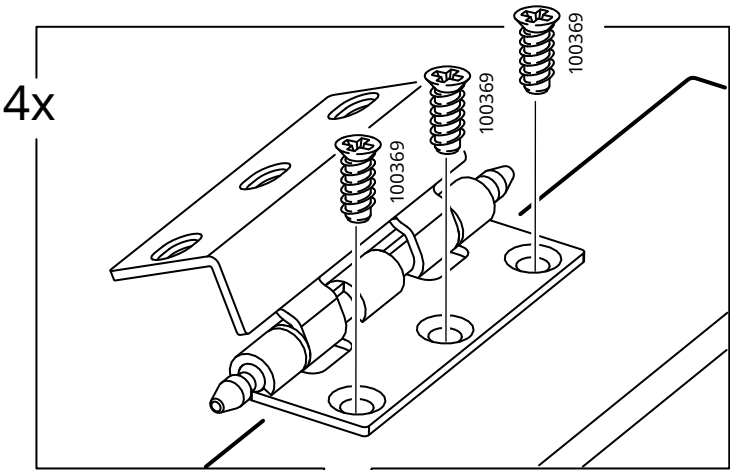 




27

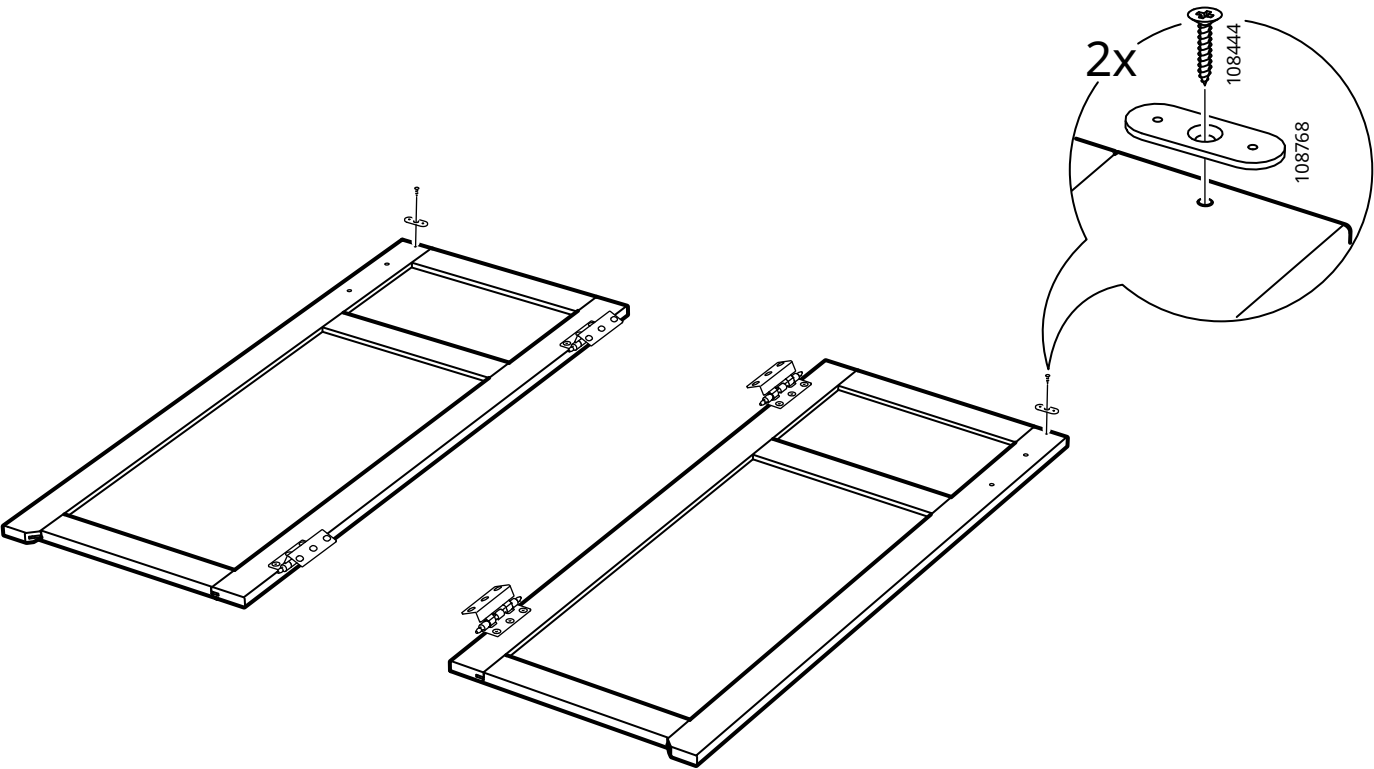 

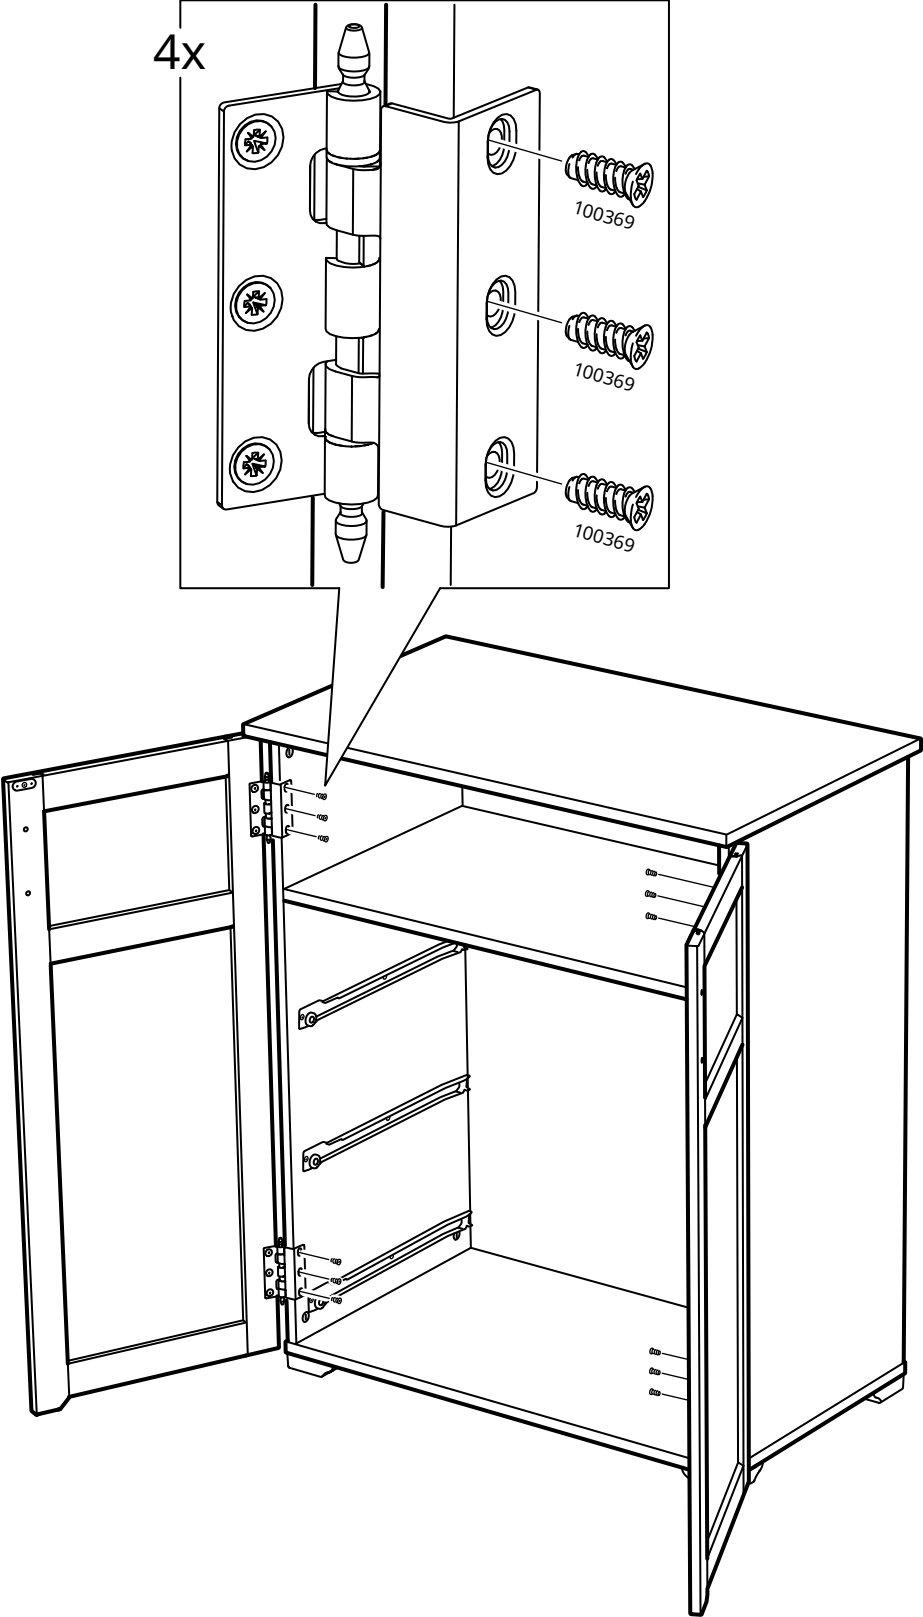 


29

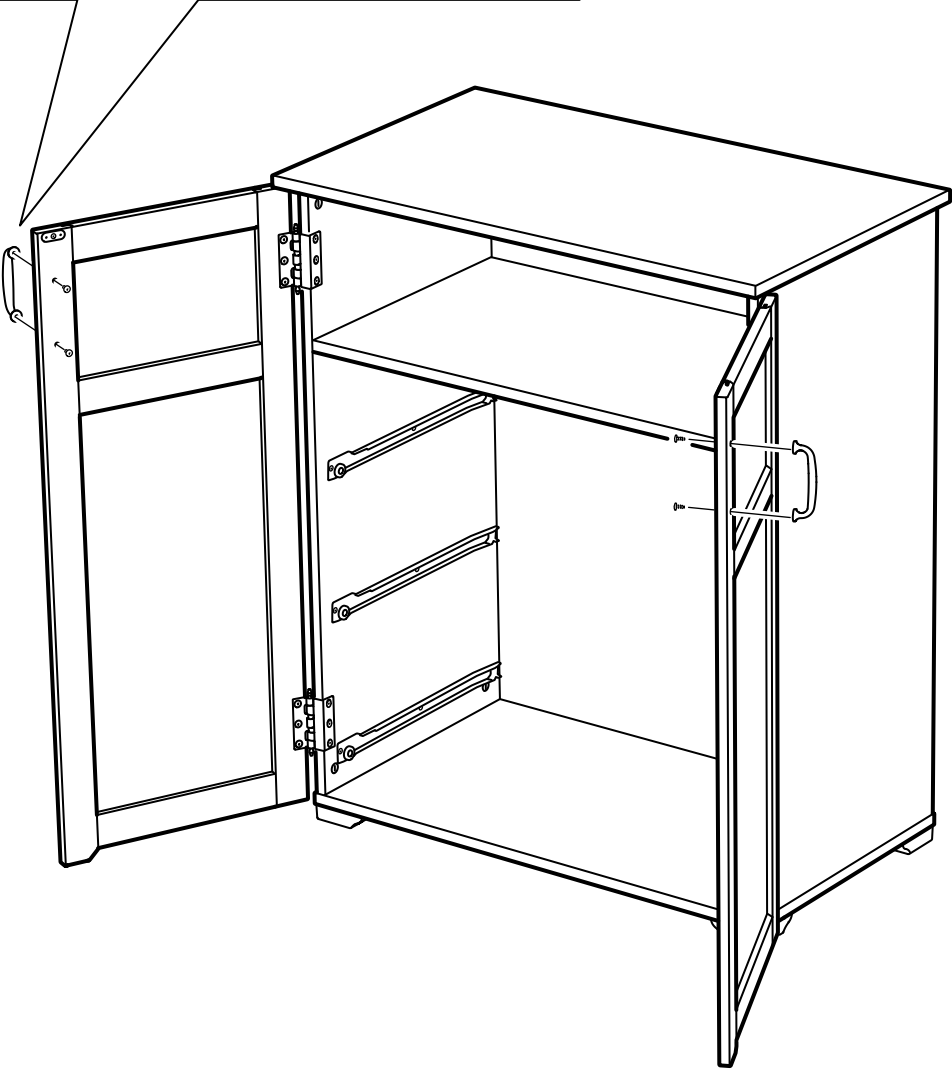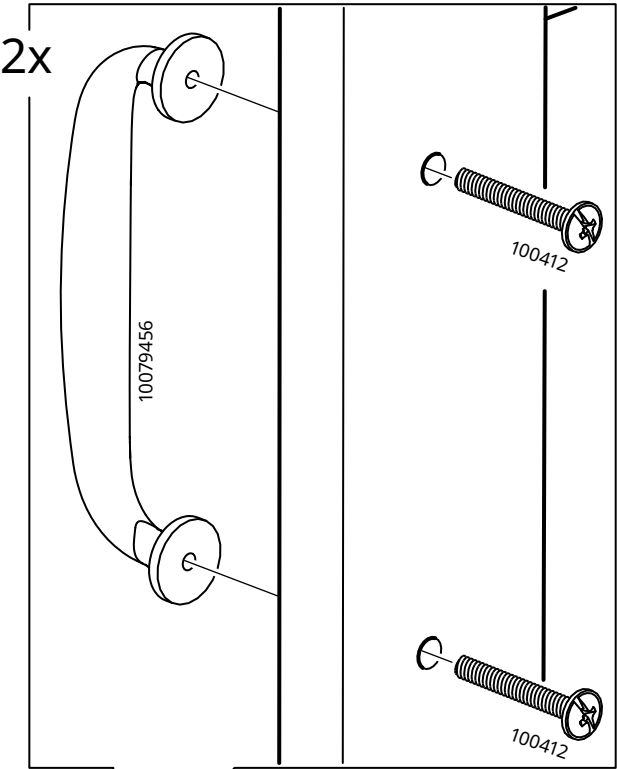  


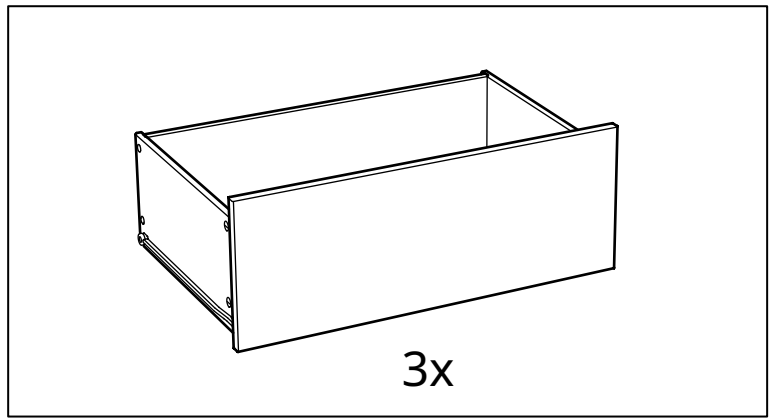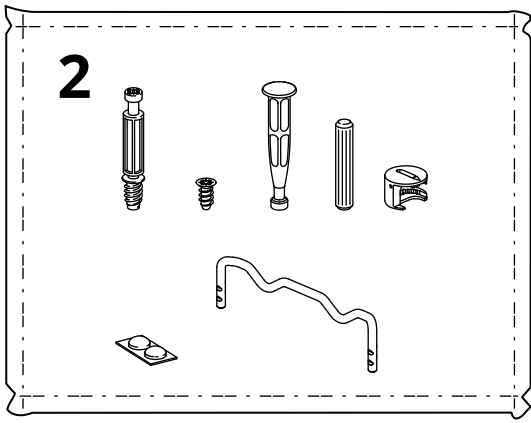  


30

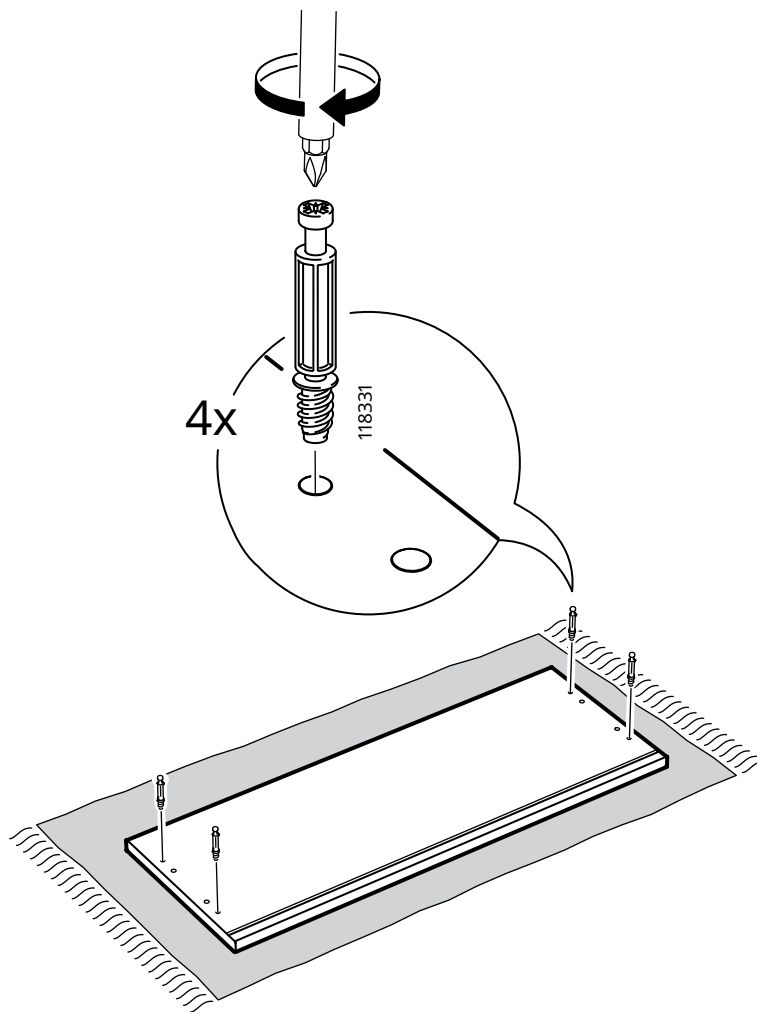 


31

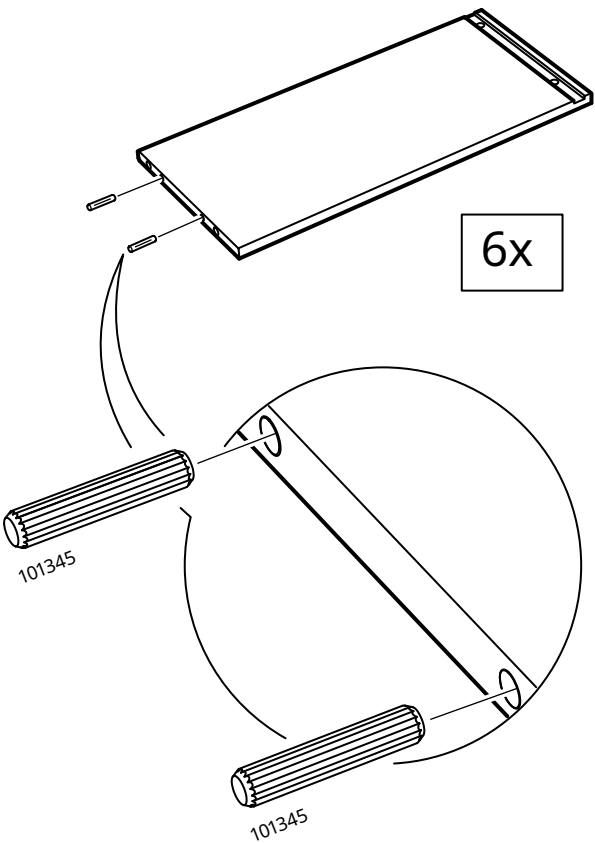 


32

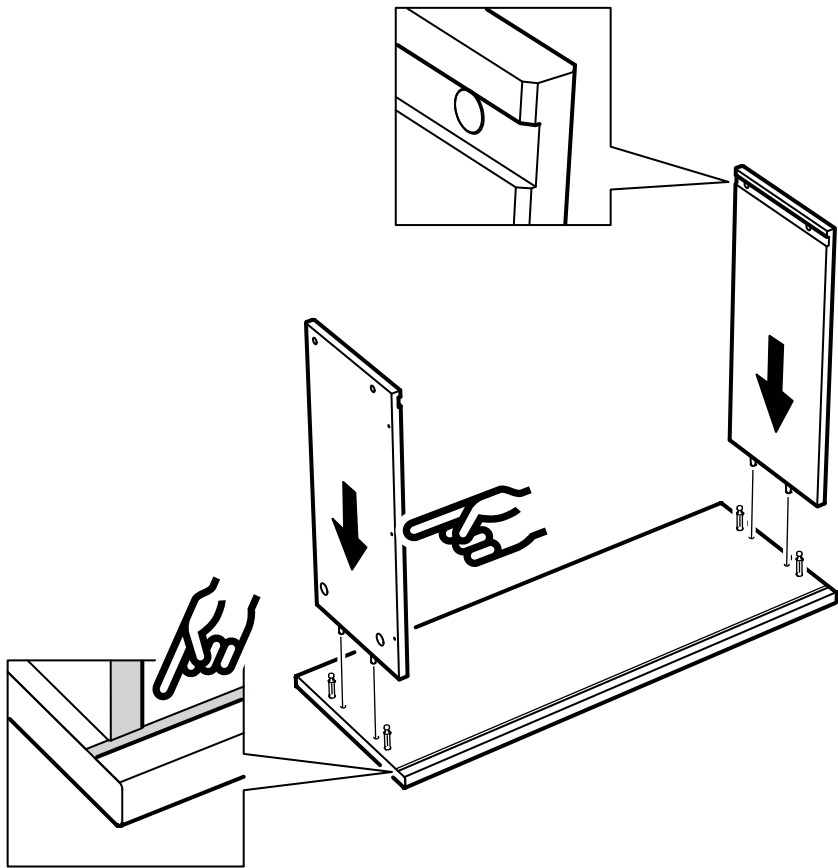 


33

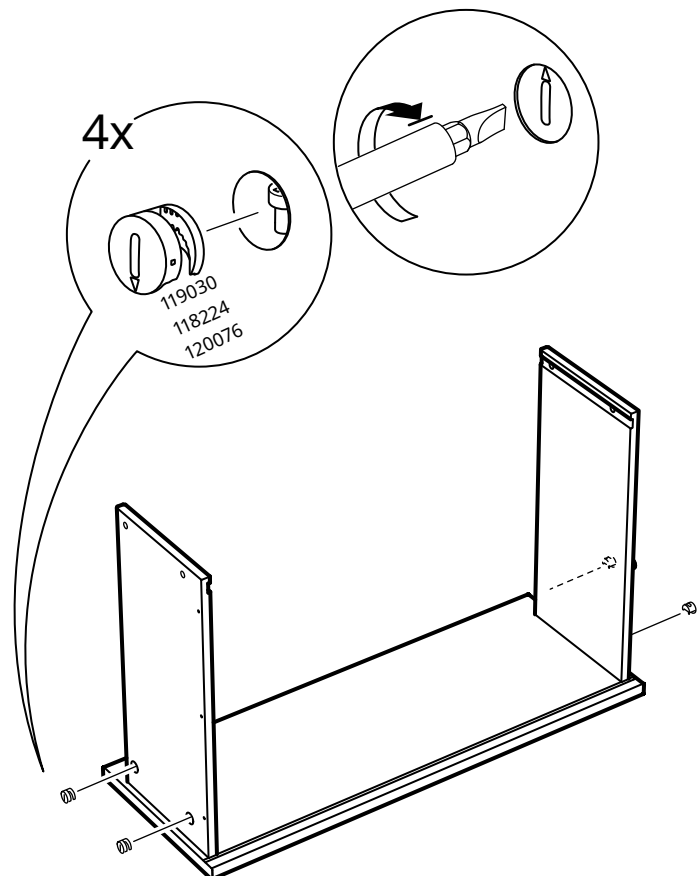 


34

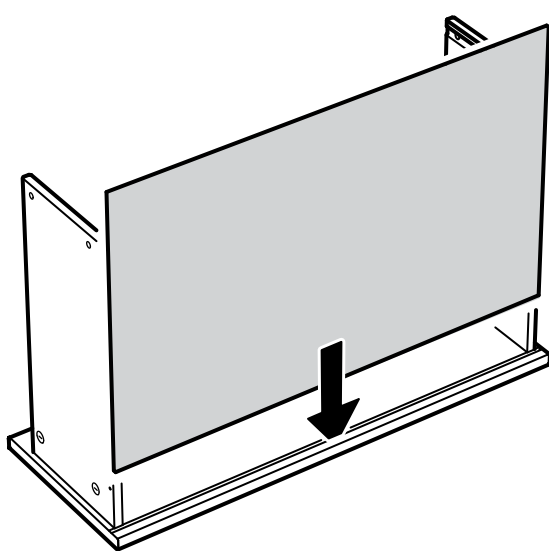 


35

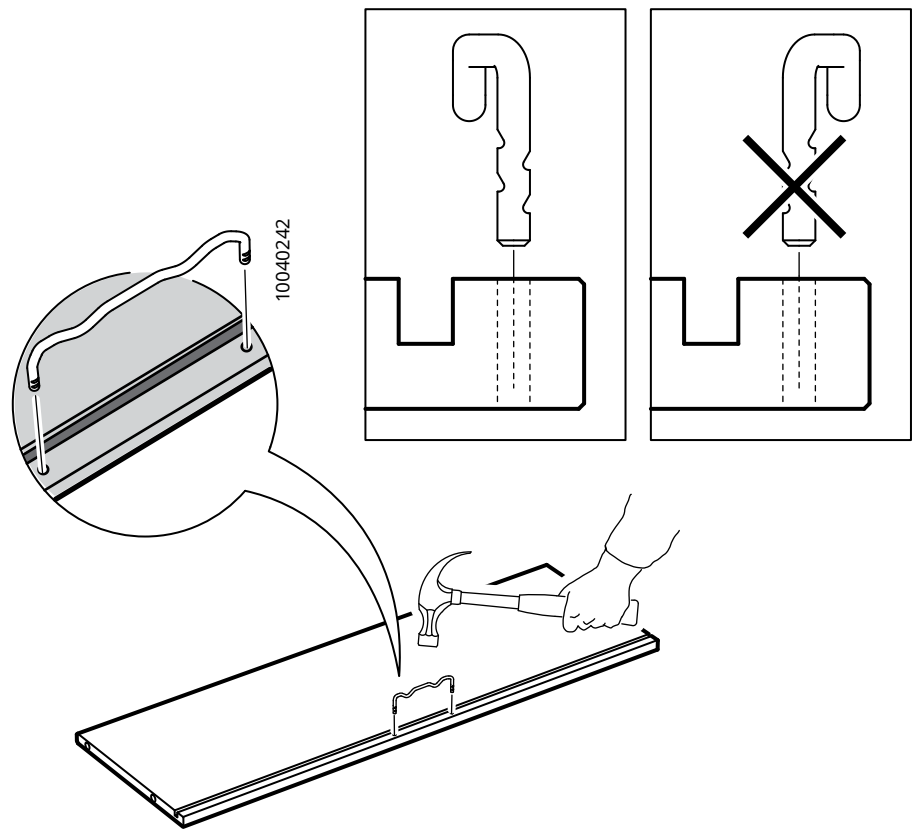 


36

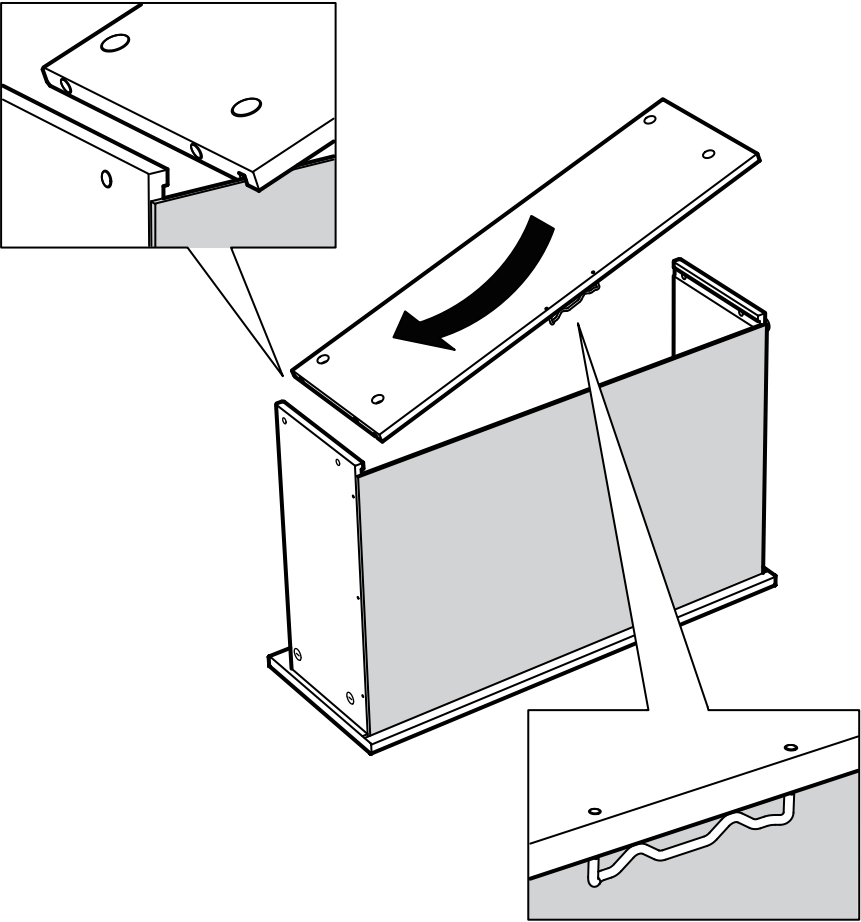 


37

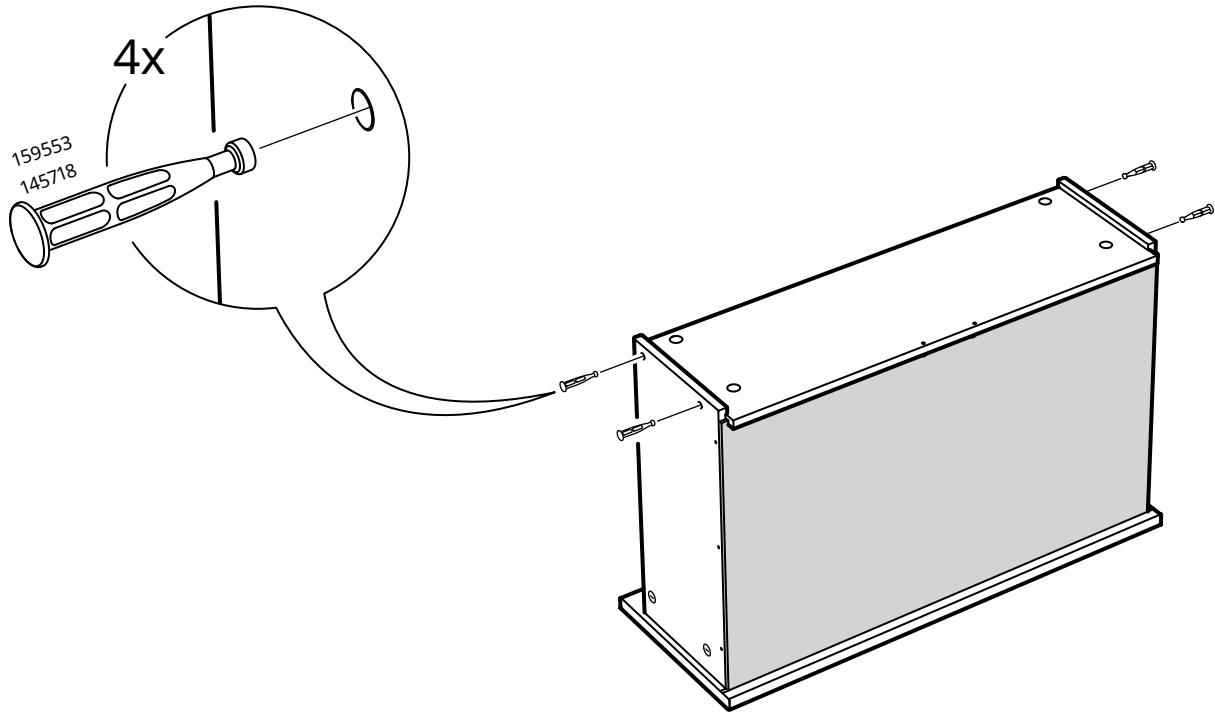 

38

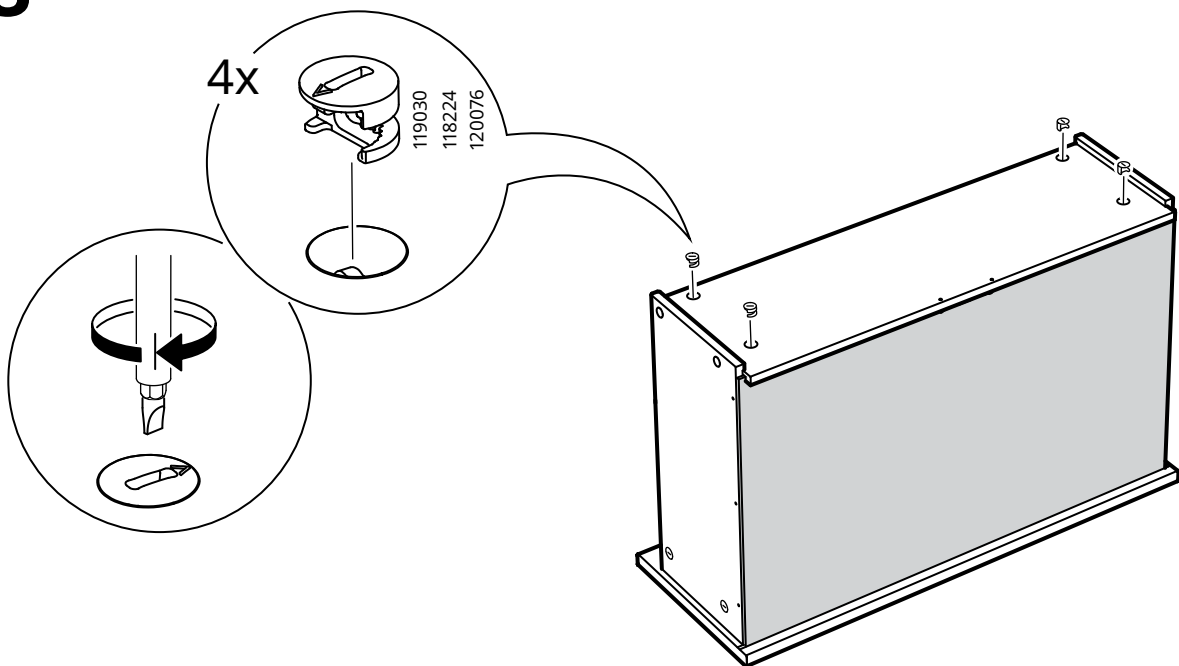 

39

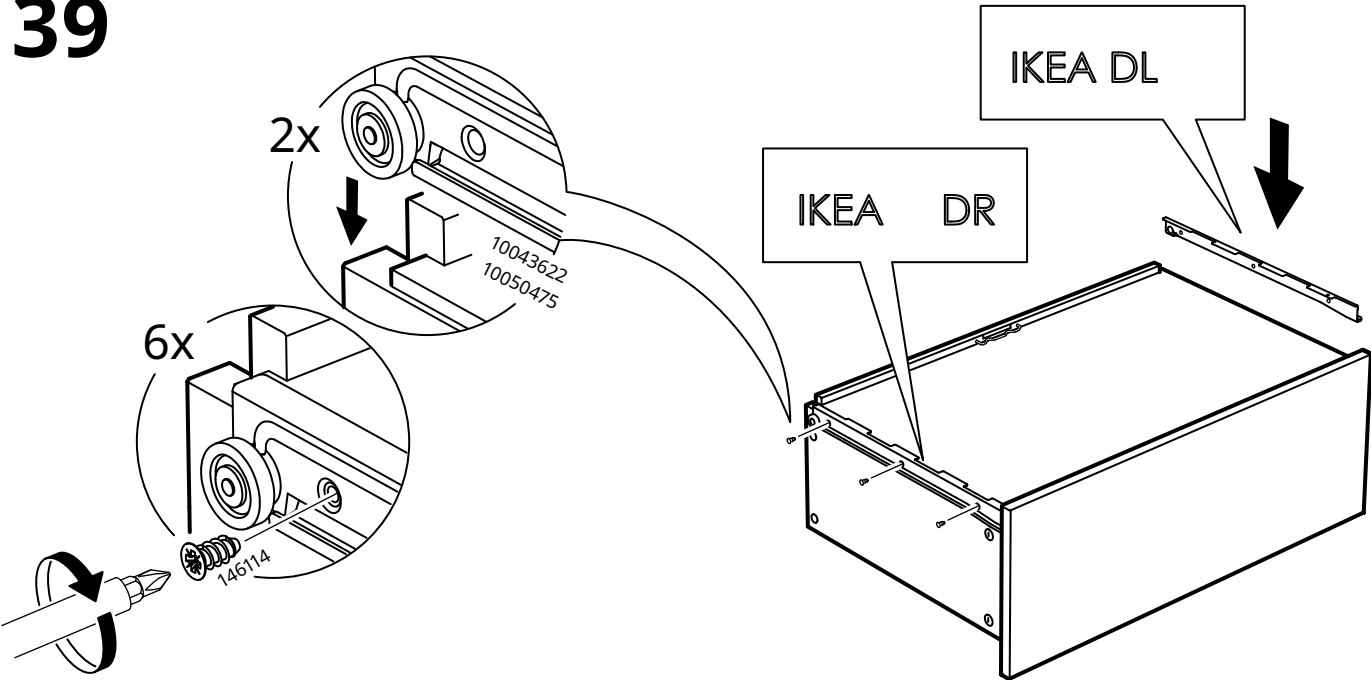 

40

